

# Terminal Server User's Reference Card

Order No. AV-HY69A-TK

## Graphic Conventions Used on This Card

- Monospaced type** Indicates an example of system output (in black type) or user input (in red type).
- italics* Indicate a variable that you must supply.
- (RET)** Indicates that you press the RETURN key to execute the command.
- Shaded text** Indicates commands that cannot be used on secure ports.

## Logging In

1. Press the RETURN key several times until the server displays a prompt. If a log-in password is required for your server, enter the correct password at the # prompt.

# *password* (RET) (not echoed)

2. Enter your user name if the server displays an Enter username > prompt.

```
DECserver 500 Terminal Server V1.0 - LAT V5.1
Please type HELP if you need assistance
Enter username> username (RET)
Local>
```

3. Enter server commands at the Local > prompt.

## Locking Your Terminal

1. Enter LOCK.

```
Local> LOCK (RET)
```

2. Choose a lock password and enter it at the prompt.

```
Lock Password> password (RET) (not echoed)
```

3. Enter your password again for verification.

```
Verification> password (RET) (not echoed)
```

4. Enter the same password to unlock your terminal.

```
Unlock Password> password (RET) (not echoed)
Local>
```

**digital**

## BASIC SERVER COMMAND SUMMARY

<b>BREAK</b>	In local mode, interrupts server displays. In service mode, returns you to local mode without ending your session.
<b>HELP</b>	Accesses on-line command help.
<b>SHOW SERVICES</b>	Displays all services available at your port.
<b>CONNECT <i>service-name</i></b>	Connects you to the specified service.
<b>SHOW SESSIONS</b>	Displays a list of your active sessions and identifies your current session.
<b>RESUME</b>	Resumes your current session.
<b>RESUME SESSION <i>n</i></b>	Resumes the specified session.
<b>FORWARDS or BACKWARDS</b>	Resumes the session that follows/precedes your current session in the SHOW SESSIONS list.
* <b>SET PORT FORWARD <i>character</i></b>	Sets a forward or backward switch character that you can enter during your current session to switch to the following/preceding session without returning to local mode.
* <b>SET PORT BACKWARD <i>character</i></b>	
<b>DISCONNECT</b>	Disconnects your current session.
<b>DISCONNECT SESSION <i>n</i></b>	Disconnects the specified session.
<b>DISCONNECT ALL</b>	Disconnects all your sessions.
<b>SHOW PORT</b>	Displays current port characteristics.
* <b>SET PORT PREFERRED <i>service-name</i></b>	Specifies a service to which you automatically connect when you enter a CONNECT command without a service name. NONE clears the service.
* <b>SET PORT PREFERRED NONE</b>	
* <b>SET PORT AUTOCONNECT ENABLED</b>	Enables the autoconnect feature, which automatically attempts to reconnect your port to a service that was disconnected abnormally.
<b>SHOW USERS</b>	Displays port, user name, and status of each user logged in to the server.
<b>BROADCAST PORT <i>n message-text</i></b>	Sends your message to the specified port on your server.
<b>LOGOUT</b>	Disconnects all your sessions and logs out your port.
* DECserver 100/200 users can execute DEFINE PORT instead of SET PORT to make these changes permanent. DECserver 500 users and Ethernet Terminal Server users must ask the server manager to make permanent changes.	