

Terminal Server



User's Reference Card

Order Number: AV-LD86B-TK

Graphic Conventions Used on This Card

Special type Indicates an example of system output (in black type) or user input (in red type).

lowercase italics In command examples, italics indicate a variable whose value you must supply. In display screen examples, italics represent the version number for the current software running on the server; for example, *Vn.n*.

RET Press the RETURN key to execute the command.

Shaded text Indicates commands that cannot be used on secure ports.

Logging In

1. Press the RETURN key several times until the server displays a prompt.
2. If a log-in password is required for your server, enter the correct password at the # prompt.

password **RET** (not displayed)

3. Enter your user name if the server displays an Enter username> prompt.

```
DECserver 500 Terminal Server Vn.n - LAT Vn.n
Please type HELP if you need assistance
Enter username> username RET
Local>
```

4. Enter server commands at the local prompt.

Locking Your Terminal

1. Enter LOCK

```
Local> LOCK RET
```

2. Choose a lock password and enter it at the prompt.

```
Lock Password> password RET (not displayed)
```

3. Enter your password again for verification.

```
Verification> password RET (not displayed)
```

4. Enter the same password to unlock your terminal.

```
Unlock Password> password RET (not displayed)
```

```
Local>
```

BASIC SERVER COMMAND SUMMARY

BREAK	In local mode, interrupts server displays. In service mode, returns you to local mode without ending your sessions.
HELP	Accesses on-line command help.
SHOW SERVICES	Displays all services available at your port.
CONNECT <i>service-name</i>	Connects you to the specified service.
RESUME	Resumes your current session.
RESUME SESSION <i>n</i>	Resumes the specified session.
FORWARDS or BACKWARDS	Resumes the session that follows or precedes your current session in the SHOW SESSIONS list.
* SET PORT FORWARD <i>character</i>	Sets a forward or backward switch character that you can enter during your current session to switch to the following or preceding session without returning to local mode.
* SET PORT BACKWARD <i>character</i>	
DISCONNECT	Disconnects your current session.
DISCONNECT SESSION <i>n</i>	Disconnects the specified session.
DISCONNECT ALL	Disconnects all your sessions.
SHOW PORT	Displays current port characteristics.
* SET PORT PREFERRED <i>service-name</i>	Specifies a service to which you automatically connect when you enter a CONNECT command without a service name. NONE clears the service.
* SET PORT PREFERRED NONE	
* SET PORT AUTOCONNECT ENABLED	
SHOW USERS	Displays port, user name, and status of each user logged in to the server.
SHOW SESSIONS	Displays list of service sessions on your port and indicates the current session.
BROADCAST PORT <i>n message-text</i>	Sends your message to the specified port on your server.
LOGOUT	Disconnects all your sessions and logs out your port.
* DECserver 100/200 users can execute DEFINE PORT instead of SET PORT to make these changes permanent. DECserver 500 users and Ethernet Terminal Server users must ask the server manager to make permanent changes.	