

**BULLETIN 310B  
VOL 2**

**TECHNICAL MANUAL  
33 TELETYPEWRITER SETS  
KEYBOARD SEND-RECEIVE (KSR)  
RECEIVE-ONLY (RO)  
AUTOMATIC SEND-RECEIVE (ASR)**



**TELETYPE®  
CORPORATION  
5555 TOUHY AVENUE, SKOKIE, ILLINOIS**


**BULLETIN 310B  
VOL 2**

**TECHNICAL MANUAL  
33 TELETYPEWRITER SETS  
KEYBOARD SEND-RECEIVE (KSR)  
RECEIVE-ONLY (RO)  
AUTOMATIC SEND-RECEIVE (ASR)**



**TELETYPE<sup>®</sup>  
CORPORATION**

5555 TOUHY AVENUE, SKOKIE, ILLINOIS

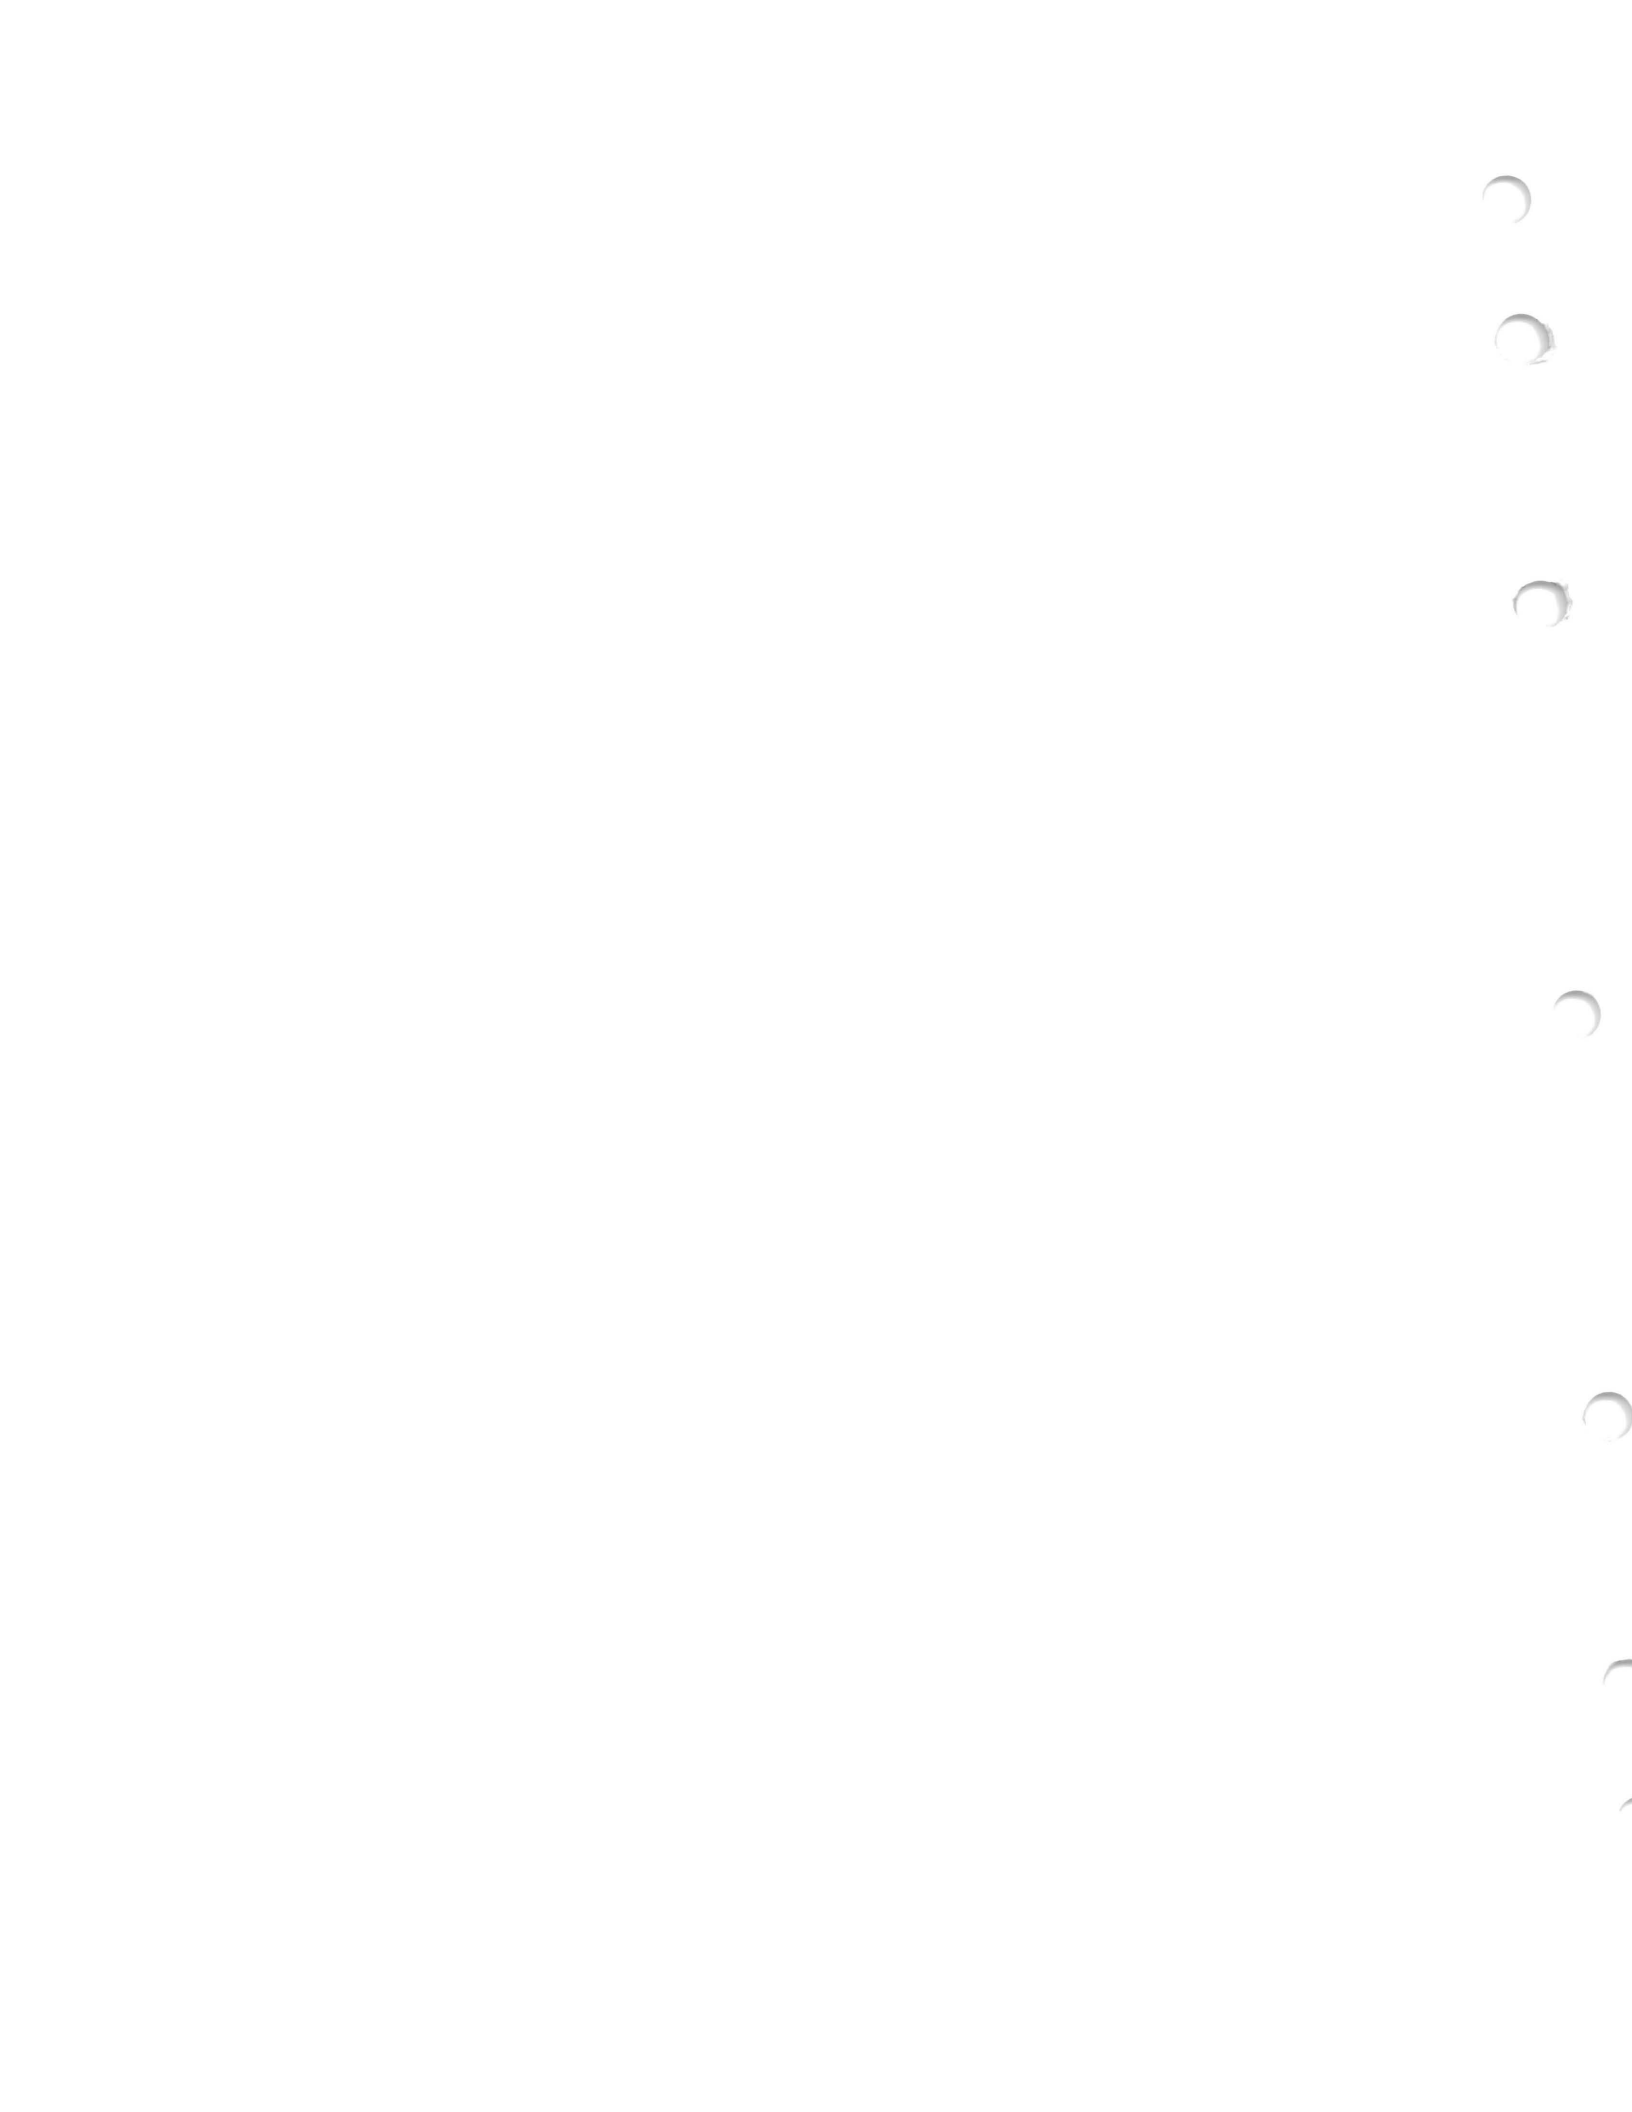

310B  
Volume 2

INTRODUCTION

Bulletin 310B is a technical manual that provides general and specific information about the 33 Keyboard Send-Receive (KSR), Receive-Only (RO), and Automatic Send-Receive (ASR) Teletypewriter Sets and their component units. It consists of two volumes.

Volume 1 contains a description of the 33 Teletypewriter Sets and gives installation instructions. Also included in Volume 1 is information on the disassembly and reassembly, lubrication, and principles of operation of the component units of the Teletypewriter Sets. Volume 2 includes adjustment information on all component units of 33 Teletypewriter Sets.

Each volume is made up of a group of appropriate independent sections. Each independent section is complete within itself—it is separately identified by a title and section number, and the pages are numbered consecutively.

Each individual section is identified by a 9-digit section number which appears at the top of each page of a section. The section number appears on the left corner of left-hand pages and on the right corner of right-hand pages. In addition, the section number on each page contains the suffix TC which identifies it as a Teletype Corporation section. All sections are placed in the technical manual in ascending numerical order.

To locate specific information, refer to the table of contents on the following page. In the first column, under "Equipment," find the name of the component unit or set in question. Move across the page to the second column and locate the title being sought. The applicable 9-digit section number can then be found in the third column. Turn to Page 1 of the applicable section, and the contents of that section will be found.

The sections comprising this bulletin are now stocked separately and may be individually ordered if the entire bulletin is not needed.

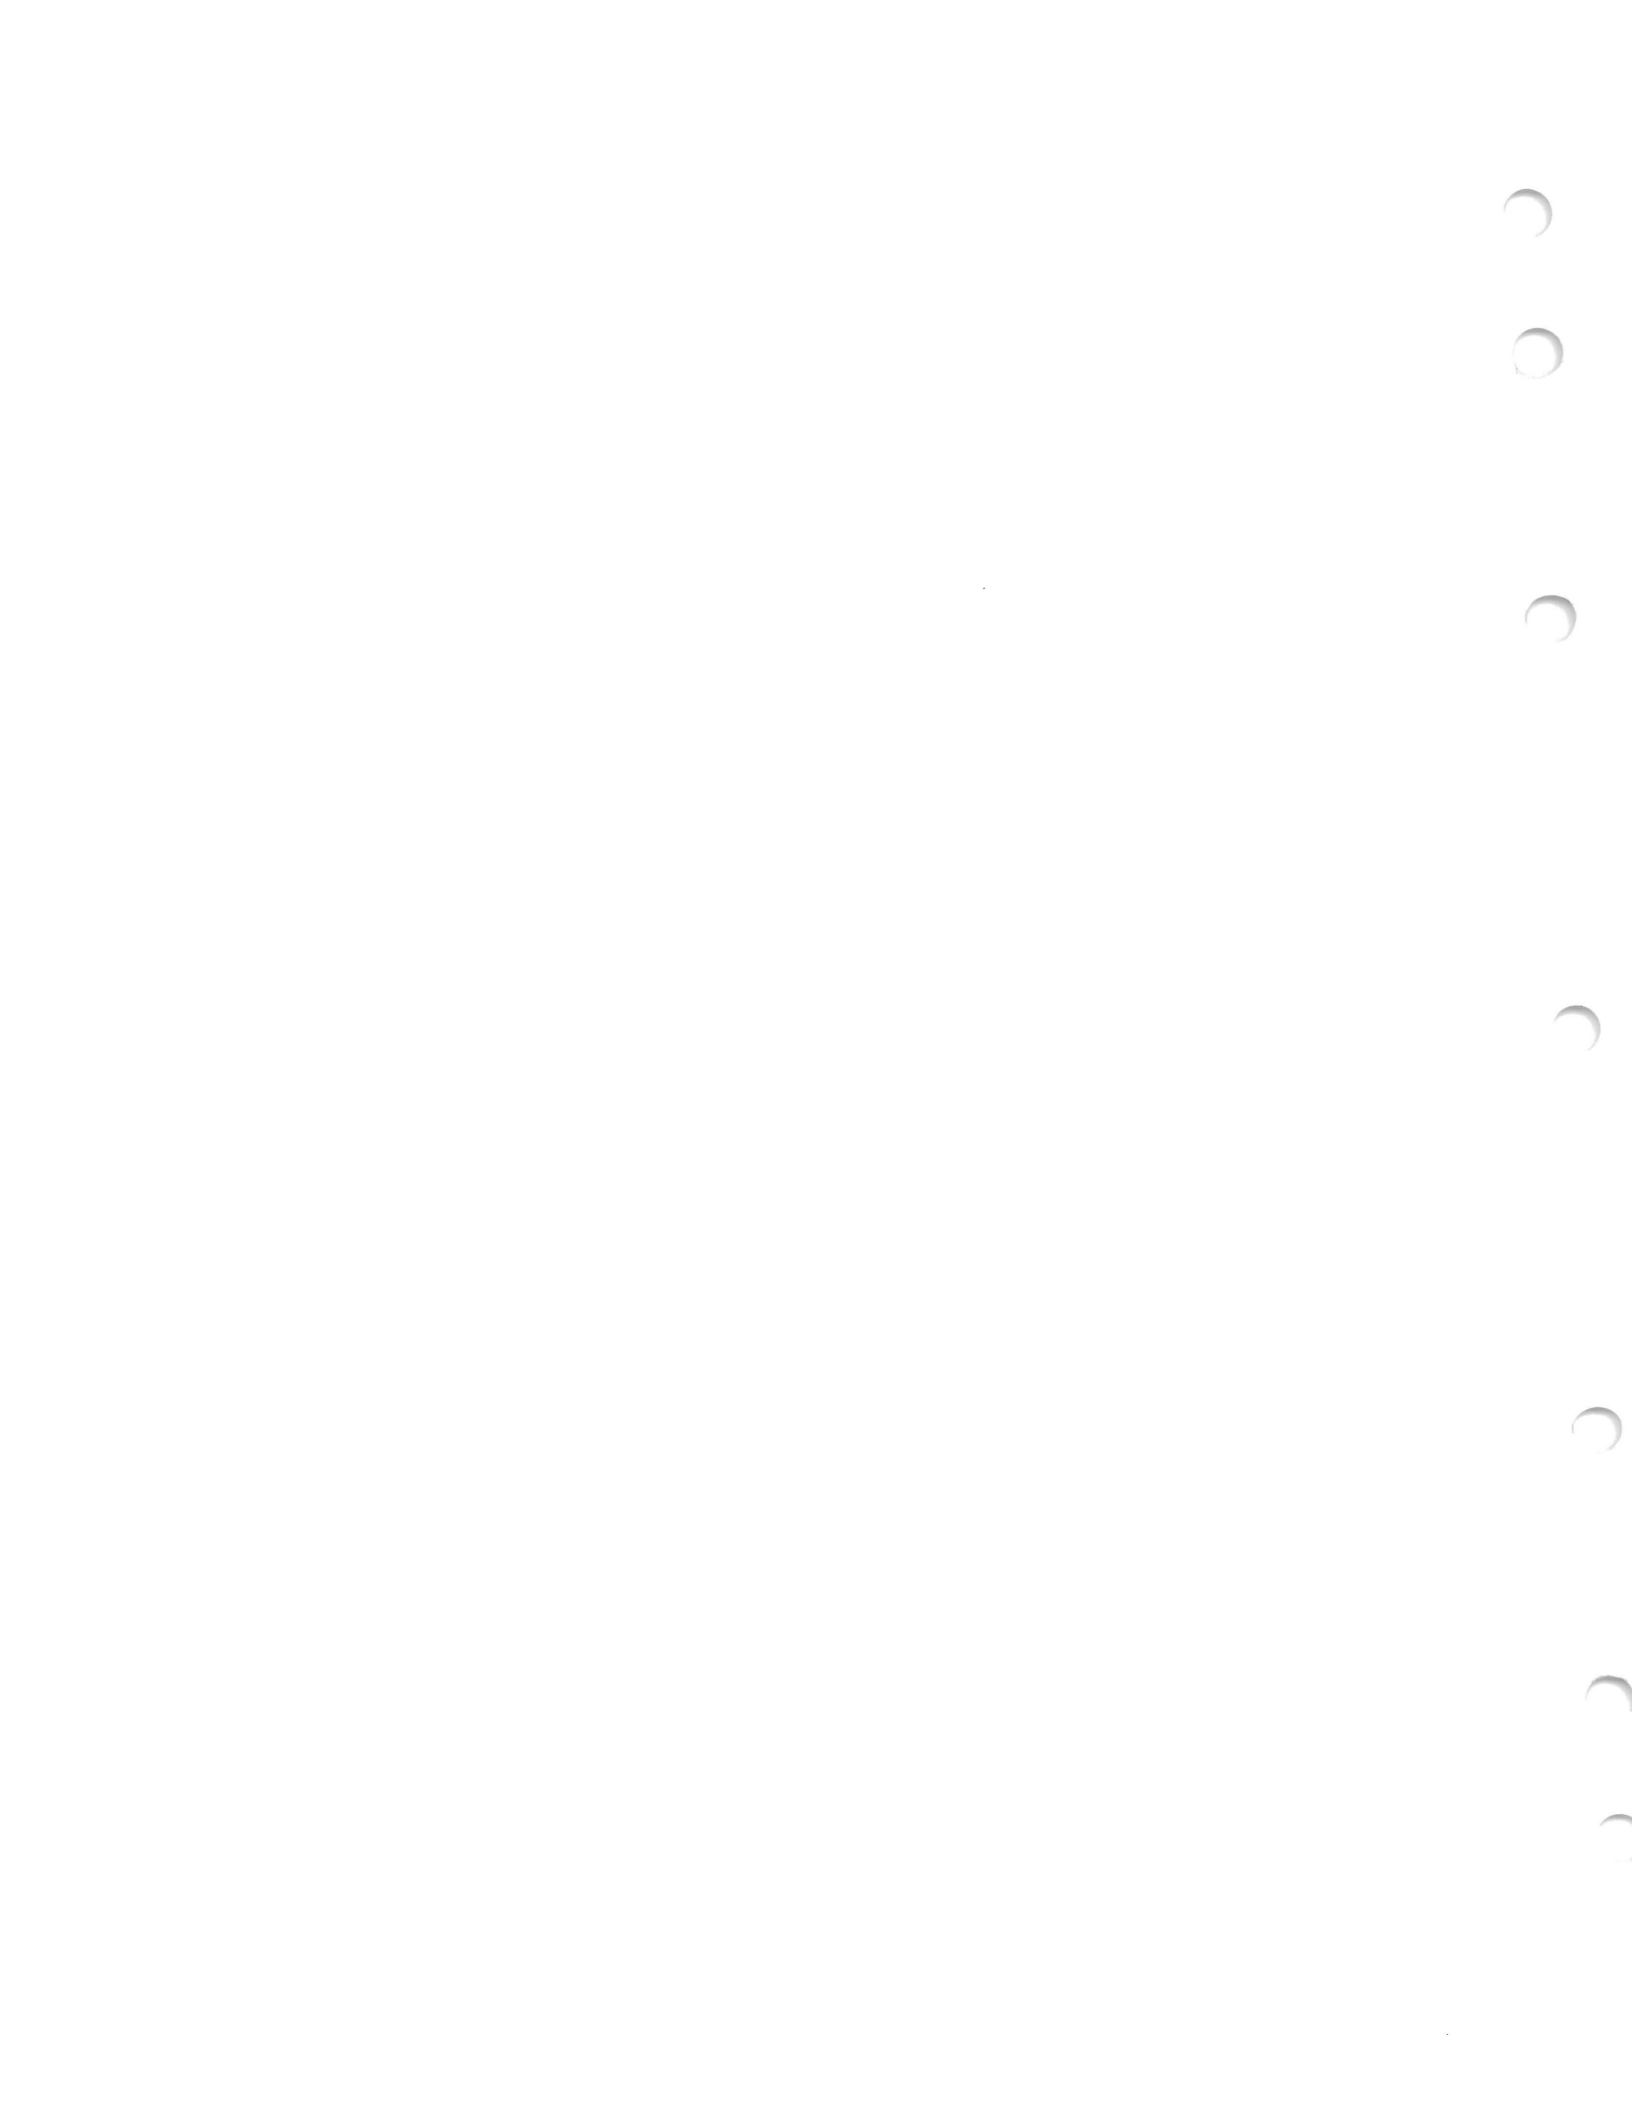



TABLE OF CONTENTS


FILING INSTRUCTIONS

1. The following filing instructions apply to changes sent to the field.
2. Asterisks (\*) in the table of contents indicate changes.
3. When the issue of a section changes, replace the old issue with the attached new one.
4. In the case of addendums, turn to the affected section and follow the instructions on the first page of the attached addendum.
5. Replace the old table of contents with this new one.

<u>Equipment</u>	<u>Title</u>	<u>Section</u>	<u>Issue</u>
Keyboard	Adjustments	574-121-700TC	3*
Typing Unit	Adjustments	574-122-700TC	4*
Tape Reader	Adjustments	574-124-700TC	3*
Tape Punch	Adjustments	574-125-700TC	4*
Cover	Adjustments	574-126-700TC	1



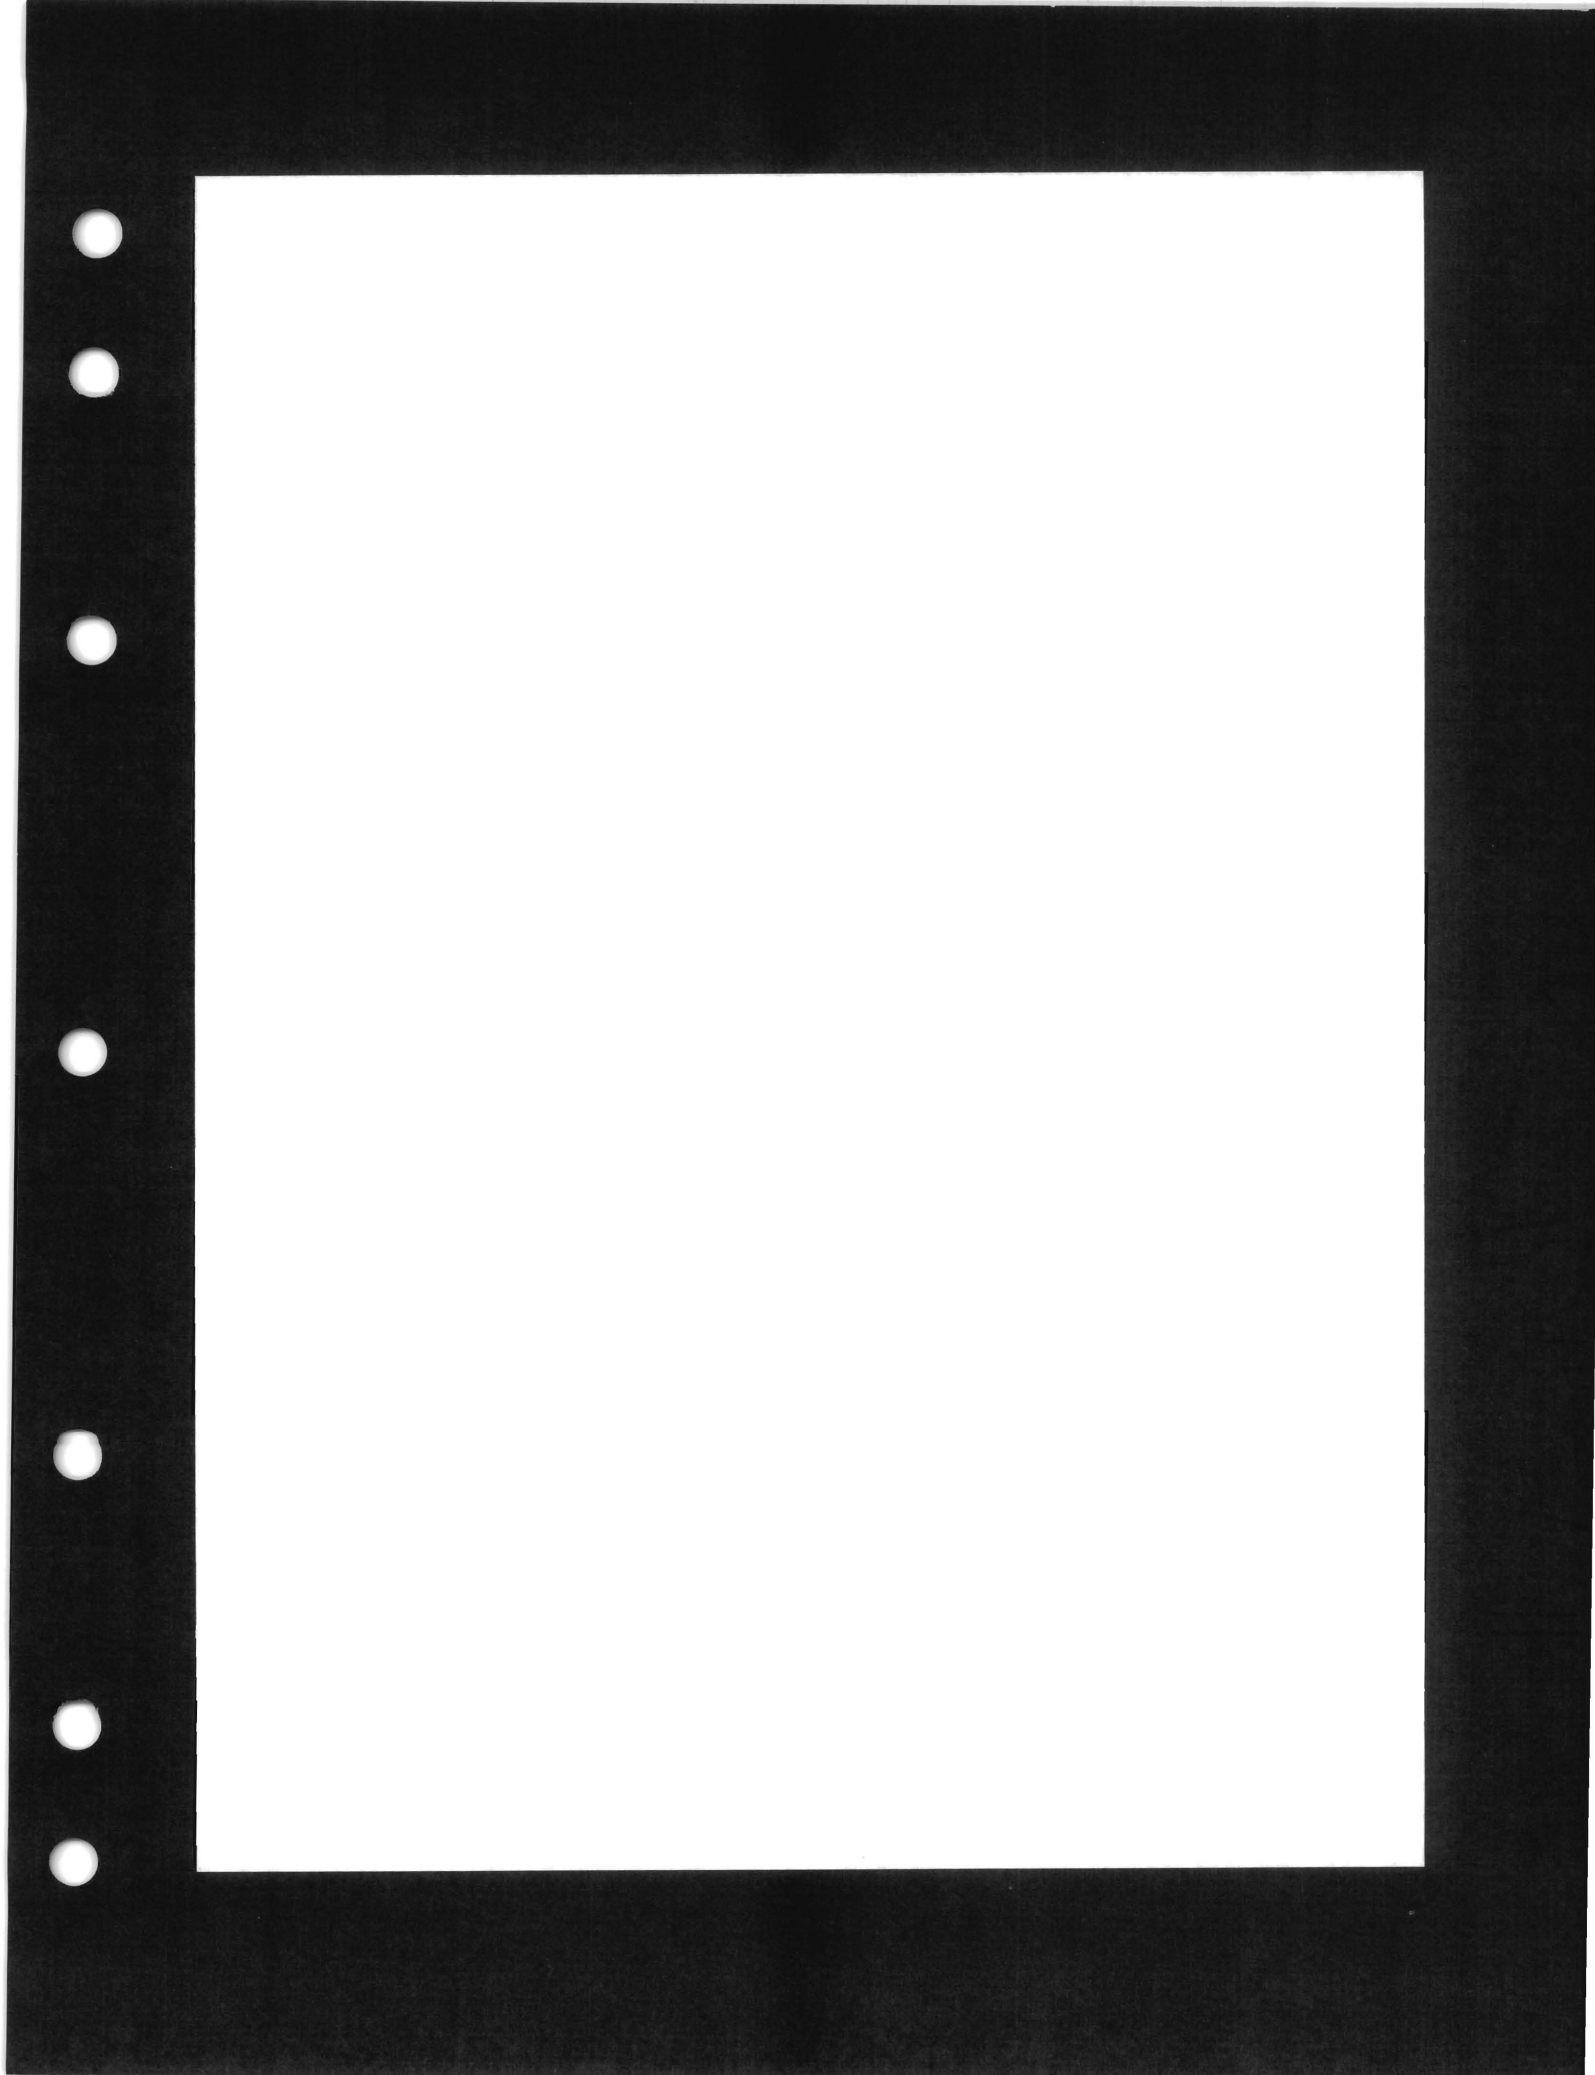

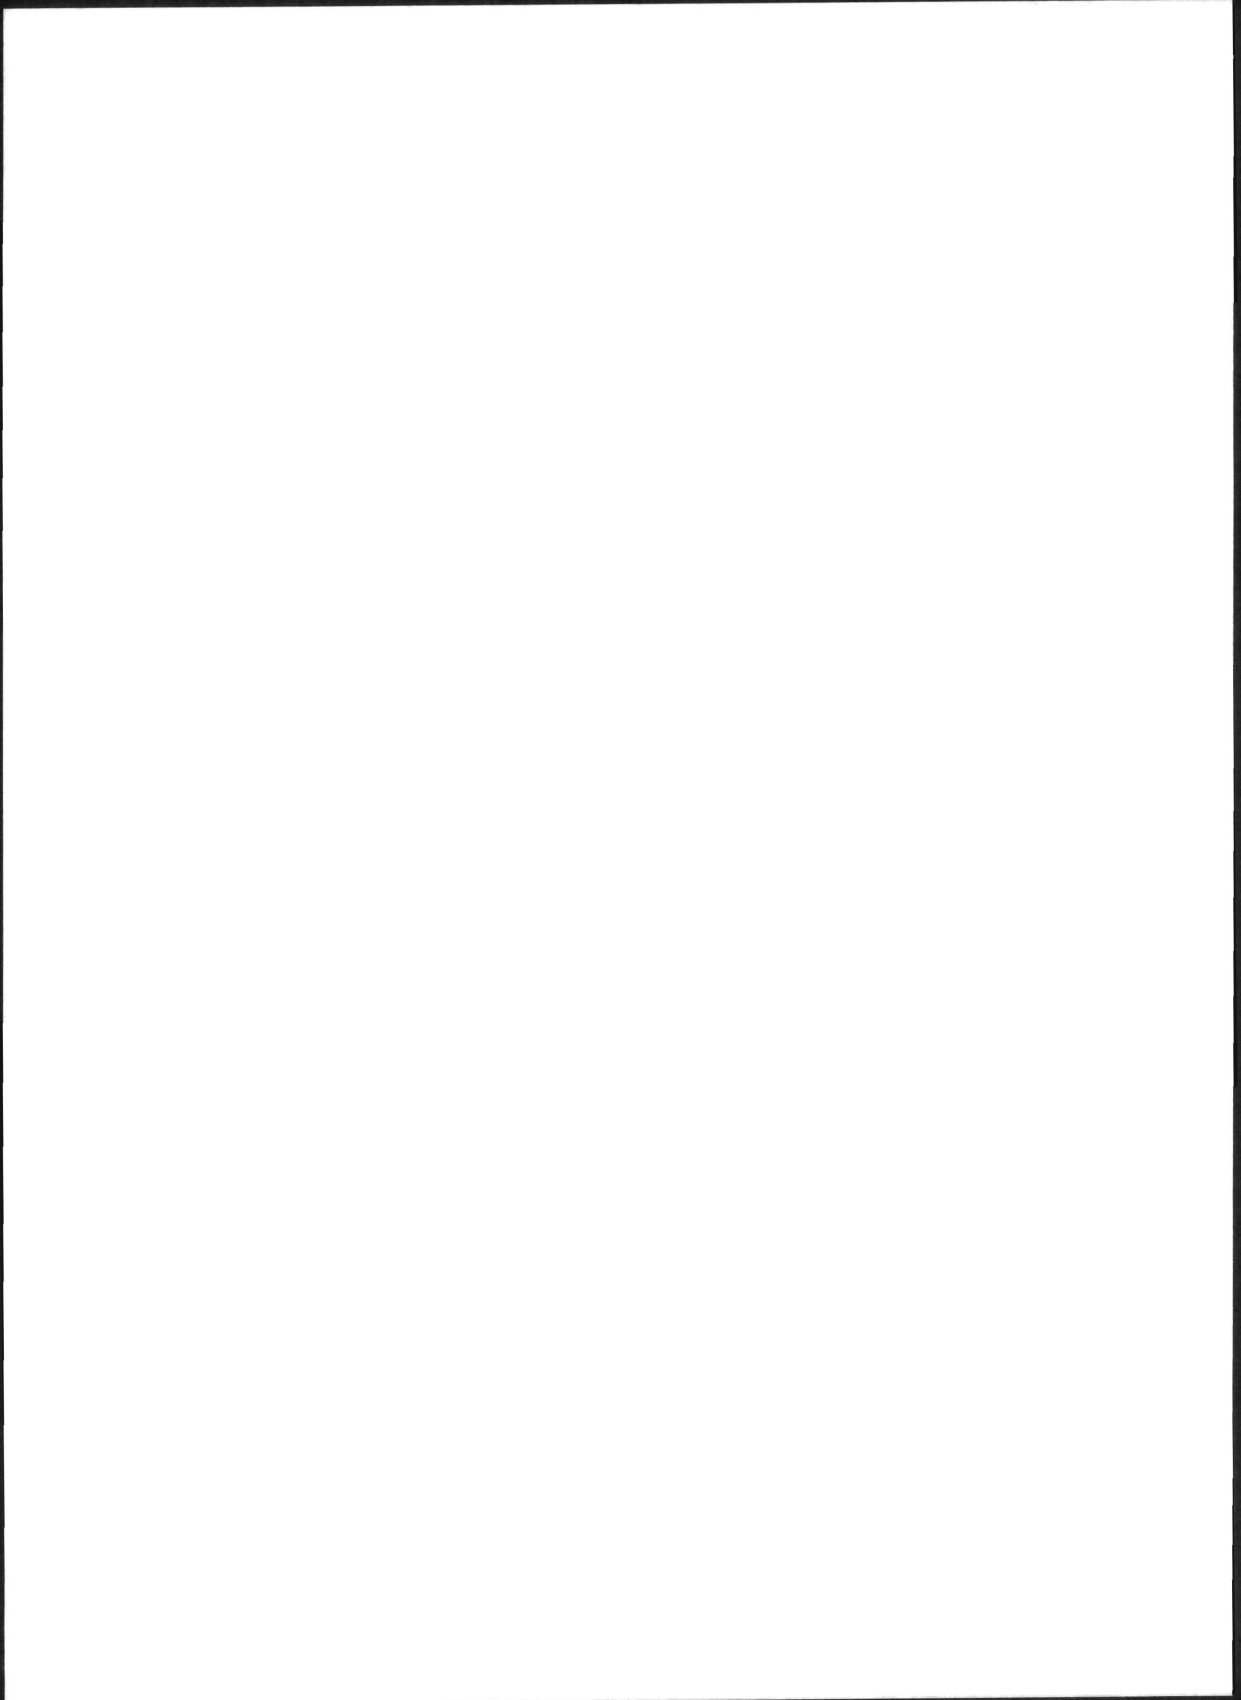

33 KEYBOARD  
ADJUSTMENTS

CONTENTS	PAGE
1. GENERAL . . . . .	1
2. BASIC UNIT . . . . .	5
BREAK keylever spring. . . . .	12
Contact block spring. . . . .	10
Contact wires . . . . .	6
Contact wire spring . . . . .	10
CTRL contact wire. . . . .	8, 9
CTRL keylever spring. . . . .	12
Distributor trip linkage. . . . .	20, 21
HERE IS keylever spring. . . . .	12
Keylever spring. . . . .	11
Keylever springs (SPACE, BLOCK, hyphen, or O keytops). . . . .	13
Latchlever spring. . . . .	19
Left shift contact wire. . . . .	7
Nonrepeat lever spring. . . . .	17
REPT keylever spring. . . . .	12
Reset bail spring . . . . .	14
Shift codebar spring . . . . .	16
Spacebar spring. . . . .	11
Universal lever spring . . . . .	18
Universal link . . . . .	5
Universal link spring . . . . .	15

1. GENERAL

1.01 This section provides adjustment information for 33 keyboards which are mechanically reset by an H-plate and the distributor trip linkage shown in 2.16 and 2.17. It is reissued to include the latest engineering changes. Since this is a general revision, marginal arrows ordinarily used to indicate changes and additions are omitted.

Note: Adjustment information for solenoid reset keyboards is found in Section 574-121-703TC.

1.02 In the adjustments covered in this section, location of clearances, position of parts, and point and angle of scale applications are

illustrated by line drawings. Requirements and procedures are set forth in the several texts that accompany the line drawings. Tools necessary to maintain 33 Teletypewriter Sets are shown in Maintenance Tools Section 570-005-800TC.

1.03 The sequence in which the adjustments appear is that which should be followed when a complete readjustment of the keyboard is undertaken. No single adjustment should be undertaken without first completely understanding the procedure and knowing the requirements. Therefore, read a procedure all the way through before making an adjustment or checking a spring tension.


Note: Disconnect the keyboard from any voltage source prior to inspection, minor repair, extensive maintenance, or a complete readjustment.

1.04 References to left, right, front, rear, etc consider the keyboard to be viewed from a position where the spacebar (Figure 3) faces up and the contact mechanism is located to the viewer's right.

1.05 When a procedure calls for using pry points or slots to make an adjustment, place a screwdriver between the points or in the slots and pry parts in the proper direction.

1.06 When the keyboard is removed from the subbase to facilitate the making of an adjustment and subsequently replaced, recheck any adjustments that may have been affected. Also, if parts are removed from the keyboard to facilitate the making of an adjustment, be sure that they are subsequently replaced. Recheck any adjustment that may have been affected by the removal of parts.

1.07 Related adjustments are listed with some of the adjustment texts and are primarily intended to aid in troubleshooting the equipment. As an example, suppose that in searching for a trouble it is discovered that Part (2) of CONTACT WIRES adjustment does not meet its requirement. Under Related Adjustment it is indicated that Part (2) of this adjustment is affected by Part (1). Check Part (1) to see if it is the basic

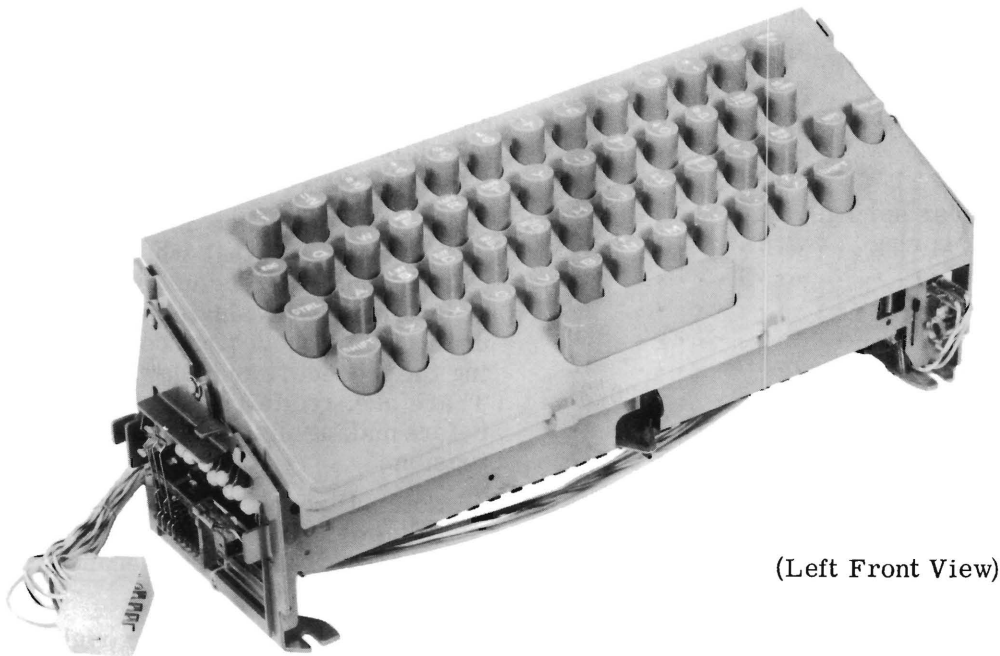

(Left Front View)

Figure 1 - 33 Keyboard (Parity)


cause of the trouble. Also, note that certain adjustments affect other adjustments. For example, see the DISTRIBUTOR TRIP LINK-AGE adjustment. Note that this adjustment affects the TRIP LEVER ENGAGEMENT adjustment. (See the appropriate typing unit section.) If the former adjustment is changed, check the latter adjustment.

1.08 The spring tensions specified in this section are indications, not exact values. Therefore, to obtain reliable readings, it is important that spring tensions be measured by spring scales placed in the positions shown on pertinent line drawings. Springs that do not meet their requirements should be replaced by new ones. Only those springs that directly affect

the operation of the keyboard are measured, however, others may be measured indirectly in the process. If, at first, the spring tension requirement cannot be met, replace the indicated spring being directly measured. Then, if the requirement is not met, any springs that are indirectly measured in the procedure should be replaced, one at a time, with the performance of requirement checks each time a spring is replaced.

Note 1: Use only spring scales which are recommended by the manufacturer. These spring scales are listed in Maintenance Tools Section 570-005-800TC.

Note 2: The spring tensions may be checked in any sequence.

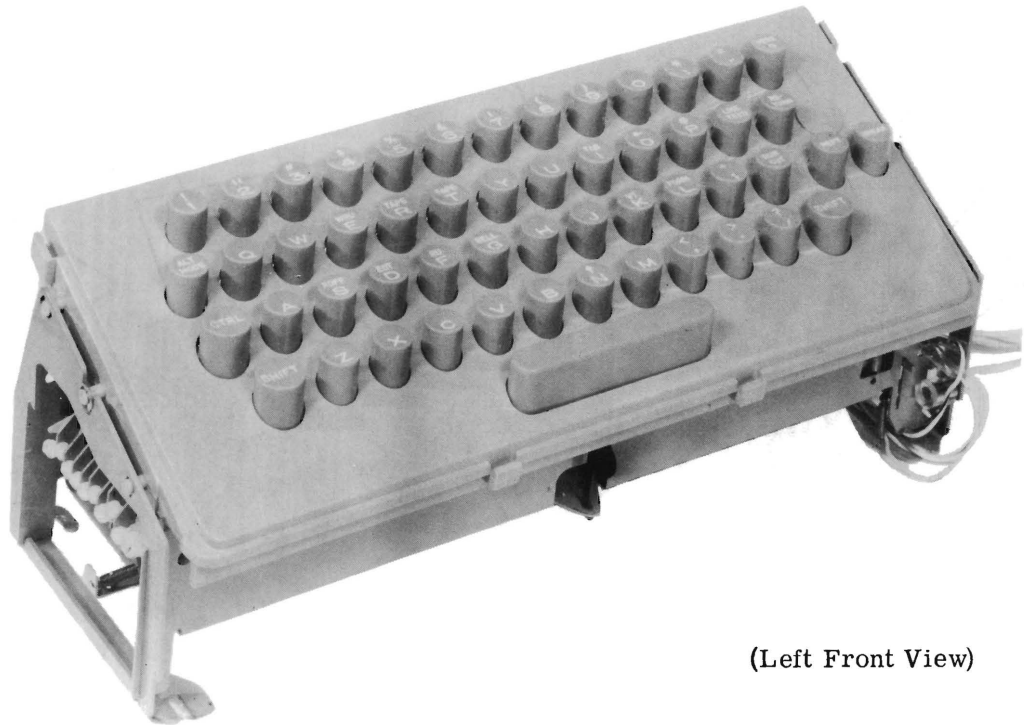

(Left Front View)

Figure 2 - 33 Keyboard (Nonparity)

1.09 With the keyboard and typing unit assembled together on the subbase, adjustment procedures may specify that the typing unit be placed in the stop condition. It is in the stop condition when the selector armature is in its attracted (frontward) position and all clutches are disengaged. Furthermore, when the typing unit is in the stop condition the keyboard will be latched — universal lever down and blocked from upward movement by an associated latch-lever.

Note: The keyboard is tripped when the universal lever is in its up position.

1.10 To place the typing unit in the stop condition, hold the selector armature in its attracted (frontward) position. Manually rotate the main shaft clockwise (as viewed from the left) until all clutches are in a stop position. Fully disengage all of the clutches by positioning a screwdriver to the associated stop-lug. Push the clutch disc in the normal direction of main shaft rotation until the corresponding latchlever seats in its clutch disc notch. This permits the clutch shoes to release their tensions on the clutch drum. With all clutches disengaged, the main shaft will turn freely without any dragging of the clutch shoes.

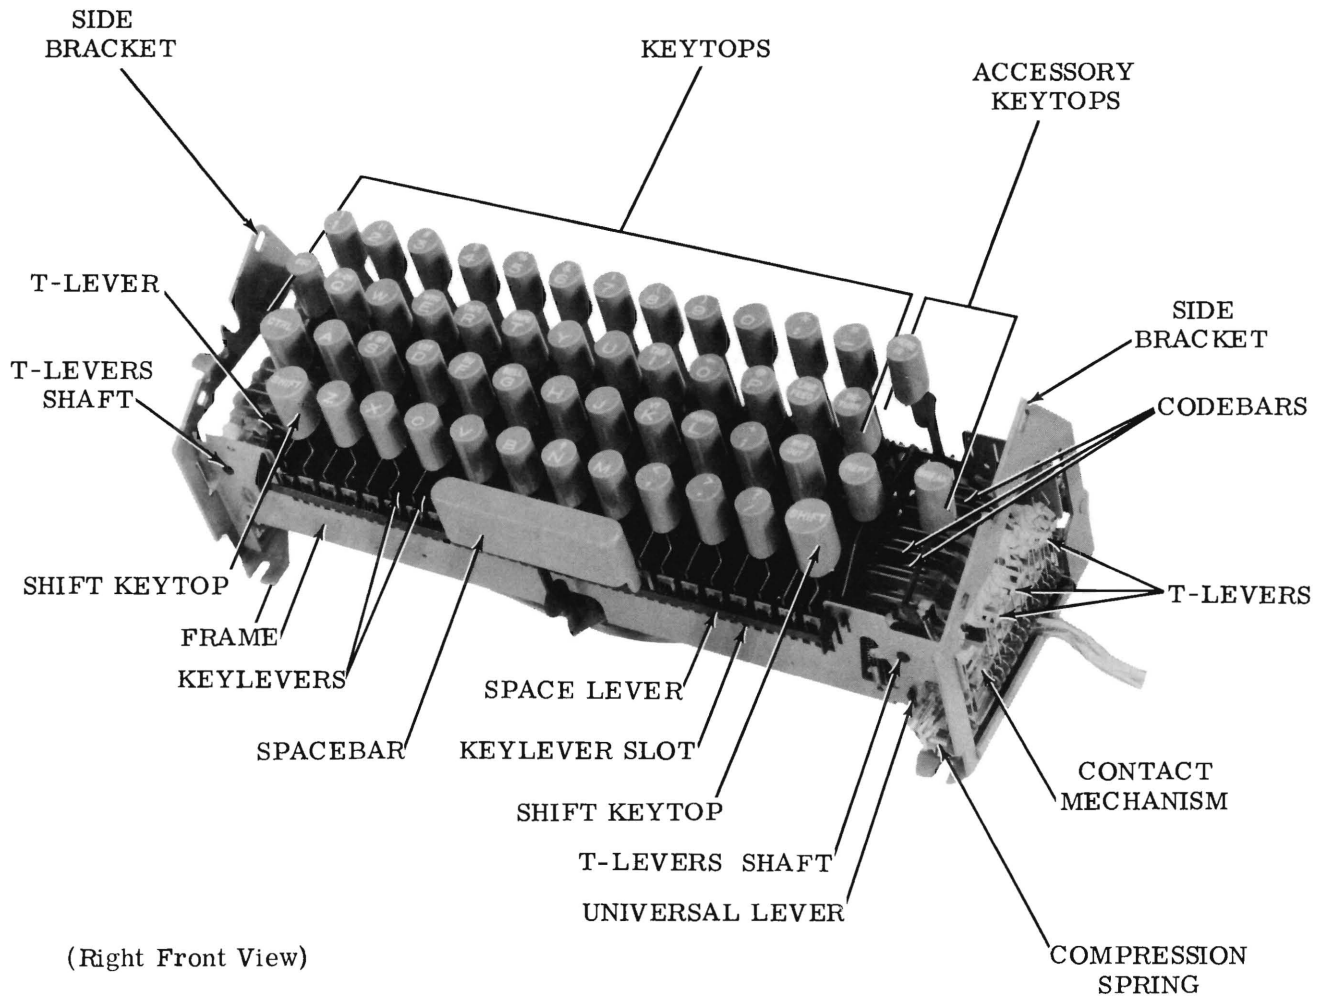


Figure 3 - Keyboard (Cover Removed)

Note 1: A stop position is that position where a shoe lever contacts a trip lever.


Note 2: The distributor clutch will not disengage unless the keyboard is latched and the answer-back drum is in its home position. The answer-back home position is the position where the control lever is fully detented into the indent on the answer-back drum.

1.11 A clutch is tripped by moving a trip lever up and away from contact with a shoe lever. When moved up, a trip lever no longer holds a shoe lever in its stop position. When the clutch is tripped, the shoe lever and a stop-lug on the clutch disc move apart, and the clutch becomes engaged. The clutch shoes wedge against the drum so that when the shaft is turned the clutch assembly will turn in unison with it.

## 2. BASIC UNIT

### 2.01 Universal Link

**Note:** Remove keyboard and call control unit from subbase to facilitate the making of the following adjustments. For disassembly instructions, see the appropriate keyboard section.

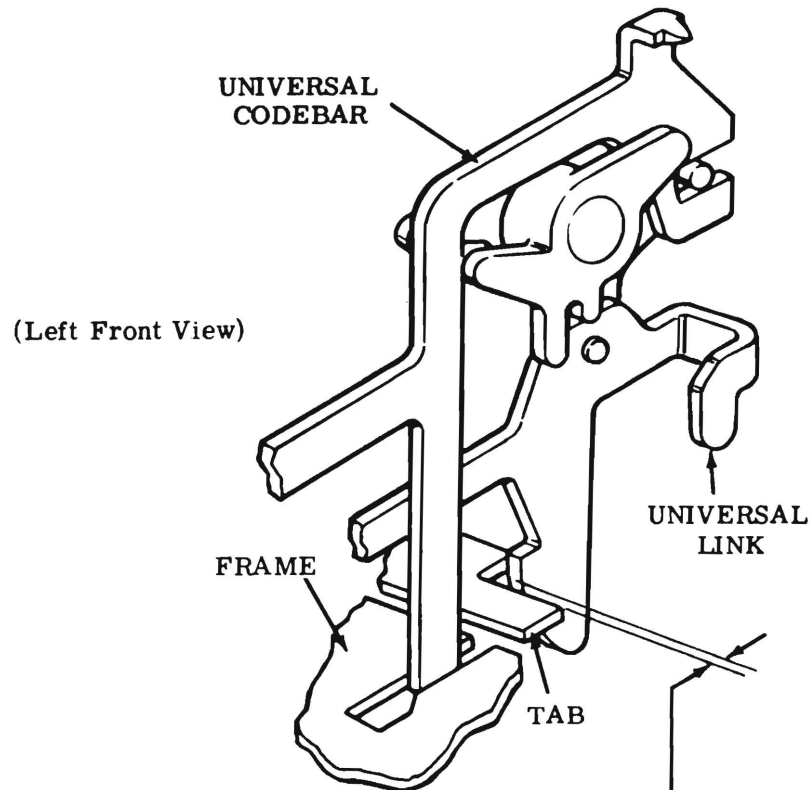

#### UNIVERSAL LINK

##### To Check

Push universal lever down until latched by latchlever.

##### Requirement

Min 0.089 inch---Max 0.103 inch  
between universal link and frame.

##### To Adjust

Place screwdriver through opening in front of frame and bend tab.

2.02 Contact Wires

CONTACT WIRES

Note: Part (1) of this adjustment applies to contact wires actuated by the reset bail (contact block slots B through O). Part (2) applies to contact wires which have two camming surfaces and are operated by a T-lever and the reset bail.

(1) To Check

Push universal lever down until latched by latchlever. Place T-levers down in marking position. As each contact wire is checked, take up its play in an upward direction.

Requirement

Min 0.012 inch --- Max 0.027 inch  
between the first reset bail actuated contact wire located towards the front of the keyboard and its associated terminal.  
Min 0.018 inch --- Max 0.032 inch  
between the remaining marking contact wires and their associated terminals.

To Adjust

Bend contact wire with TP185829 bending tool.

Note: Contact bounce is not permissible during distributor readout of the nos. 1 through 8 code bits. If necessary, the no. 1 contact gap should be refined to the low end of its adjustment range to eliminate bounce.

(2) To Check

Push universal lever down until latched by latchlever. Place T-levers up in spacing position. Trip keyboard by depressing universal codebar. As each contact wire is checked, take up its play in an upward direction.

Requirement

Min 0.020 inch --- Max 0.040 inch  
between terminal and each contact wire.


To Adjust

Bend contact wire with TP185829 bending tool as shown.


Related Adjustment

Affected by

Part (2) of this adjustment is affected by Part (1).

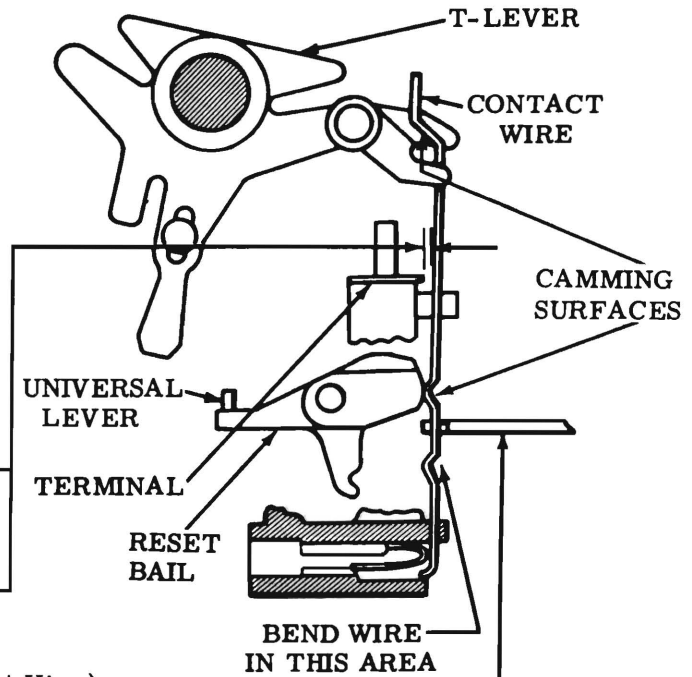

(Front View)

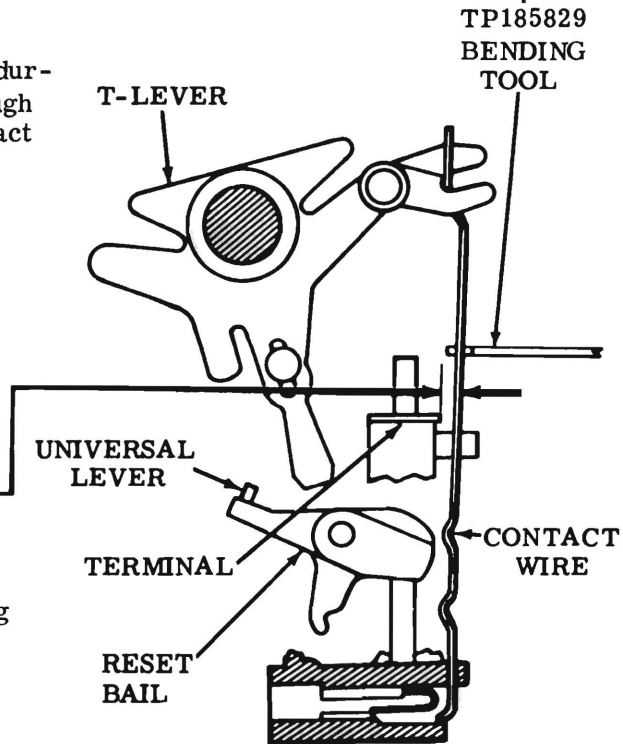

(Front View)

2.03 Contact Wires (continued)

LEFT SHIFT CONTACT WIRE

Note 1: This adjustment applies only to parity keyboards equipped with a TP180076 T-lever at right side of SHIFT codebar mechanism.

Note 2: Contact wires on auxiliary contact block on left side of parity keyboards are designated A, B, C, and D from rear to front.

(1) To Check

Push universal lever down, until latched by latchlever. Trip keyboard by depressing universal codebar. Insert a 0.090 inch gauge diagonally into third keylever (SHIFT) slot in frame from left. Depress left SHIFT keylever until it bottoms on top of gauge.

Requirement

- (a) Min some clearance between D contact wire and camming surface of its associated T-lever.
- (b) Min 0.020 inch---Max 0.055 inch between C contact wire and SHIFT terminal.

(2) To Check



Push universal lever down until latched by latchlever. Hold right SHIFT keylever fully depressed. Trip keyboard by depressing universal codebar. Release SHIFT keylever. Lightly take up play in contact block towards right.

Requirement

- (a) Min 0.004 inch between C contact wire and camming surface of SHIFT T-lever with all contact block play lightly taken up toward right.
- (b) Min 0.015 inch between D contact wire and SHIFT terminal.
- (c) Min 0.025 inch between C contact wire and rear SHIFT codebar at closest point of travel.

To Adjust

Bend contact wire(s) using TP185829 bending tool.

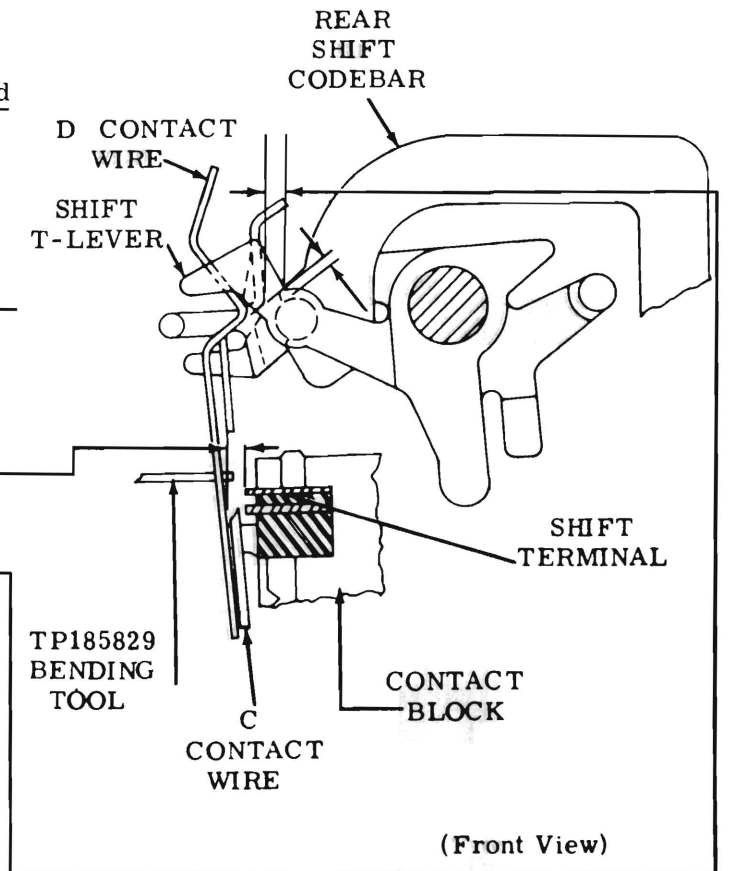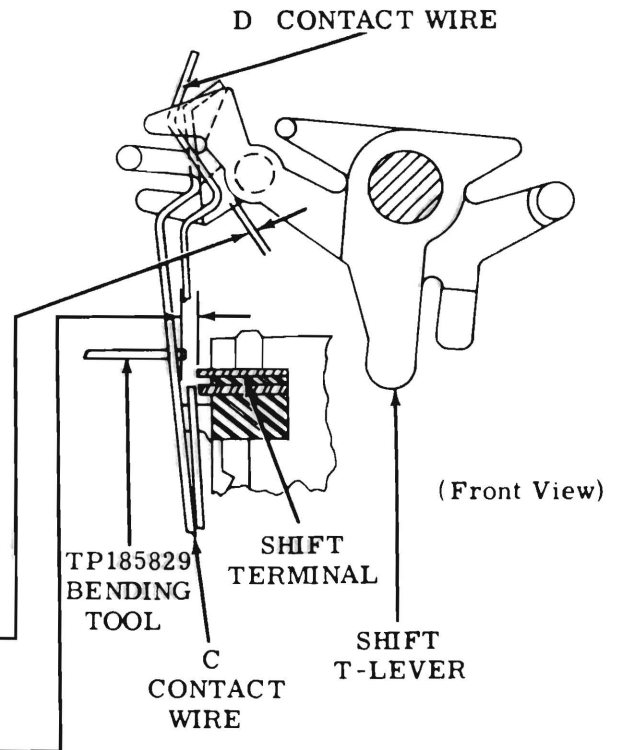

2.04 Contact Wires (continued)

"CTRL" CONTACT WIRE

**Note 1:** This adjustment applies only to parity keyboards equipped with TP185780 CTRL keylever spring but without TP186049 blocking lever and TP186051 tie link.

**Note 2:** Contact wires on auxiliary contact block on left side of parity keyboards are designated A, B, C, and D from rear to front.

(1) To Check

With the CTRL keytop unoperated, lightly take up play in contact block towards left to make clearance between the B contact wire and CTRL terminal a minimum. Check Requirement (a). Lightly take up play in contact block towards right to make clearance between B contact wire and CTRL terminal a maximum. Check Requirement (b).

(2) To Check

Fully depress the CTRL keytop and hold it depressed. Lightly take up play in contact block towards left to make clearance between the A contact wire and CTRL terminal a minimum. Check Requirement (c). Lightly take up play in contact block towards right to make clearance between A contact wire and CTRL terminal a maximum. Check Requirement (d).

Requirement

(a) Min 0.008 inch  
between B contact wire and CTRL terminal.


(b) Max 0.050 inch  
between B contact wire and CTRL terminal.

(c) Min 0.008 inch  
between A contact wire and CTRL terminal.

(d) Max 0.050 inch  
between A contact wire and CTRL terminal.

To Adjust

Bend contact wire(s) with TP185829 bending tool as shown.

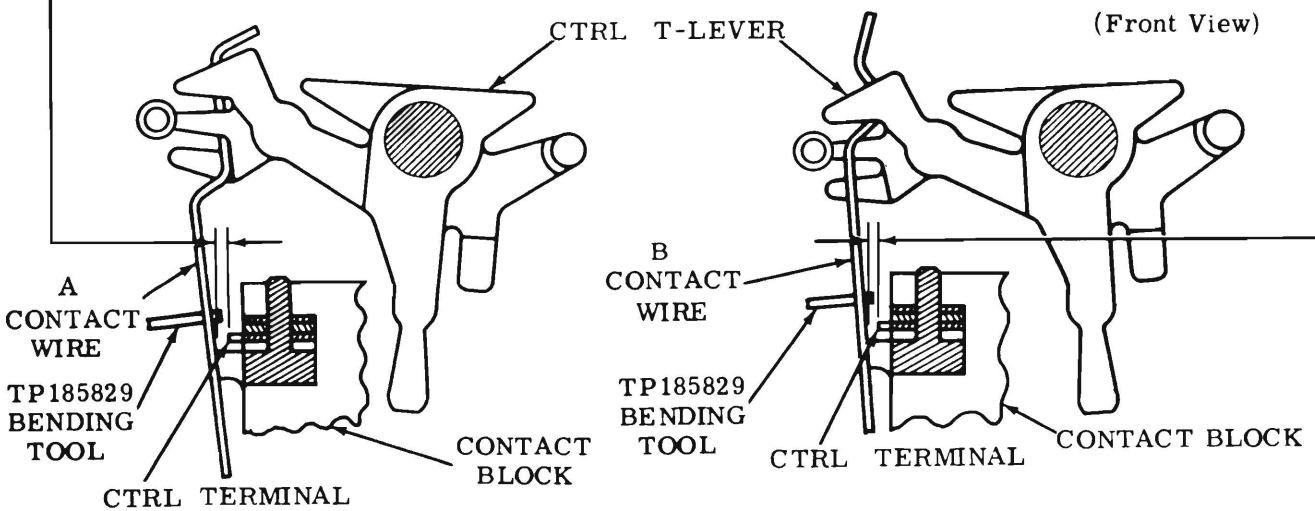

2.05 Contact Wires (continued)

"CTRL" CONTACT WIRE

**Note 1:** This adjustment applies only to parity keyboards equipped with TP185780 CTRL key-lever spring and with TP186049 blocking lever and TP186051 tie link.

**Note 2:** Contact wires on auxiliary contact block on left side of parity keyboards are designated A, B, C, and D from rear to front.

(1) To Check

Fully depress the CTRL keytop and hold it depressed. Trip keyboard by depressing the "Q" keytop. Release both keytops and manually reset the keyboard. Lightly take up all play in contact block towards the left.

Requirement

Min 0.023 inch---Max 0.035 inch  
between B contact wire and CTRL terminal.

(2) To Check


Fully depress the CTRL keytop and then trip the keyboard. Release the CTRL keytop. Lightly take up all play in contact block towards the left.

Requirement


Min 0.015 inch---Max 0.030 inch  
between A contact wire and CTRL terminal.

To Adjust


Bend contact wire(s) with TP185829 bending tool as shown.

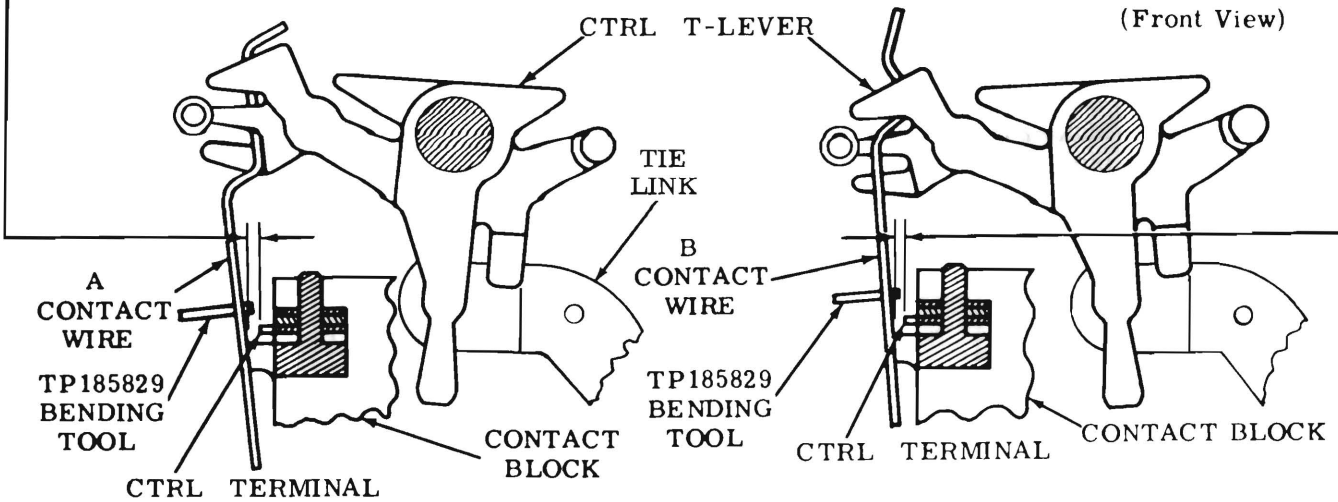

2.06 Contact Block Spring and Contact Wire Spring

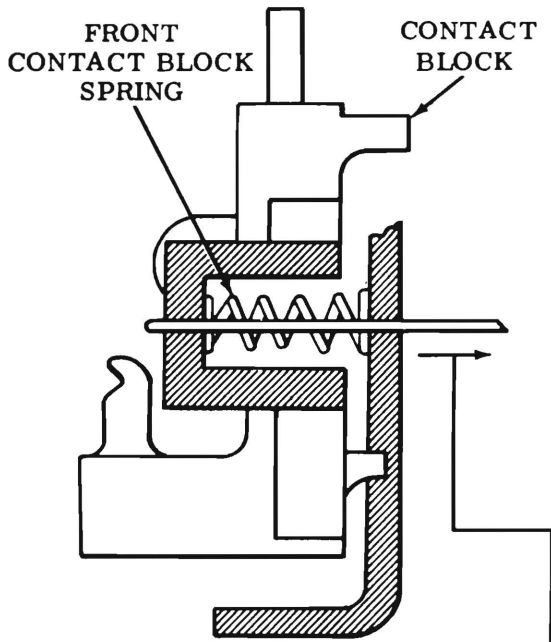

(Front View)

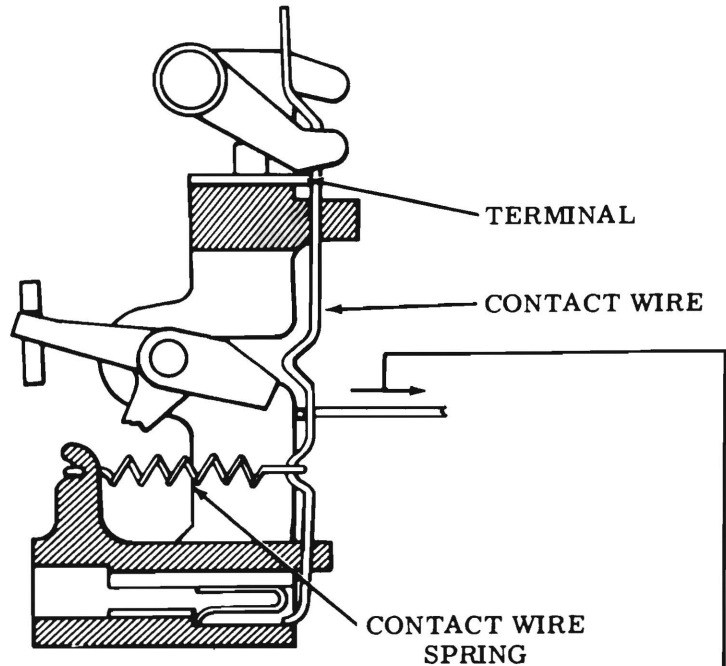

(Front View)

CONTACT BLOCK SPRING

**Requirement**

Min 18 oz---Max 42 oz  
to start contact block moving.

Note: Check both front and rear contact block springs.

CONTACT WIRE SPRING

**To Check**

Push universal lever down until latched by latchlever. Place T-levers down in marking position. Trip keyboard by depressing universal codebar.

**Requirement**

Min 3/4 oz---Max 1-1/4 oz  
to start each contact wire moving away from terminal.

2.07 Spacebar Spring and Keylever Spring

Note: The SPACEBAR SPRING and KEYLEVER SPRING adjustments do not apply to keylever springs associated with the SPACE, BLOCK, hyphen, or O keytops found on numeric-type keyboards.


SPACEBAR SPRING

To Check

Push universal lever down until latched by latchlever. Depress spacebar and then release.

Requirement

Min 5 grams---Max 25 grams to start spacebar moving.

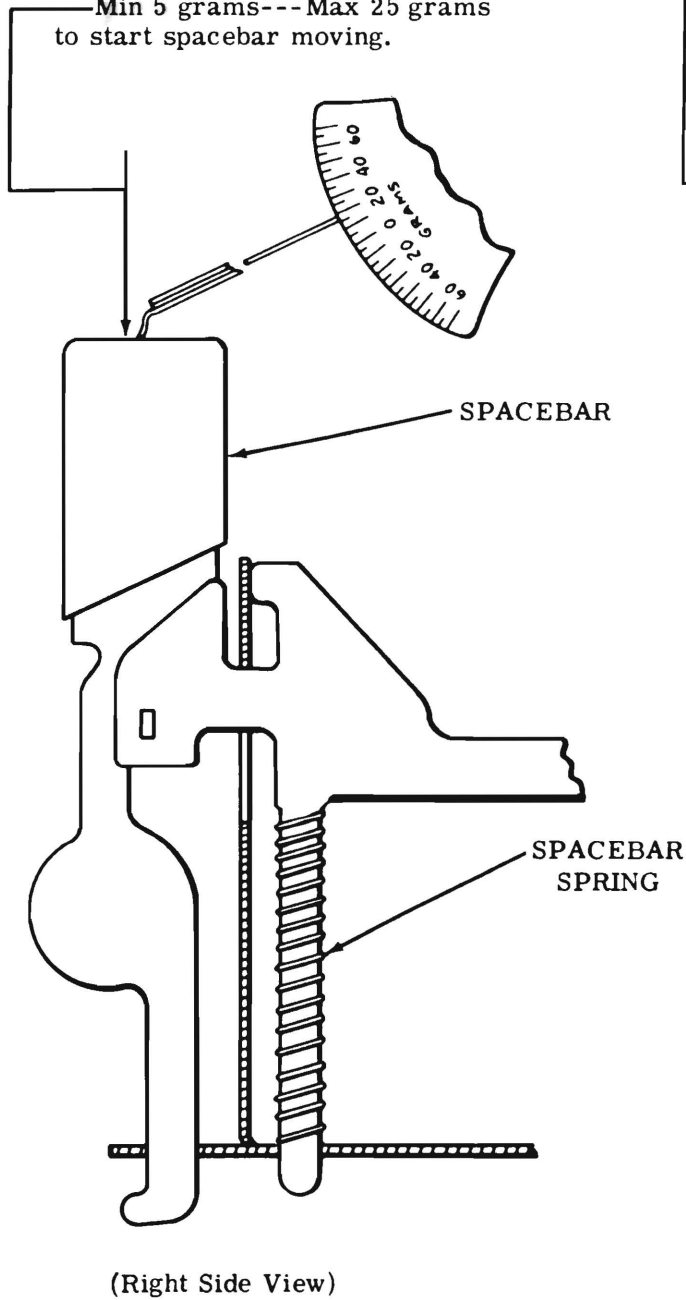

KEYLEVER SPRING


To Check

Push universal lever down until latched by latchlever. Select any keytop and depress. Release keytop.

Requirement

Min 5 grams---Max 30 grams to start selected keytop moving.

Note: Check each keylever spring.

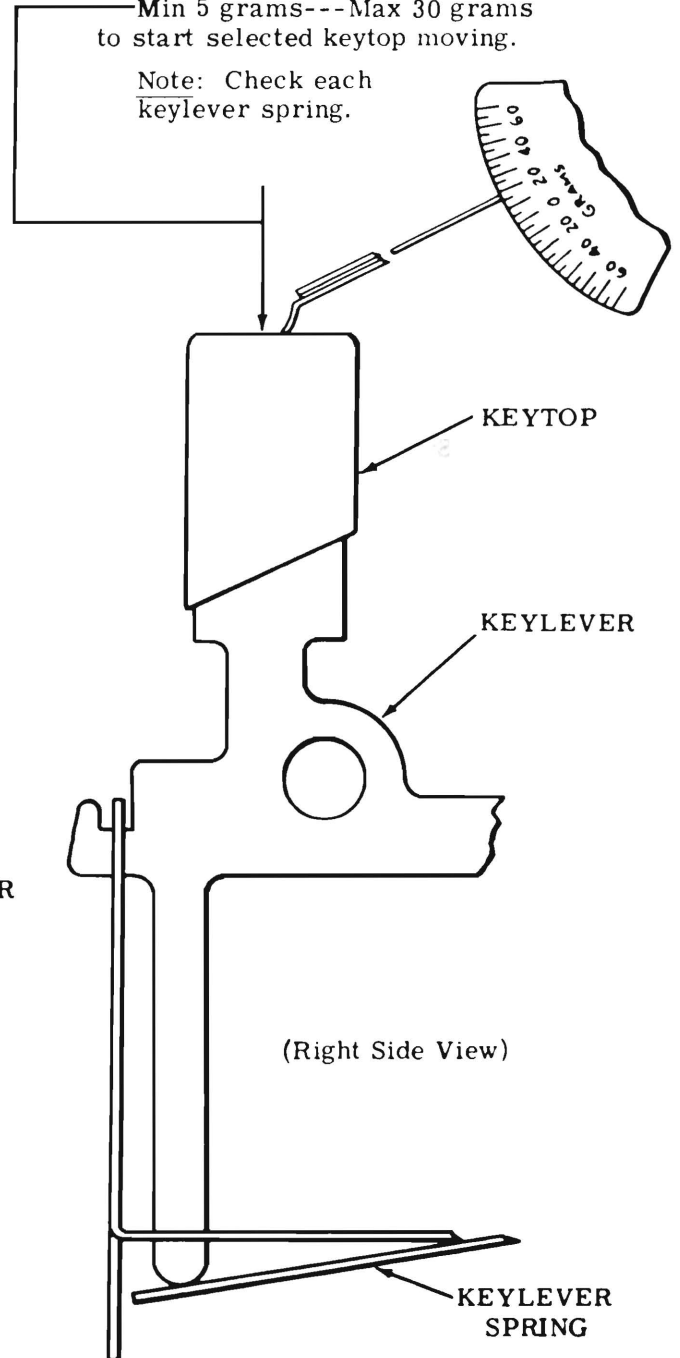

2.08 HERE IS, BREAK, CTRL, and REPT Keylever Springs

"BREAK" KEYLEVER SPRING

Requirement

Min 4-1/2 oz---Max 10 oz  
to start keytop moving.

"CTRL" KEYLEVER SPRING

Requirement

Early design keyboards equipped with TP180102  
keylever spring:  
Min 1-1/2 oz---Max 3-1/2 oz  
to start keytop moving.

Late design keyboards equipped with TP185780  
keylever spring:

Min 4-1/2 oz---Max 6-1/2 oz  
to start keytop moving.

"HERE IS" KEYLEVER SPRING


Requirement

Min 18 grams---Max 35 grams  
to start keytop moving.

"REPT" KEYLEVER SPRING

Requirement

Min 15 grams---Max 30 grams  
to start keytop moving.

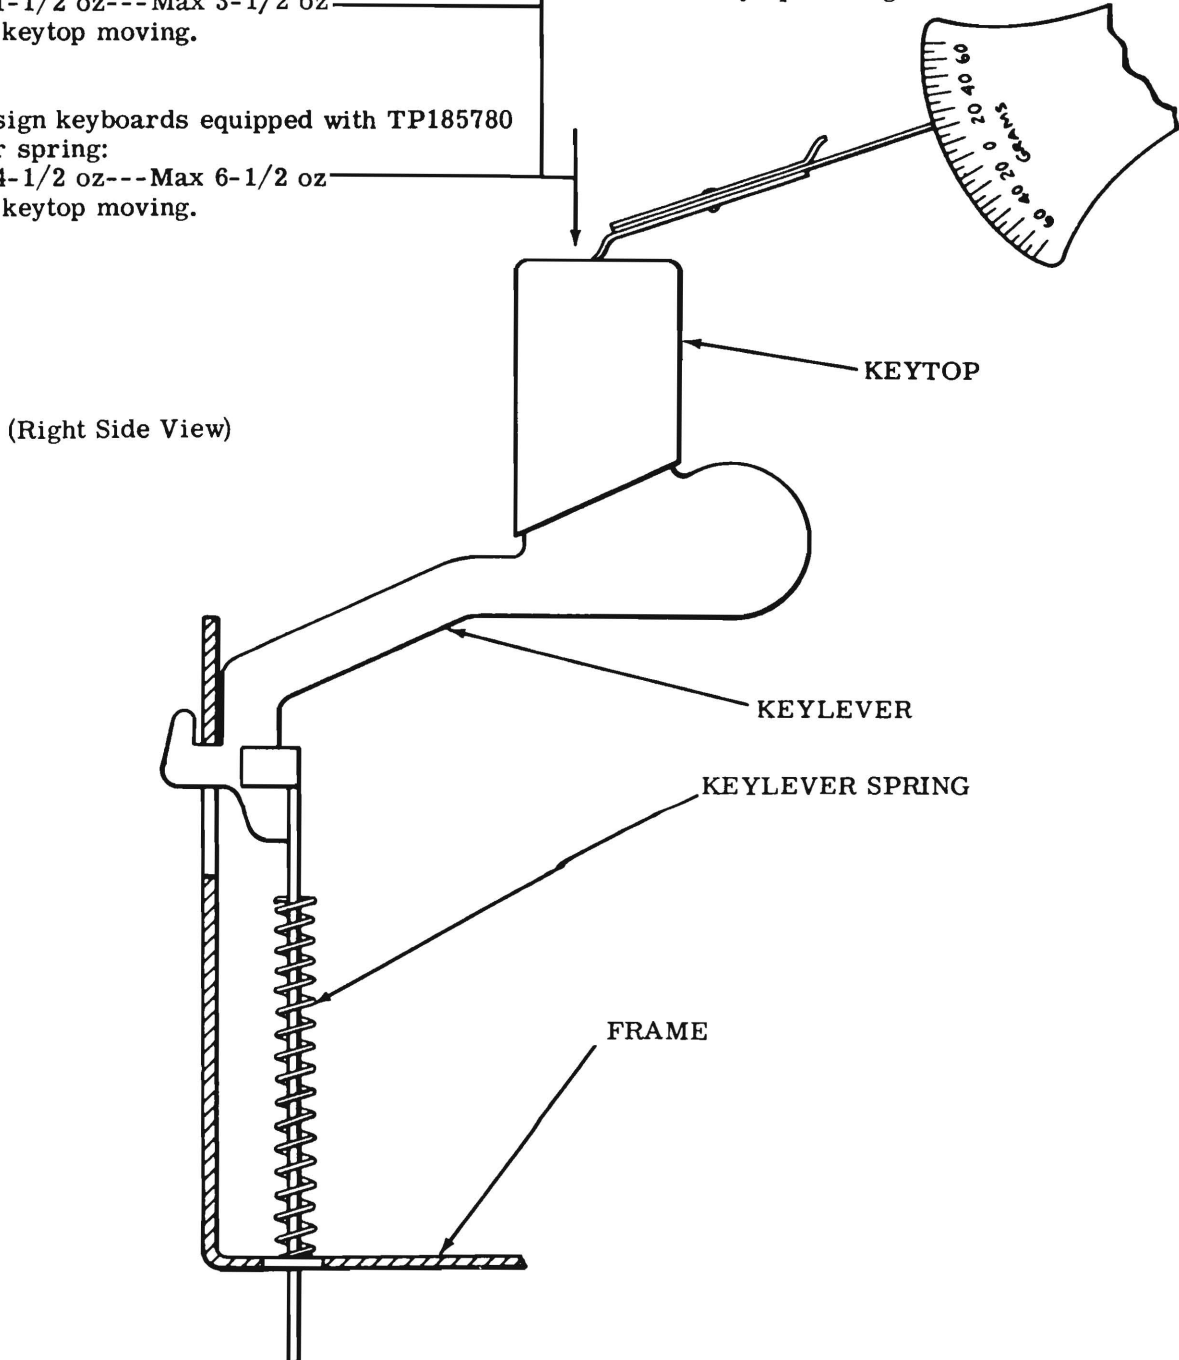

2.09 SPACE, BLOCK, Hyphen, or O Keylever Springs

KEYLEVER SPRINGS (SPACE, BLOCK, HYPHEN, O KEYTOPS)

Note 1: This adjustment applies only to keylever springs associated with SPACE, BLOCK, hyphen, or O keytops found on numeric-type keyboards.


To Check

Push universal lever down until latched by latchlever. Depress either the SPACE, BLOCK, hyphen, or O keytop. Release selected keytop.

Requirement

Min 20 grams---Max 65 grams  
to start selected keytop moving.

Note 2: Repeat above procedure for each of the SPACE, BLOCK, hyphen, and O keytops.

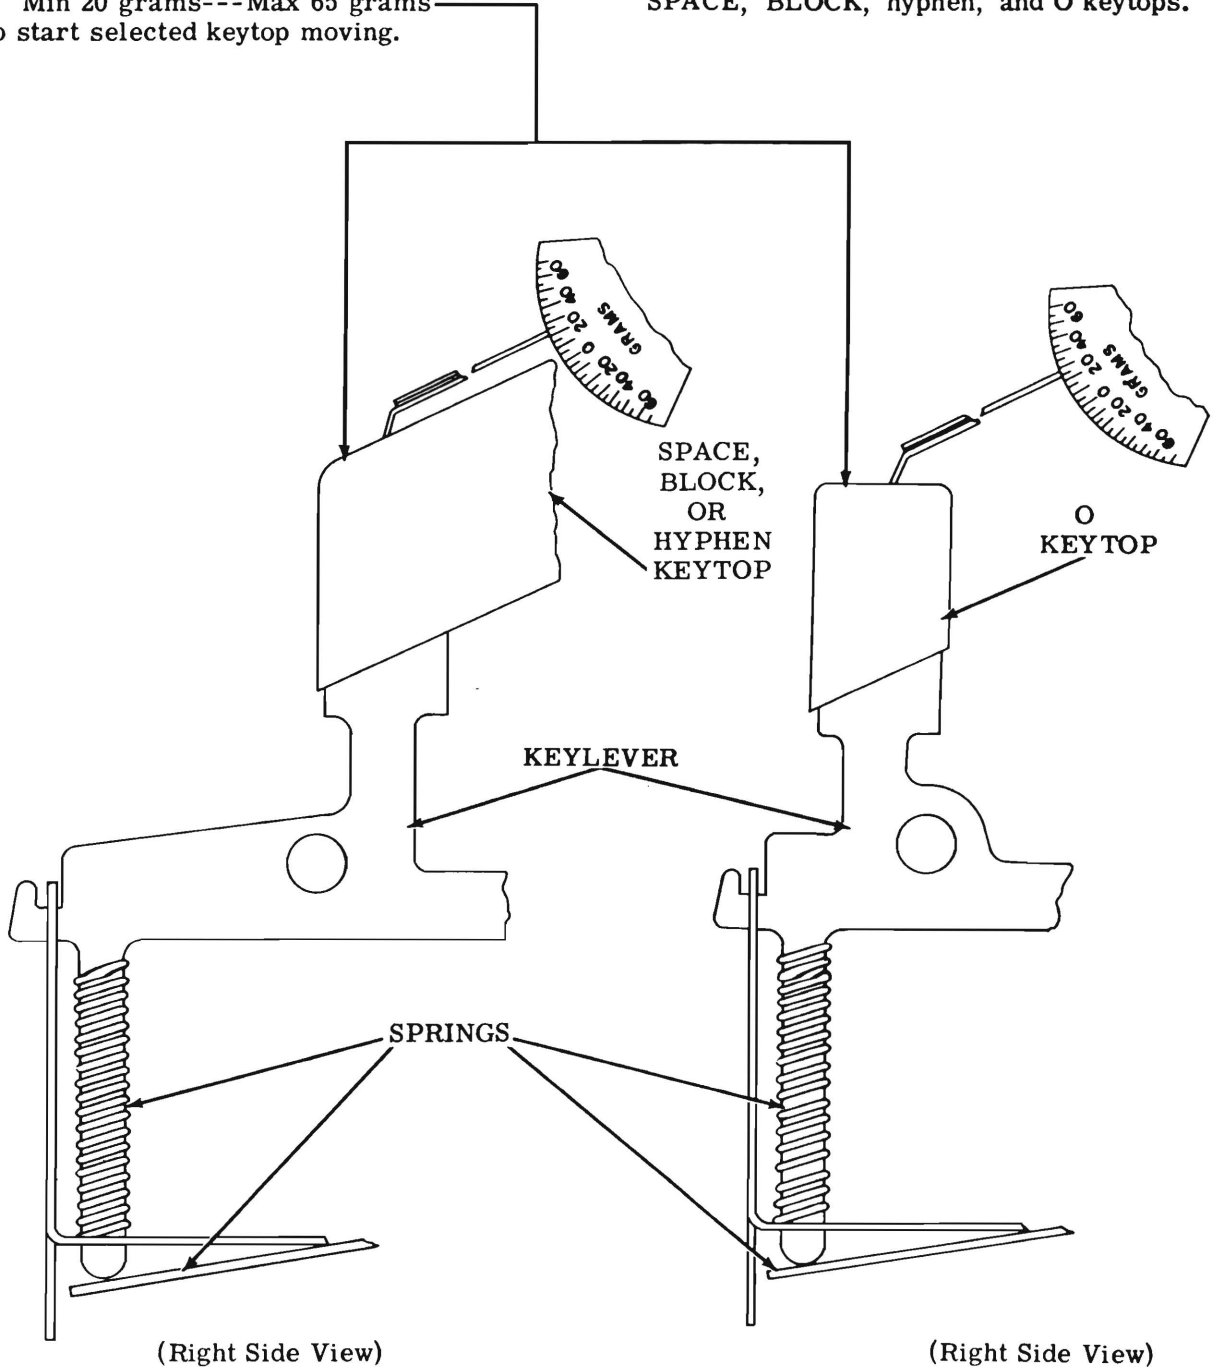

2.10 Reset Bail Spring


RESET BAIL SPRING

To Check

Push universal lever down until latched by latchlever. Trip keyboard by depressing RUB-OUT keytop.

Requirement

Min 1-1/4 oz---Max 2-1/2 oz  
to start reset bail moving.

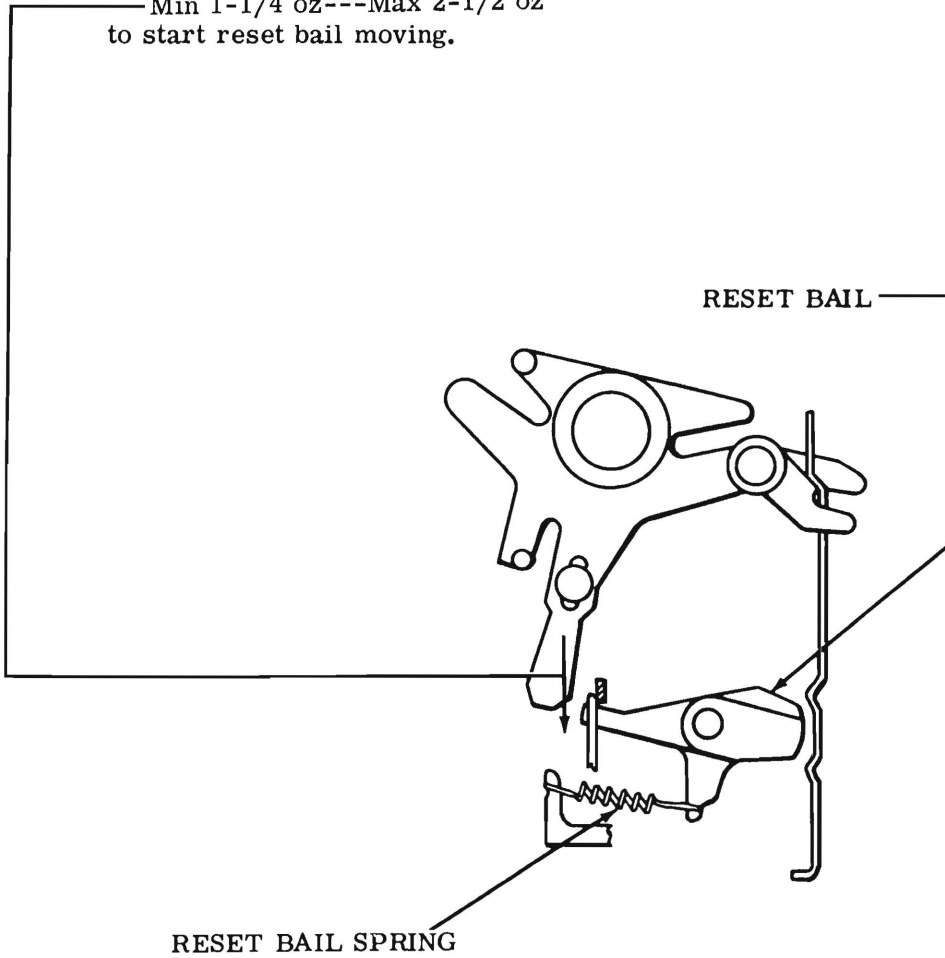

(Front View)

2.11 Universal Link Spring


UNIVERSAL LINK SPRING

To Check

Push universal lever down until latched by latchlever. Trip keyboard by depressing universal codebar.

Requirement

Min 1/2 oz---Max 1-1/4 oz  
to start universal link moving.

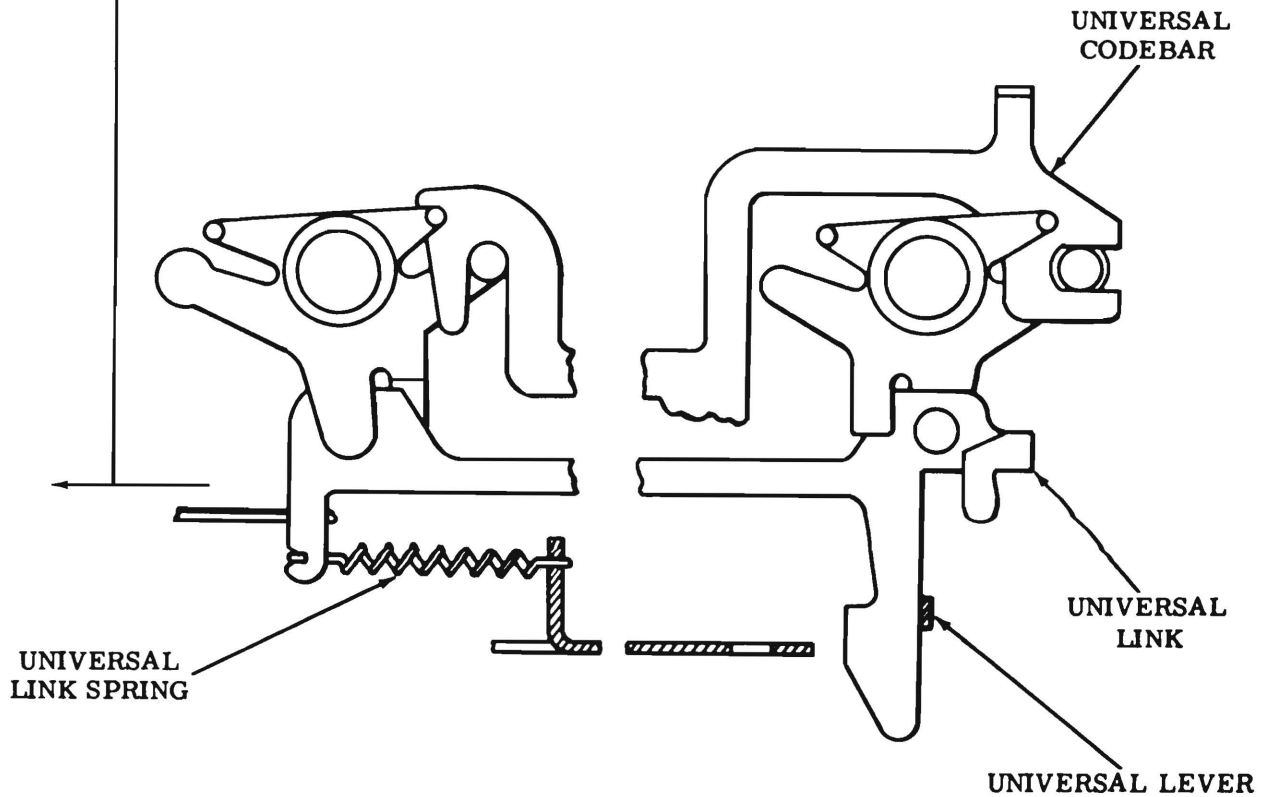

(Front View)


2.12 Shift Codebar Spring

SHIFT CODEBAR SPRING

Requirement


Nonparity keyboards.

—Min 1-1/4 oz---Max 2-1/2 oz  
to start shift codebar tie link moving.

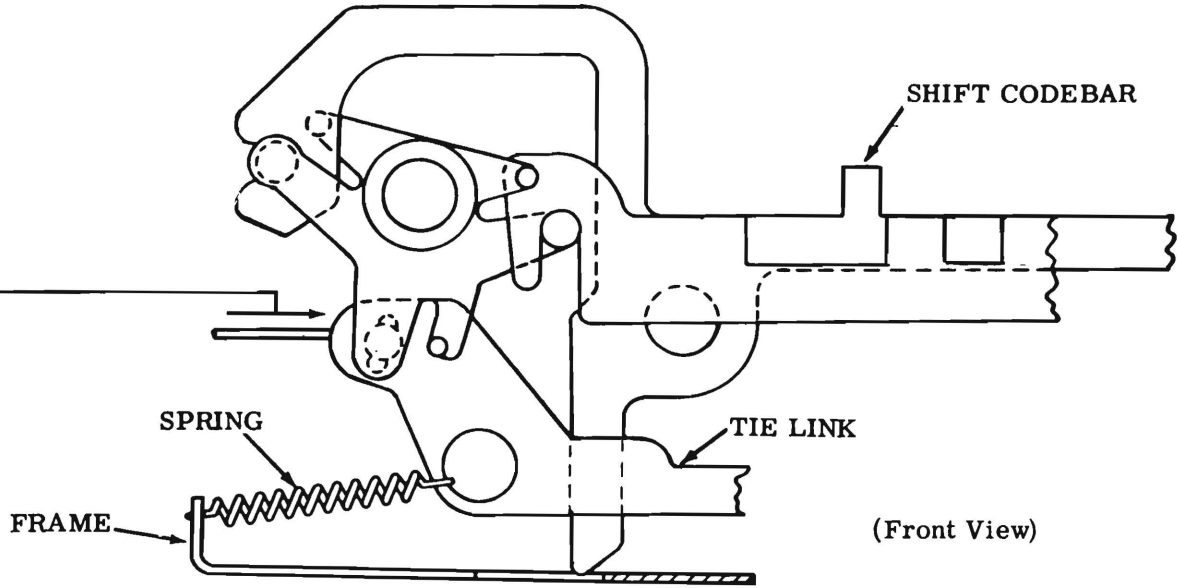

Parity keyboards:

—Min 2 oz---Max 3-3/4 oz  
to start shift codebar tie link moving.

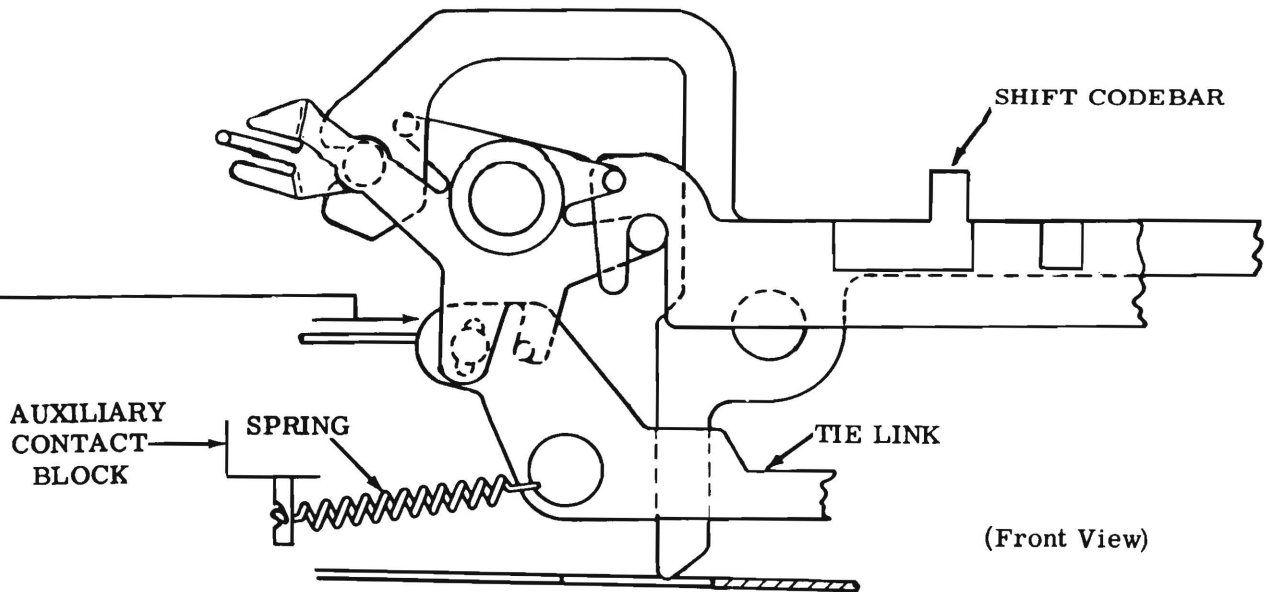


2.13 Nonrepeat Lever Spring

Note: Remove keyboard cover For disassembly instructions, see appropriate keyboard section.

NONREPEAT LEVER SPRING

To Check  
Push universal lever down until latched  
by latchlever.

Requirement  
Min 1/4 oz---Max 3/4 oz  
to start nonrepeat lever moving.

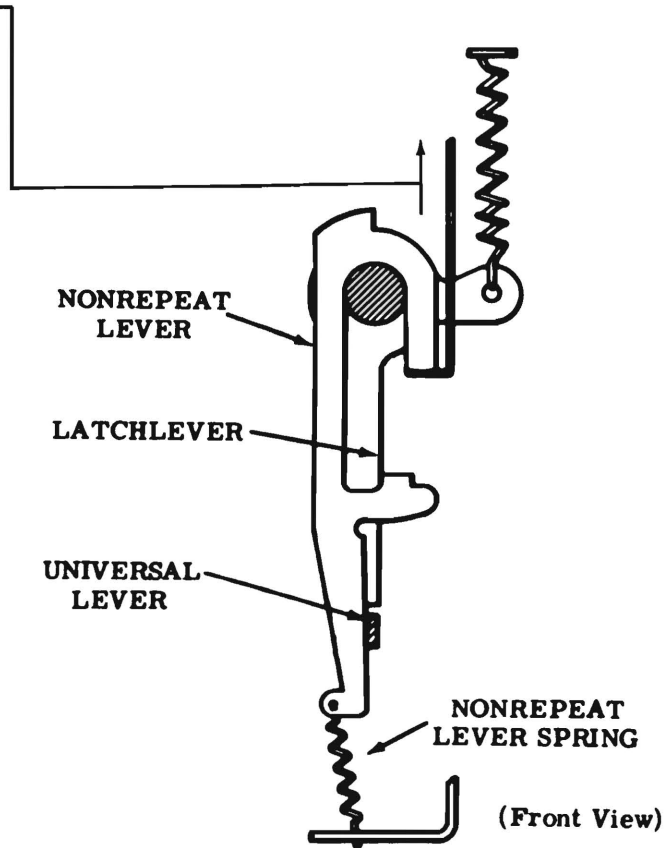

2.14 Universal Lever Spring


UNIVERSAL LEVER SPRING

To Check

Push universal lever down until latched by latchlever. Hold reset bail away from universal lever.

Requirement

Min 1/2 oz---Max 1-1/2 oz  
to start universal lever moving.

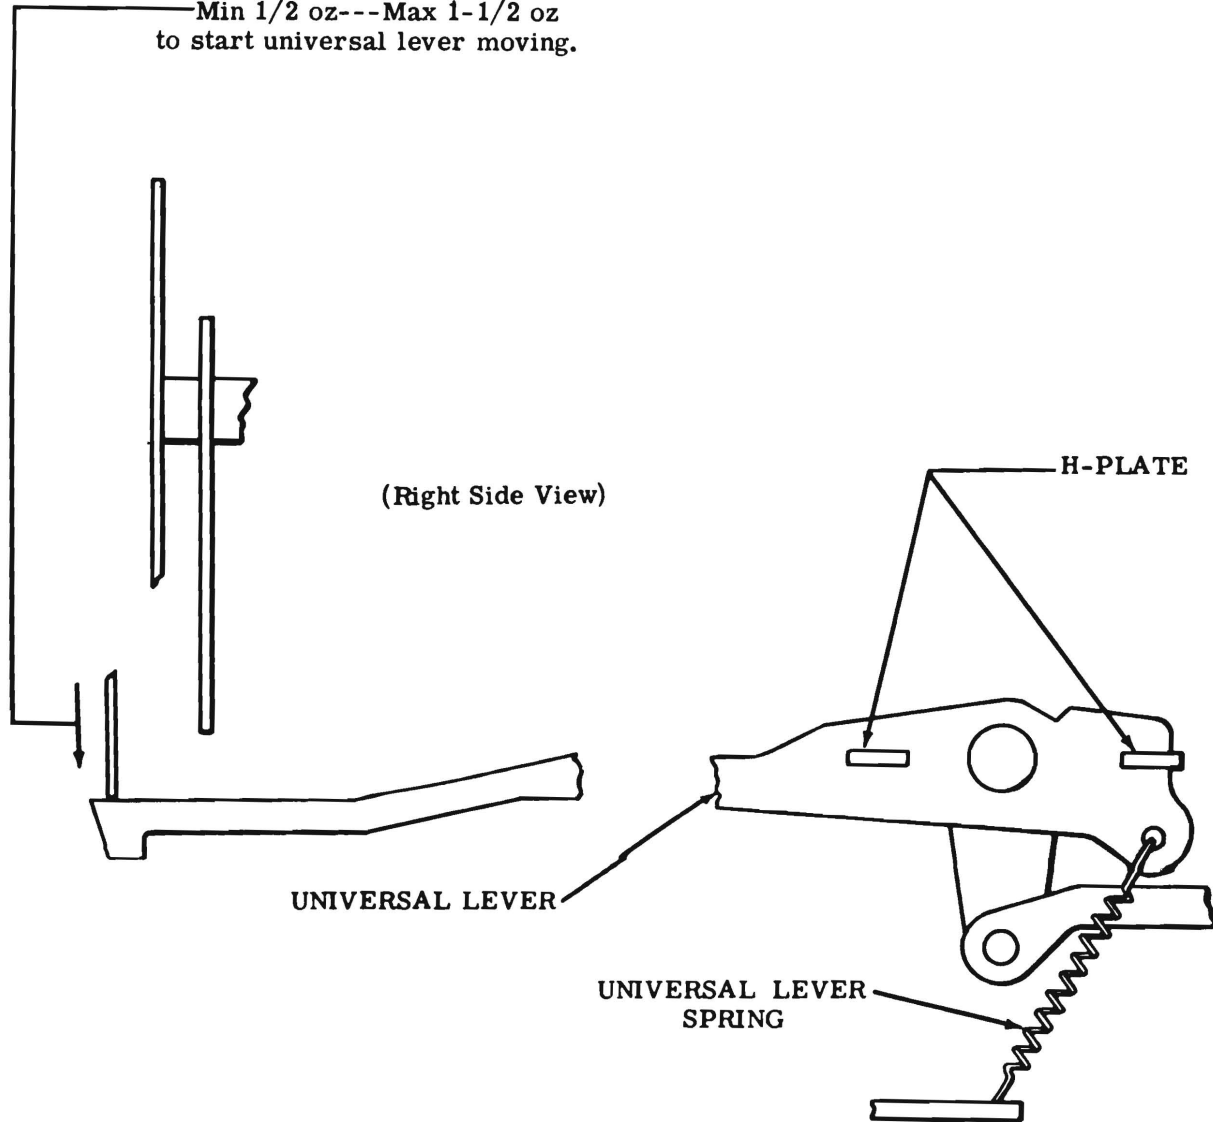

Note: Replace keyboard cover and reassemble keyboard (including H-plate) onto subbase. For reassembly instructions, see the appropriate keyboard section.

## 2.15 Latchlever Spring


LATCHLEVER SPRING**To Check**

Place typing unit in stop condition. Trip distributor clutch and rotate main shaft until keyboard follower lever is moved by cam roller to its lowest point.

**Requirement**

Min 1/2 oz---Max 1 oz  
to start latchlever moving.

Note: Replace call control unit onto subbase. For reassembly instructions, see appropriate keyboard section.

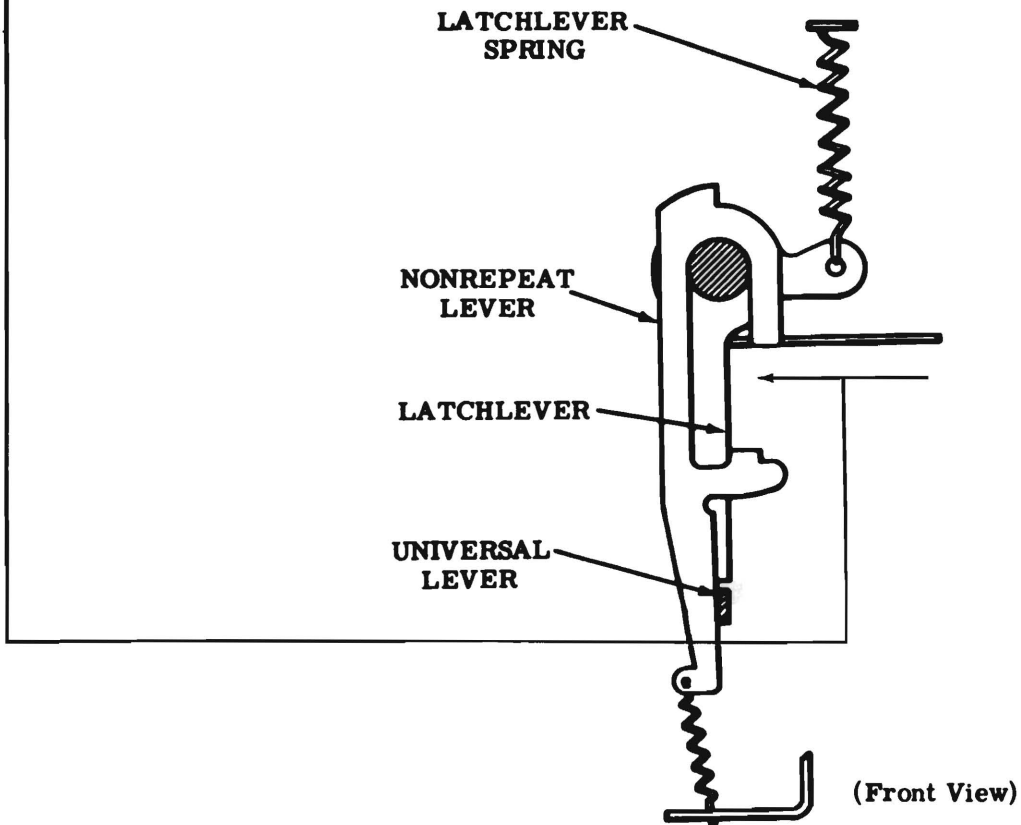

2.16 Distributor Trip Linkage

DISTRIBUTOR TRIP LINKAGE - Method 1  
 (Using the TP186308 keyboard adjusting gauge)

To Check

Place the typing unit in stop condition. Depress RUB-OUT key to trip distributor clutch. From the front of the keyboard, manually push the universal lever down to its latched position. Place the TP186308 gauge on front of keyboard frame. Rotate distributor shaft until its cam post (LATE DESIGN) or cam roller (EARLY DESIGN) is on the high part of the cam follower lever camming surface.

Requirement

The top edge of the universal lever, which is now in the lowest position, should be within the thickness of the gauge's lower tab as gauged by eye.


To Adjust

Loosen clamp screw friction tight. Using pry points and slot in casting position trip linkage adjusting bracket until requirement is met. Tighten clamp screw.

Related Adjustment

Affects

TRIP LEVER ENGAGEMENT (See appropriate typing unit section.)

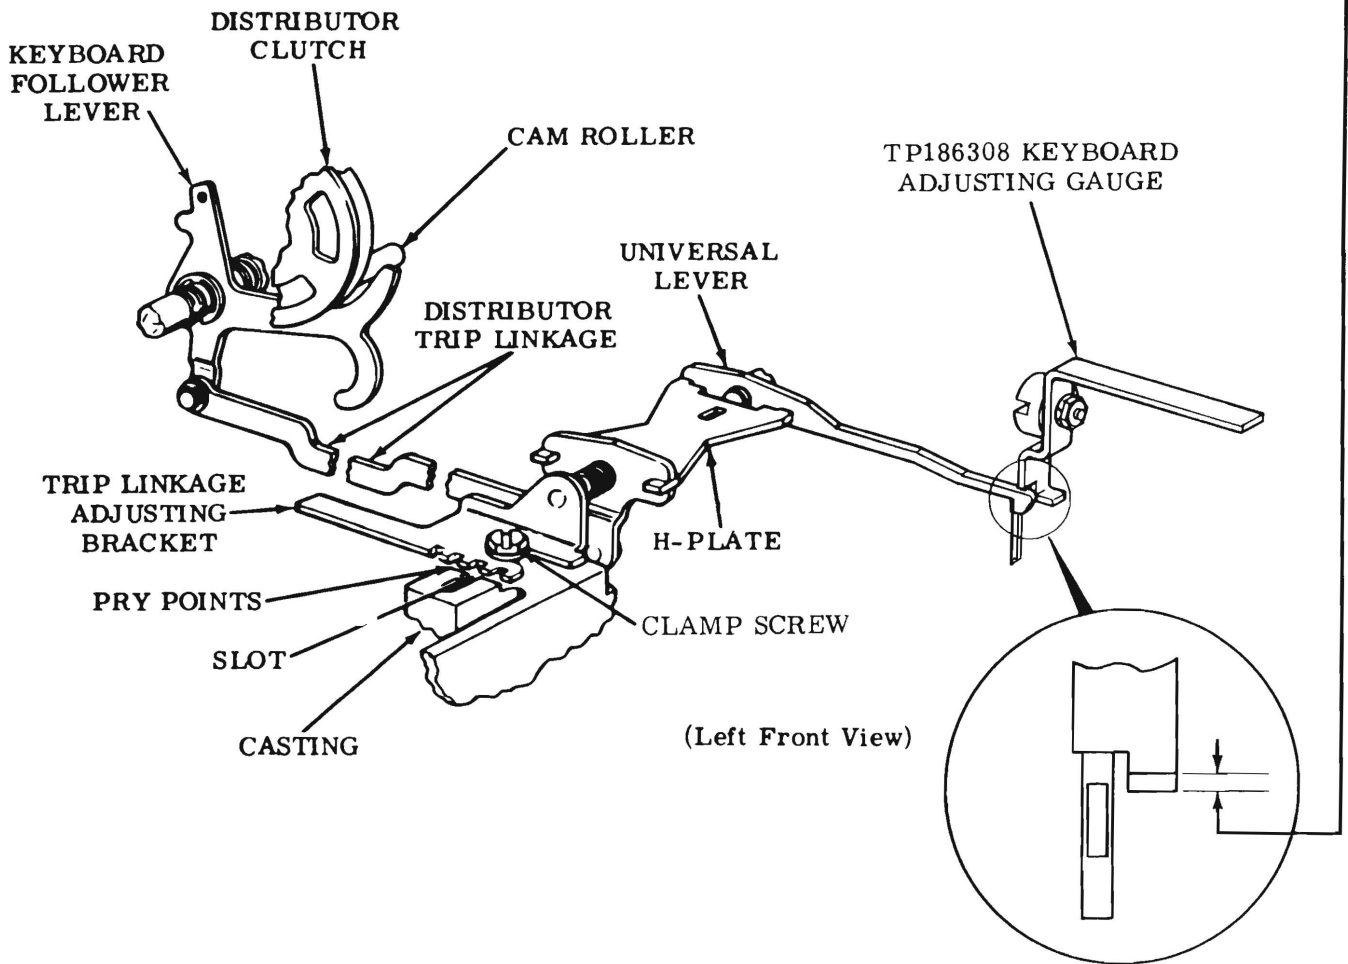


## 2.17 Distributor Trip Linkage (continued)

**DISTRIBUTOR TRIP LINKAGE** - Method 2  
(Not using the TP186308 keyboard adjusting gauge)

Note: The requirement applies to early and late design keyboards having the TP180086, TP182240, or TP185766 universal lever.

**To Check**

Place the typing unit in stop condition. Depress the RUB-OUT key to trip the distributor clutch. Rotate the distributor shaft until the keyboard follower lever is on the high part of its cam. Push against reset bail spring anchor with just enough force to slightly move the reset bail, then release.

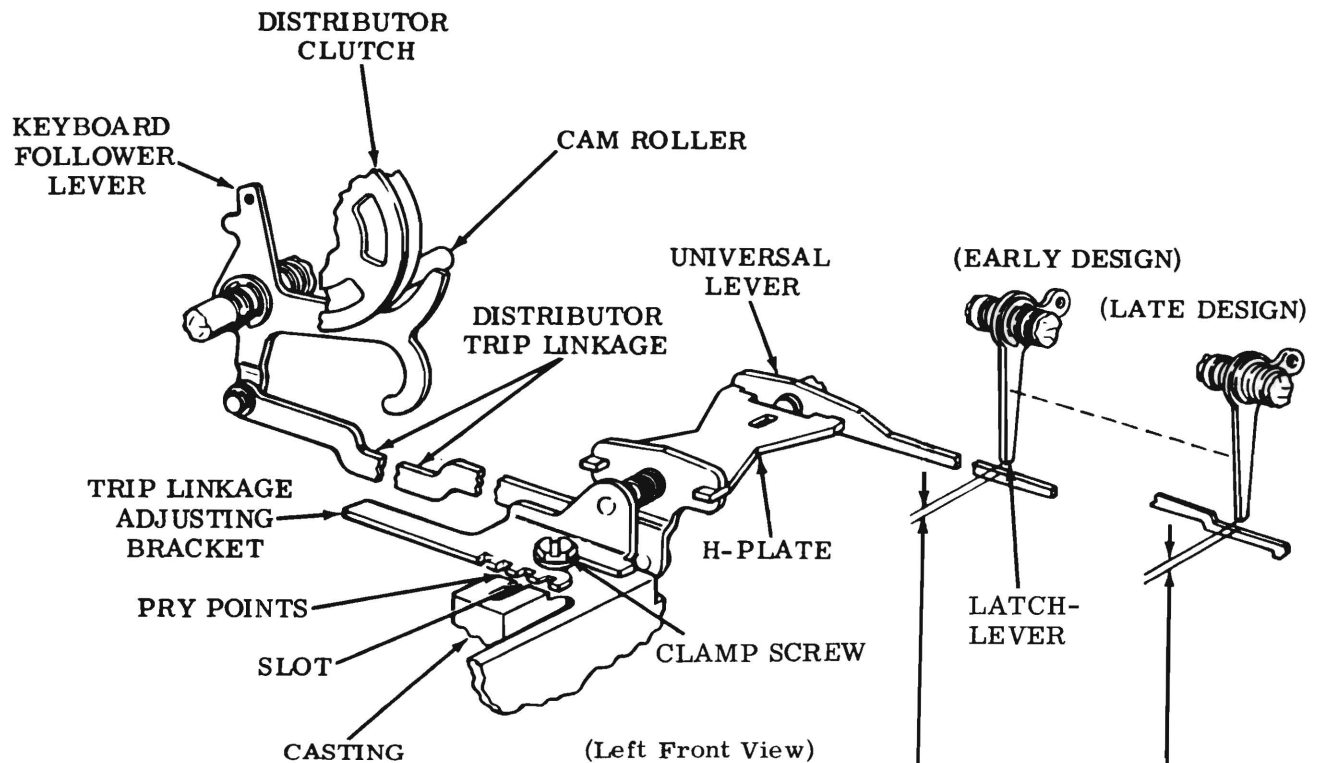**Requirement**


Min 0.014 --- Max 0.058 inch  
between latchlever and universal lever.

**To Adjust**


Loosen clamp screw friction tight. Using pry points and slot in casting, position trip linkage adjusting bracket until requirement is met. Tighten clamp screw.

**Related Adjustment****Affects**

TRIP LEVER ENGAGEMENT (See appropriate typing unit section.)

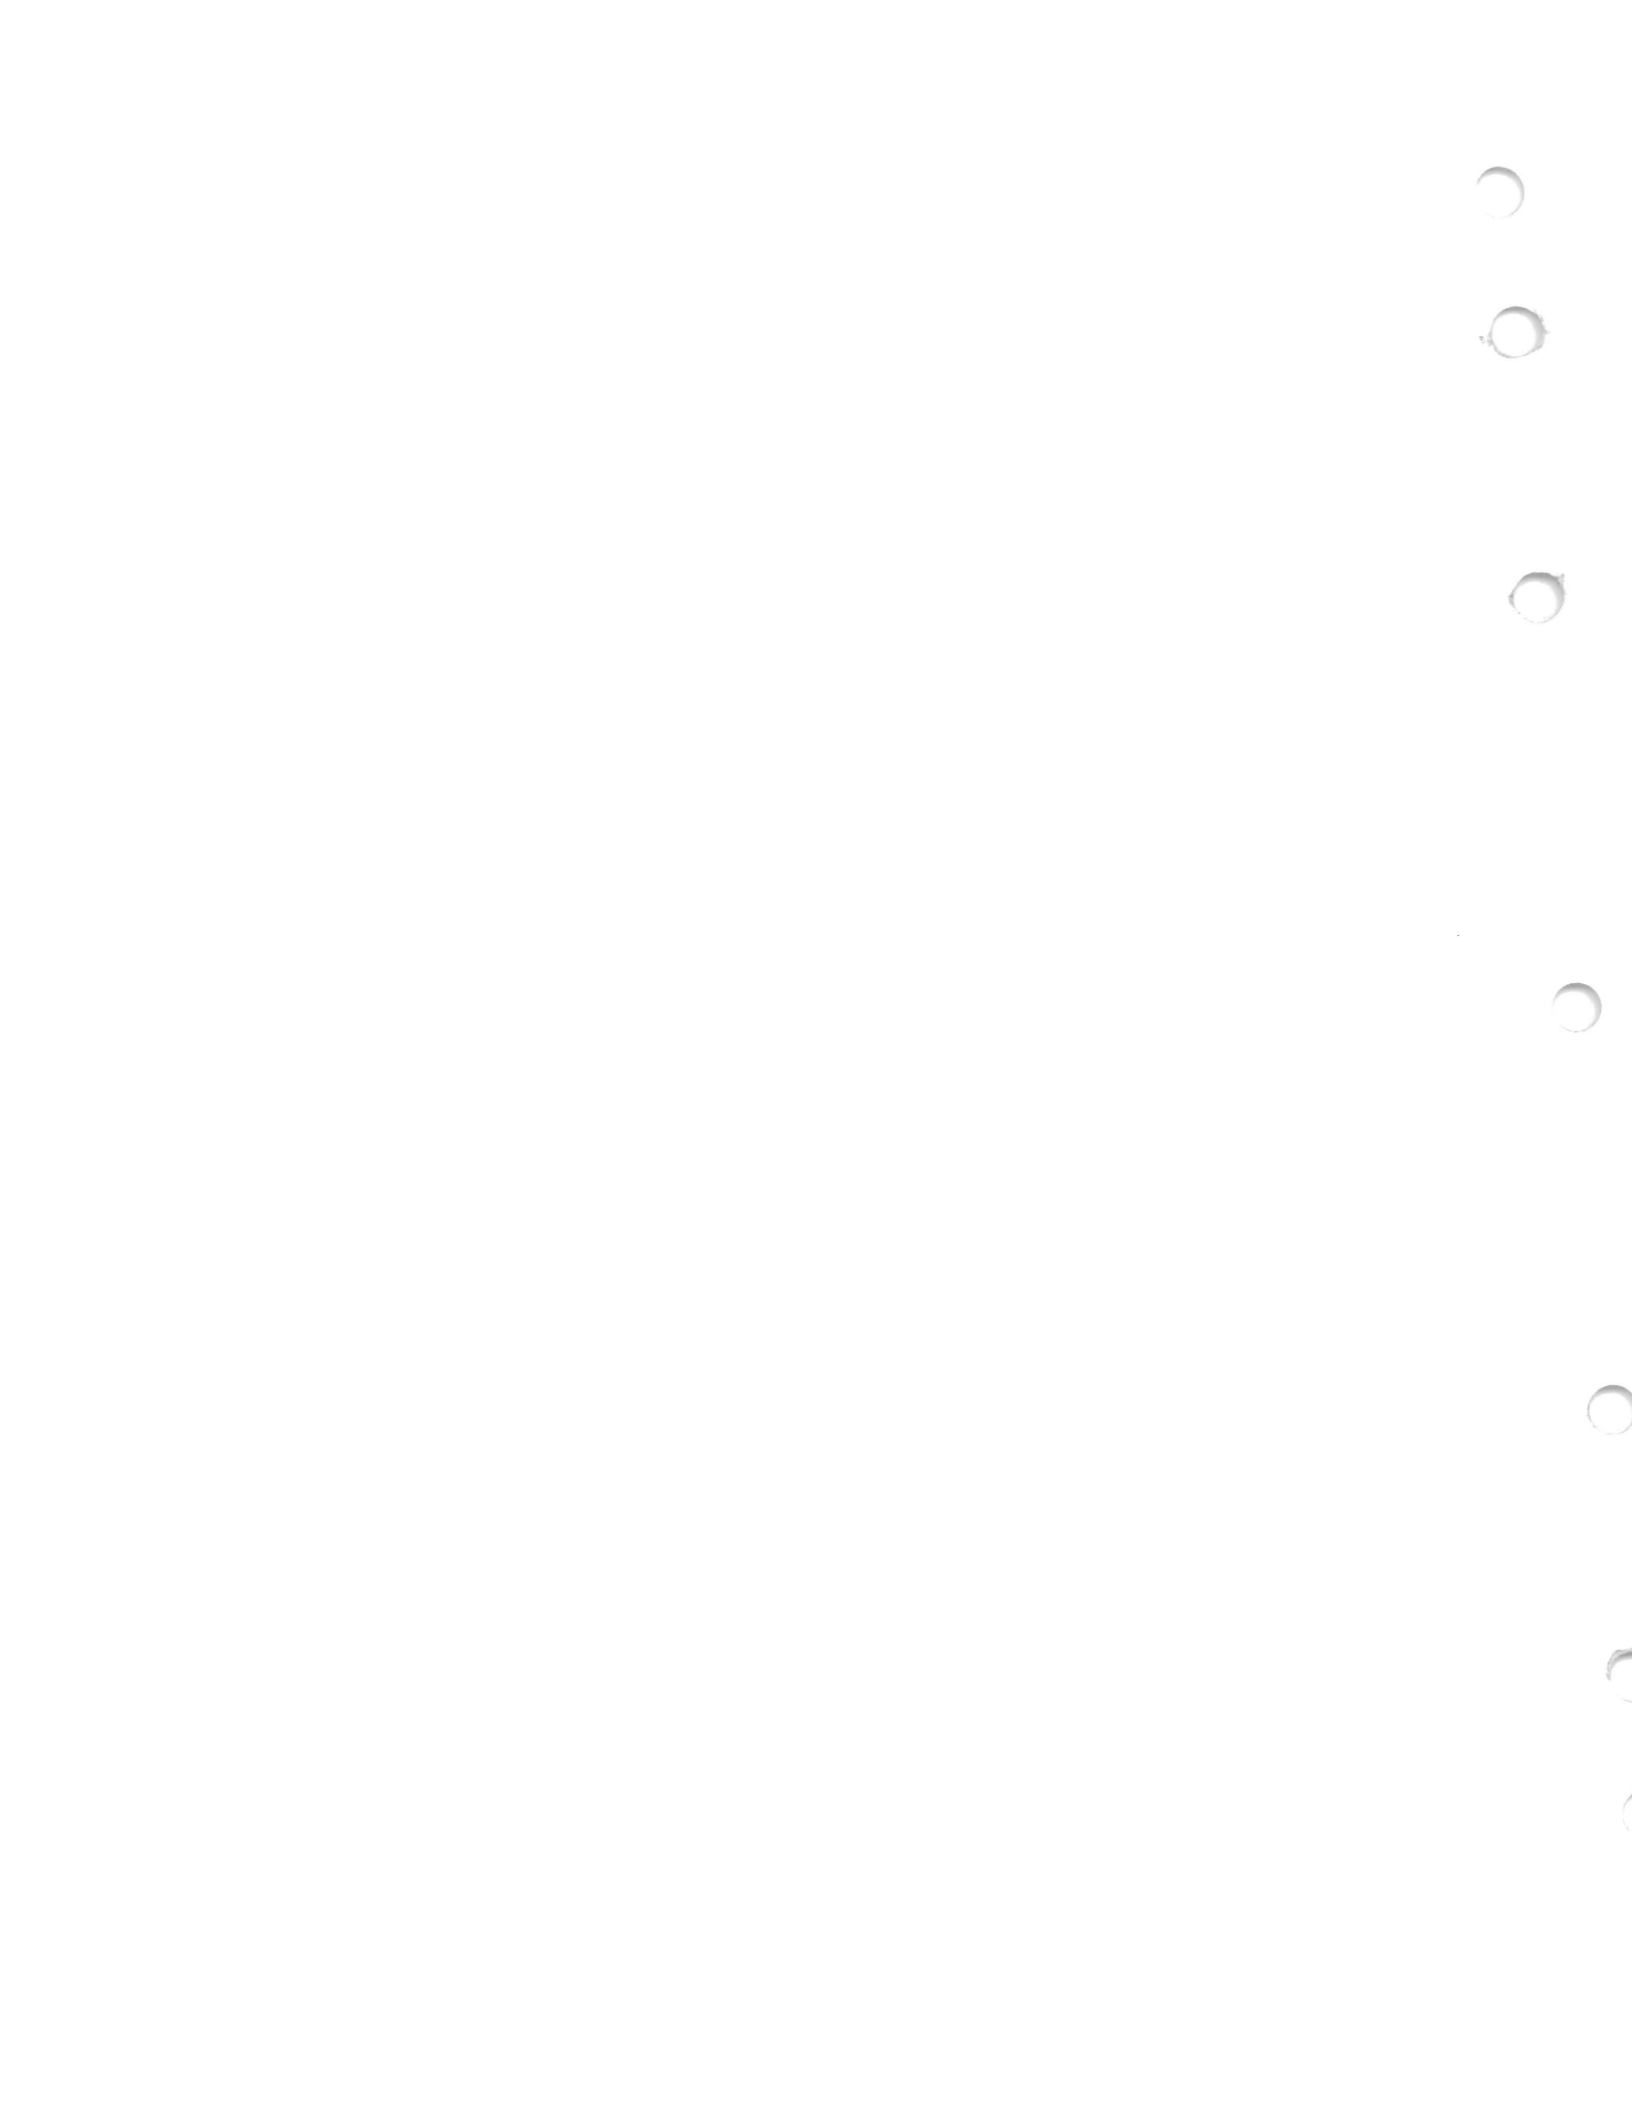



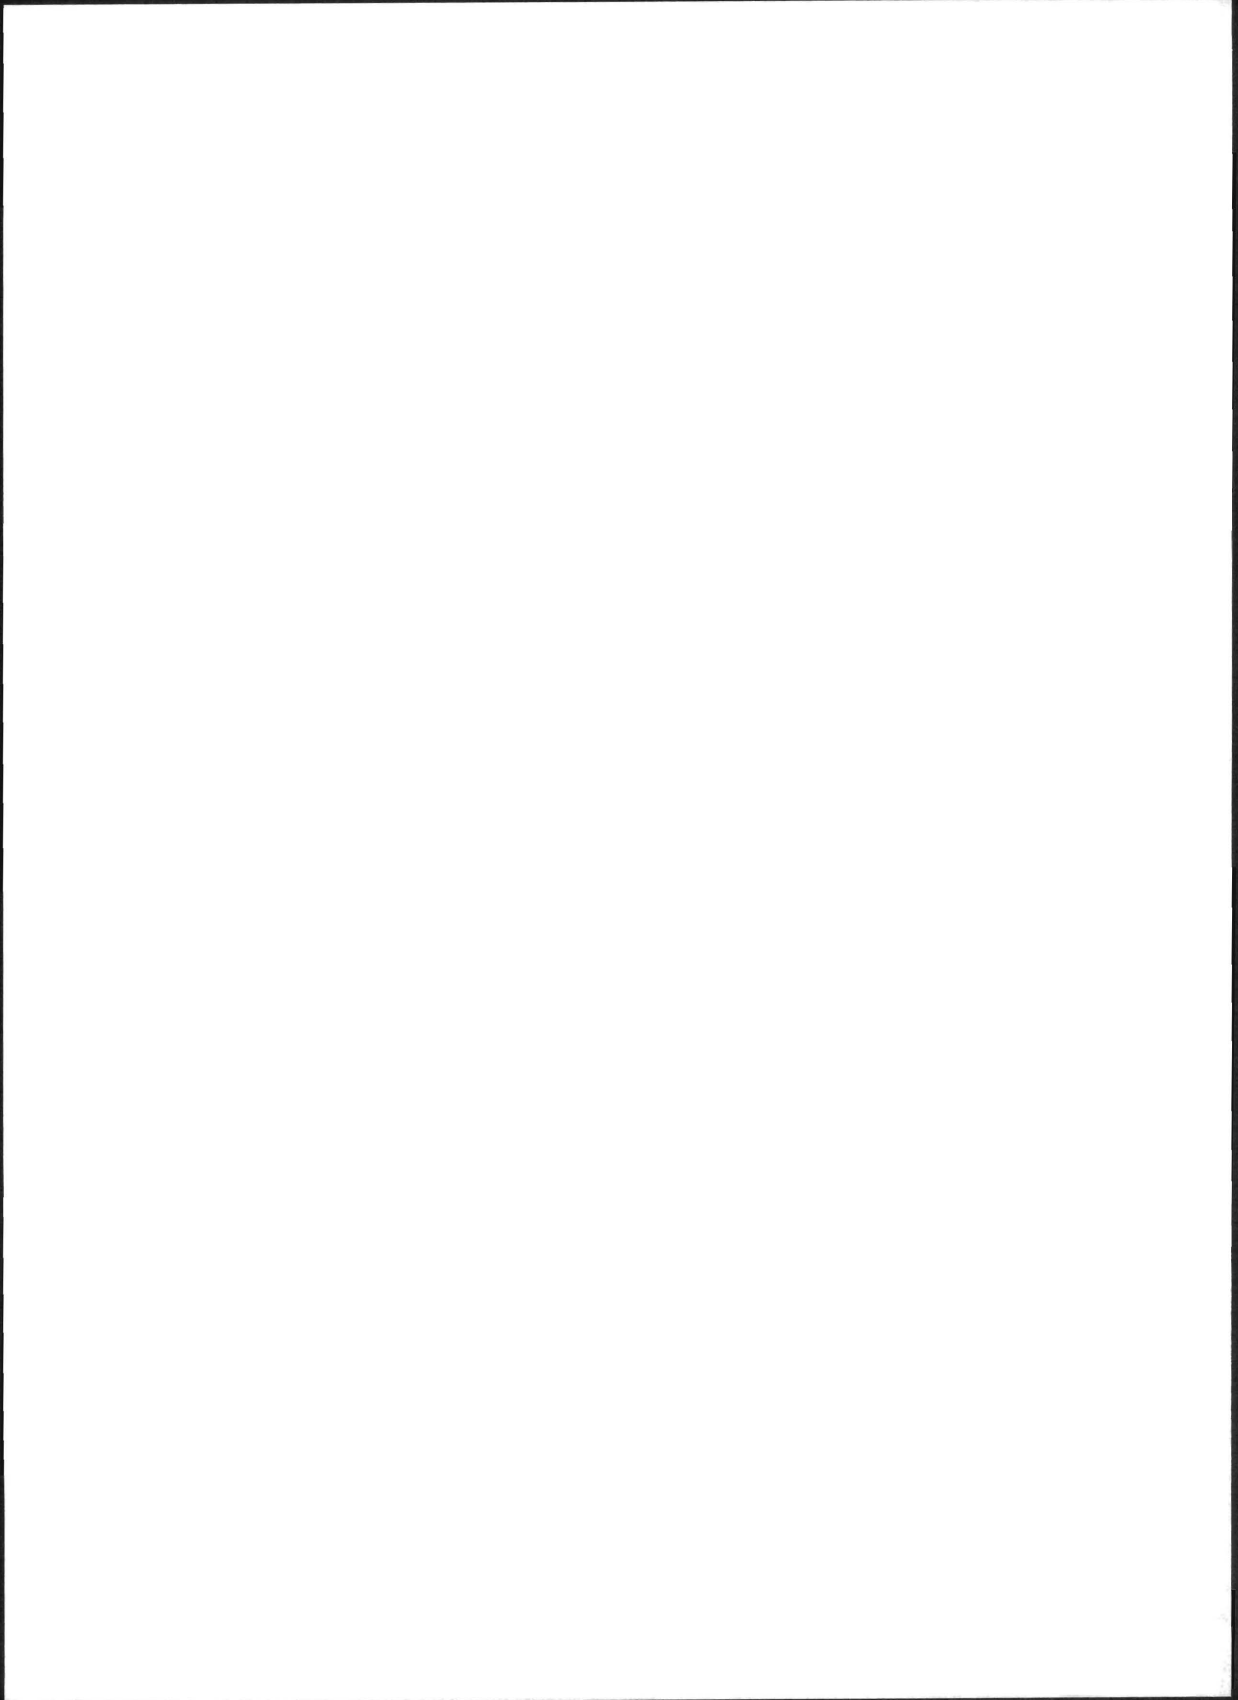

33 TYPING UNIT

ADJUSTMENTS

CONTENTS	PAGE	CONTENTS	PAGE
1. GENERAL . . . . .	4	Keyboard follower lever spring . . .	17
2. BASIC UNIT . . . . .	9	Shaft left bearing gap . . . . .	11
Carriage Area		Stop bail spring . . . . .	17
Final printing alignment . . . . .	131	Trip lever engagement . . . . .	14
Fourth pulse linkage positioning . . . .	55	Trip shaft position . . . . .	12
Front rollers clearance . . . . .	51	Form Feed Area	
Left slide guideplate reset . . . . .	61	Cam lobe position - S . . . . .	106
Power bail roller clearance . . . . .	52	Clutch shoe lever gap - S . . . . .	102
Print drive lever positioning . . . . .	56	Form feed belt tension - S . . . . .	101
Print hammer bail spring . . . . .	67	Form-out bail spring - S . . . . .	120
Print hammer trip lever release . . . .	62	Form-out contact operating bail	
Print hammer trip lever reset . . . . .	63	clearance - S . . . . .	120
Print hammer trip lever spring . . . .	67	Form-out contact pressure and	
Print suppression latchlever		gap - S . . . . .	120
endplay . . . . .	58	Form-out lever overtravel - S . . . .	105
Print suppression latchlever		Form-out lever — reset clearance	
release . . . . .	65	- S (early design) . . . . .	108
Rack and pinion backlash . . . . .	52	Form-out lever — reset clearance	
Rear rail position . . . . .	53	- S (late design) . . . . .	109
Rear roller clearance . . . . .	54	Form-out lever spring - S . . . . .	105
Reset lever positioning . . . . .	57	Latchlever assembly spring - S . . .	105
Ribbon drive lever spring . . . . .	71	Latchlever spring - S . . . . .	102
Ribbon feed pawl spring . . . . .	71	Line feed bail spring - S . . . . .	115
Ribbon guide spring . . . . .	67	Line feed lever line-up and	
Ribbon positioning . . . . .	64	endplay - S . . . . .	104
Ribbon power lever drive . . . . .	70	Line feed lever spring - S . . . . .	115
Ribbon ratchet spring . . . . .	71	Line feed pawl stripping - S . . . . .	114
Ribbon reverse arm spring . . . . .	71	Line feed selection . . . . .	115
Right side guideplate reset . . . . .	60	Reset follower lever spring - S . . .	106
Rotary drive bail spring . . . . .	68	Trip lever engagement (final) - S	
Slide guideplate springs . . . . .	59	(late design) . . . . .	112
Slide springs . . . . .	69	Trip lever engagement — form-out	
Typewheel "home" position		- S . . . . .	110
(preliminary) . . . . .	66	Trip lever engagement — line feed	
Typewheel positioning (preliminary) .	59	- S (early design) . . . . .	111
Typewheel return spring . . . . .	68	Trip lever engagement —	
Vertical drive bail spring . . . . .	68	(preliminary) - S . . . . .	103
Distributor Area		Trip lever spring - S . . . . .	102
Brush holder gap . . . . .	11	Trip lever upstop position - S	
Brush holder position . . . . .	15	(early design) . . . . .	113
Brush holder spring . . . . .	16	Trip shaft endplay - S . . . . .	104
Clutch latchlever spring . . . . .	16	Function Area	
Clutch shoe lever gap . . . . .	13	Automatic codebar spring . . . . .	41
		Bearing alignment . . . . .	33

SECTION 574-122-700TC

CONTENTS	PAGE
Bell clapper gap . . . . .	50
Blocking lever springs . . . . .	39
Carriage drive bail endplay . . . . .	50
Carriage return lever — latch clearance . . . . .	49
Carriage return spring . . . . .	50
Codebar guide position . . . . .	40
Codebar reset bail spring . . . . .	36
Codebar reset guide position . . . . .	38
Codebar reset lever line-up . . . . .	35
Codebar reset lever position . . . . .	36
Codebar springs . . . . .	41
Coding and installation of TP180801 universal function lever . . . . .	155
End-of-line bell signal - S . . . . .	129
End-of-line latch spring . . . . .	80
Function bail spring . . . . .	45
Function lever code arrangement . . . . .	156
Function lever retainer . . . . .	45
Function lever springs . . . . .	43
Function pawl spring . . . . .	42
Function shaft and casting position . . . . .	48
Left rocker drive . . . . .	42
Line feed function strip lever spring - S . . . . .	43
Line length selection . . . . .	128
Main shaft rotation . . . . .	33
Margin bell bellcrank clearance . . . . .	129
Print suppression and no. 4 codebar spring . . . . .	41
Print suppression cam follower spring . . . . .	47
Print suppression latch — horizontal clearance . . . . .	37
Print suppression latch — vertical clearance . . . . .	47
Right rocker drive . . . . .	44
Rocker shaft position and endplay . . . . .	34
Selector blocking levers positioning . . . . .	39
Stripper bail clearance . . . . .	46
 Main Shaft Area	
Clutch shoe lever spring . . . . .	25
Clutch shoe spring . . . . .	25
Codebar and function clutch latchlever springs . . . . .	24
Codebar and function clutch shoe lever gaps . . . . .	24
Codebar clutch endplay . . . . .	20
Codebar clutch trip lever engagement . . . . .	22
Codebar clutch trip lever line-up . . . . .	21
Driven gear line-up . . . . .	20
Form feed clutch endplay - S . . . . .	100
Function clutch endplay . . . . .	19
Function clutch position (preliminary) . . . . .	19

CONTENTS	PAGE
Function clutch trip lever engagement . . . . .	23
Latchlever endplay . . . . .	100
Left bearing position . . . . .	18
Selector cam endplay . . . . .	18
Trip lever springs . . . . .	23
Trip shaft latchlever endplay . . . . .	21
 Motor Area	
Belt tension . . . . .	10
Gear backlash . . . . .	9
 Paper Controls	
Paper alarm contact lever clearance - S . . . . .	126
Paper alarm contact pressure and gap - S . . . . .	126
Paper lever spring - S . . . . .	126
 Platen Area	
Cam zero position . . . . .	117, 118
Copyholder wire position - F . . . . .	93
Detent position - F . . . . .	85
Detent position - S . . . . .	116
Detent ratchet pawl spring - S . . . . .	116
Form length selection - S . . . . .	119
Idler position - S . . . . .	107
Left margin position - F . . . . .	80
Left margin position - S . . . . .	125
Line feed blocking lever spring - F . . . . .	86
Line feed drive arm clearance - F . . . . .	87
Line feed drive link position - F . . . . .	89
Line feed drive link spring — horizontal - F . . . . .	86
Line feed drive link spring — vertical - F . . . . .	86
Line feed pawl downstop position - F . . . . .	90
Line feed pawl spring - F . . . . .	85
Line feed selection - F . . . . .	84
Line feed stripper plate clearance - F . . . . .	92
Line feed upstop bracket position - F . . . . .	88
Paper guide springs - F . . . . .	81
Paper guide spring - S . . . . .	94
Paper guideplate clearance - S . . . . .	99
Paper guideplate springs - F . . . . .	81
Paper guideplate spring - S . . . . .	94
Paper straightener bail spring - F . . . . .	81
Platen detent pawl spring - F . . . . .	89
Platen endplay - F . . . . .	95
Platen — horizontal position - F . . . . .	78
Platen — horizontal position - S . . . . .	96, 97
Platen knob position - S . . . . .	94
Platen knob spring - S . . . . .	94

CONTENTS	PAGE	CONTENTS	PAGE
Pressure roller clearance - F . . . . .	91	Armature spring . . . . .	143
Printing line position (final) - S . . . . .	122	Blocking follower lever spring . . . . .	133
Printing line position (preliminary) - S . . . . .	121	Blocking latch spring . . . . .	143
Reset follower lever — reset position - S . . . . .	117	Blocking link clearance . . . . .	132
Right margin position - S . . . . .	125	Character suppression contact wire gap . . . . .	142
Right paper guide position - S . . . . .	123	Coding the answer-back drum . . . . .	158
Vertical type alignment - F . . . . .	79	Contact wire spring . . . . .	145
Vertical type alignment - S . . . . .	97, 98	Control lever spring — horizontal . . . . .	133
Wire guide position - S . . . . .	124	Control lever spring — vertical (early design) . . . . .	143
Zeroizing button - S . . . . .	107	Control lever spring — vertical (late design) . . . . .	144
Selector Area		Detent spring . . . . .	145
Armature bracket position (preliminary) . . . . .	26	Drum position . . . . .	134
Armature spring . . . . .	28	Feed lever position . . . . .	136
Latchlever spring . . . . .	29	Feed lever spring . . . . .	146
Pushlever springs . . . . .	31	Feed pawl position . . . . .	137
Receiving margins . . . . .	130	Feed pawl spring . . . . .	145
Selector clutch torque . . . . .	32	HERE IS bellcrank positioning . . . . .	138
Selector lever springs . . . . .	30	Tripbail positioning . . . . .	139
Shoe lever gap and trip lever engagement . . . . .	27	Trip lever adjusting tab clearance . . . . .	141
Spacing locklever spring . . . . .	30	Trip lever clearance . . . . .	135
Start lever spring . . . . .	29	Trip lever overtravel and armature gap . . . . .	140
Stripper bail spring . . . . .	31	Trip lever spring . . . . .	144
Trip lever spring . . . . .	27	Trip magnet position . . . . .	140
Spacing Area		Auxiliary Contact Assembly (TP183549)	
Carriage bounce . . . . .	83	Front contact spring . . . . .	149
Carriage return arm springs . . . . .	83	Time delay contact bracket position . . . . .	149
Carriage return latch spring . . . . .	83	Function Area	
Carriage return lever spring . . . . .	74	Coding and installation of TP180801 universal function lever . . . . .	155
Carriage return lever — unlatch clearance . . . . .	82	Function Box Switches	
Check pawl spring . . . . .	76	Contact assembly position . . . . .	147
Feed pawl spring . . . . .	75	Print-Nonprint	
Feed pawl stop position . . . . .	72	Armature spring . . . . .	151
Feed pawl travel . . . . .	76	Latch bellcrank spring . . . . .	152
Left margin printing . . . . .	127	Nonprint codebar spring . . . . .	154
Space bellcrank spring . . . . .	72	Nonprint function lever clearance . . . . .	150
Space suppression lever clearance — printing . . . . .	73	Release magnet overtravel . . . . .	152
Space suppression lever clearance — spacing . . . . .	74	Solenoid bracket position . . . . .	151, 153
Space suppression lever spring . . . . .	75	Receive-Only Sets	
Spacing belt tension . . . . .	77	Keyboard adjusting bracket position . . . . .	148
<b>3. VARIATIONS TO BASIC ADJUSTMENTS . . . . .</b>	<b>132</b>		
Answer-Back Area			
Answer-back drum code arrangement . . . . .	161		

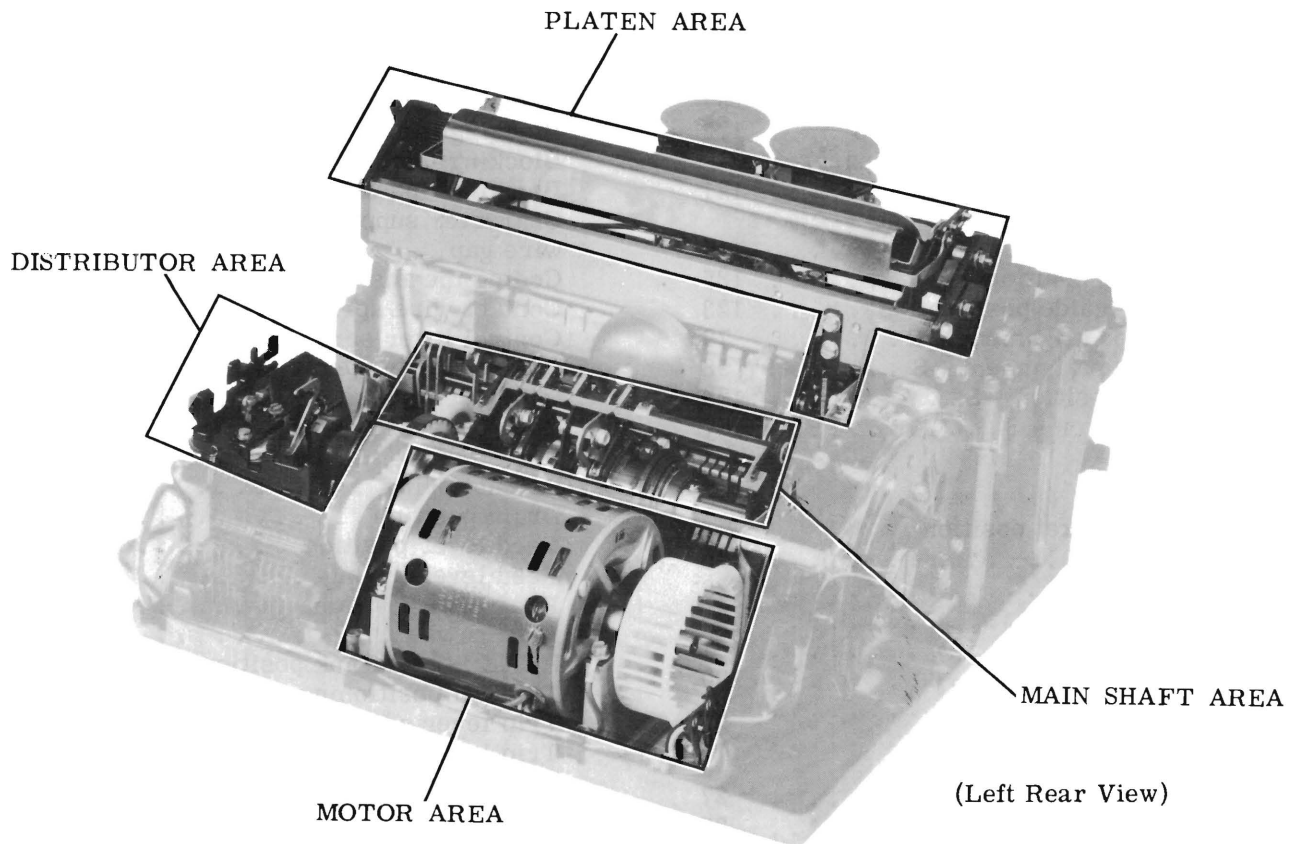


Figure 1 - Distributor, Main Shaft, Motor, and Platen Areas

## 1. GENERAL

1.01 This section provides adjustment information for the 33 typing unit. It is re-issued to add engineering changes and coding information for the universal function lever and the answer-back drum. Marginal arrows ordinarily used to indicate changes and additions have been omitted.

1.02 In the adjustments covered in this section, location of clearances, position of parts, and point and angle of scale applications are illustrated by line drawings. Requirements and procedures are set forth in the several texts that accompany the line drawings. Required tools are included in TP185830 maintenance tool kit and are listed in Section 570-005-800TC. A DXD800 Signal Distortion Test Set was used to determine the requirements for the selector receiving margins.

1.03 Adjustments are divided into two categories — basic and variations. Basic adjustments apply to all friction feed and/or sprocket feed typing units. Adjustments found under variations apply only to typing units which

have the particular feature(s) under consideration. The F and S following an adjustment title mean that the adjustment applies only to friction feed (F) or sprocket feed (S) typing units. No letter designation indicates that the adjustment applies to both types of equipment.

1.04 Adjustments are presented in a definite order which is considered the best to follow when completely readjusting the equipment. Certain interrelated adjustments, which appear on the same page, should be checked and adjusted in a definite sequence. The sequence is indicated by the letters (A), (B), etc. No single adjustment should be undertaken without first completely understanding the procedure and knowing the requirements. Therefore, read a procedure all the way through before making an adjustment or checking a spring tension.

Note: Disconnect the typing unit from any ac or dc potential prior to inspection, minor repair, extensive maintenance, or a complete readjustment.

1.05 References to left, right, front, rear, etc consider the typing unit to be viewed from a position where the carriage area faces

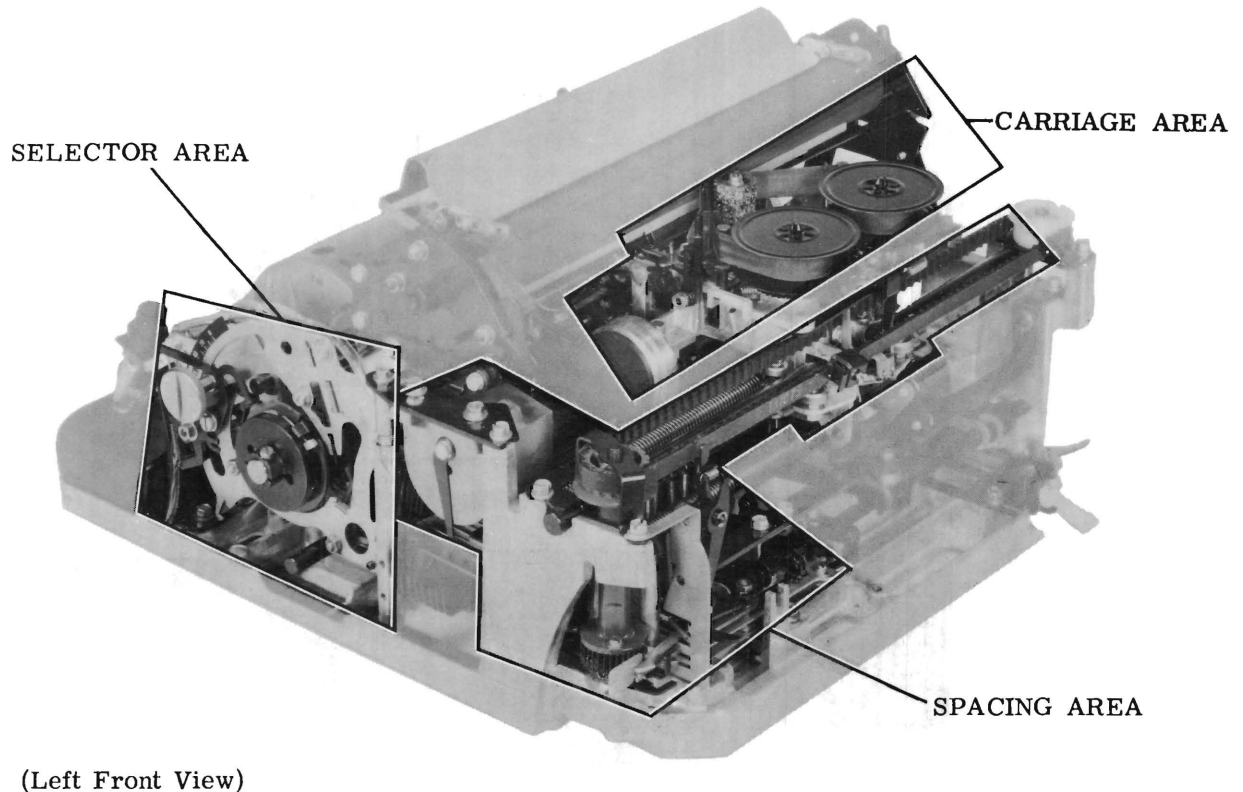


Figure 2 - Carriage, Selector, and Spacing Areas

up and the selector area is located to the viewer's left.

1.06 Unless specifically stated otherwise, make screws or nuts friction tight to make an adjustment and tighten them securely once the adjustment has been made.

1.07 When a procedure calls for using pry points or slots to make an adjustment, place a screwdriver between the points or in the slots and pry parts in the proper direction.

1.08 Due to a high degree of congestion within certain areas of some typing units, some disassembly will be required prior to making certain adjustments. If parts or subassemblies are removed from the typing unit to facilitate the making of an adjustment, be sure that they are subsequently replaced. Recheck any adjustments that may have been affected by the removal of parts or subassemblies.

Note 1: Do not remove parts and/or subassemblies unless it is considered absolutely necessary to perform an adjustment.

Note 2: Instructions for the disassembly and reassembly of parts and/or subassemblies are given in the appropriate disassembly and reassembly section and/or appropriate illustrated parts section.

Note 3: Do not lift typing unit while holding any part of the selector mechanism. Excessive strain on the selector mechanism, due to the weight of the typing unit, may cause selector malfunctioning. See appropriate disassembly and reassembly section for the proper method of lifting typing unit from its subbase.

1.09 Related adjustments are listed with some of the adjustment texts and are primarily intended to aid in troubleshooting the equipment. As an example, suppose that in searching for a

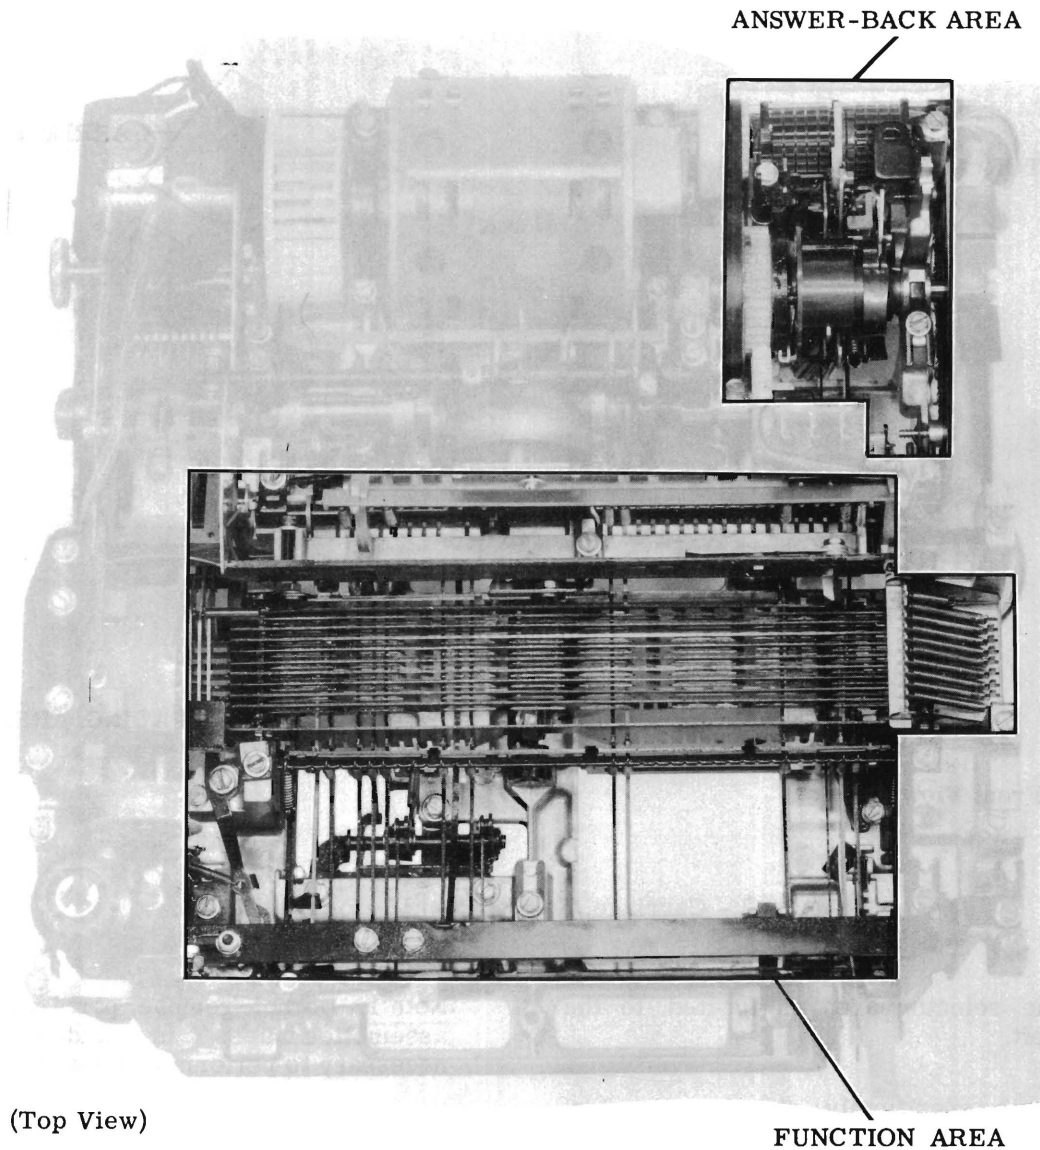


Figure 3 - Answer-Back and Function Areas

trouble it is discovered that the FUNCTION CLUTCH POSITION adjustment does not meet its requirement. Under Related Adjustments it is indicated that this adjustment is affected by the LEFT BEARING POSITION adjustment. First, check it to see if it is the cause of the trouble. Also, it is indicated that the FUNCTION CLUTCH POSITION adjustment affects FUNCTION CLUTCH ENDPLAY, CODEBAR CLUTCH ENDPLAY, and CODEBAR CLUTCH TRIP LEVER LINE-UP adjustments. If the former adjustment is changed, check the latter adjustments.

Note: Information in parentheses ( ) following any related adjustment gives the associated paragraph number and area, if different from the paragraph number at the top of the page.

1.10 The spring tensions specified in this section are indications, not exact values. Therefore, to obtain reliable readings, it is important that spring tensions be measured by spring scales placed in the positions shown on pertinent line drawings. Springs that do not meet their requirements should be replaced by

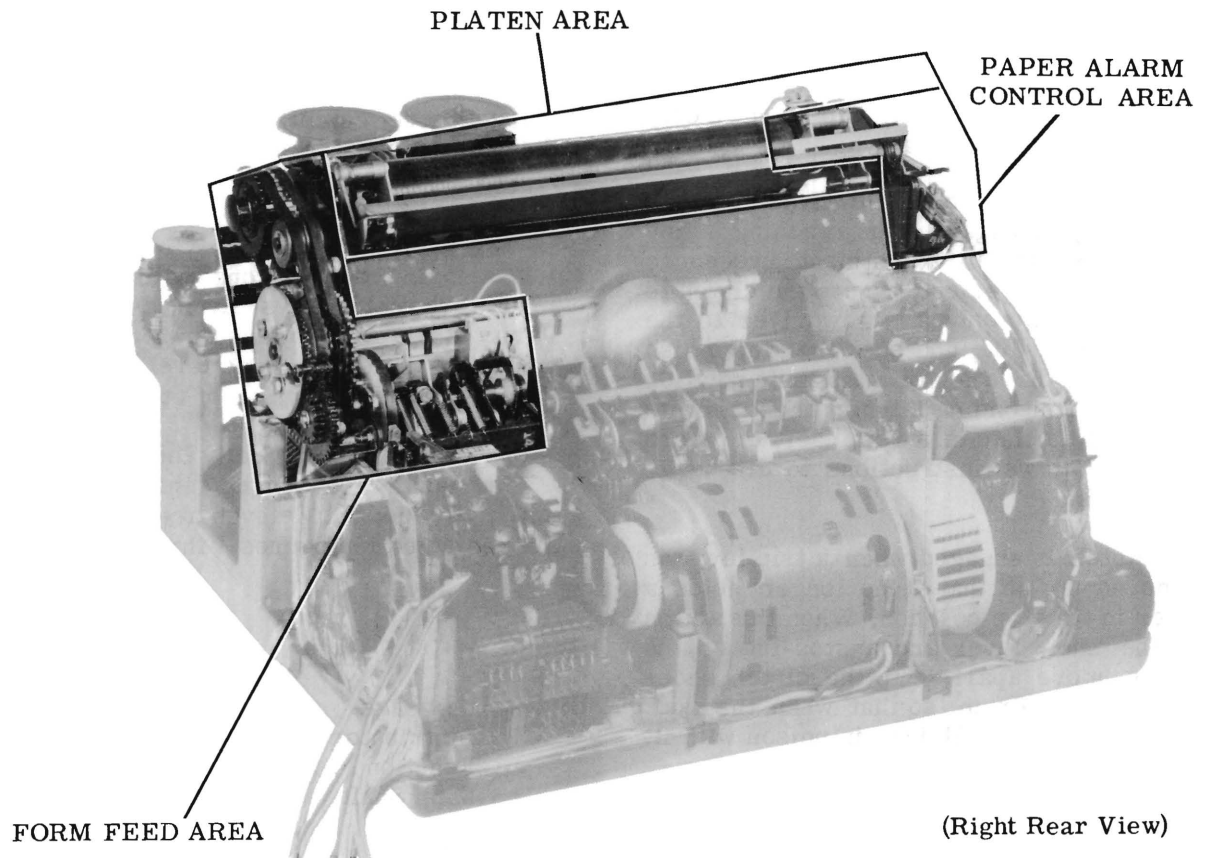


Figure 4 - Paper Alarm Control, Form Feed, and Platen Areas

new ones. Only those springs that directly affect the operation of the typing unit are measured, however, others may be measured indirectly in the process. If, at first, the spring tension requirement cannot be met, replace the indicated spring being directly measured. Then if the requirement is not met, any springs that are indirectly measured in the procedure should be replaced, one at a time, with the performance of requirement checks each time a spring is replaced.

Note 1: Use only spring scales which are recommended by the manufacturer and found in Maintenance Tools Section 570-005-800.

Note 2: The spring tensions may be checked in any sequence.

1.11 All adjustment procedures should be started with the typing unit in the stop condition. It is in the stop condition when the selector armature is in its attracted (frontward) position and all clutches are disengaged.

1.12 To place the typing unit in the stop condition, use TP185832 armature clip to hold the selector armature in its attracted

(frontward) position. Rotate the main shaft clockwise (as viewed from the left) until all clutches are in a stop position. Fully disengage all of the clutches as instructed in 1.13 following.

Note 1: A stop position is that position where a shoe lever contacts a trip lever.

Note 2: The distributor clutch will not disengage if the typing unit is removed from a set unless the keyboard adjusting bracket is adjusted per 3.17. Adjustment must be remade to set requirements when the typing unit is replaced in an ASR or KSR set.

Note 3: The distributor clutch will not disengage unless the answer-back drum is in its home position, which is the position where the control lever is fully detented into the indent on the answer-back drum.

1.13 When disengaged, a clutch is latched so that a shoe lever is held in its stop position by a trip lever while a corresponding

latchlever is seated in a notch of the clutch disc. This allows the clutch shoes to release their tension on the clutch drum. With all clutches disengaged, the main shaft will turn freely without any clutch shoes dragging.

Note: If the shaft is turned by hand, a clutch will not fully disengage upon reaching a stop position. Where an adjustment procedure calls for disengagement, rotate the clutch to a stop position, apply a screwdriver to the associated stop-lug, and push the clutch disc in the normal direction of main shaft rotation until the corresponding latchlever seats in its clutch disc notch. As a reminder, the word "latched" follows instructions to disengage the clutches.

1.14 A clutch is engaged when a trip lever is moved up so that it no longer holds a shoe lever in its stop position. When this action occurs, the shoe lever and a stop-lug on the clutch disc move apart, and the clutch shoes wedge against the drum, so that when the shaft is turned, the clutch will turn in unison with it.

1.15 Manual Operation: To manually operate the typing unit, place it in the stop condition as instructed in 1.12 and 1.13. Momentarily permit the armature to move to its unattracted (rearward) position to trip the selector clutch. Slowly rotate the main shaft clockwise (as viewed from the left) until all push levers have moved under their respective selector levers. Using a spring hook, strip the push levers from under the selector levers corresponding to the spacing elements of the code combination to be set up. Then continue to rotate the main shaft until the proper condition is set up or the character is cleared through the typing unit.

1.16 The selector levers are numbered 1, 2, 3, 4, 5, 7, 6, and 8 from left to right. To set up the character Y, for example, whose 8-level code combination is 1--45-78, strip the push levers from the 2, 3, and 6 selector levers.

1.17 Code combinations within this section are not always given as parity codes. Parity codes are obtained by proper transformation of the eighth code level as explained in the typing unit principles of operation section.

1.18 To aid in physically locating the adjustments and spring tensions, the typing unit is divided into eleven areas. These areas are indicated in Figures 1 through 4 as follows:

<u>Area</u>	<u>Figure</u>
Carriage . . . . .	2
Distributor . . . . .	1
Function . . . . .	3
Main Shaft . . . . .	1
Motor . . . . .	1
Selector . . . . .	2
Spacing . . . . .	2
Platen . . . . .	1, 4
Form Feed . . . . .	4
Answer-Back . . . . .	3
Paper Alarm Control . . . . .	4

1.19 To facilitate making the adjustments remove the typing unit from the subbase. For instruction, see the appropriate disassembly and reassembly section.

2. BASIC UNIT

2.01 Motor Area

GEAR BACKLASH

To Check

Find position of tightest pinion and intermediate gear engagement. Hold intermediate gear stationary. Observe fan rim radial motion.

Requirement

Min 0.010 inch---Max 0.032 inch play at fan rim.


To Adjust

Loosen mounting screws and position motor gear bracket. Tighten screws.

Related Adjustment

Affects

BELT TENSION (2.02)

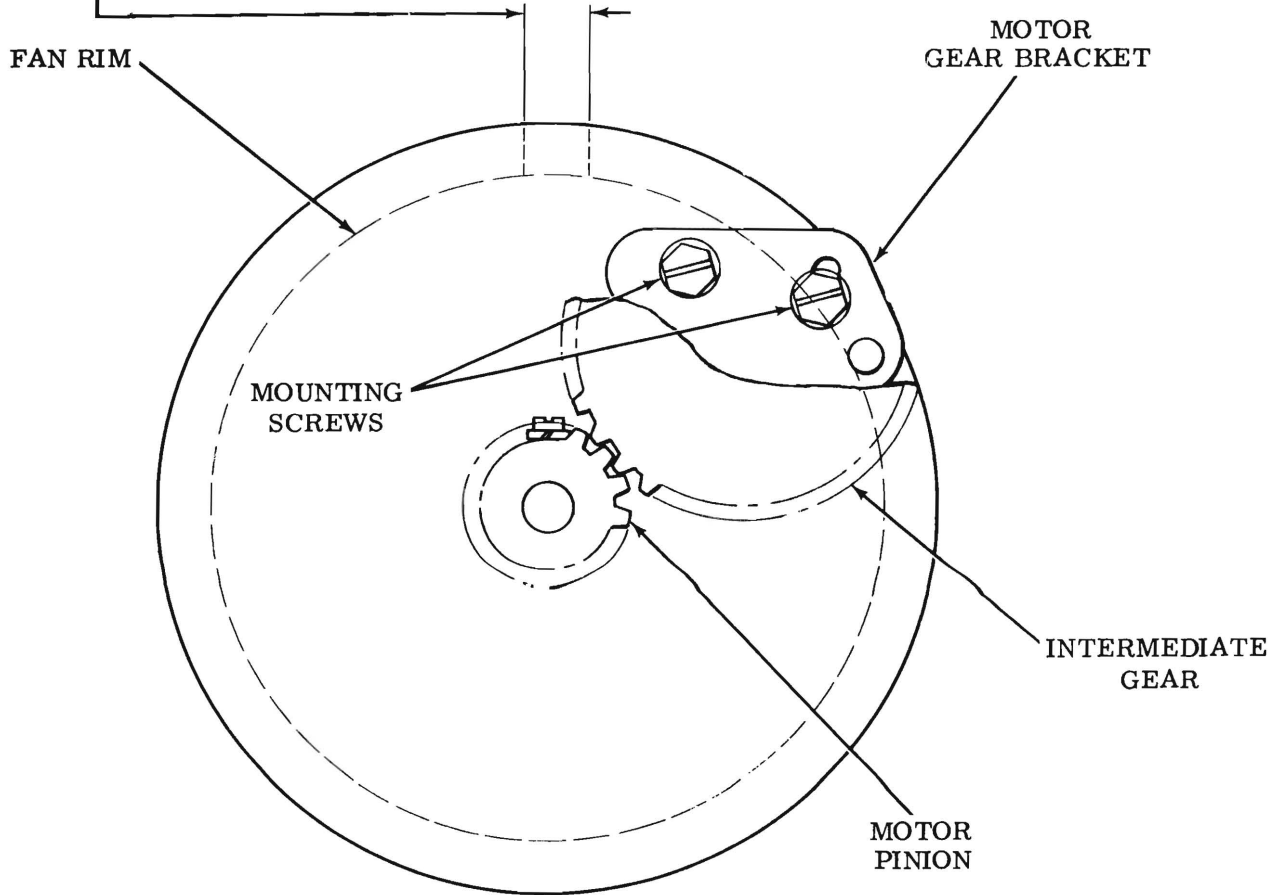

(Right Side View)

2.02 Motor Area (continued)

BELT TENSION

To Check

Rotate fan clockwise (viewed from left) until upper level of motor belt becomes taut. Using a spring scale, apply 16 oz force at center of belt.

Requirement

Min 0.100 inch---Max 0.135 inch deflection at center of motor belt.



To Adjust

Loosen four clampscrews and rotate motor in cradle  
Tighten clampscrews.


Related Adjustments

Affected By

GEAR BACKLASH (2.01)

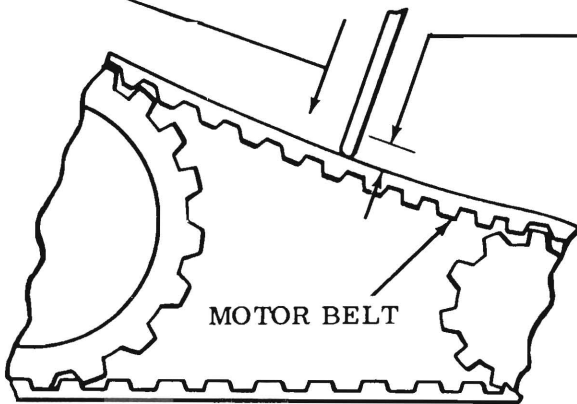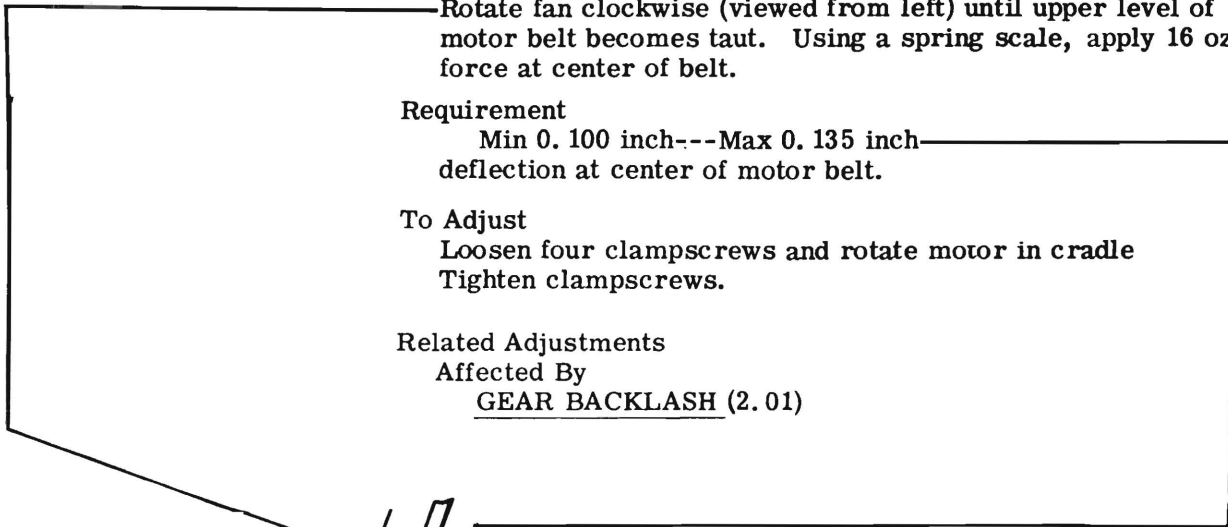

(Right Side View)

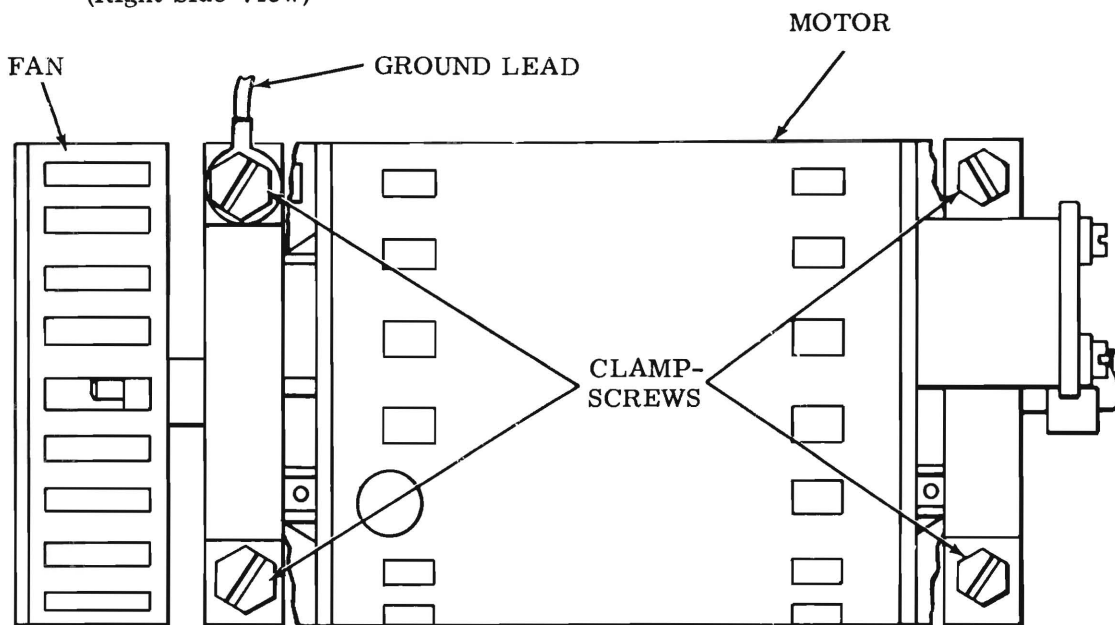

(Top View)

2.03 Distributor Area

**(B) SHAFT LEFT BEARING GAP**

**Requirement**

Min some---Max 0.012 inch between left bearing and clutch gear assembly as gauged by eye.

**To Adjust**

Disengage (latch) distributor clutch. Hold clutch gear assembly firmly to right. Position left bearing with clampscrews loosened. Tighten left bearing clampscrews.

**Related Adjustments**

Affected By  
BRUSH HOLDER GAP (2.03)

**(A) BRUSH HOLDER GAP**

**(1) Requirement**

With distributor clutch disengaged (latched)

Min 0.010 inch---Max 0.060 inch between brush holder pointer and disc.

**(2) Requirement**

During entire brush holder rotation

Min 0.002 inch

between any brush holder and disc.


**To Adjust**

With three bearing clampscrews loosened, position distributor shaft. Tighten right, but not left, bearing clampscrew.

**Related Adjustments**

**Affects**

SHAFT LEFT BEARING GAP (2.03)  
TRIP SHAFT POSITION (2.04)  
DRIVEN GEAR LINE-UP (2.12)

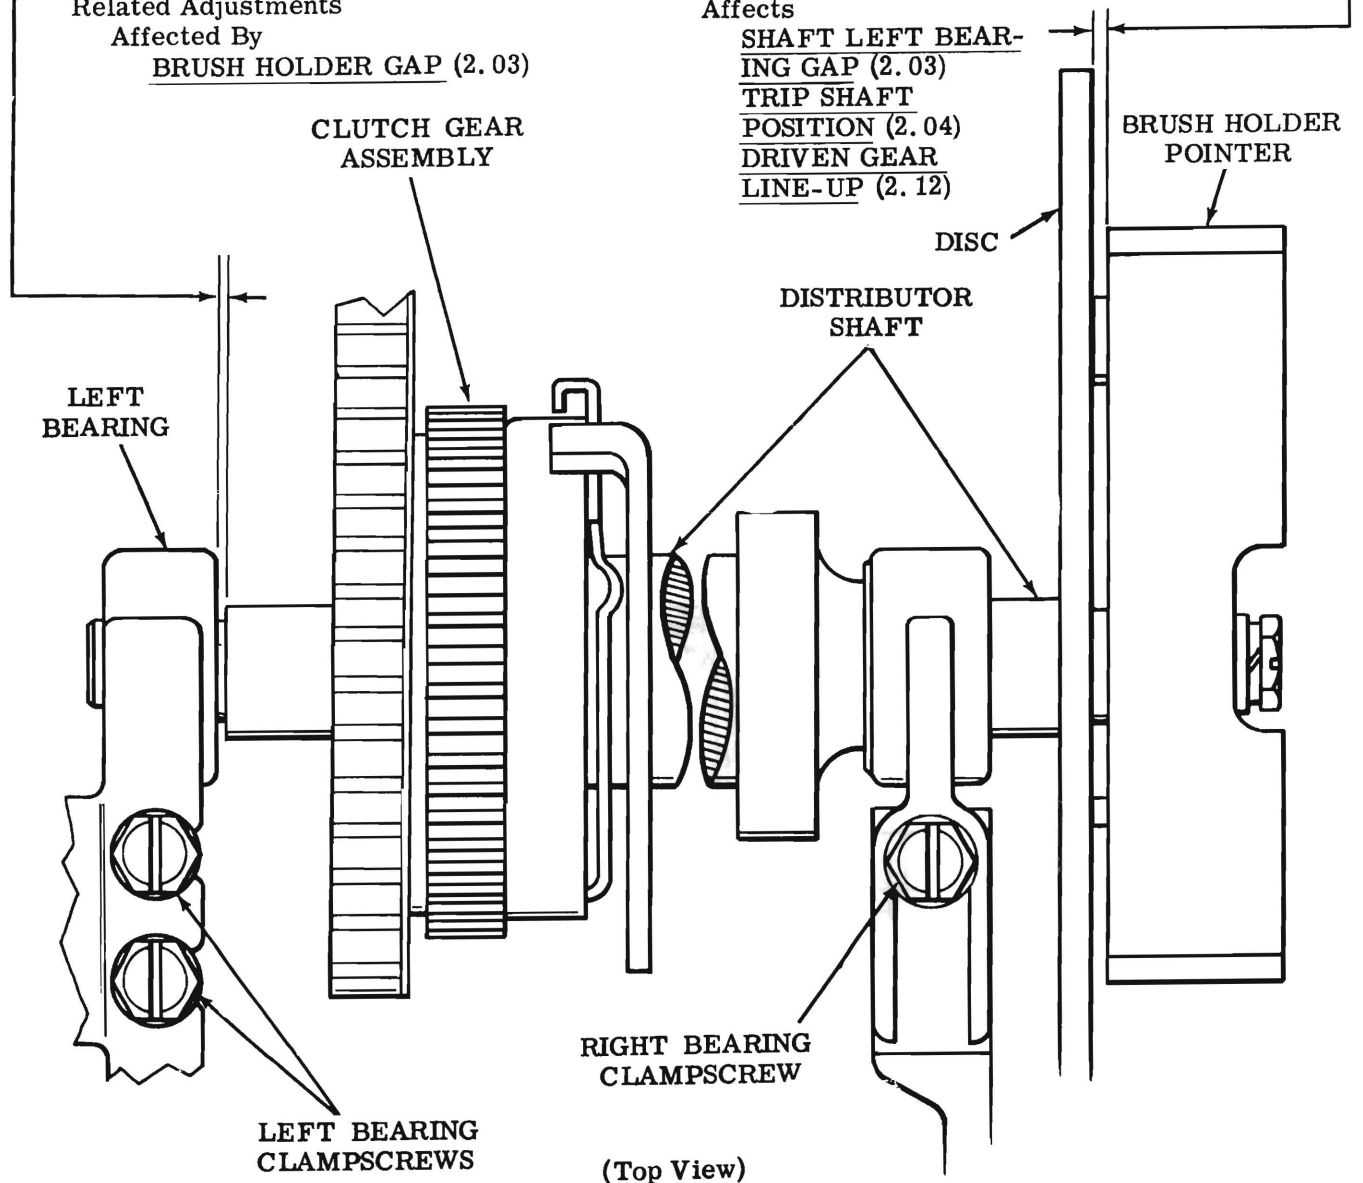

(Top View)

2.04 Distributor Area (continued)

TRIP SHAFT POSITION

To Check

Place distributor clutch in the stop position.

(1) Requirement

With play taken up to minimize all clearances, the trip lever should engage  
 Min two-thirds width  
 of formed end of shoe lever.

(2) Requirement

Rear extension of control lever should not bind in its slot in answer-back block.

To Adjust

Loosen clampscrew and post friction tight and position trip shaft. Tighten clampscrew and post.

Related Adjustments


Affects

FEED PAWL POSITION (3.06)

Affected By


BRUSH HOLDER GAP (2.03)

CONTROL LEVER

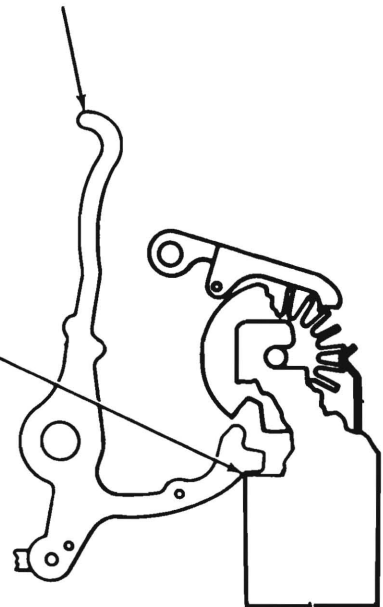

(Right Side View)

ANSWER-BACK BLOCK

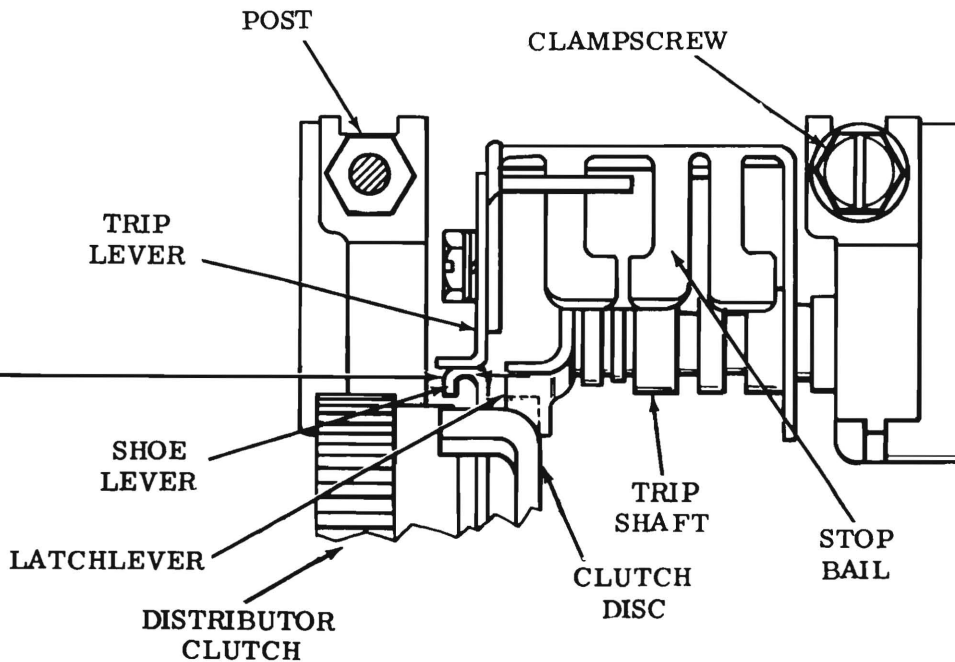

(Top View)

## 2.05 Distributor Area (continued)

CLUTCH SHOE LEVER GAP**To Check**

With distributor clutch disengaged and latched, measure and record clearance between shoe lever and stop-lug. Trip distributor clutch by moving trip lever rearward. Fully seat the clutch shoes by applying slight pressure against the shoe lever along its normal path of forward travel. Measure and record same clearance as above.

**(1) Requirement**


With distributor clutch disengaged (latched)  
Min 0.015 inch  
between stop-lug and shoe lever.

**(2) Requirement**

Clearance between stop-lug and shoe lever  
Min 0.050 inch---Max 0.080 inch  
greater when distributor clutch is engaged than when disengaged.

**To Adjust**

Remove answer-back drum. With clamp-screw friction tight, position trip lever using pry point. Tighten clampscrew. Replace answer-back drum.

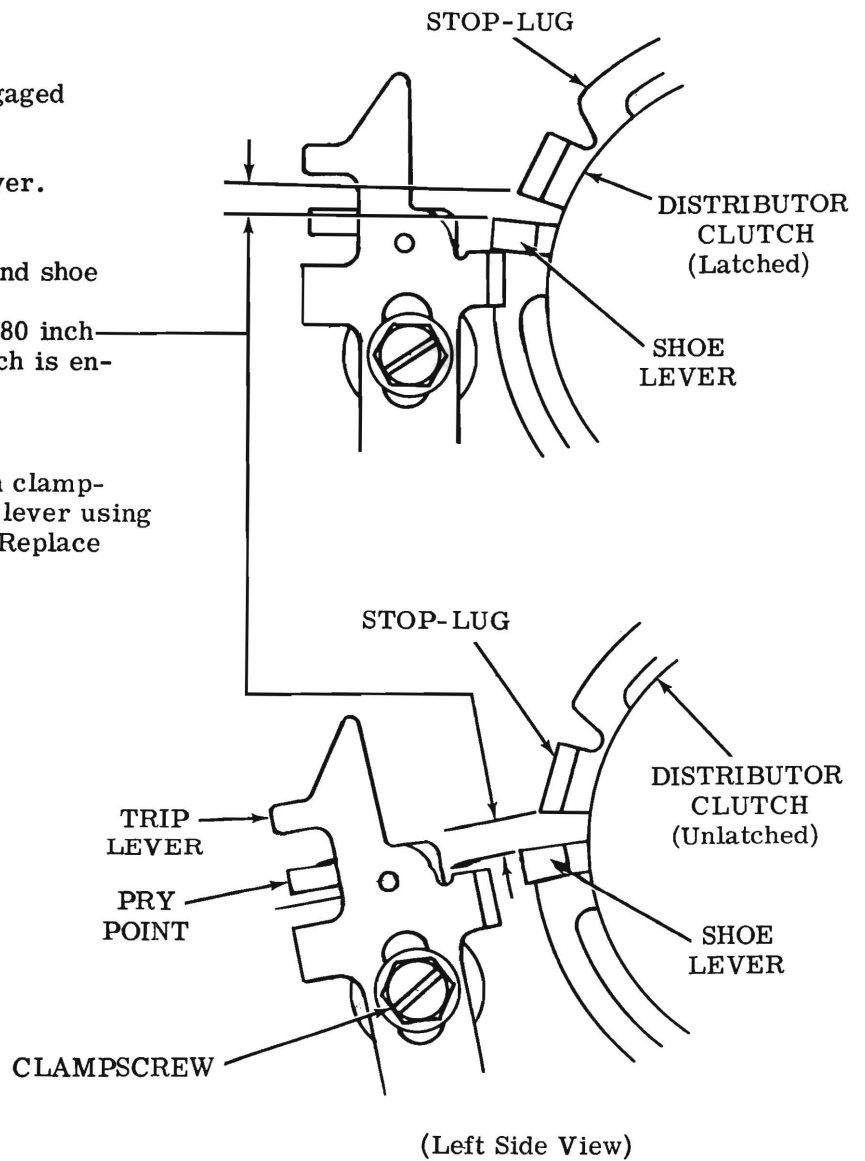


2.06 Distributor Area (continued)

**Note 1:** Before proceeding, replace typing unit onto subbase. For instructions, see the appropriate disassembly and reassembly section.

**Note 2:** Do not lift typing unit while holding any part of the selector mechanism. Note the proper method for lifting the typing unit. This method is described in the appropriate disassembly and reassembly section.

**DISTRIBUTOR**

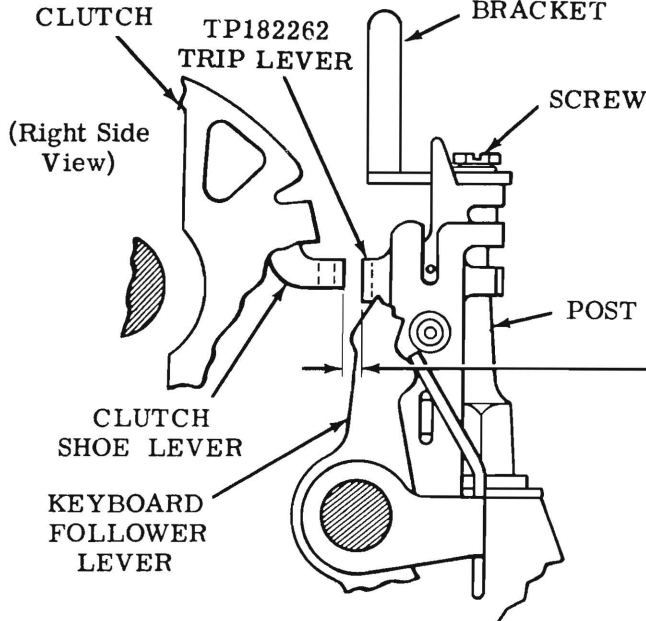

**TRIP LEVER ENGAGEMENT**

**Note 3:** The answer-back control lever and reader trip lever should not be touching their respective stop bail adjusting tabs when checking this adjustment.

**Note 4:** Perform (1) To Check only on late design units containing the TP182262 trip lever.

- (1) To Check  
 Disengage (latch) distributor clutch. Depress any nonfunction keytop to unlatch distributor clutch. If necessary, loosen screw and position bracket to obtain clearance between bracket and trip lever. Tighten screw. Rotate clutch to align upper edges of shoe lever and trip lever.


**Requirement**

Min 0.015 inch---Max 0.035 inch between shoe lever and trip lever.

**To Adjust**

Remove answer-back drum. Use TP180993 bending tool to bend center adjusting tab. Replace answer-back drum.

**CAUTION: TO PREVENT ELECTRICAL SHOCK EXERCISE CARE WHEN WORKING WITH TYPING UNIT UNDER POWER.**

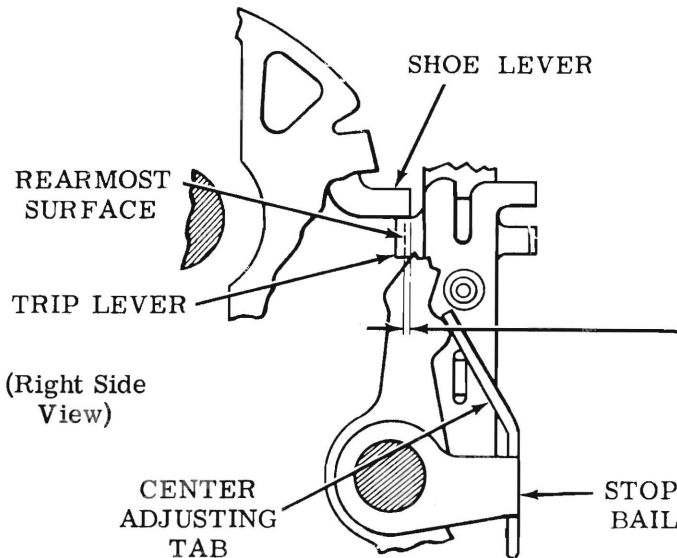

- (2) To Check  
 Operate typing unit under power. Place keyboard universal lever in latched position.

**Requirement**

Shoe lever should be  
 Min flush---Max 0.015 inch beyond rearmost surface of trip lever.

**To Adjust**

**Early Design (without TP182262)**  
 Remove answer-back drum. Use TP180993 bending tool to bend center adjusting tab. Replace answer-back drum.

**Late Design (with TP182262)**  
 Loosen screw friction tight and position bracket. Tighten screw.

2.07 Distributor Area (continued)

BRUSH HOLDER POSITION


Requirement

With distributor clutch disengaged (latched) pointer should be within locating mark.

To Adjust



Loosen mounting screw and position distributor brush holder. Tighten mounting screw.

Note: Rotate the brush holder in a clockwise direction only.

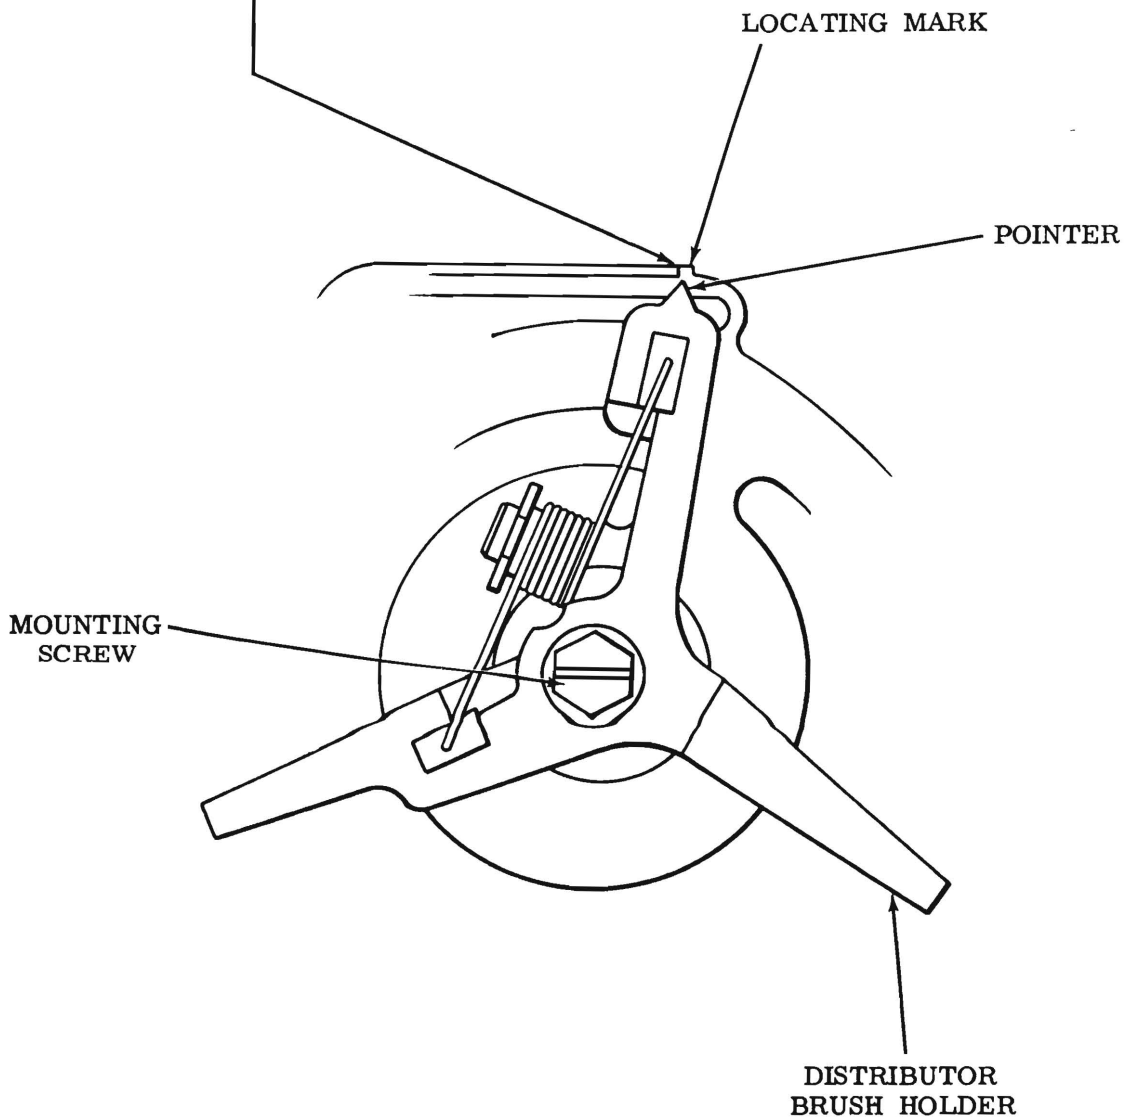

(Right Side View)

2.08 Distributor Area (continued)

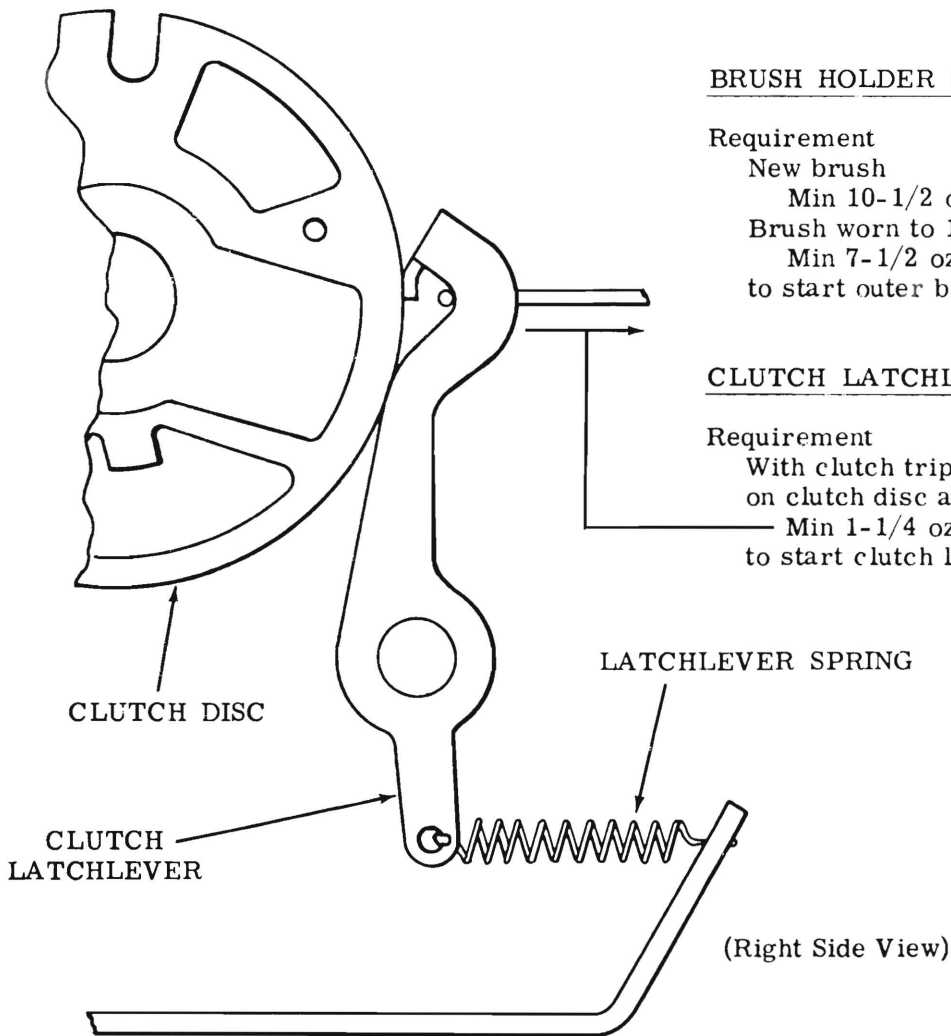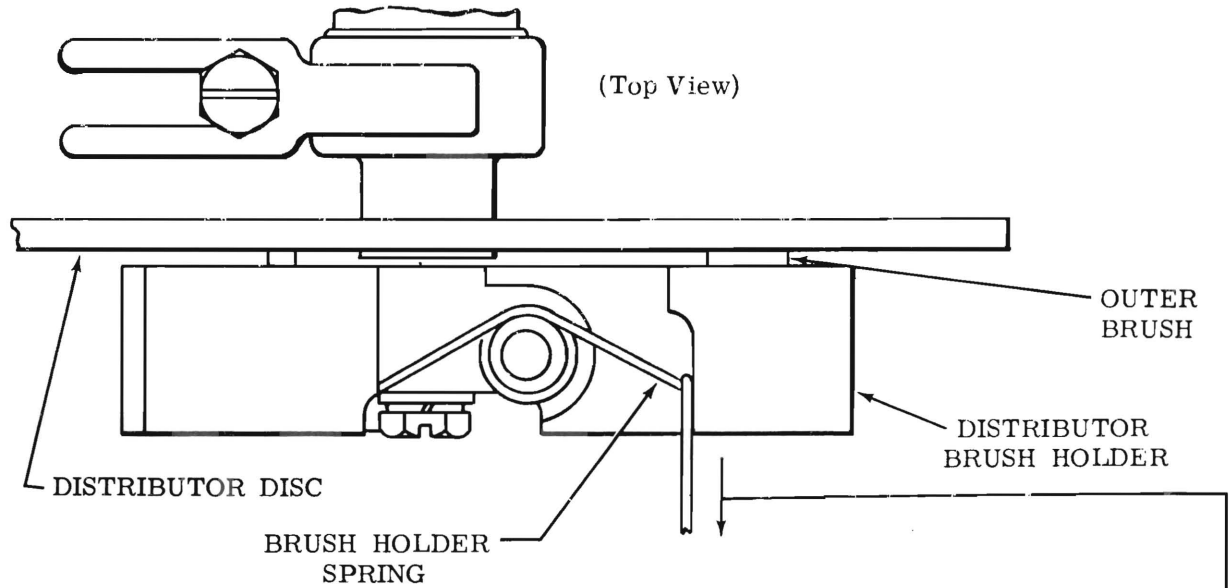

BRUSH HOLDER SPRING

Requirement

New brush

Min 10-1/2 oz---Max 13-1/2 oz

Brush worn to 1/4 inch length

Min 7-1/2 oz---Max 10-1/2 oz

to start outer brush moving.

CLUTCH LATCHLEVER SPRING



Requirement

With clutch tripped and latchlever resting on clutch disc as shown

Min 1-1/4 oz---Max 2-1/4 oz

to start clutch latchlever moving.

2.09 Distributor Area (continued)

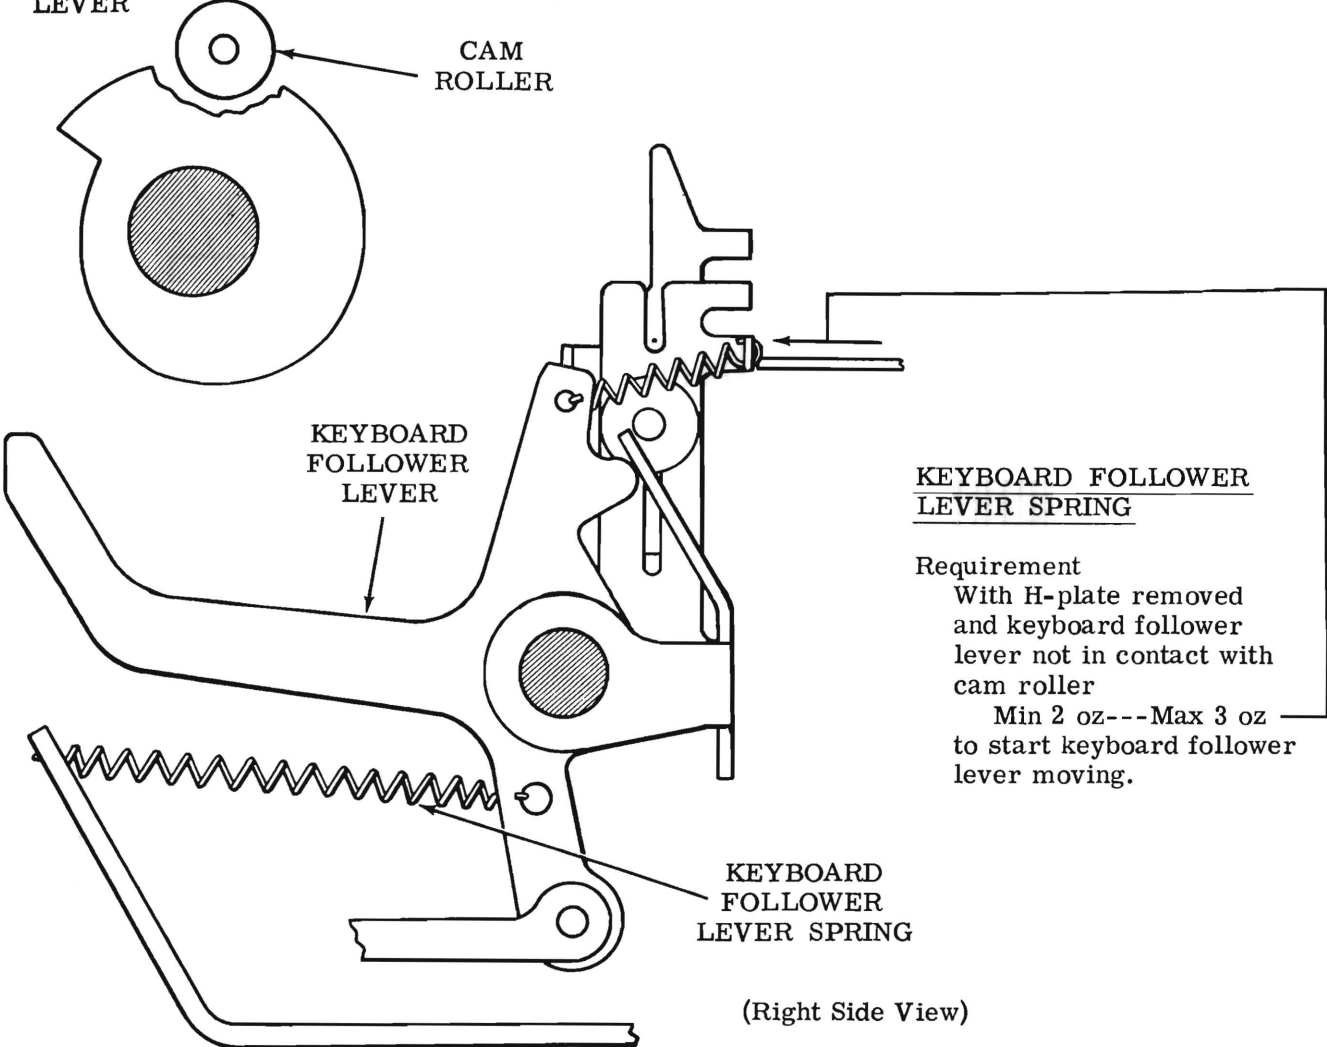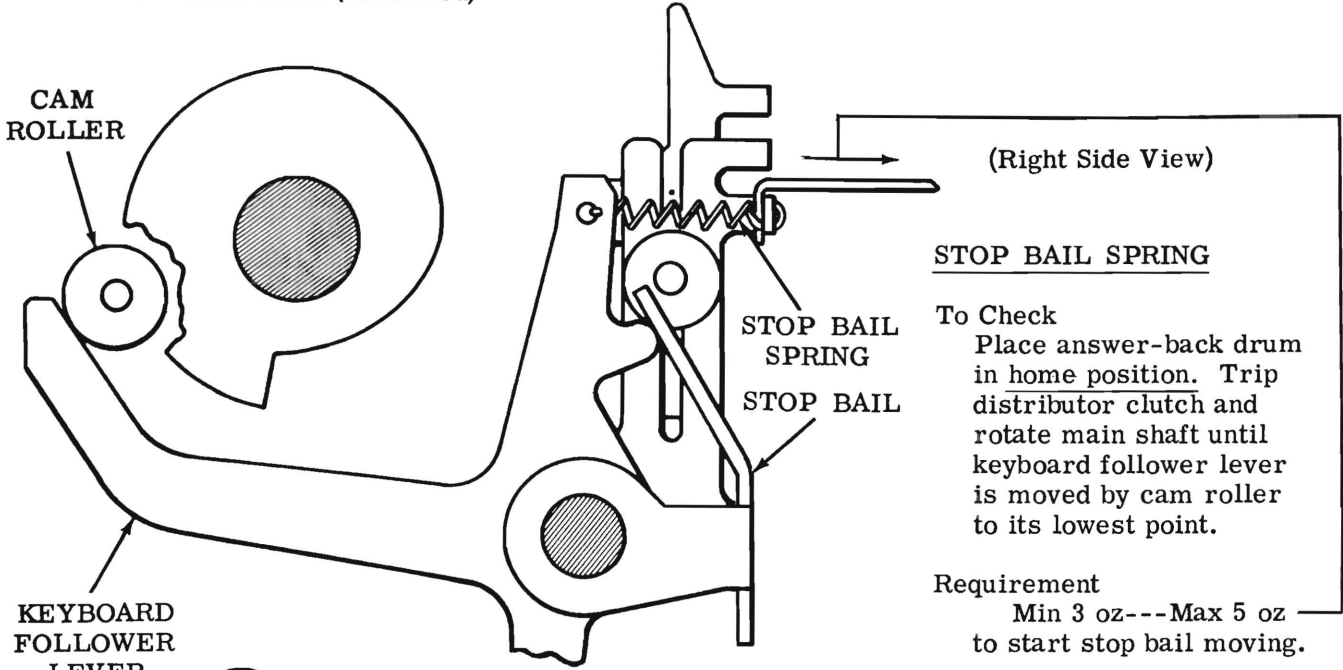

2.10 Main Shaft Area

Note: If a complete readjustment of the typing unit is to be performed, loosen all screws on main shaft except collar screw immediately to the right of the left main shaft bearing.

(A) LEFT BEARING POSITION

Related Adjustments  
Affects


Requirement

The start cam follower, selector levers, and spacing locklever should fully engage their cams when cam sleeve is in contact with the left bearing, and the left side of the left bearing should protrude beyond selector side plate.

FUNCTION SHAFT AND CASTING POSITION (2. 40)  
DRIVEN GEAR LINE-UP (2. 12)  
CODEBAR CLUTCH TRIP LEVER LINE-UP (2. 13)

To Adjust

Loosen left bearing clampscrews and position left bearing. Tighten clampscrews.

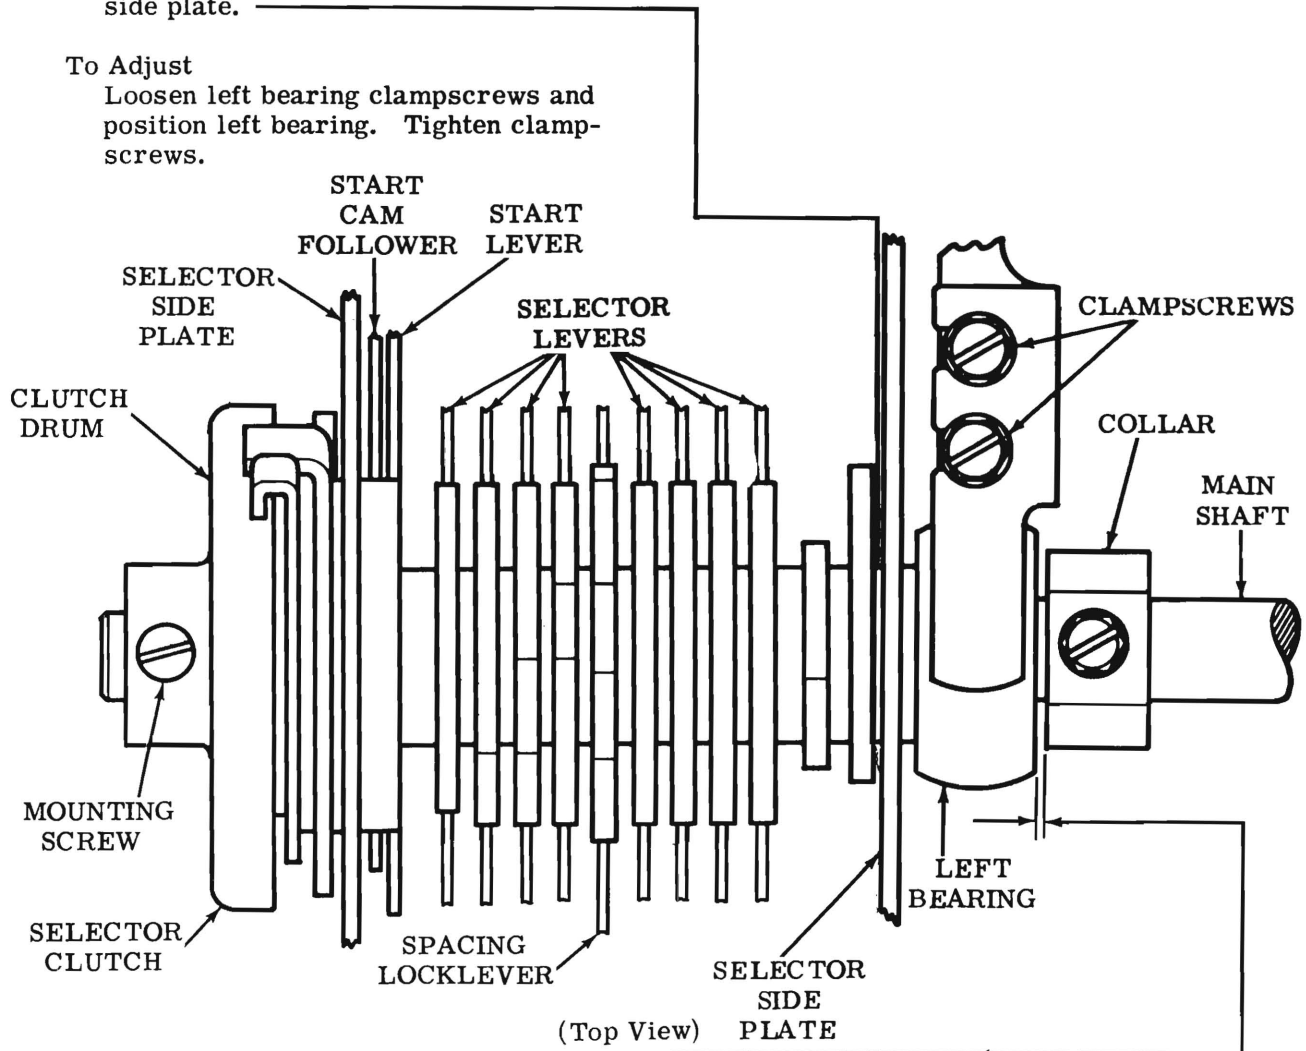

(B) SELECTOR CAM ENDPLAY

To Check

Disengage (latch) selector clutch. Take up play in main shaft toward right.

Requirement

Min 0.002 inch---Max 0.012 inch endplay between left bearing and collar.

To Adjust

With the selector clutch drum mounting screw friction tight, position the clutch drum. Tighten mounting screw.

Related Adjustments

Affects

DRIVEN GEAR LINE-UP (2. 12)  
CODEBAR CLUTCH TRIP LEVER LINE-UP (2. 13)

2.11 Main Shaft Area (continued)

Note: Adjustment (A) is to be done only when completely readjusting the typing unit.

(A) FUNCTION CLUTCH POSITION  
(Preliminary)

To Check

Take up play to minimize clearance between carriage drive eccentric and end of roller shaft.

Requirement

Min 0.020 inch---Max 0.040 inch clearance between carriage drive eccentric and end of roller shaft as gauged by eye.

To Adjust

Loosen the left and right function casting clampscrews (do not loosen the center clampscrew) friction tight and align the left side of lower portion of function casting with left side of lower projection of codebar basket rear tie bar by moving function casting. Loosen drum mounting screw and position function clutch to meet requirement. Tighten drum mounting screw.\*

To Check

Disengage (latch) function clutch. Take up clearances to make function clutch endplay a maximum.

Requirement

Min 0.005 inch---Max 0.015 inch endplay in function clutch.

To Adjust

Loosen collar clampscrew and position function clutch to meet requirement. Tighten clampscrew.


Related Adjustment Affected By

FUNCTION CLUTCH POSITION (2.11)

(Left Front View)

\*Related Adjustments Affects

FUNCTION CLUTCH ENDPLAY (2.11)  
CODEBAR CLUTCH ENDPLAY (2.12)

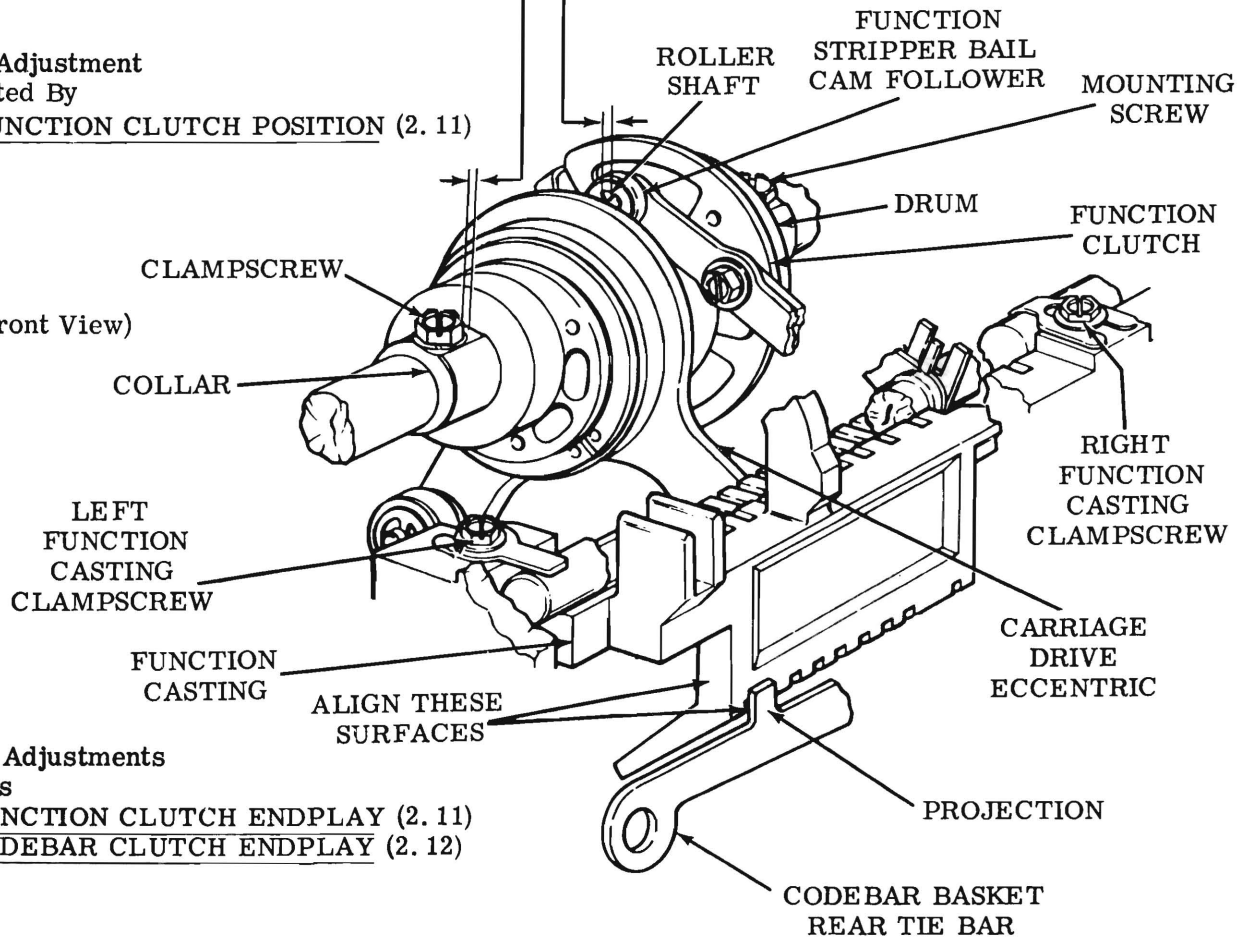

2.12 Main Shaft Area (continued)

CODEBAR CLUTCH ENDPLAY

To Check

Disengage (latch) codebar clutch. Take up clearances to make codebar clutch endplay a maximum.

Requirement

Min 0.005 inch--Max 0.015 inch endplay in codebar clutch.

To Adjust

Loosen codebar clutch mounting screw and position codebar clutch to meet requirement. Tighten codebar clutch mounting screw.

Related Adjustments


Affects

CODEBAR CLUTCH TRIP LEVER LINE-UP (2.13)

CODEBAR RESET LEVER LINE-UP (2.27)

Affected By

FUNCTION CLUTCH POSITION (2.11)

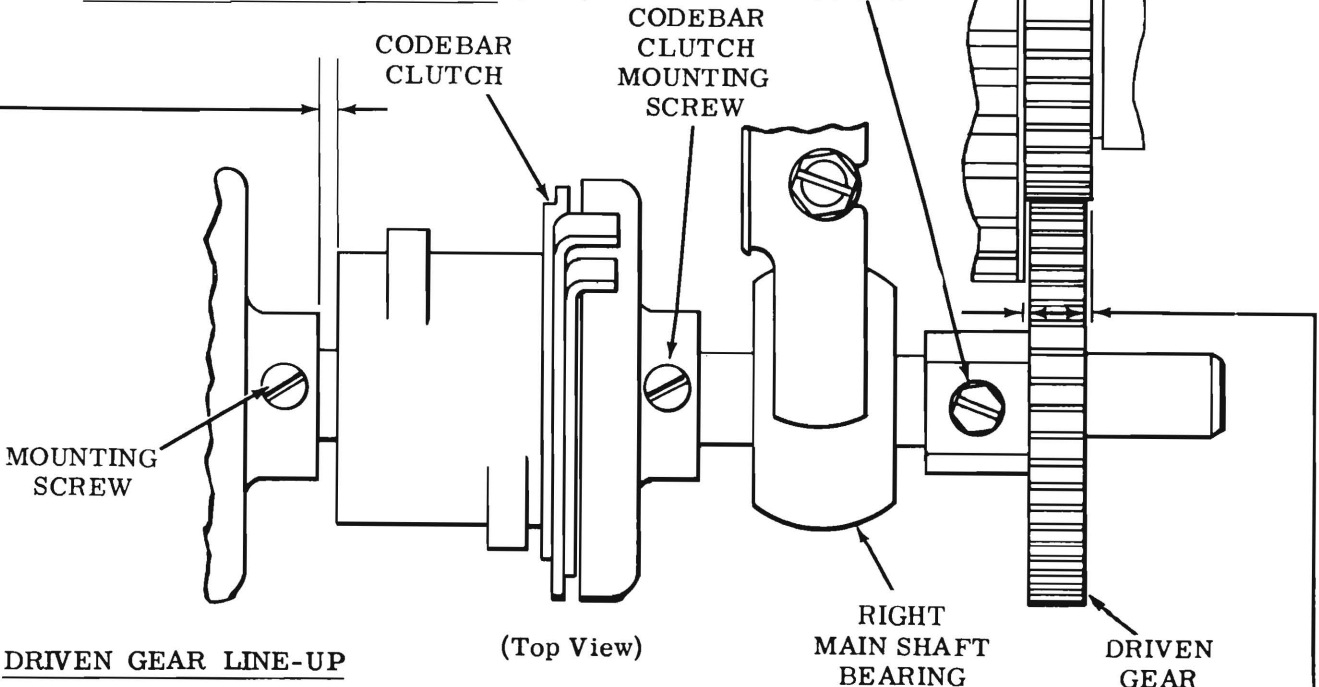

DRIVEN GEAR LINE-UP

Requirement

Driven gear centered on drive gear as gauged by eye.

To Adjust

Loosen driven gear mounting screw, and position driven gear to meet requirement. Tighten driven gear mounting screw.

Related Adjustments

Affected By

LEFT BEARING POSITION (2.10)

BRUSH HOLDER GAP (2.03)

SELECTOR CAM ENDPLAY (2.10)

2.13 Main Shaft Area (continued)

CODEBAR CLUTCH TRIP LEVER LINE-UP


(1) Requirement

As gauged by eye, codebar clutch trip lever approximately aligned with shoe lever

within 0.030 inch.

(2) Requirement

Min 0.005 inch between function clutch trip roller's shaft and codebar reset cam when all play is taken up to make clearance minimum.

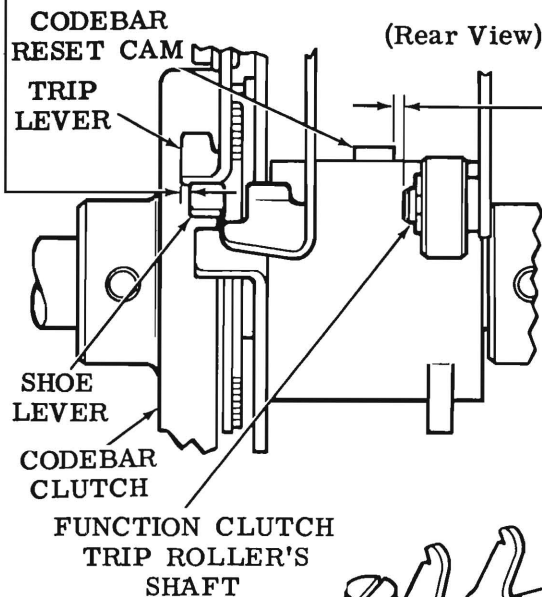

To Adjust

Loosen clampscrew and position trip lever.

Note: It may also be necessary to loosen setscrew in collar.

Related Adjustments

Affects

TRIP SHAFT LATCHLEVER ENDPLAY (2.13)  
CODEBAR CLUTCH TRIP LEVER ENGAGEMENT (2.14)

Affected By

LEFT BEARING POSITION (2.10)  
SELECTOR CAM ENDPLAY (2.10)  
CODEBAR CLUTCH ENDPLAY (2.12)

TRIP SHAFT LATCHLEVER ENDPLAY

Requirement

Min some--- Max 0.012 inch endplay in latchlevers, as gauged by eye.


To Adjust

Loosen setscrew and position collar.  
 Tighten setscrew.

Related Adjustments


Affected By

CODEBAR CLUTCH TRIP LEVER LINE-UP (2.13)

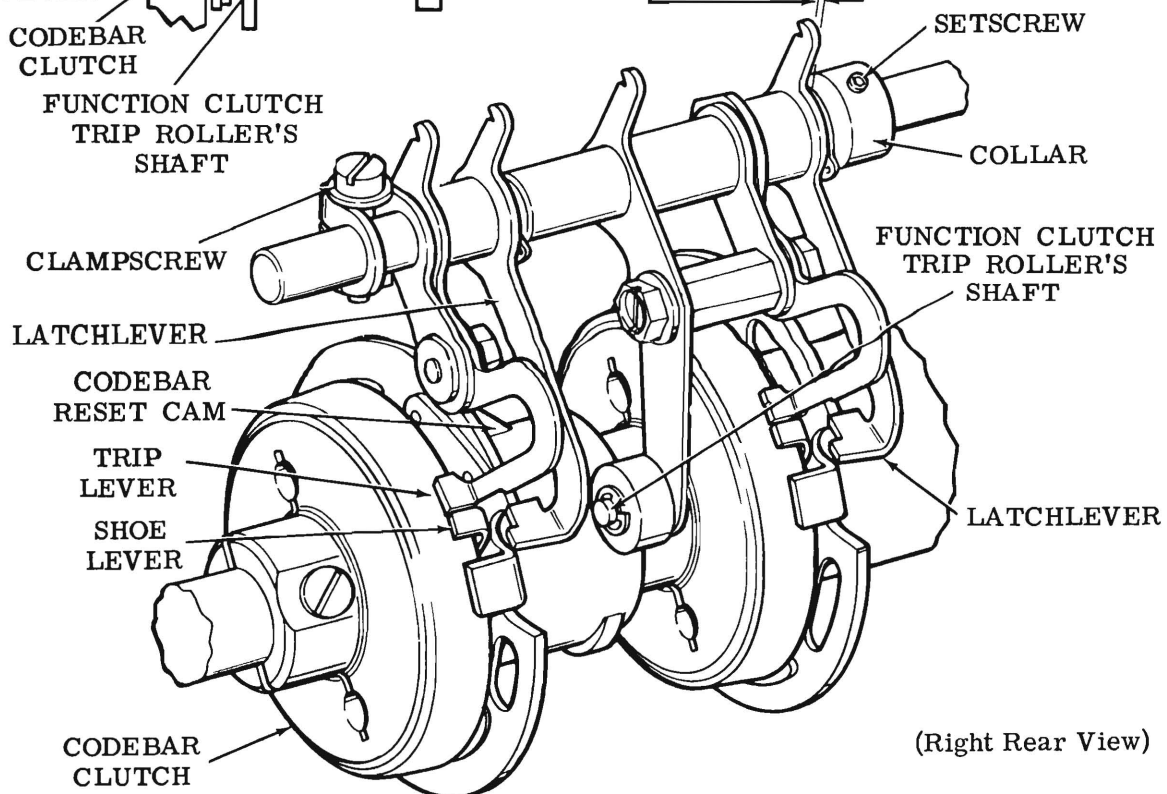

(Right Rear View)

2.14 Main Shaft Area (continued)

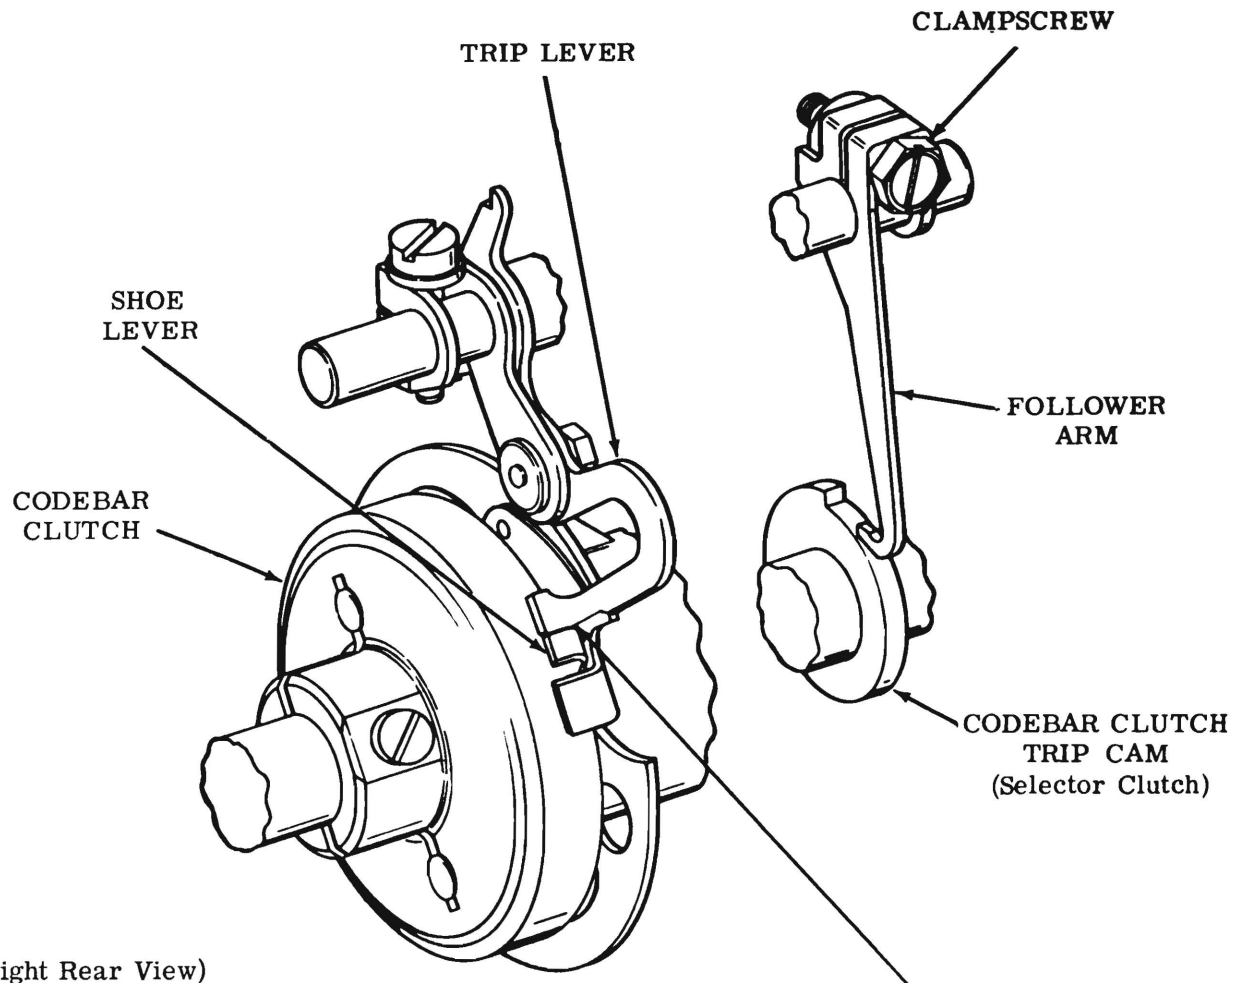

CODEBAR CLUTCH TRIP LEVER ENGAGEMENT

Requirement

With typing unit in stop condition, trip lever should engage shoe lever by approximately full thickness of shoe lever.

To Adjust

Loosen clampscrew and position codebar clutch trip cam follower arm. Tighten clampscrew.

Note: Make sure follower arm is at center of codebar clutch trip cam.

Related Adjustments

Affected By

CODEBAR CLUTCH TRIP LEVER LINE-UP (2.13)

2.15 Main Shaft Area (continued)

TRIP LEVER SPRINGS

Note: Check for both codebar and function clutches.

Requirement


With clutch engaged, codebar clutch

Min 6 oz---Max 12 oz

function clutch

Min 2 oz---Max 4 oz

to start trip lever moving.

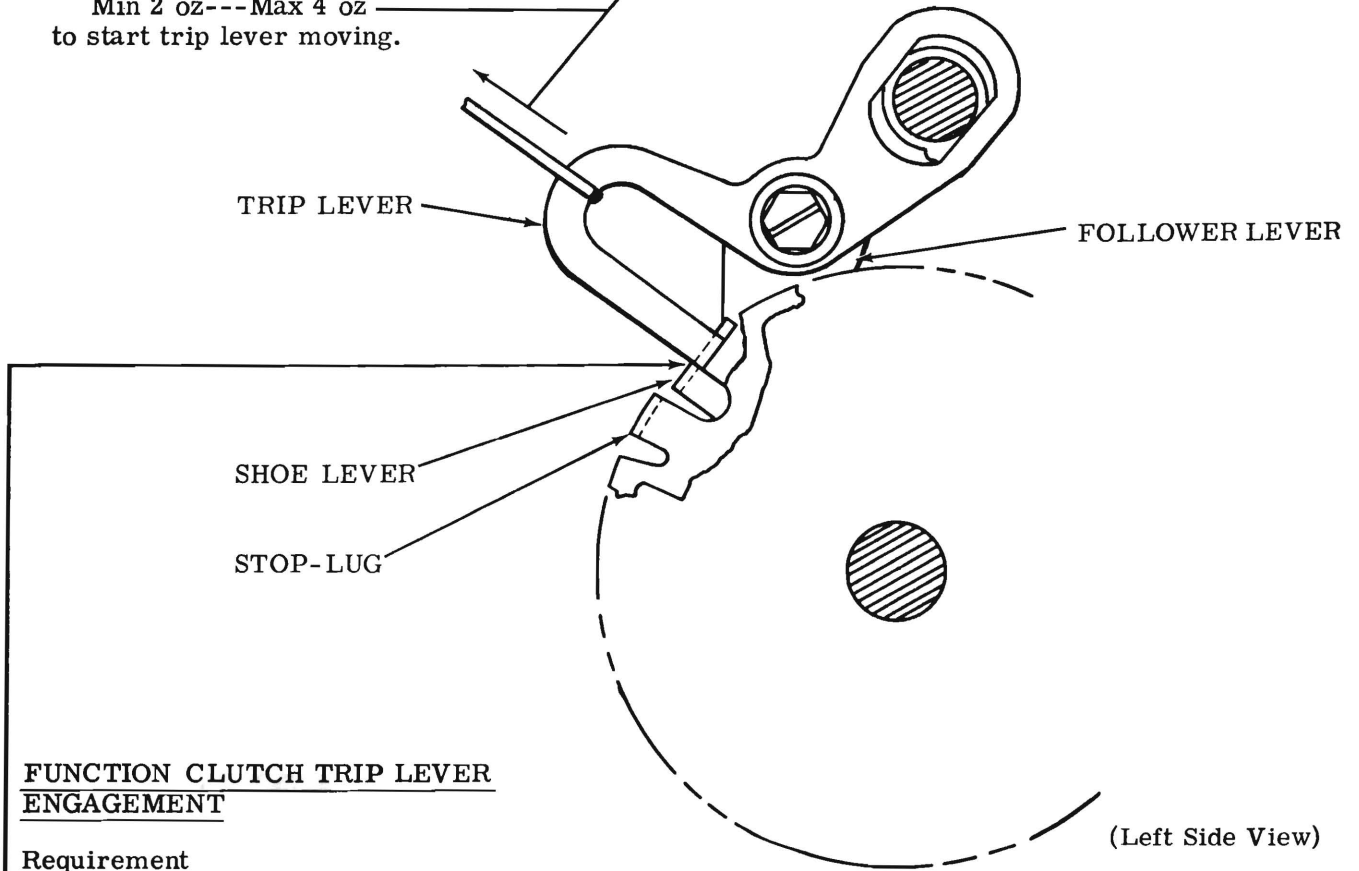


Requirement

With typing unit in stop condition, trip lever should engage shoe lever by approximately full thickness of shoe lever.

To Adjust

Loosen clampscrew and position follower lever. Tighten clampscrew.

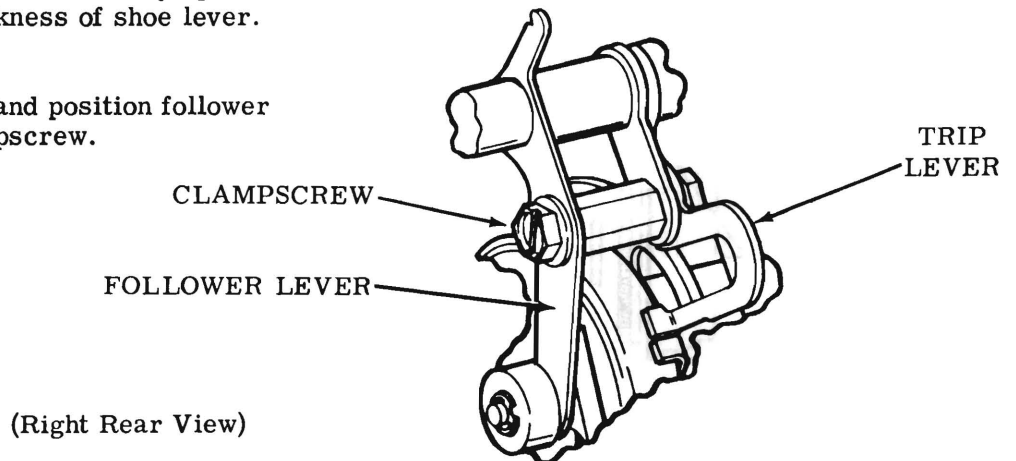

2.16 Main Shaft Area (continued)

CODEBAR AND FUNCTION CLUTCH SHOE LEVER GAPS

(1) To Check

Disengage (latch) clutch. Trip clutch by lifting trip lever. Permit trip lever to come to rest on shoe lever. Fully seat clutch shoes by applying slight pressure against shoe lever along its normal path of forward travel.

Requirement

Min 0.055 inch---Max 0.085 inch between edge of trip lever and edge of shoe lever.

Note: On typing units with either a scribed line or a notch on the trip lever, gauge by eye the alignment of the scribed line or notch and the front edge of the shoe lever. They are to line up.

(2) To Check

Disengage (latch) clutch.

Requirement

Min 0.015 inch between shoe lever and stop-lug.

To Adjust


Loosen clampscrew. Lengthen or shorten trip lever clearance to meet requirement. Tighten clampscrew.

CODEBAR AND FUNCTION CLUTCH LATCHLEVER SPRINGS


Requirement

With latchlever resting on high portion of clutch disc

Min 2 oz---Max 3 oz to start latchlever moving.

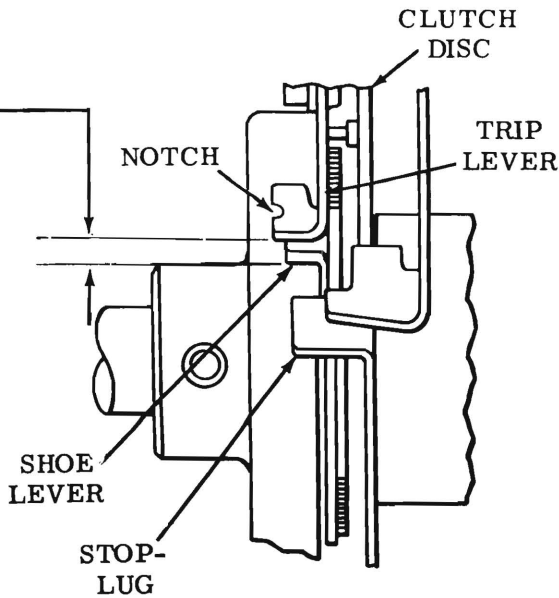

(Rear View)

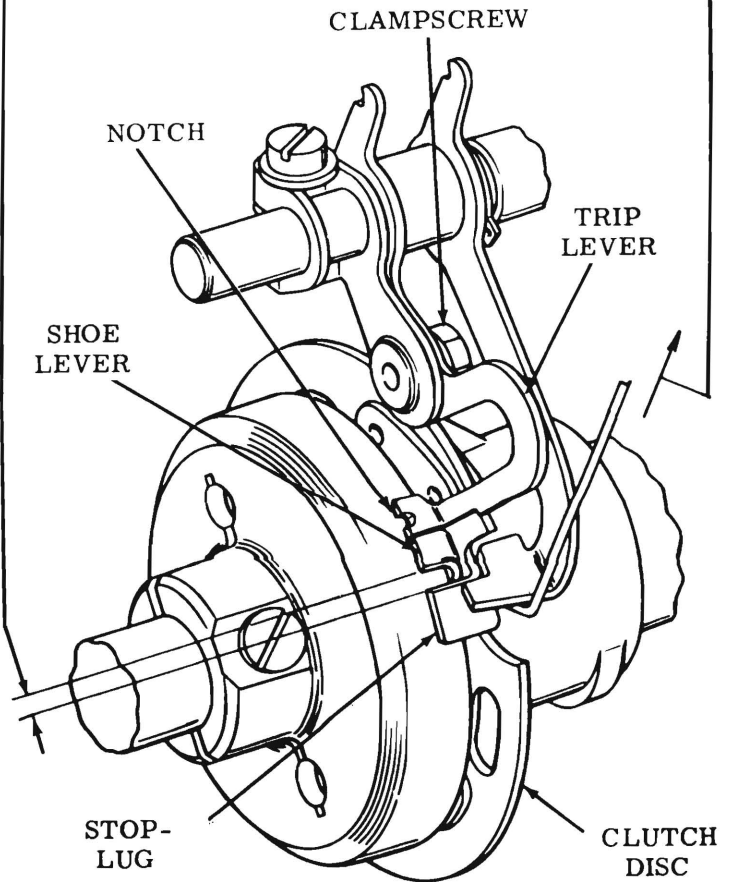


(Right Rear View)

2.17 Main Shaft Area (continued)

Note 1: These tensions apply to all clutches.

CLUTCH SHOE LEVER SPRING

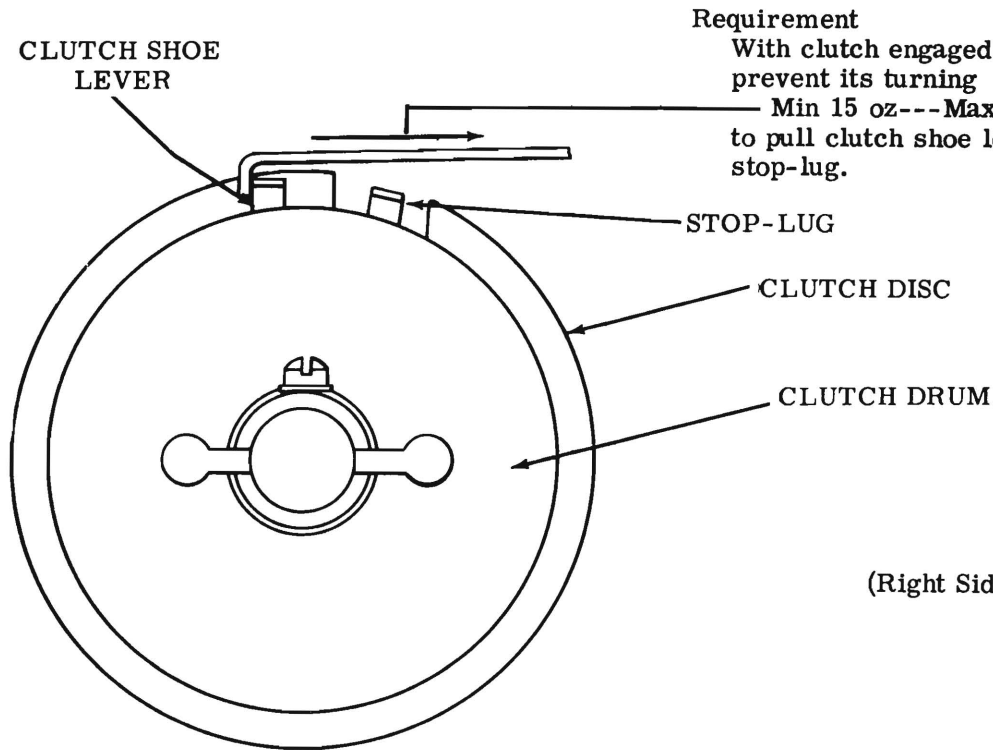


Requirement

With clutch engaged and clutch disc held to prevent its turning  
 Min 15 oz---Max 20 oz  
 to pull clutch shoe lever into contact with stop-lug.

(Right Side View)

CLUTCH SHOE SPRING

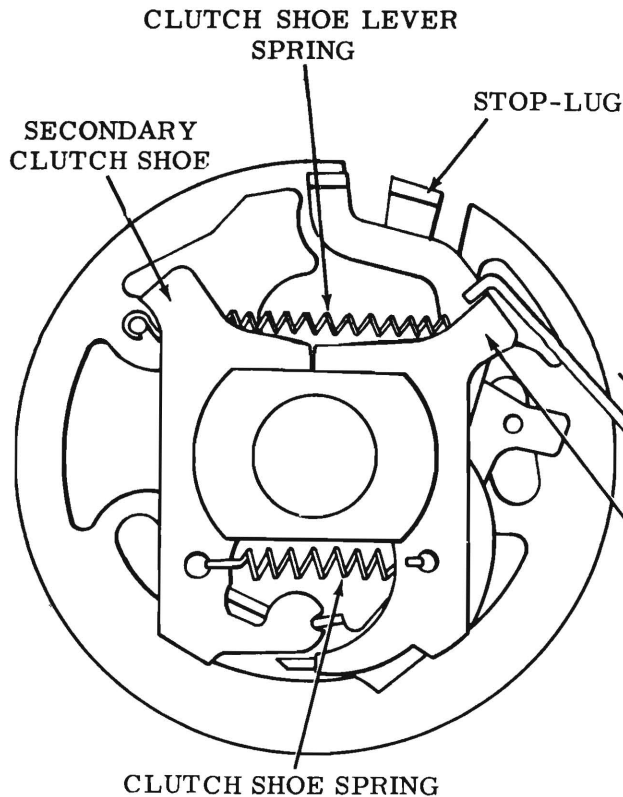

Note 2: In order to check this spring tension, it is necessary to remove the clutch from the main shaft. Therefore, it should not be checked unless there is reason to believe it will not meet its requirement.


To Check  
 Remove clutch drum.

Requirement

Min 3 oz---Max 5 oz  
 to start primary clutch shoe moving.

(Left Side View)

2.18 Selector Area

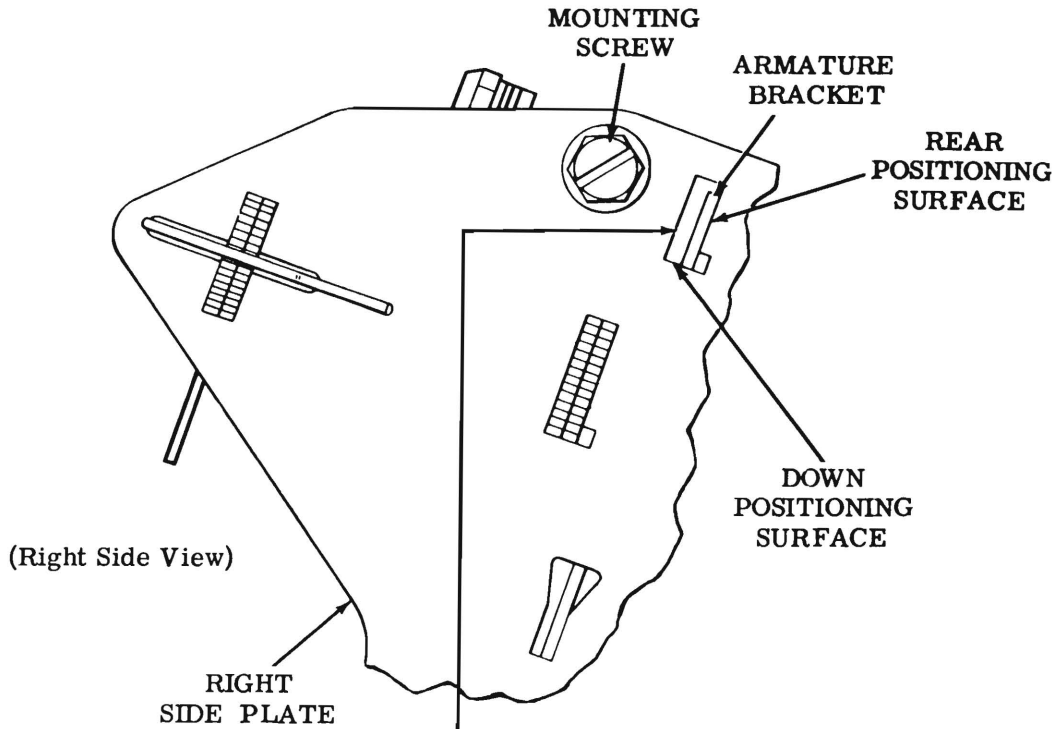

ARMATURE BRACKET POSITION  
(Preliminary)

Requirement

Armature bracket should be positioned against its down and rear positioning surfaces on right and left side plates so that it is parallel within 0.002 inch with rear surfaces measured at ends.


To Adjust

Loosen two mounting screws and position bracket. Tighten mounting screws.


Related Adjustments

Affects

- ARMATURE SPRING (2.20)
- RECEIVING MARGINS (2.123)
- SHOE LEVER GAP AND TRIP LEVER ENGAGEMENT (2.19)

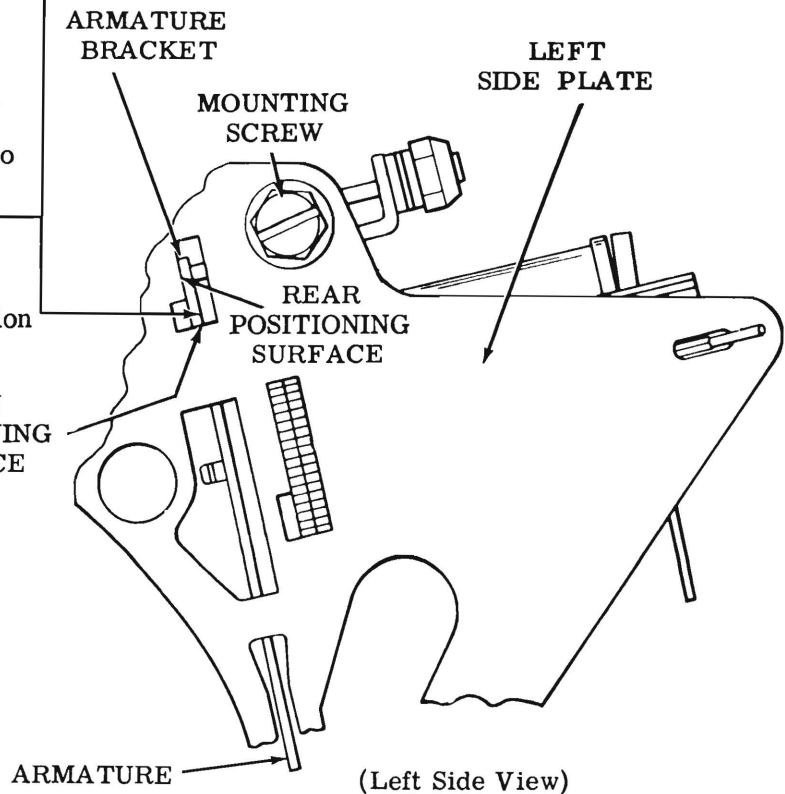

2.19 Selector Area (continued)

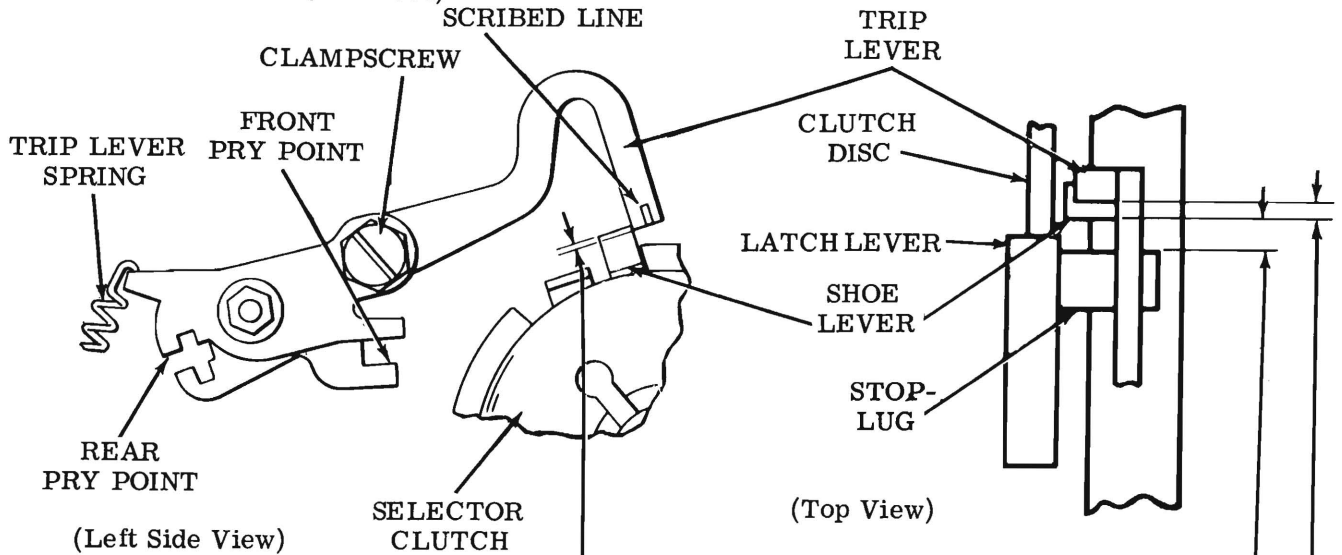


TRIP LEVER SPRING

**Requirement**

With typing unit in stop condition and shoe lever held away from trip lever

Min 6 oz---Max 7-3/4 oz  
to start trip lever moving.

**Note 1:** Start lever and latchlever springs also influence this spring tension. Check them individually if above requirement is not met. If they meet requirements, replace trip lever spring.

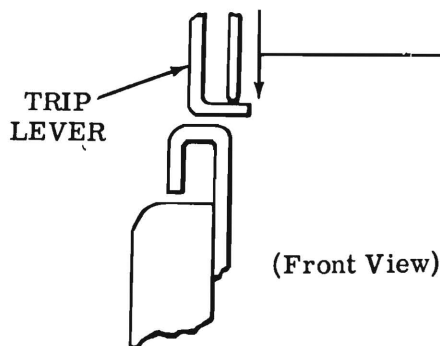

**Note 2:** On typing units with either a scribed line or a notch on the trip lever, gauge by eye the alignment of the scribed line or notch and the front edge of the shoe lever. They are to line up.

SHOE LEVER GAP AND TRIP LEVER ENGAGEMENT

(1) To Check

Disengage (latch) selector clutch. Trip selector clutch by momentarily permitting the armature to move to its unattracted (rearward) position. Fully seat clutch shoes by applying slight pressure against shoe lever along its normal path of forward travel.

**Requirement**

Min 0.055 inch---Max 0.085 inch  
between edge of trip lever and edge of shoe lever.

(2) To Check

Disengage (latch) selector clutch.

**Requirement**

Min 0.015 inch  
between shoe lever and stop-lug.

(3) To Check

Disengage (latch) selector clutch.

**Requirement**

Trip lever should engage shoe lever  
Min 2/3 thickness  
of shoe lever.

**To Adjust**

Loosen clampscrew friction tight and position trip lever using front and/or rear pry points. Tighten clampscrew.

**Related Adjustments**

**Affects**

RECEIVING MARGINS (2.123)

**Affected By**

ARMATURE BRACKET POSITION (2.18)

2.20 Selector Area (continued)

ARMATURE SPRING

Note: This is a preliminary adjustment. It should not be considered final until RECEIVING MARGINS (2.123) adjustment is completed, and, as finally adjusted, it could fall outside limits specified below.

To Check

Place typing unit in stop condition and move carriage near right margin. Remove armature clip. Rotate selector clutch until start lever, selector levers, and spacing locklever do not contact armature.

Requirement

Min 2-1/4 oz---Max 4-3/4 oz \_\_\_\_\_  
to pull armature to midpoint of travel.

To Adjust

Rotate adjusting nut clockwise to increase armature spring tension and counter-clockwise to decrease it.


Related Adjustments

Affects

RECEIVING MARGINS (2.123)

Affected By

ARMATURE BRACKET POSITION (2.18)

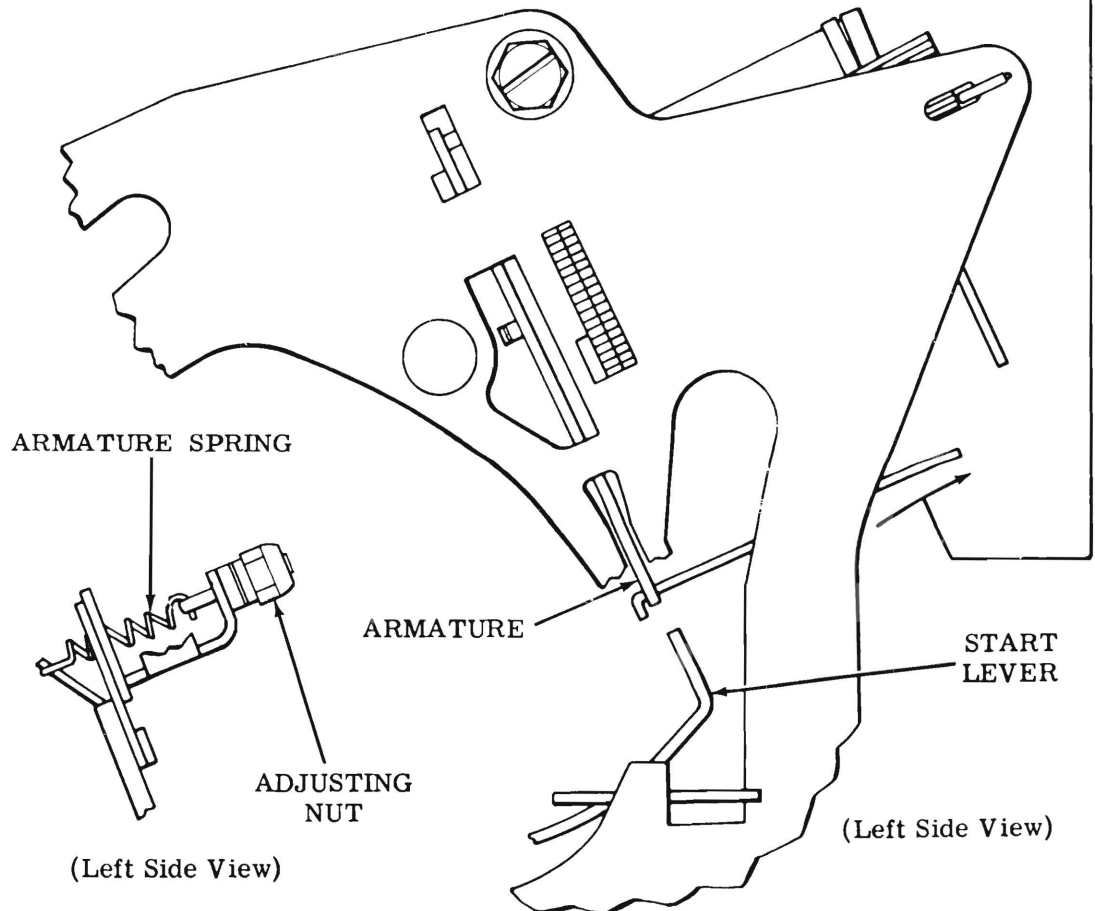

2.21 Selector Area (continued)


START LEVER SPRING

**Requirement**

With typing unit in stop condition

Min 19 oz---Max 23 oz

to pull start lever spring to installed length

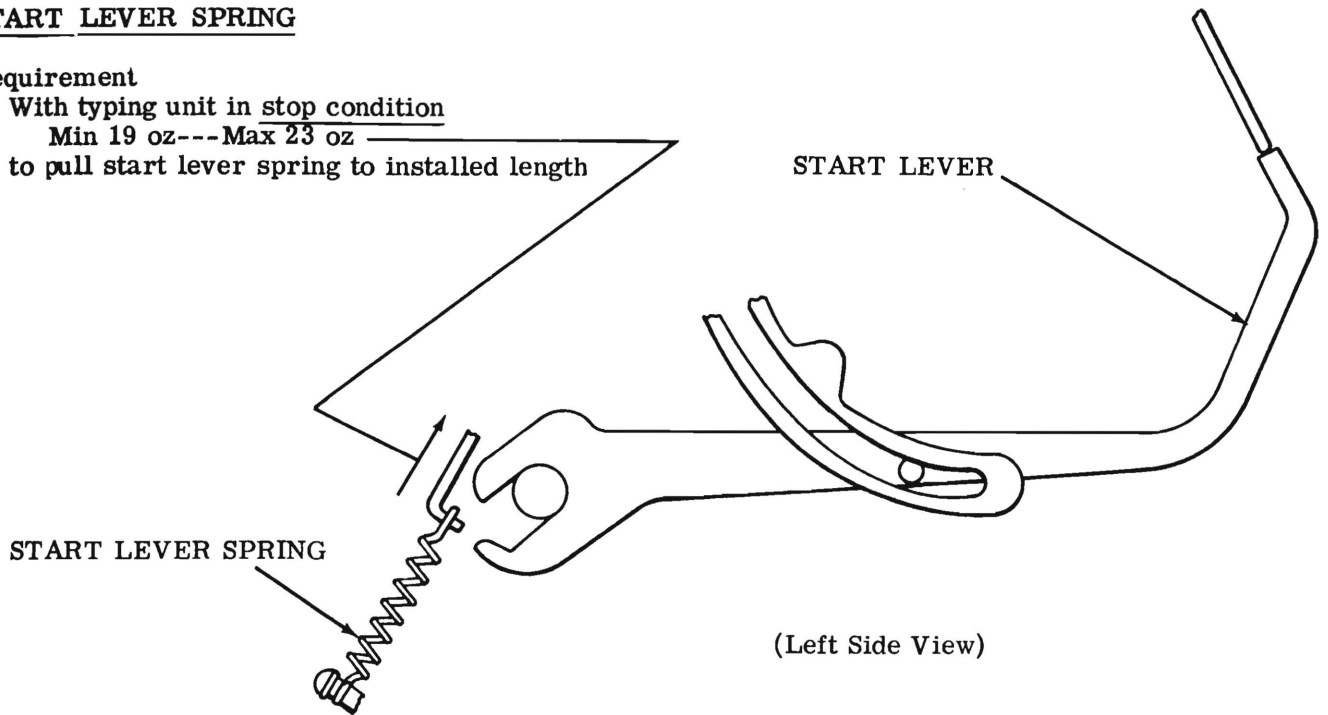

(Left Side View)


LATCHLEVER SPRING

**Requirement**

With selector latchlever resting on high part of clutch disc

Min 2 oz---Max 3 oz

to start selector latchlever moving.

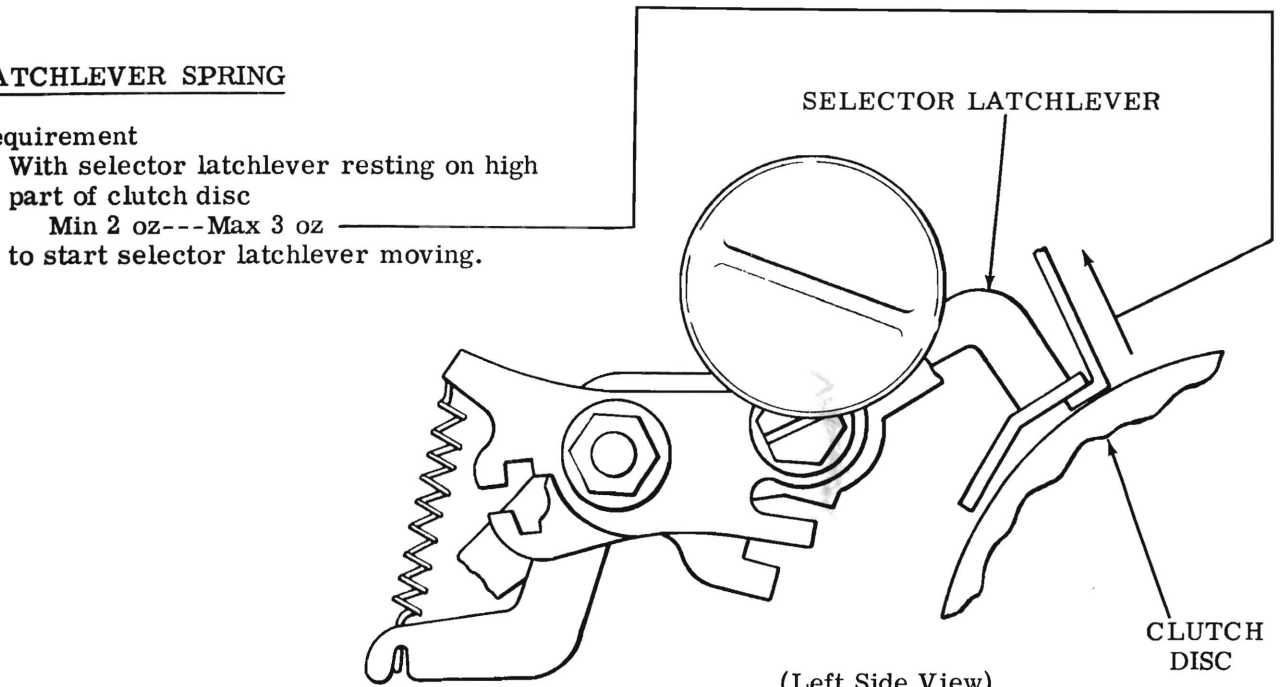

(Left Side View)

2.22 Selector Area (continued)

SELECTOR LEVER SPRINGS


To Check

Set up NUL, an all spacing code combination, in selector. Rotate main shaft until typing unit is in stop condition.

Requirement

Min 1-1/2 oz---Max 3-1/4 oz to start selector lever moving.

Note: Check each selector lever spring.

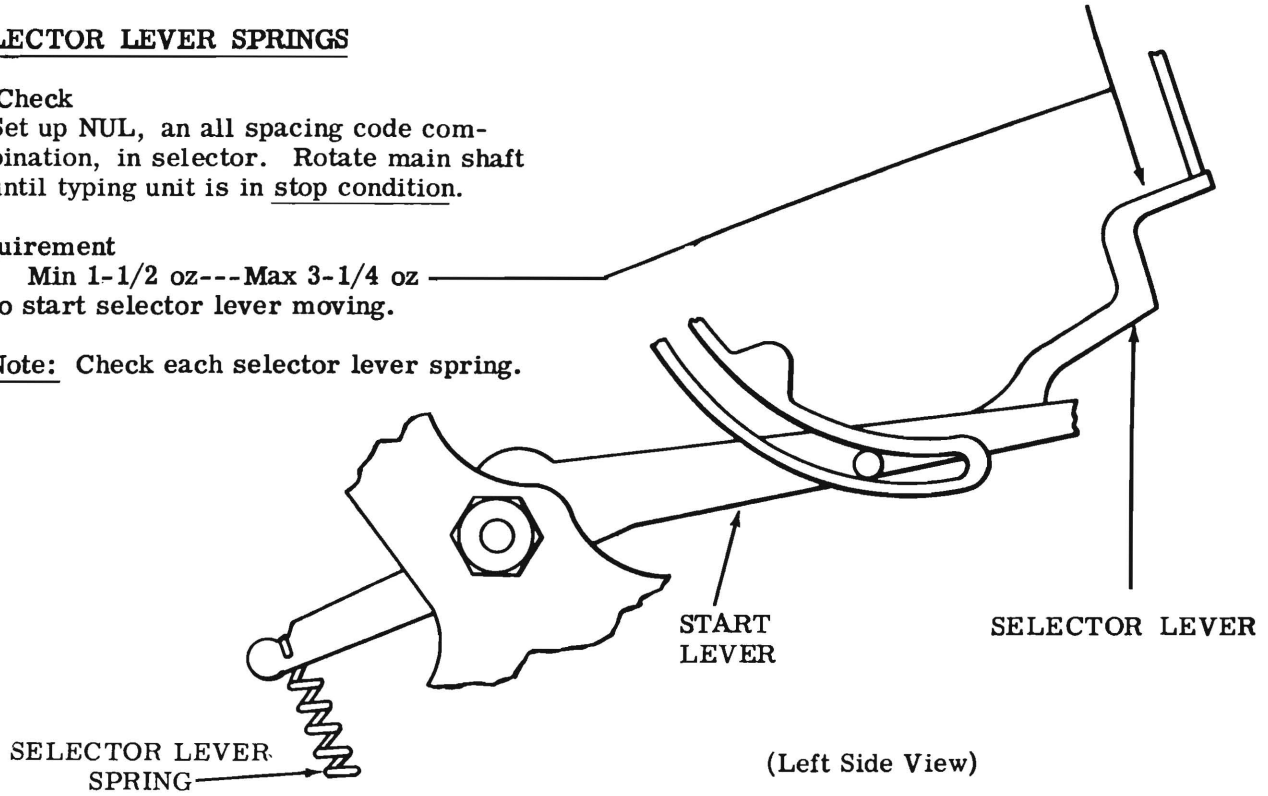


SPACING LOCKLEVER SPRING

To Check

Set up NUL, an all spacing code combination, in selector. Rotate main shaft until typing unit is in stop condition.

Requirement

Min 1-1/2 oz---Max 3 oz to start locklever moving.

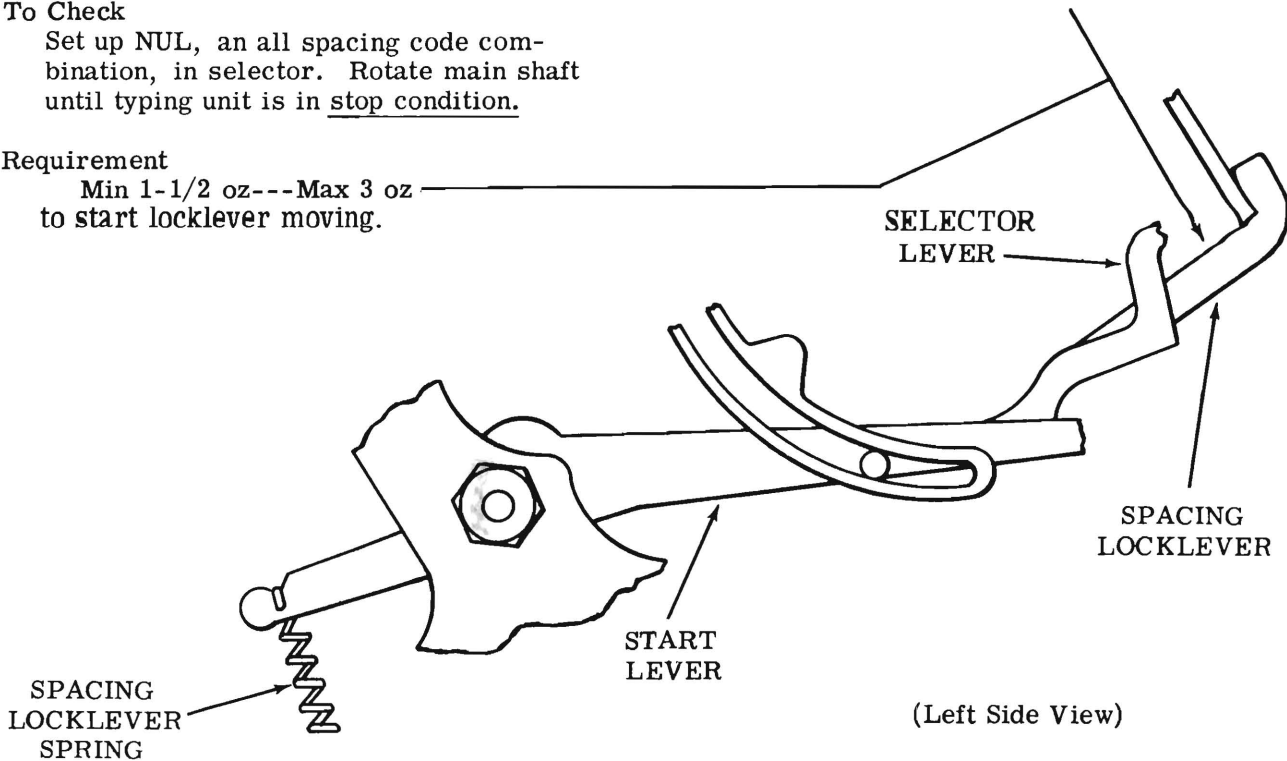

2.23 Selector Area (continued)


STRIPPER BAIL SPRING

**To Check**

Set range finder at 60. Set up NUL, an all spacing code combination, in selector. Rotate main shaft until typing unit is in stop condition.

**Requirement**

Min 1/4 oz---Max 1 oz  
to start stripper bail moving.

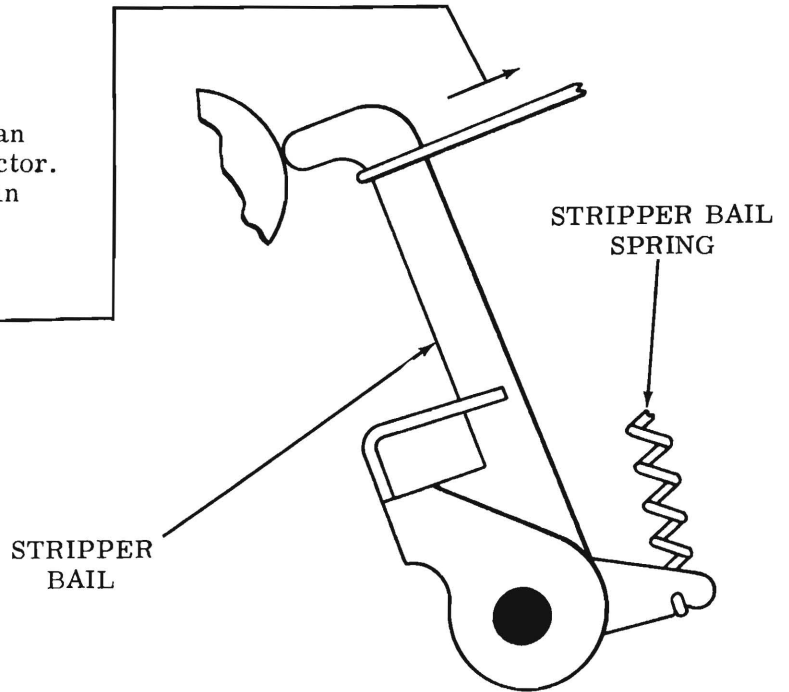

(Left Side View)

PUSH LEVER SPRINGS


**Note 1:** To measure this tension, selector mechanism must be removed from typing unit. Therefore, do not check it unless there is cause to suspect it will not meet requirement.

**CAUTION:** BEFORE REMOVING SELECTOR CLUTCH, MAKE SURE ARMATURE IS IN THE SPACING POSITION. HOLD SELECTOR LEVERS IN PLACE AWAY FROM SELECTOR CLUTCH WITH TP184098 TOOL.

**Requirement**


With blocking lever held away from push lever  
Min 1-1/2 oz---Max 3 oz  
to start push lever moving.

**Note 2:** Check each push lever spring.

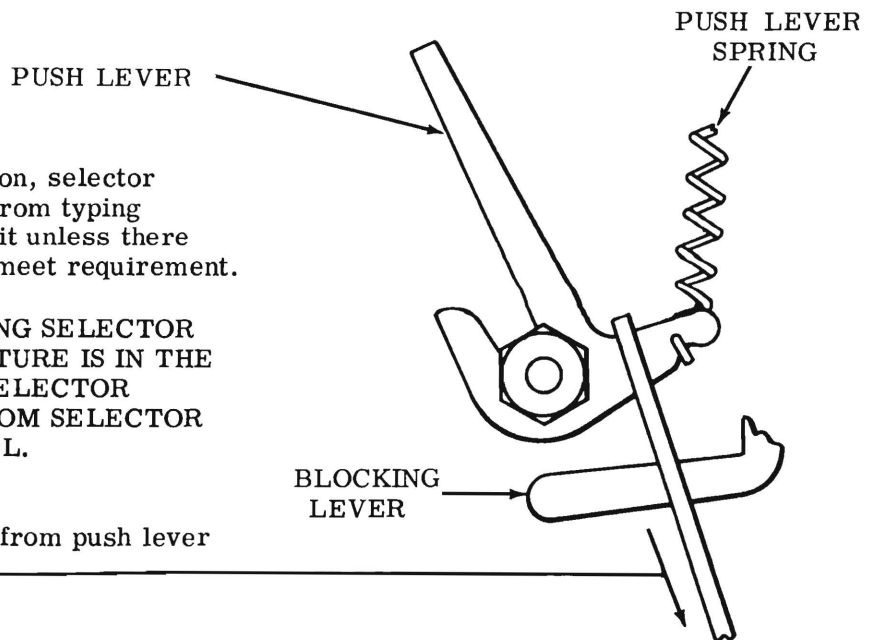

(Left Side View)

2.24 Selector Area (continued)

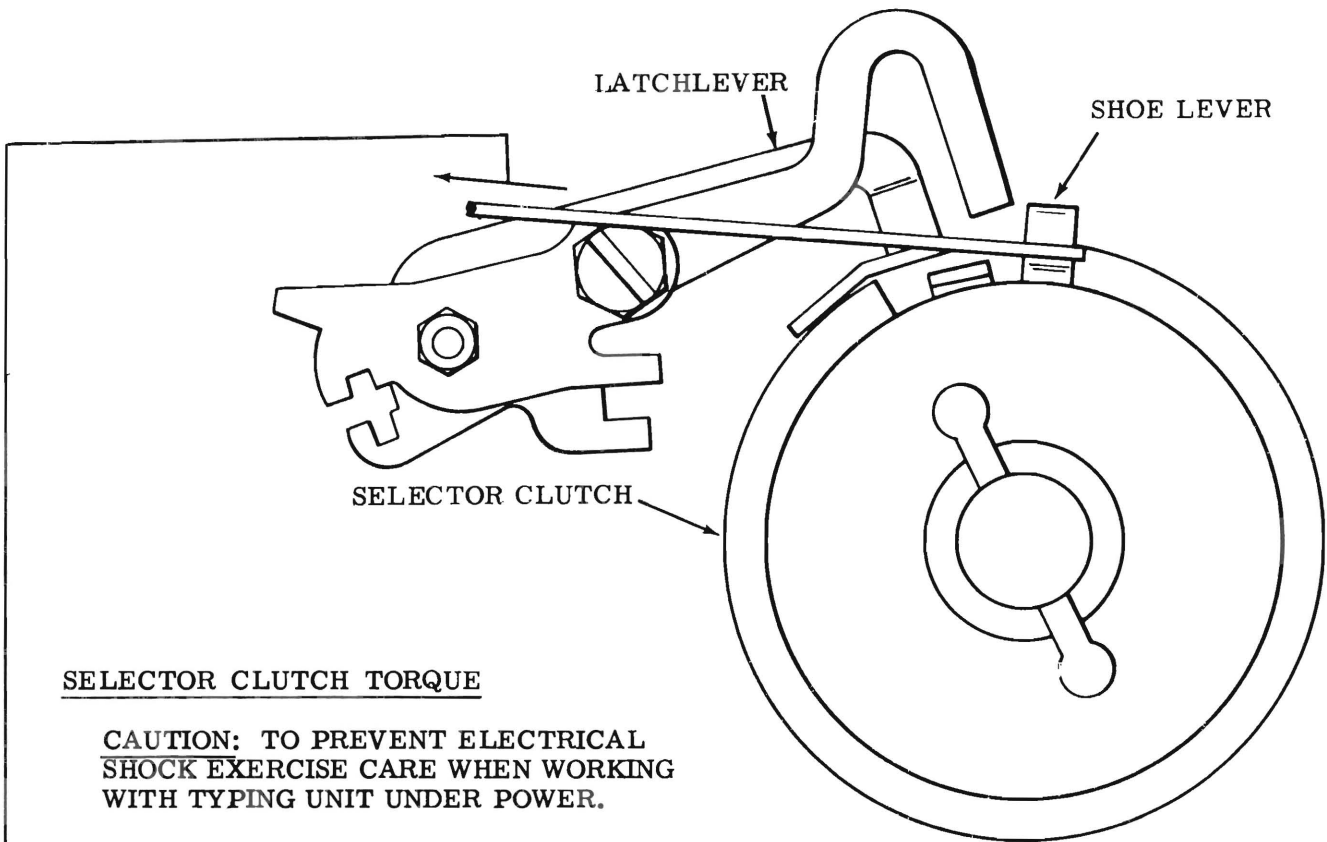

(Left Side View)

SELECTOR CLUTCH TORQUE

**CAUTION: TO PREVENT ELECTRICAL SHOCK EXERCISE CARE WHEN WORKING WITH TYPING UNIT UNDER POWER.**

**To Check**

Place TP185832 armature clip so as to hold armature attracted. Plug typing unit into proper call control unit receptacle and apply power to typing unit. Hold shoe lever with spring scale as shown. Trip selector clutch by moving armature rearward. Allow selector clutch to advance until latchlever is disengaged. Check requirement. Remove all power connections.

**Requirement**

Min 13 oz---Max 16 oz  
to hold shoe lever.

## 2.25 Function Area

(A) MAIN SHAFT ROTATION

Note 1: This adjustment should be checked when adjustments affecting the typing unit drive system have been disturbed.

## (1) To Check

With motor drive belt removed and all clutches disengaged (latched), manually rotate main shaft.

## Requirement

No excessive drag or binding should be detected.

## (2) To Check

With motor belt installed and all clutches disengaged (latched), manually rotate main shaft.

## Requirement

No excessive drag or binding should be detected.

Note 2: Excessive drag or binding when the main shaft is rotated will cause insufficient receiving margins.

## To Adjust

If requirements are not met, check following adjustments:

GEAR BACKLASH (Motor Area) (2.01)

BELT TENSION (Motor Area) (2.02)

LEFT BEARING POSITION (Main Shaft Area) (2.10)

SELECTOR CAM ENDPLAY (Main Shaft Area) (2.10)

FUNCTION CLUTCH ENDPLAY (Main Shaft Area) (2.11)

CODEBAR CLUTCH ENDPLAY (Main Shaft Area) (2.12)

DRIVEN GEAR LINE-UP (Main Shaft Area) (2.12)

FORM FEED CLUTCH ENDPLAY - S (Main Shaft Area) (2.93)

SHOE LEVER GAP AND TRIP LEVER ENGAGEMENT (Selector Area) (2.19)

BEARING ALIGNMENT (2.25)

(B) BEARING ALIGNMENT

Note 3: This adjustment applies to main shaft bearings, distributor shaft bearings, function rocker shaft bearings, and codebar reset bail bearings. It should only be made if bearing clamps have been loosened, or if a bind is detected in associated shafts.

## Requirement

Bearings should be aligned with their respective shaft.

## To Adjust

(a) With bearing clamps loosened, position bearing using finger pressure while rotating associated shaft. Tighten clampscrews.

(b) If bind still exists, keep bearing clamp tightened and apply a light blow vertically to top of bearing clamp.

2.26 Function Area (continued)

ROCKER SHAFT POSITION AND ENDPLAY

(1) Requirement

Both bearings should be centered on base casting, as gauged by eye.

To Adjust

Loosen collar setscrews and bearing clampscrews and position bearings.  
Tighten bearing clampscrews.

(2) Requirement

The left end of function rocker shaft should line up with inside top edge of base casting lip, however:


- 0.030 inch misalignment is permissible to the left.
- 0.060 inch misalignment is permissible to the right.

(3) Requirement

Min some---Max 0.010 inch endplay in function rocker shaft.

To Adjust


Loosen setscrews and position function rocker shaft and both collars.  
Tighten both setscrews.

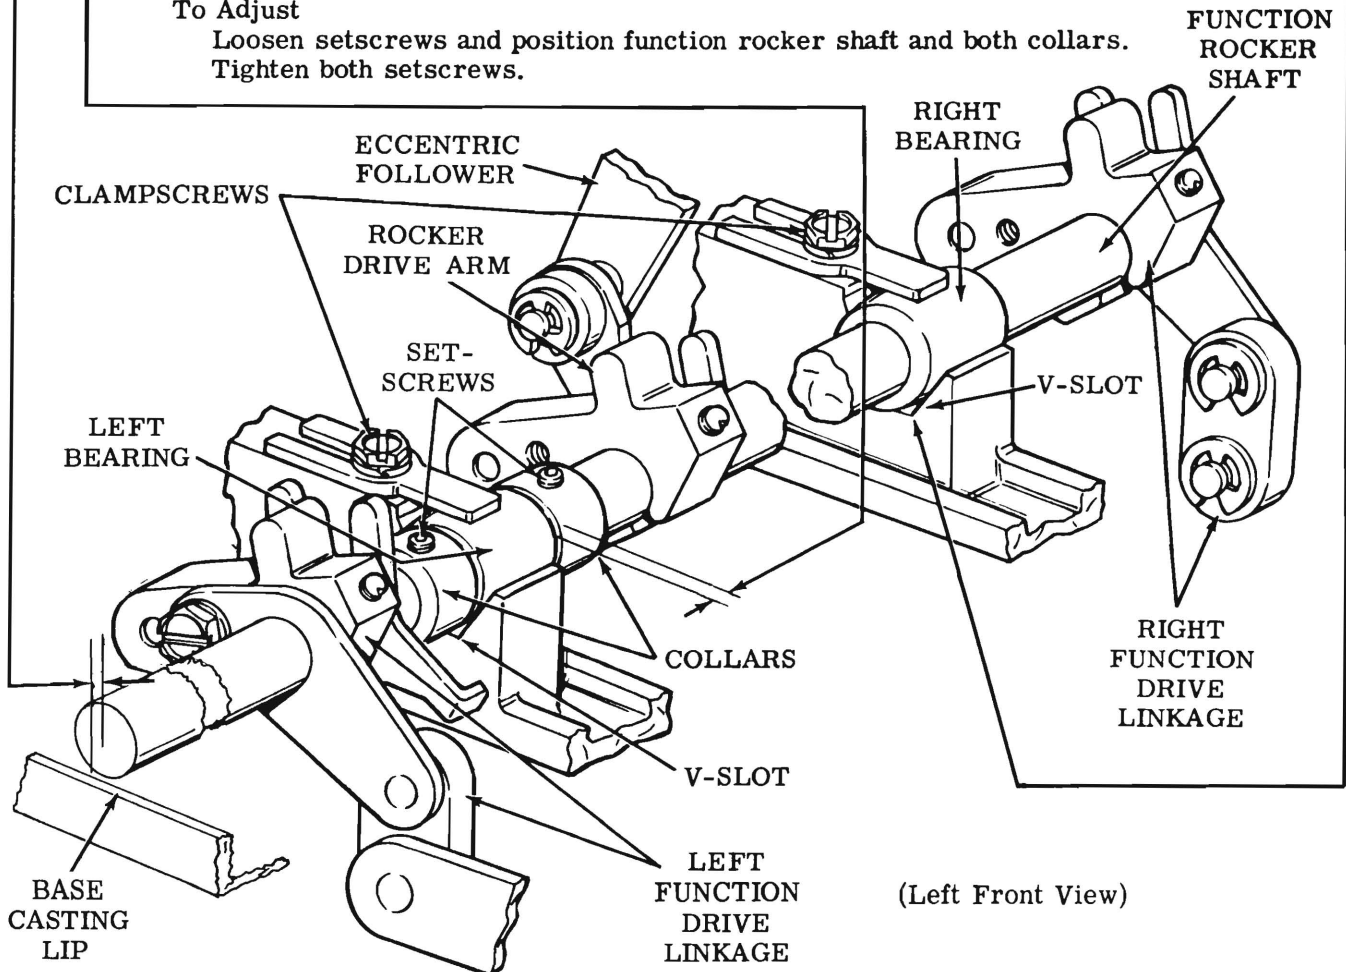

Related Adjustments  
Affects

- CODEBAR RESET LEVER LINE-UP (2.27)
- CODEBAR RESET LEVER POSITION (2.28)
- PRINT SUPPRESSION LATCH — HORIZONTAL CLEARANCE (2.29)

## 2.27 Function Area (continued)

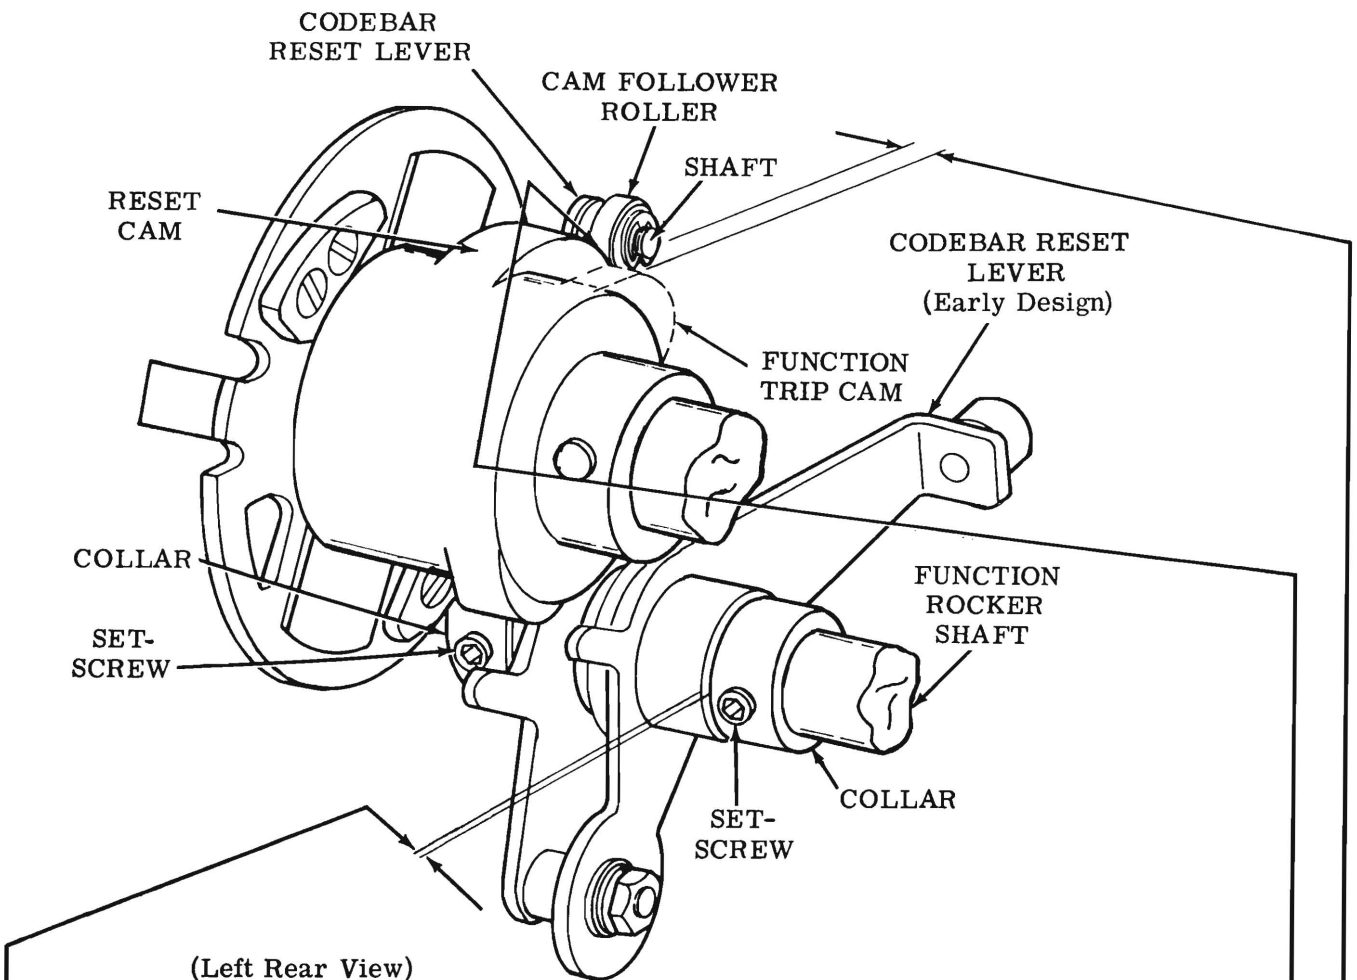CODEBAR RESET LEVER LINE-UP**Requirement**

With typing unit in stop condition

- (1) Cam follower roller approximately centered on reset cam, as gauged by eye,  
Max 0.020 inch \_\_\_\_\_  
overhang permitted on right side only.
- (2) Min some---Max 0.010 inch  
endplay in codebar reset lever.
- (3) Min 0.005 inch \_\_\_\_\_  
between cam follower roller's shaft and function trip cam.

**To Adjust**

Loosen setscrews and position two collars.

**Related Adjustments****Affects**


CODEBAR RESET LEVER POSITION (2.28)

**Affected By**

ROCKER SHAFT POSITION AND ENDPLAY (2.26)

CODEBAR CLUTCH ENDPLAY (2.12)

2.28 Function Area (continued)

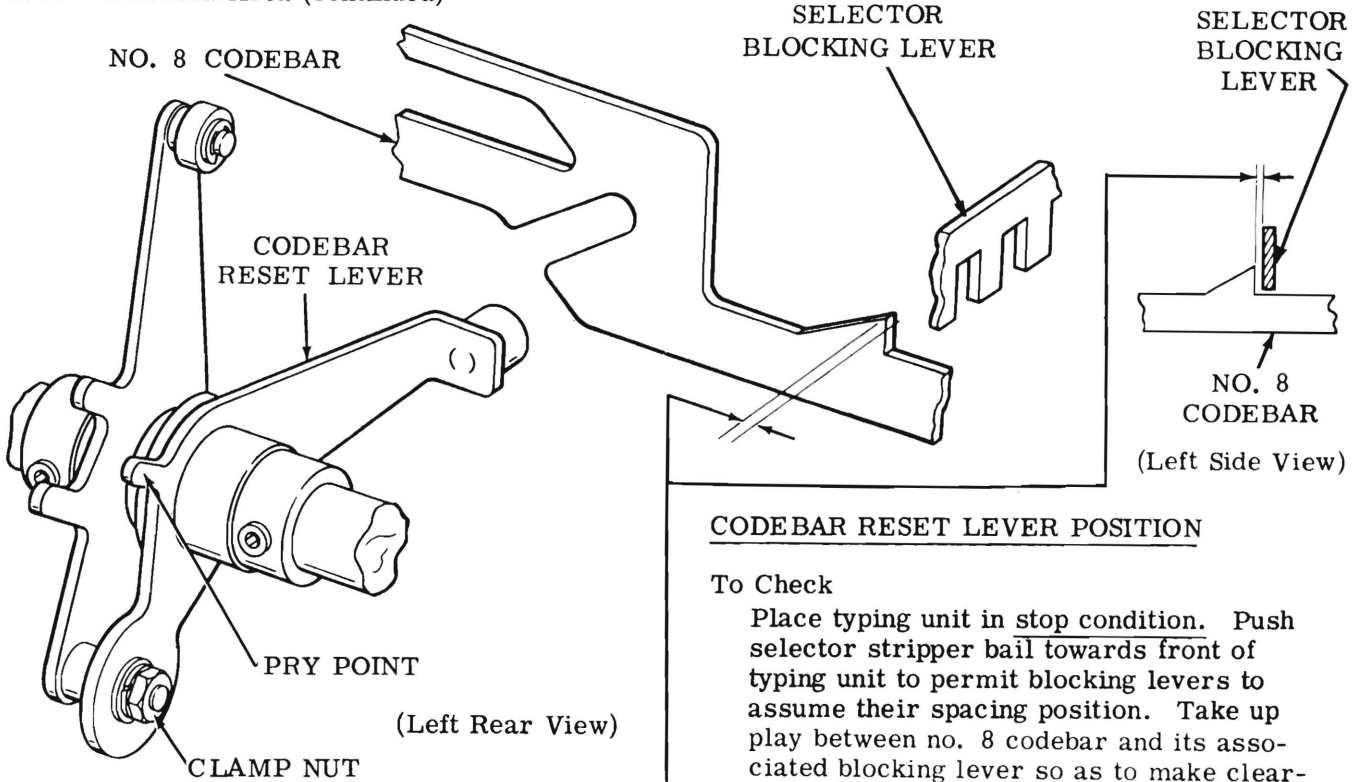

CODEBAR RESET LEVER POSITION

**To Check**

Place typing unit in stop condition. Push selector stripper bail towards front of typing unit to permit blocking levers to assume their spacing position. Take up play between no. 8 codebar and its associated blocking lever so as to make clearance a minimum.

**Requirement**

Min 0.012 inch---Max 0.030 inch between the codebar closest to front of typing unit and its selector blocking lever.

**To Adjust**

With clamp nut loosened, use pry point to adjust codebar reset lever. Tighten clamp nut.

**Related Adjustments**

**Affects**

- PRINT SUPPRESSION LATCH — HORIZONTAL CLEARANCE (2. 29)
- PRINT SUPPRESSION LATCH — VERTICAL CLEARANCE (2. 39)
- FUNCTION SHAFT AND CASTING POSITION (2. 40)
- REAR RAIL POSITION (Carriage Area) (2. 45)
- FOURTH PULSE LINKAGE POSITIONING (Carriage Area) (2. 47)
- PRINT SUPPRESSION LATCHLEVER RELEASE (Carriage Area) (2. 57)
- SPACE SUPPRESSION LEVER CLEARANCE — PRINTING (Spacing Area) (2. 65)

**Affected By**

- ROCKER SHAFT POSITION AND END-PLAY (2. 26)
- CODEBAR RESET LEVER LINE-UP (2. 27)


CODEBAR RESET BAIL SPRING

**To Check**

Set up NUL, an all spacing code combination, in the selector and rotate main shaft until codebar reset bail is in highest position.

**Requirement**

Min 5-3/4 oz---Max 8-3/4 oz to start codebar reset bail moving.

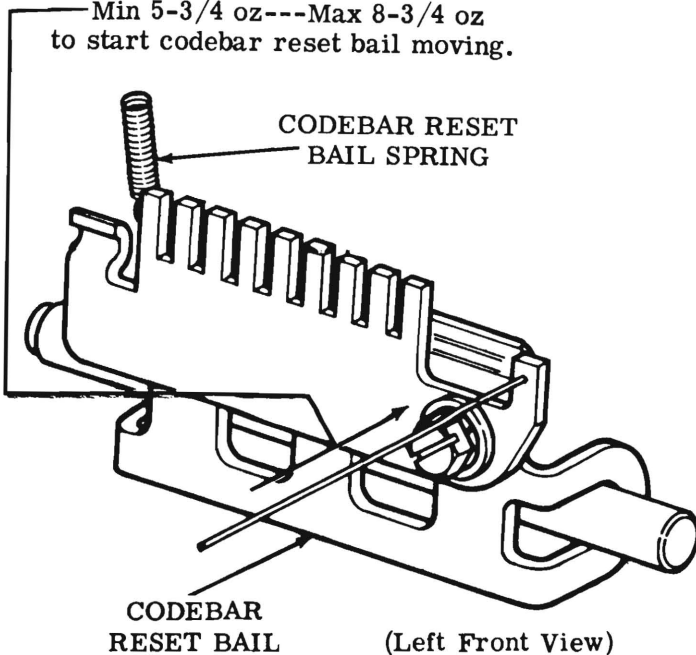

2.29 Function Area (continued)

PRINT SUPPRESSION LATCH — HORIZONTAL CLEARANCE

- (1) Requirement  
With typing unit in the stop condition  
Min 0.010 inch---Max 0.025 inch  
between print suppression latch and  
print suppression codebar.
- (2) Requirement  
Print suppression cam follower and  
latch should move freely.

Note 1: Disregard Requirement (2)  
for typing units which are not equipped  
with TP180744 collars.

Note 2: Some typing units have one  
clamp nut to loosen, others two,  
depending upon the configuration of  
the latch bracket used.

To Adjust  
Loosen clamp nut(s) and setscrews in  
collars (see Note 1 and Note 2). Position  
latch bracket using pry point to meet  
Requirement (1). Tighten clamp nuts.  
Position collars to meet Requirement  
(2). Tighten setscrews.

Related Adjustments


Affects

FUNCTION SHAFT AND CASTING POSITION (2. 40)

Affected By

ROCKER SHAFT POSITION AND ENDPLAY (2. 26)

CODEBAR RESET LEVER POSITION (2. 28)

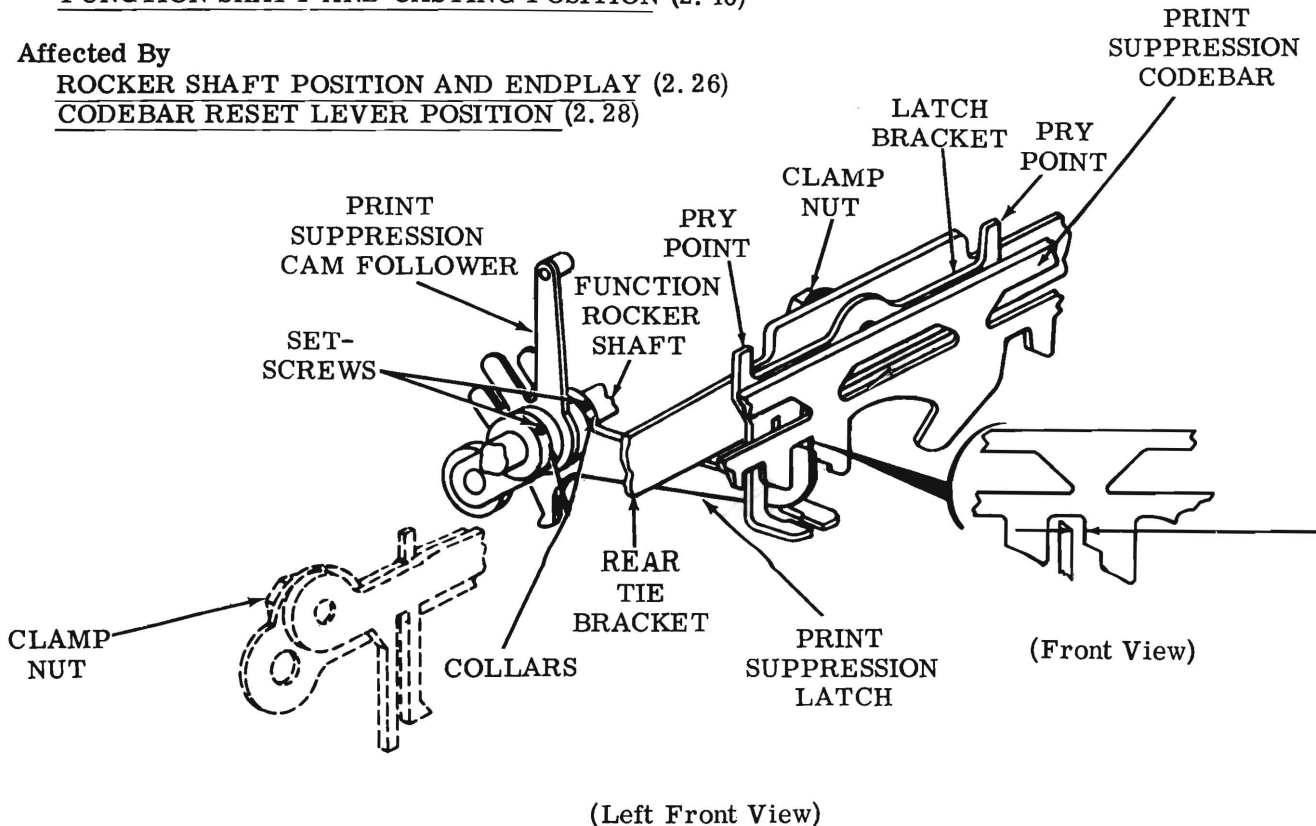

2.30 Function Area (continued)

CODEBAR RESET GUIDE POSITION

(1) Requirement

Codebars should have no noticeable curvature when viewed from their ends.

Note: The following To Check is for units equipped with TP181574 EOT function lever, TP180801 universal function lever, or similar function levers.

To Check


Manually set up RUBOUT, an all marking code combination, in the selector. Rotate main shaft until the function lever reaches its highest point of travel. Lightly take up any play between the function lever and codebars.

(2) Requirement

The codebars should fully engage the function lever tines.

To Adjust

Loosen clampscrew and position codebar guide using pry point. Tighten clampscrew.

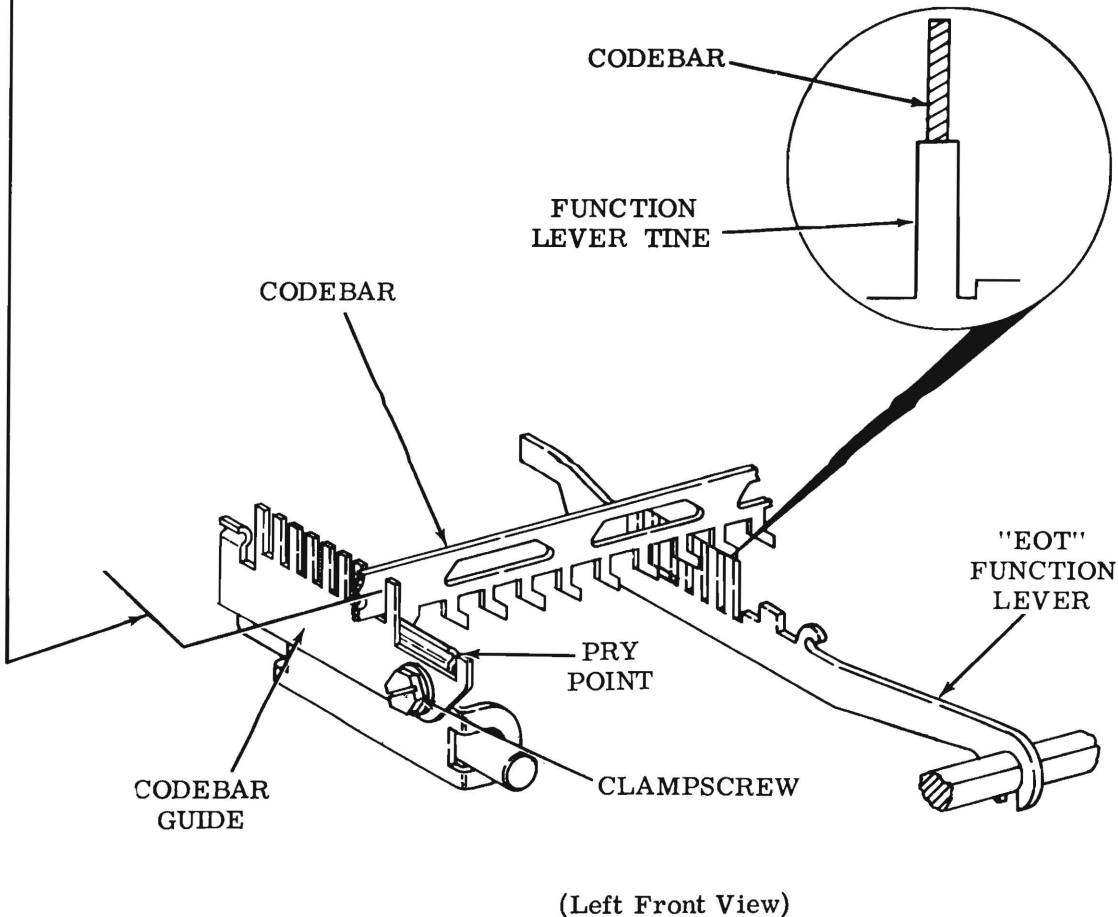

2.31 Function Area (continued)

SELECTOR BLOCKING LEVERS POSITIONING

Note: Set range finder to 80 on scale for both (1) and (2) To Check.

(1) To Check


Manually operate typing unit and set up RUBOUT, an all marking code combination in selector. Continue rotating main shaft until selector levers are on peak of their respective cams and codebar ends are approximately flush with left edge of their associated blocking levers.

(1) Requirement

Min 0.006 inch---Max 0.050 inch  
between the no. 1 blocking lever and its associated codebar.

(2) Requirement

Min 0.003 inch  
between all remaining blocking levers and their associated codebars.

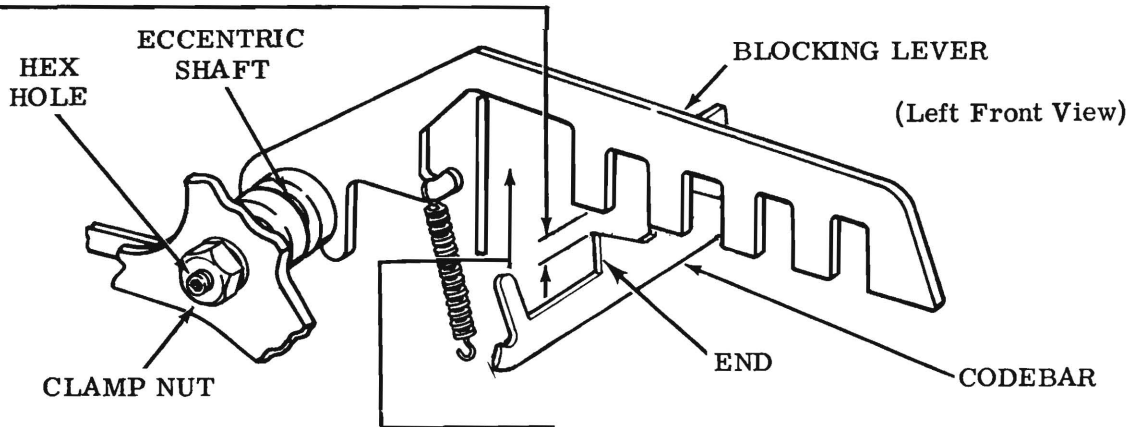

(2) To Check

Manually rotate main shaft. Hold armature forward in its marking position and rotate main shaft until selector clutch shoe lever is in vertical (12 o'clock) position. Continue rotating main shaft until shoe lever reaches 3 o'clock position as viewed from left, and note any vertical motion of no. 1 or no. 2 blocking levers.

Requirement

No visible vertical motion of no. 1 or no. 2 blocking levers while selector clutch shoe lever is moving from 12 o'clock to 3 o'clock position.

To Adjust

Loosen clamp nut and position eccentric with hex key wrench. Keep high part of eccentric toward rear of typing unit. Tighten clamp nut.

Related Adjustments

Affects

CODEBAR GUIDE POSITION (2. 32)

BLOCKING LEVER SPRINGS

To Check

Set up NUL, an all spacing code combination, in the selector. Rotate main shaft until typing unit is in stop condition.

Requirement

Min 1/2 oz---Max 1-1/4 oz  
to start blocking lever moving.

Note: Check each blocking lever spring.

2.32 Function Area (continued)

CODEBAR GUIDE POSITION

To Check

Place typing unit in stop condition and manually operate the typing unit until the no. 1 blocking lever is in its lowest position.

(1) Requirement

No. 1 codebar centrally located in guide slot, as gauged by eye.

(2) Requirement

No. 1 blocking lever should engage the full thickness of no. 1 codebar.


To Adjust

Loosen clampscrew. Position codebar guide. Tighten clampscrew.

Related Adjustments

Affected By

SELECTOR BLOCKING LEVERS POSITIONING (2.31)

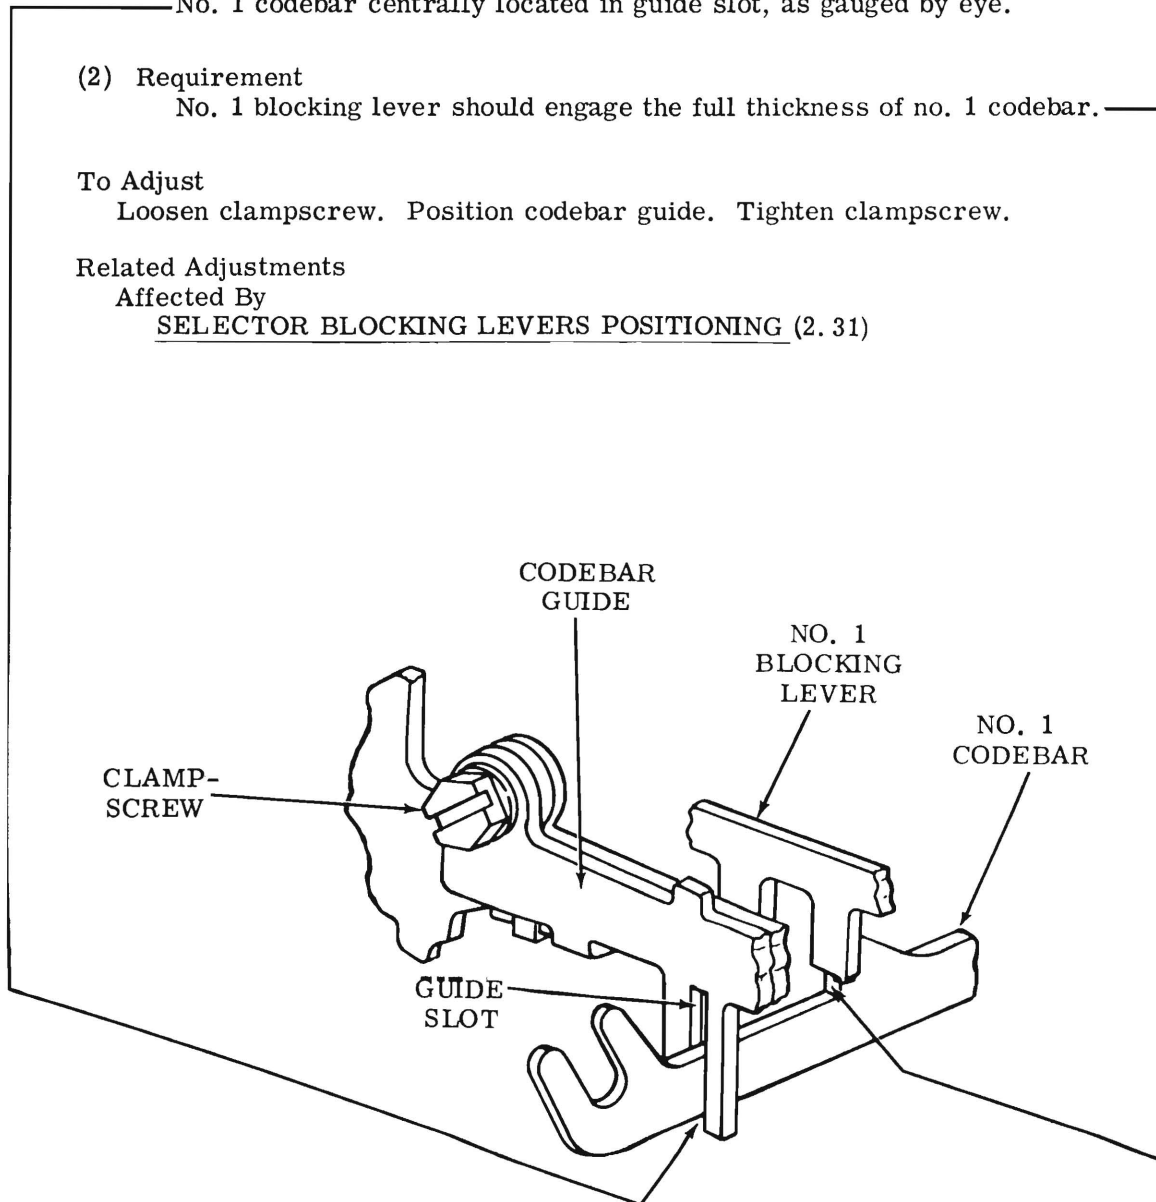

(Left Front View)

2.33 Function Area (continued)

AUTOMATIC CODEBAR SPRING

Requirement

With carriage at left margin TP180948 automatic codebar


Min 1/2 oz---Max 1-3/4 oz  
TP183495, TP183496, TP183497 automatic codebars

Min 2 oz---Max 3 oz  
to start automatic codebar moving.

AUTOMATIC CODEBAR

AUTOMATIC CODEBAR SPRING

(Front View)

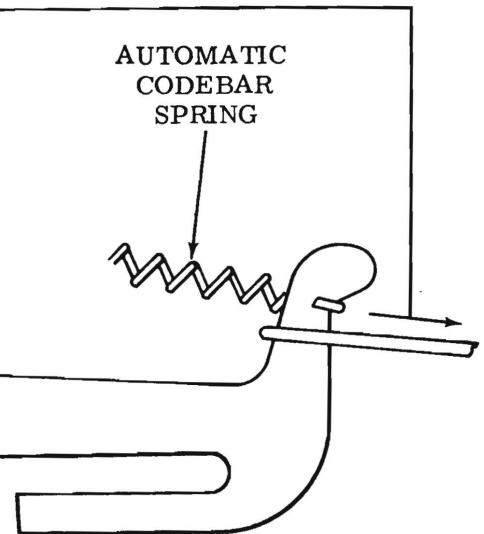

PRINT SUPPRESSION AND NO. 4 CODEBAR SPRING

Requirement

With typing unit in stop condition and no. 4 codebar follower on carriage lifted

Min 12 oz---Max 14 oz  
to start codebar moving.

Note 1: Check the print suppression and no. 4 codebar spring.

CODEBAR SPRINGS

Note 2: Check each codebar spring other than automatic, print suppression and no. 4.

Requirement

With typing unit in stop condition and codebar follower lifted:

Min 5-1/2 oz---Max 7-1/2 oz  
to start codebar moving.

FOLLOWER



CODEBAR SPRING

(Front View)

CODEBAR

(Front View)

GUIDE POST

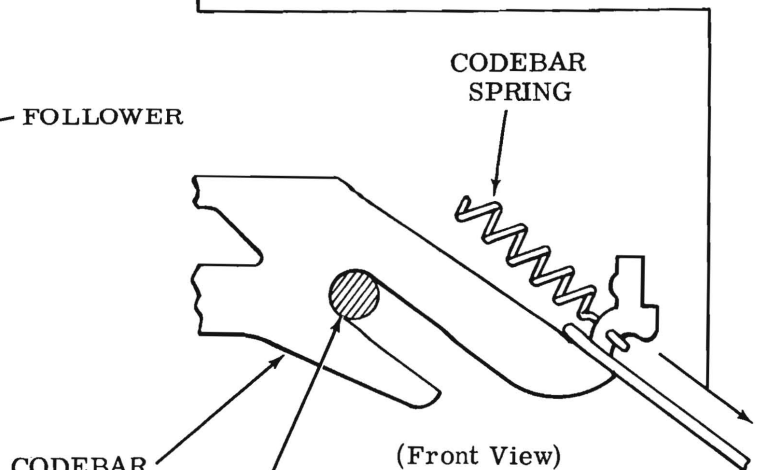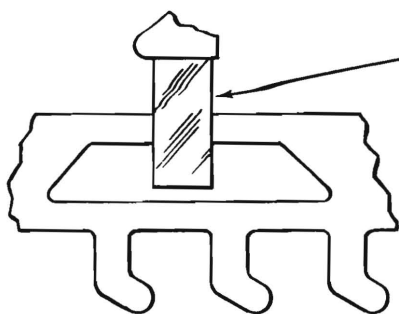

2.34 Function Area (continued)

FUNCTION PAWL SPRING

Requirement

With typing unit in stop condition and all external loads which would influence the requirement removed

Pawl Spring	TP49420 (26 Turns)	TP86283 (38 Turns)	TP180863 (33 Turns)
-------------	-----------------------	-----------------------	------------------------

Min	9 oz	1-1/4 oz	3 oz
Max	13 oz	2-1/2 oz	5-1/2 oz

to start each function pawl moving.

Note: Check each pawl spring. TP180863 pawl spring is used with the carriage return function pawl. TP86283 pawl spring is used with the answer-back blocking function pawl. TP49420 pawl spring is used with BELL and EOT function pawls. All others may be either the TP49420 or TP86283 pawl springs.

LEFT ROCKER DRIVE

To Check

Set up carriage return code combination (1-34---8) in selector. Rotate main shaft until function bail is at highest point of travel. Take up carriage return function lever play in an upward direction at the pivot to minimum clearance.

Requirement

Min 0.015 inch---Max 0.050 inch between carriage return function lever and its function pawl.

To Adjust


Loosen clampscrew. Use pry point to adjust rocker drive arm. Tighten clampscrew.

Note: On early design units pry point is on the center drive arm. On late design units pry point is on left side of left drive arm.

Related Adjustments


Affects

- RIGHT ROCKER DRIVE (2.36)
  - CARRIAGE RETURN LEVER — LATCH CLEARANCE (2.41)
  - FUNCTION LEVER RETAINER (2.37)
  - SPACE SUPPRESSION LEVER CLEARANCE - SPACING (2.66)
  - LINE FEED DRIVE ARM CLEARANCE - F (Platen Area) (2.80)
- Related Tape Punch Adjustments (Refer to Section 574-125-700TC)

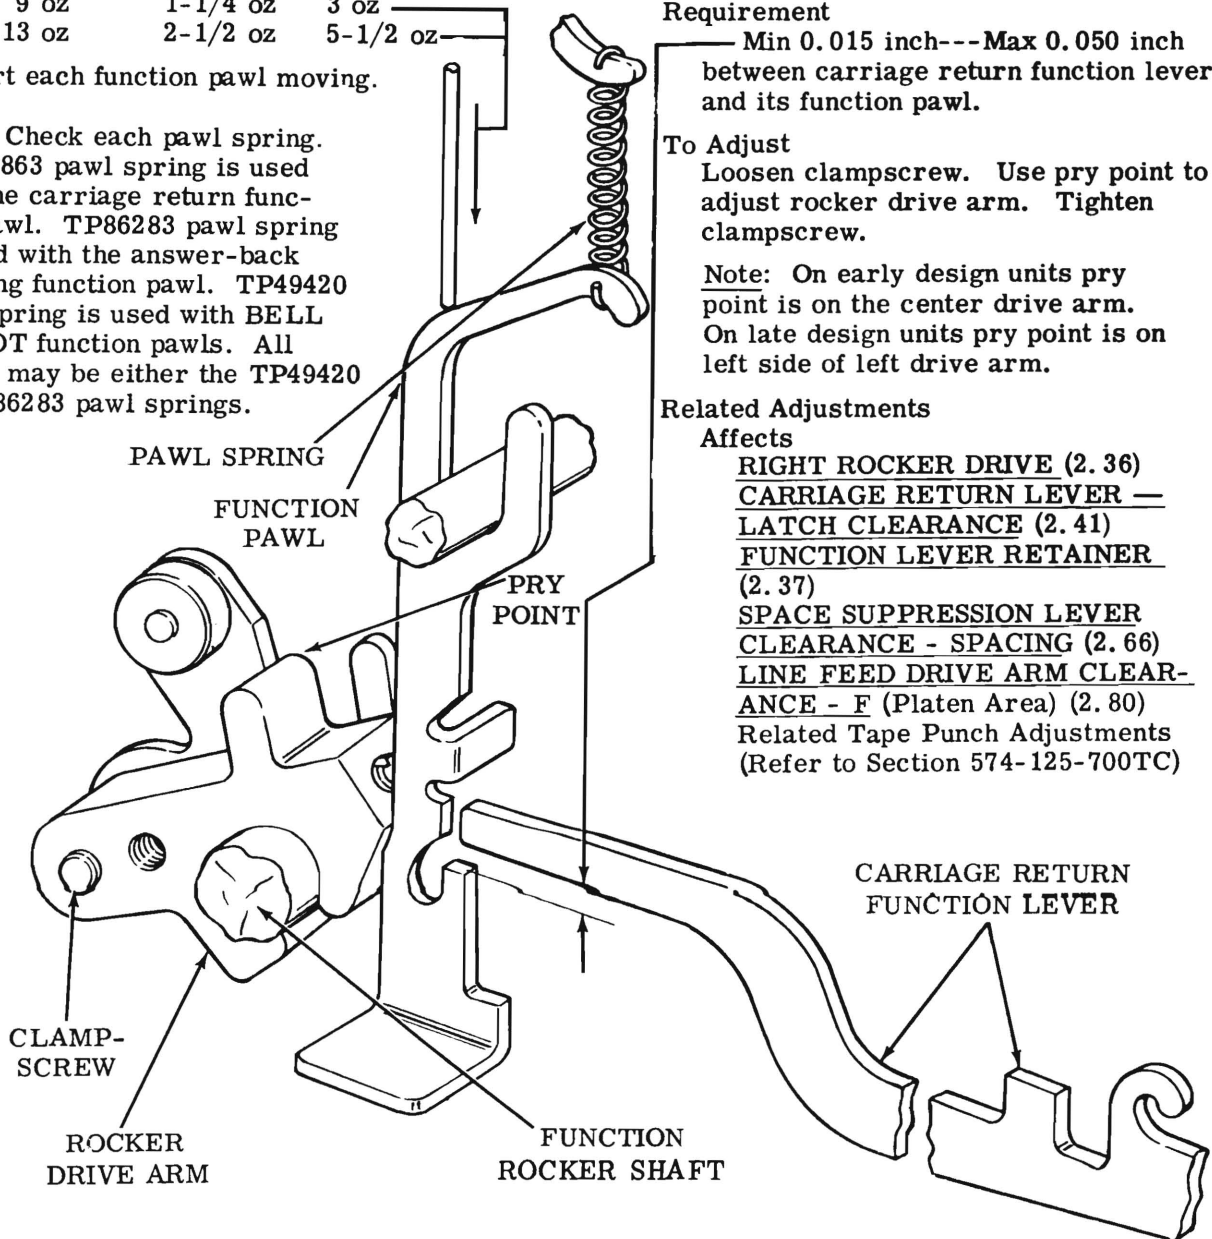

(Left Front View)

2.35 Function Area (continued)

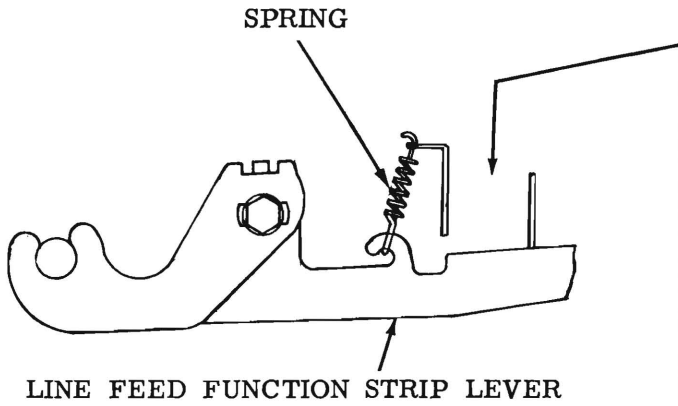

(Right Side View)

LINE FEED FUNCTION STRIP LEVER SPRING - S

**Requirement**

With a spring scale positioned on the line feed function strip lever

Min 23 oz---Max 30 oz \_\_\_\_\_  
to start the line feed function strip lever moving.

FUNCTION LEVER SPRINGS

**Requirement**

With typing unit in stop condition, the spring scale requirements to start each function lever moving are


- (1) Min 19 oz---Max 24 oz to start LF and AUTO LF function levers moving.

Note 1: Hold the blocking pawl up when checking this requirement.

- (2) Min 3-1/2 oz---Max 5-1/2 oz to start carriage return function lever moving.

Note 2: Hold carriage return lever in forward position.

- (3) Min 3-1/2 oz---Max 5-1/2 oz to start remaining function levers moving.

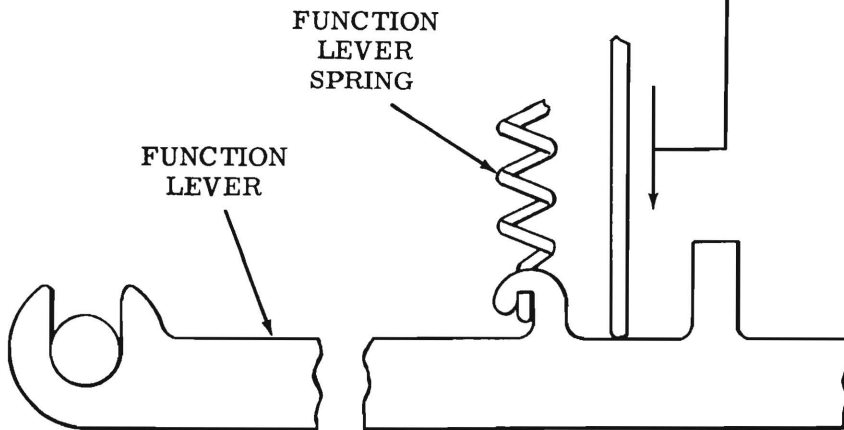

(Right Side View)

2.36 Function Area (continued)

RIGHT ROCKER DRIVE

To Check


Disengage (latch) distributor clutch. Set up answer-back character ENQ code combination (1-3-----) in selector. Rotate main shaft until function bail is at its highest point. Make sure that distributor clutch has not been tripped. Take up answer-back function lever play in an upward direction at the pivot to minimize clearance.

Requirement

Min 0.015 inch--Max 0.050 inch between answer-back function lever and its function pawl.

To Adjust

Loosen clampscrew. Use pry point to adjust right rocker arm. Tighten clampscrew.

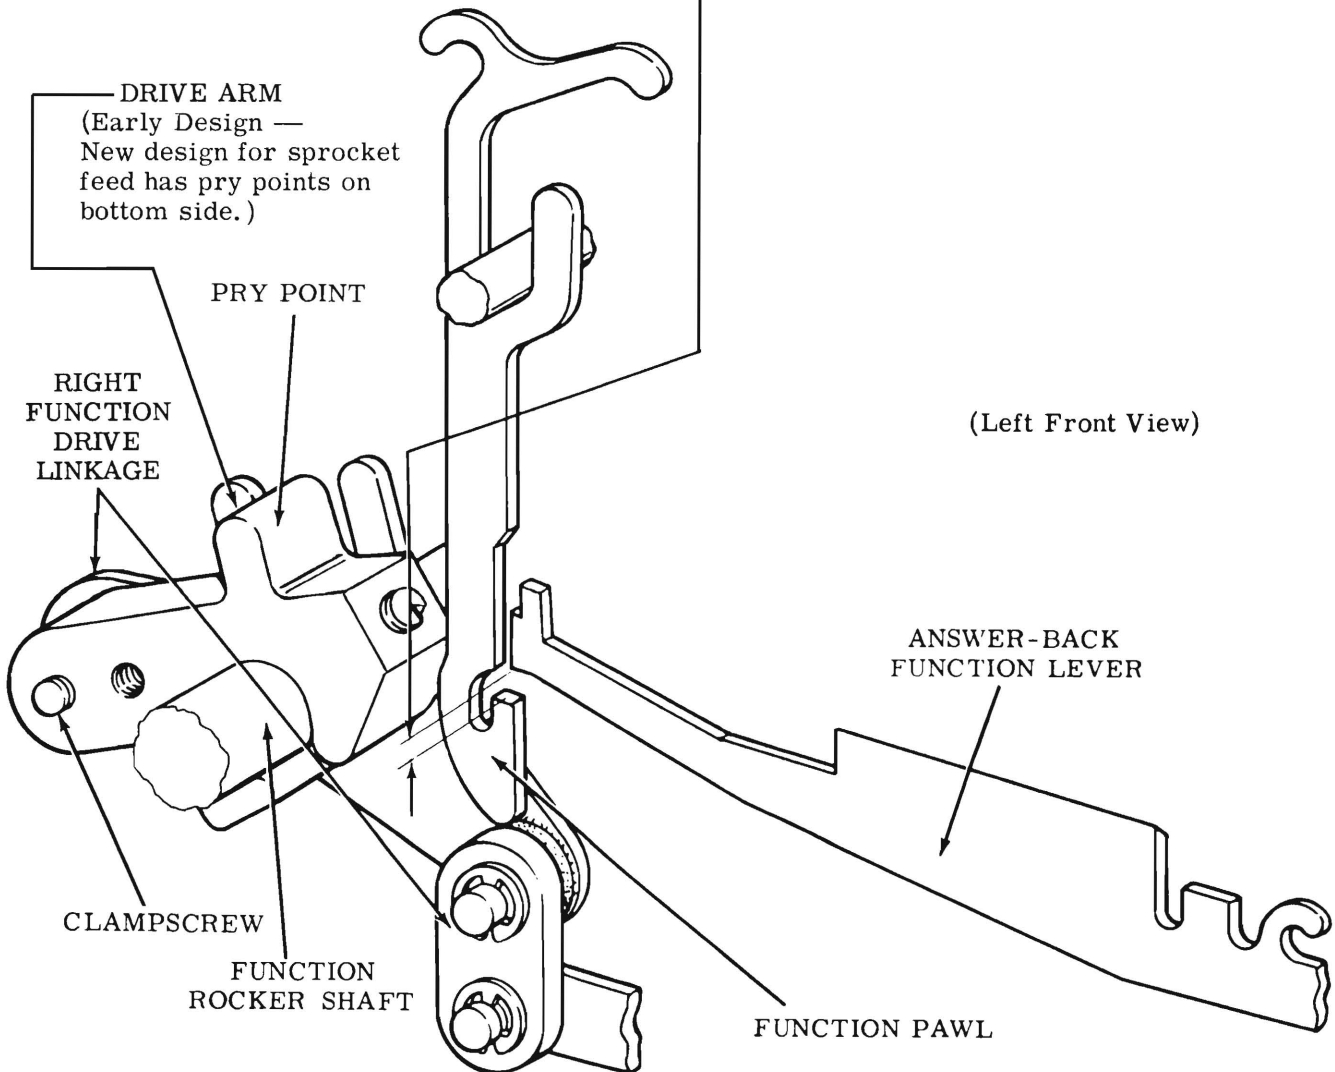

Related Adjustments

Affects

FORM-OUT LEVER OVERTRAVEL - S

(Form Feed Area) (2.98)

LINE FEED PAWL STRIPPING - S

(Form Feed Area) (2.107)


TRIPBAIL POSITIONING (3.08)

Affected By

LEFT ROCKER DRIVE (2.34)

Note: If typing unit is not equipped with the answer-back feature, select a code combination which will permit the right-most function lever to be selected.

2.37 Function Area (continued)

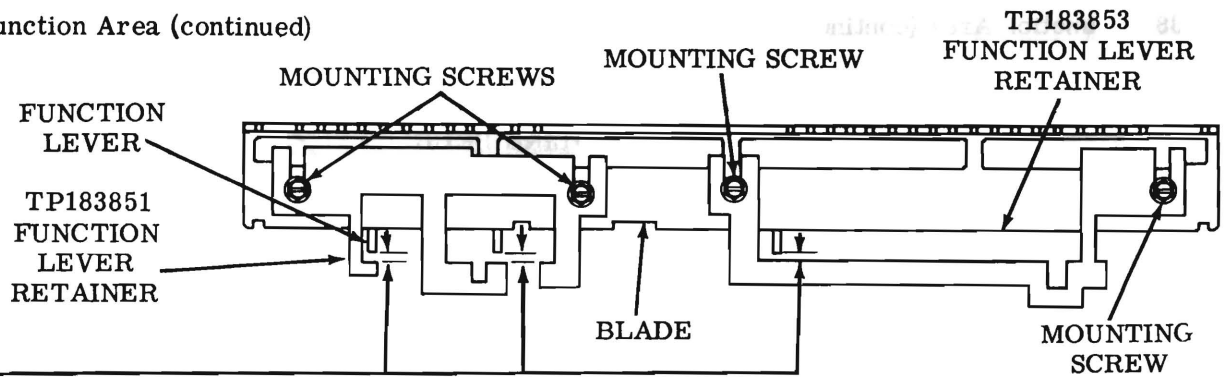

FUNCTION LEVER RETAINER


Units equipped with TP183851 (left) and TP183853 (right) function lever retainers.

To Check

With an all marking code combination in the selector, manually operate the typing unit until the blade is at its highest point of travel.

Requirement

Min some---Max 0.040 inch between the function lever retainers and function levers at the closest point.

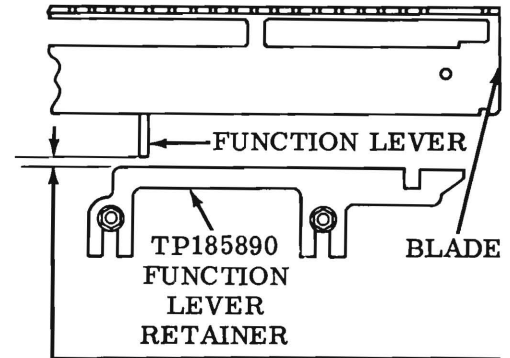

Units equipped with the TP185890 function lever retainers and the print-nonprint feature.

To Check

With an all marking code combination in the selector, manually operate the typing unit until the blade is at the lowest point of travel.

Requirement

Min some---Max 0.020 inch between the retainer and the function lever closest to it.


To Adjust

Loosen mounting screws and position retainers. Tighten screws.

FUNCTION BAIL SPRING


Requirement

With typing unit in stop condition  
Min 72 oz---Max 104 oz  
to pull each function bail spring to installed length.

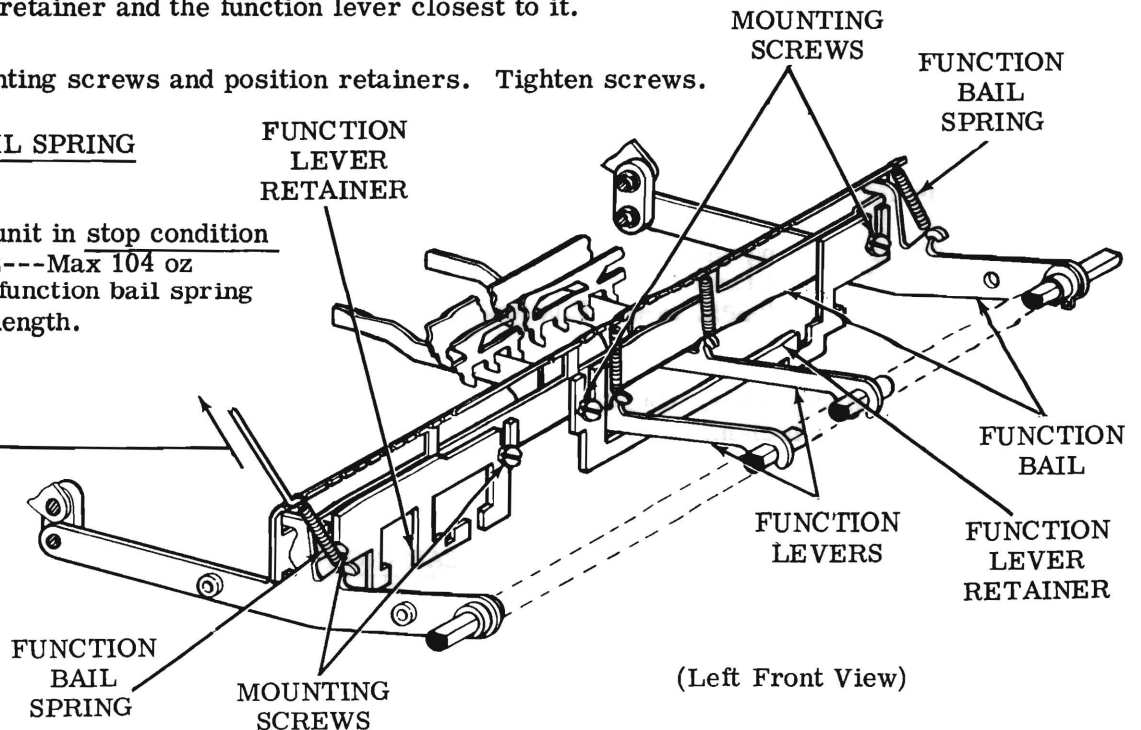

(Left Front View)

2.38 Function Area (continued)

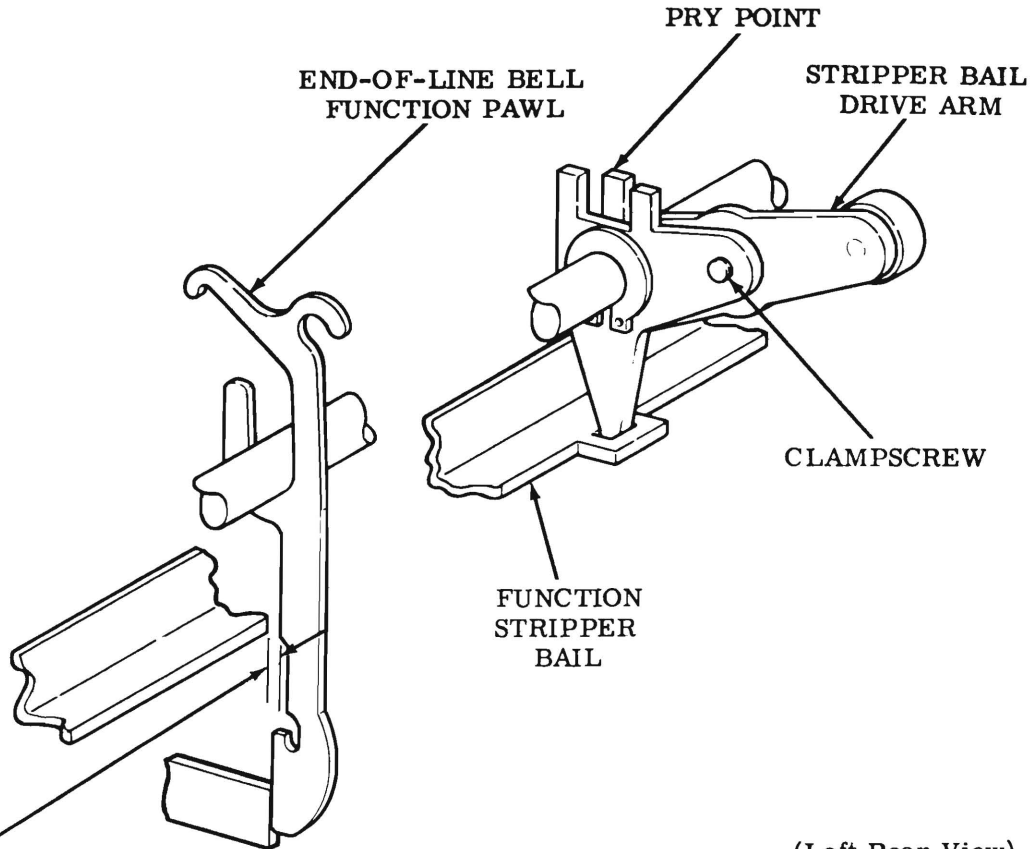

(Left Rear View)

STRIPPER BAIL CLEARANCE

Requirement

With typing unit in stop condition

Min 0.015 inch---Max 0.025 inch  
between function stripper bail and edge of stripped  
end-of-line bell function.

Note: For typing units which are not equipped with the  
end-of-line bell function pawl, check requirement at the TP180792  
function pawl closest to slot F in function casting.

To Adjust


Loosen clampscrew. Use pry point to position stripper bail drive  
arm. Tighten clampscrew.

Related Adjustment

Affects

LINE FEED STRIPPER PLATE CLEARANCE - F (Platen Area) (2.85)

2.39 Function Area (continued)

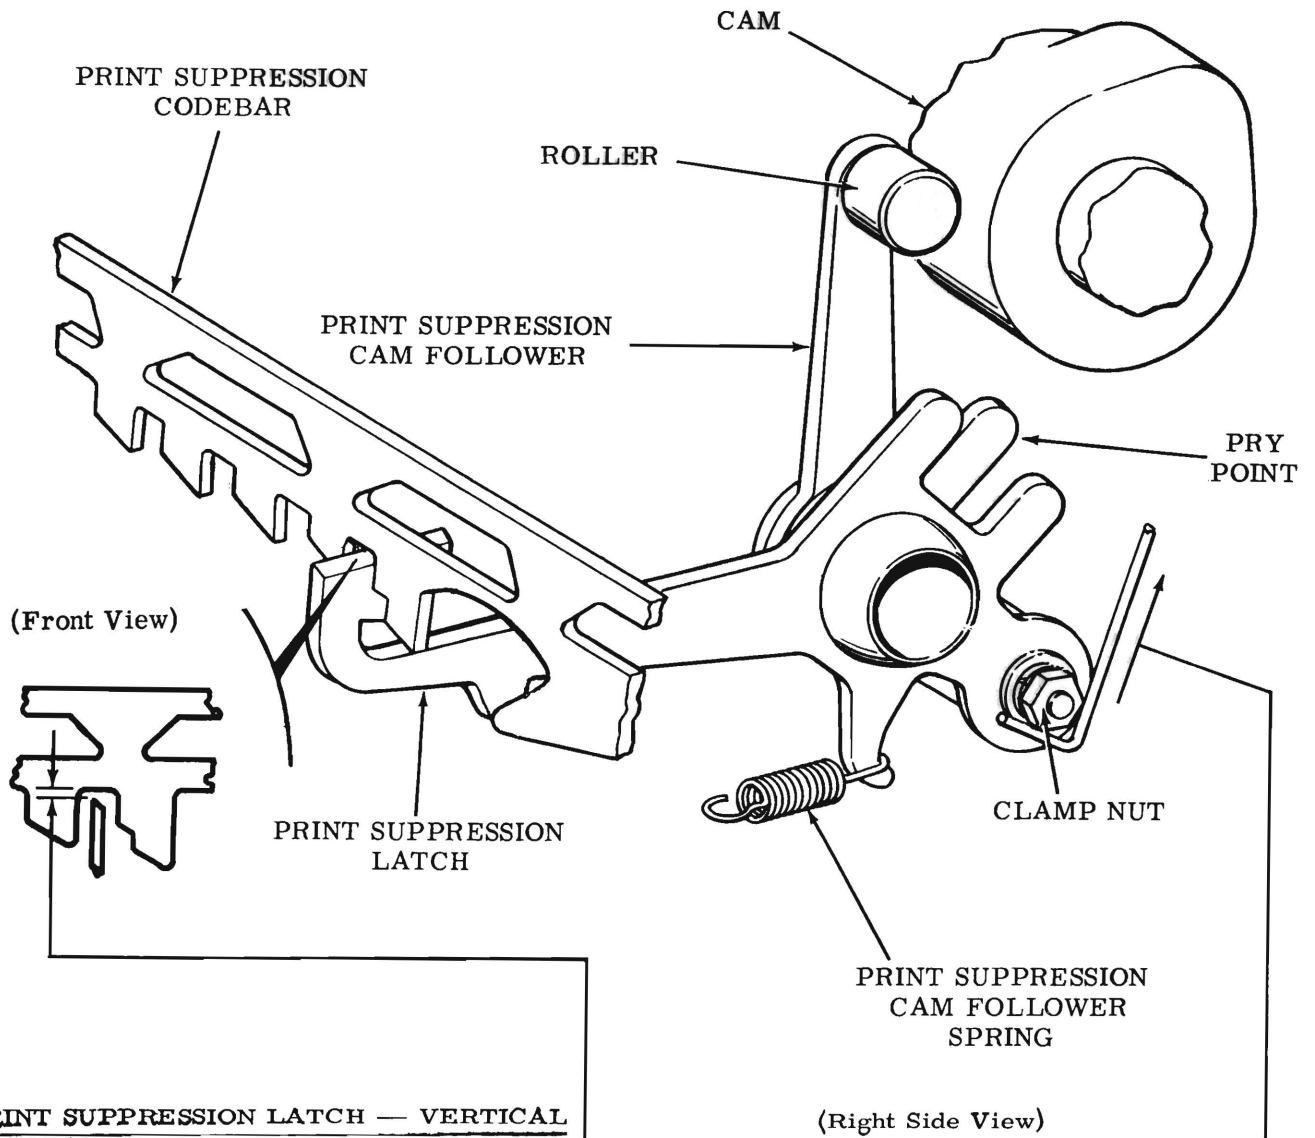

PRINT SUPPRESSION LATCH — VERTICAL CLEARANCE

**Requirement**

With typing unit in stop condition and print suppression cam follower roller resting on its cam

Min 0.015 inch---Max 0.050 inch  
between print suppression latch and print suppression codebar.

**To Adjust**

Loosen clamp nut. Using pry point, position print suppression cam follower. Tighten clamp nut.

**Related Adjustments**

Affected By

CODEBAR RESET LEVER POSITION (2.28)


PRINT SUPPRESSION CAM FOLLOWER SPRING

**Requirement**

With typing unit in stop condition

Min 10 oz---Max 14 oz  
to start print suppression cam follower moving.

2. 40 Function Area (continued)

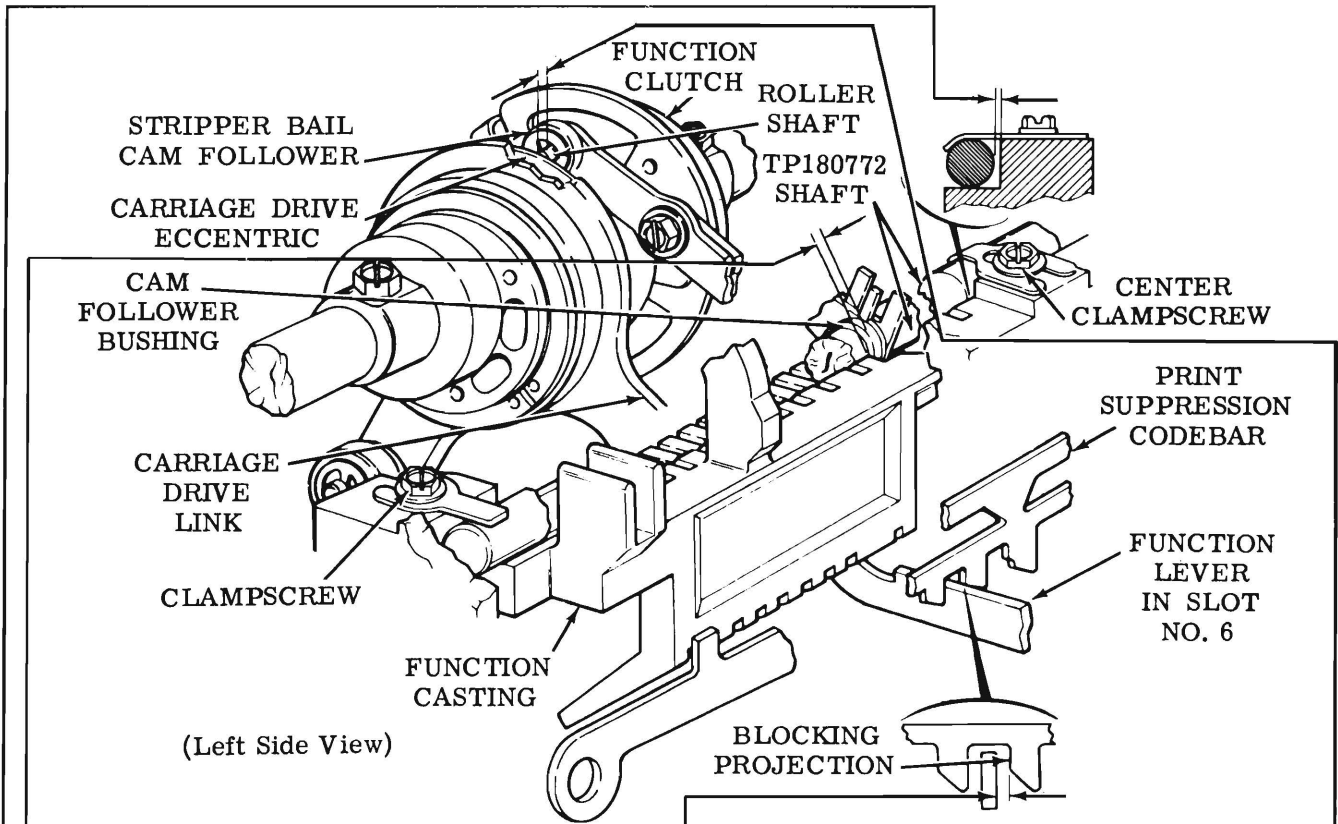

**FUNCTION SHAFT AND CASTING POSITION**

Note: The Requirement (1) applies only to TP180772 shafts which have raised rings which serve to locate the stripper bail cam follower.

**(1) Requirement**

Min some---Max 0.010 inch between stripper bail cam follower and left side of slot in function casting.

**To Adjust**

Loosen clampscrews and position TP180772 shaft.

**(2) Requirement**

The shaft should be in contact with, or not more than Max 0.003 inch away from the vertical surface at the center of the function casting.

**To Adjust**

With the center and two end clampscrews loosened, position to meet Requirements (1) and (2).

**To Check**

Manually set up NUL, an all spacing code combination in selector. Rotate main shaft until suppression cam follower just begins to rise on its cam.

**(3) Requirement**

Min 0.030 inch---Max 0.050 inch between blocking projection on print suppression codebar and the function lever in slot no. 6.

**(4) Requirement**

Min 0.005 inch between carriage drive eccentric and roller shaft on stripper bail cam follower with play taken up to make clearance a minimum.

**To Adjust**

With the two end clampscrews loosened, position casting to meet Requirements (3) and (4). Tighten clampscrews.

**Related Adjustments**

**Affected By**

- CODEBAR RESET LEVER POSITION (2. 28)
- PRINT SUPPRESSION LATCH — HORIZONTAL CLEARANCE (2. 29)
- LEFT BEARING POSITION (2. 10)

2. 41 Function Area (continued)


CARRIAGE RETURN LEVER – LATCH CLEARANCE

To Check

Position carriage to center of typing unit and carefully remove carriage return spring. Set up carriage return code combination (1-34---8) in selector. Rotate main shaft until function bail reaches lowest point of travel. Position left end of carriage return lever rearward to eliminate its play.

(1) Requirement

Early design  
 carriage return lever flush with  
 carriage return latch  
 Within 0.005 inch

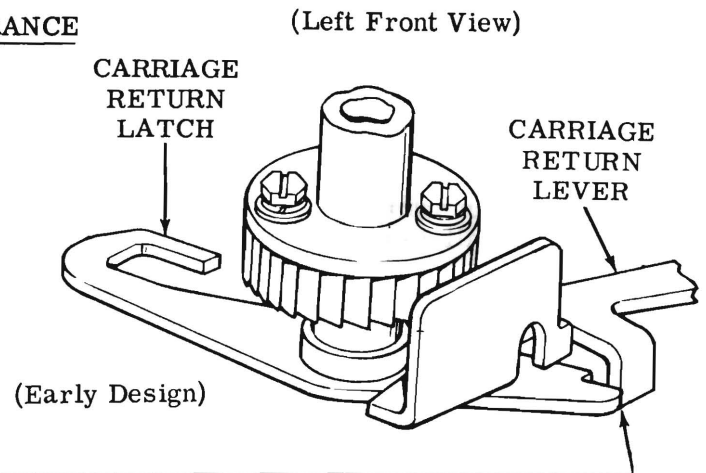

(2) Requirement


Late design  
 Min some---Max 0.030 inch  
 between carriage return lever and  
 carriage return latch.

To Adjust

Loosen clampscrew. Use pry points to position carriage return lever. Tighten clampscrew. Replace carriage return spring.

Related Adjustment

Affected By  
LEFT ROCKER DRIVE (2. 34)

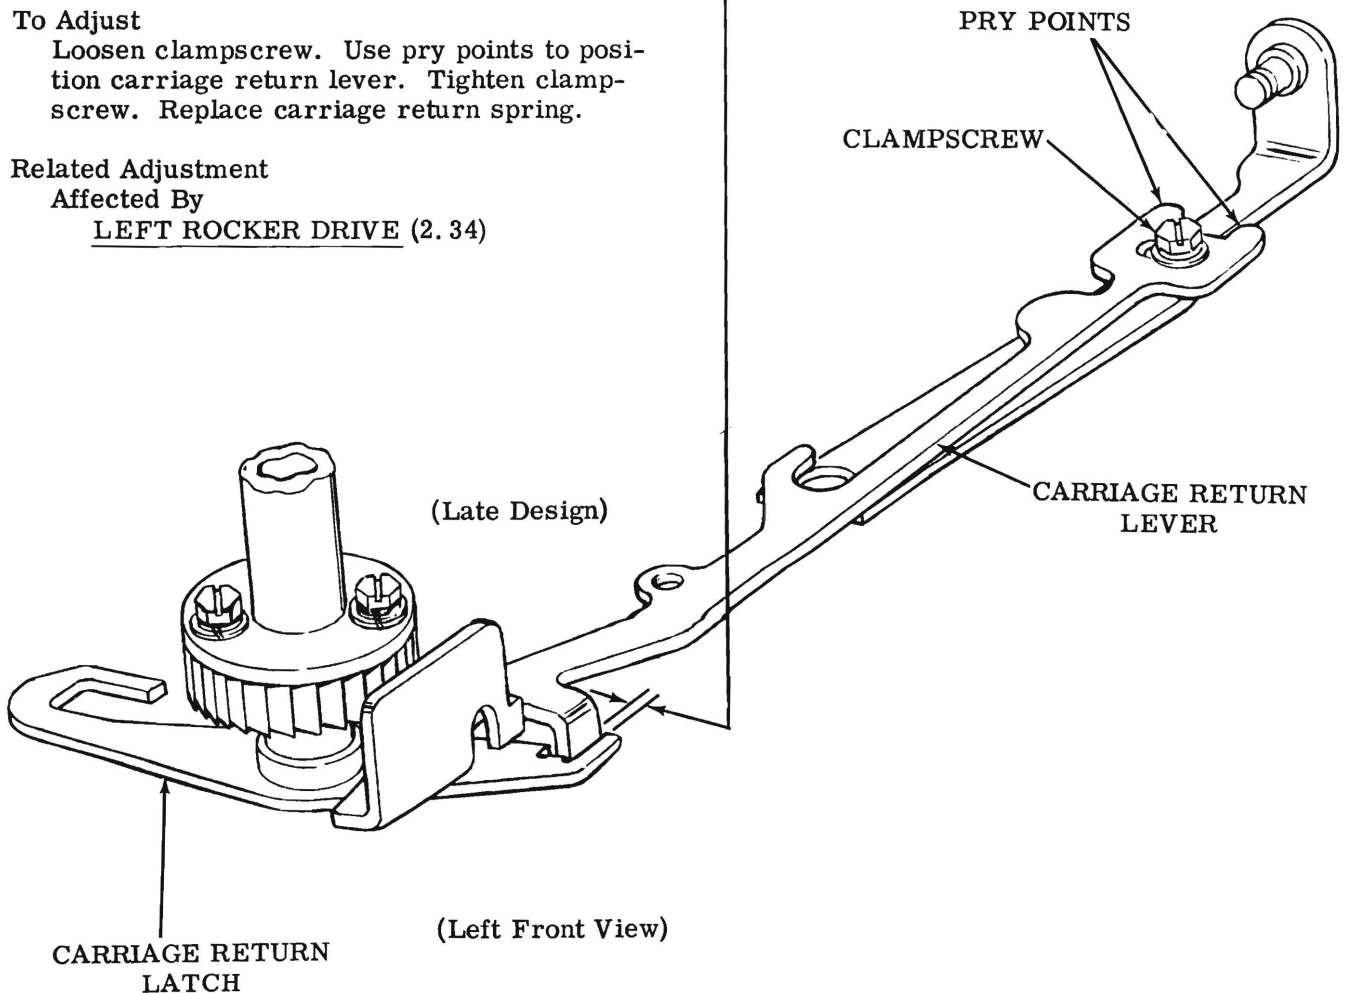


2.42 Function Area (continued)

CARRIAGE DRIVE BAIL ENDPLAY

**To Check**  
 Rotate main shaft until carriage drive bail is parallel to the base casting.

**Requirement**  
 Min some---Max 0.015 inch endplay in carriage drive bail.


**To Adjust**  
 Loosen clampscrew and position carriage drive bail left pivot. Tighten clampscrew.

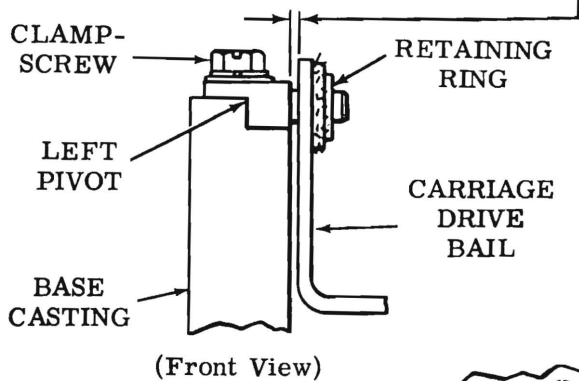

CARRIAGE RETURN SPRING

**Requirement**

With typing unit in stop condition and carriage at right margin  
 Min 56 oz---Max 64 oz  
 to pull carriage return spring to installed length.

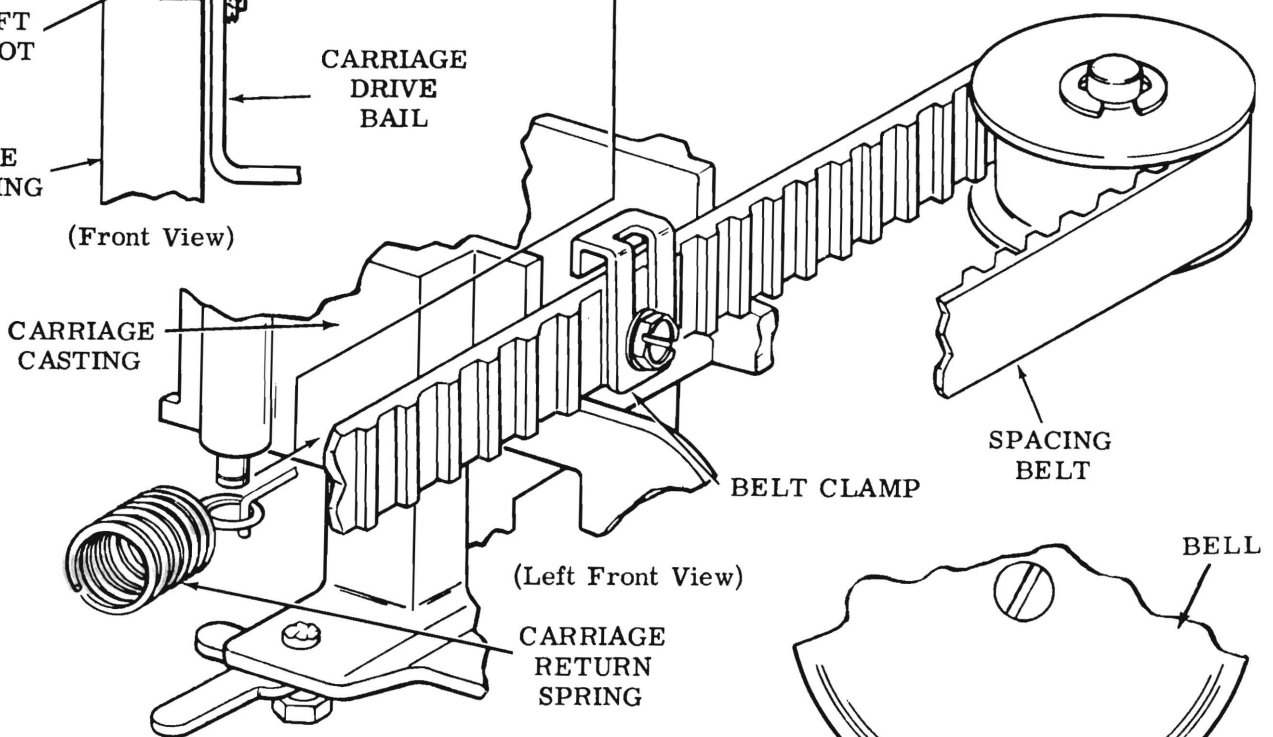


BELL CLAPPER GAP

(1) **Requirement**  
 With typing unit in stop condition  
 Min 0.030 inch---Max 0.070 inch  
 between clapper and bell.

**To Adjust**  
 Using pliers, bend clapper spring.

(2) **Requirement**  
 The bell must be audible when operated.

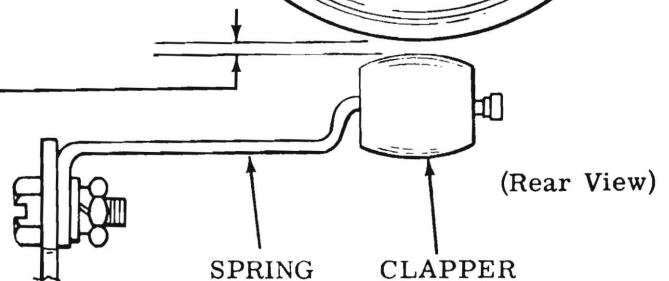

## 2.43 Carriage Area

FRONT ROLLERS CLEARANCE

Note 1: This adjustment does not apply to typing units equipped with nonadjustable parts such as TP183503 bearing housing and TP183504 bearing retainer.

**To Check**

Place typing unit in stop condition.  
Remove the carriage return spring.  
Take up roller play toward the front of the typing unit.

**Requirement**

Min some---Max 0.005 inch  
between carriage front roller and carriage front rail.


**To Adjust**

Loosen mounting nut and position each roller against rail by means of eccentric shaft. Slowly back off eccentric shaft to meet requirement. Tighten mounting nut.

Note 2: Some positions of carriage front roller may show a slight drag condition. This is acceptable providing there is no perceptible increase in carriage friction due to condition.

**Related Adjustments****Affects**

PRINT DRIVE LEVER POSITIONING (2.48)  
PRINT SUPPRESSION LATCHLEVER RELEASE (2.57)  
RIBBON POWER LEVER DRIVE (2.62)  
PLATEN HORIZONTAL POSITION - F (2.70)  
PLATEN HORIZONTAL POSITION - S (2.89)

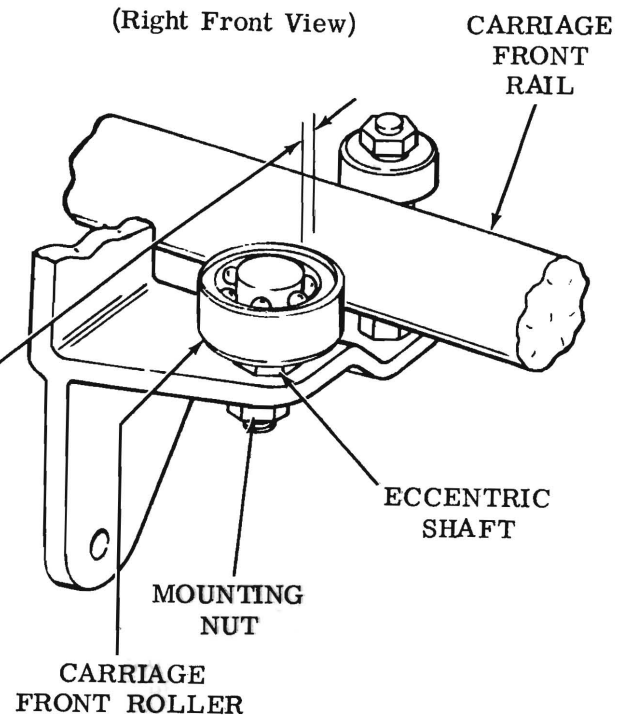

2.44 Carriage Area (continued)

POWER BAIL ROLLER CLEARANCE

To Check


Trip function clutch and rotate main shaft until carriage drive bail is at lowest point of travel.

Requirement

Min some---Max 0.005 inch between front roller and carriage drive bail.

To Adjust

Loosen mounting nut and position front roller by means of eccentric shaft. Tighten mounting nut.

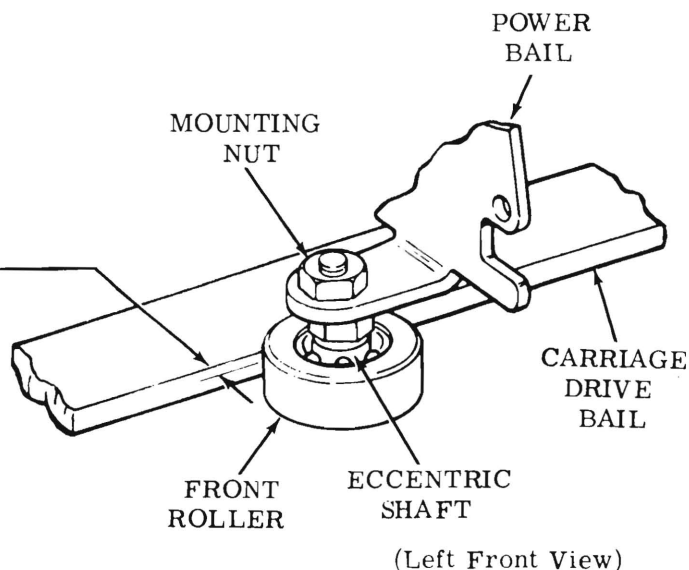

RACK AND PINION BACKLASH

Note 1: This adjustment is to be performed only on early design carriages having the TP180548 adjusting plate and TP180549 bracket. Late design carriages do not require this adjustment.

To Check

Place typing unit in stop condition.



Requirement

Each rack should have Min some---Max 0.010 inch backlash.

To Adjust

Loosen lock plate clampscrews and move lock plate towards the rear. Loosen one adjusting plate clampscrew friction tight and place a 0.010-inch feeler gauge between the rack and adjusting plate. Position adjusting plate for no play between the rack and pinion using pry point. Tighten adjusting plate clampscrew and remove feeler gauge. Repeat procedure for adjusting plate on other side. Position lock plate against adjusting plates. Tighten lock plate clampscrews.

Note 2: Do not loosen both adjusting plate clampscrews at the same time.

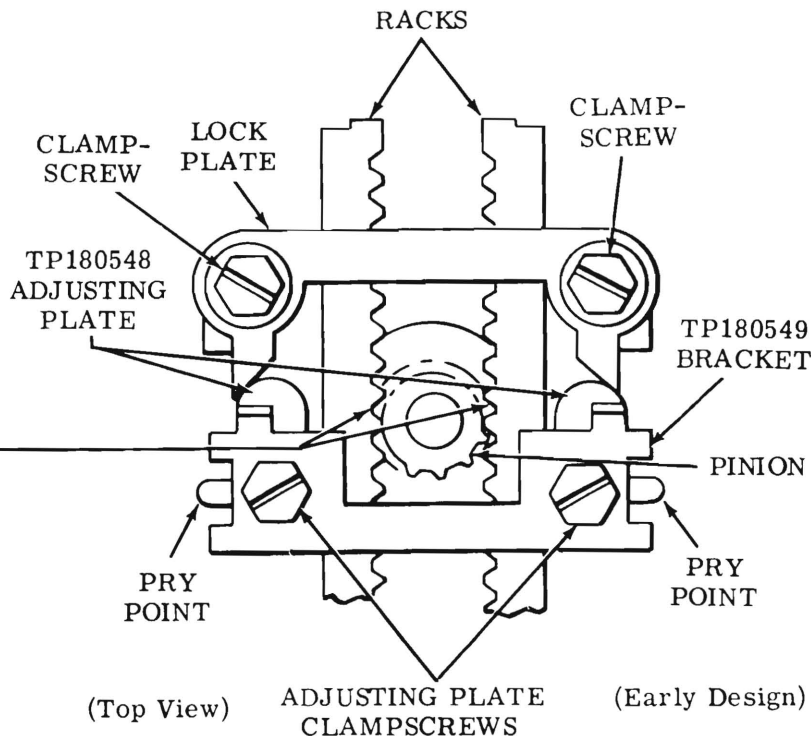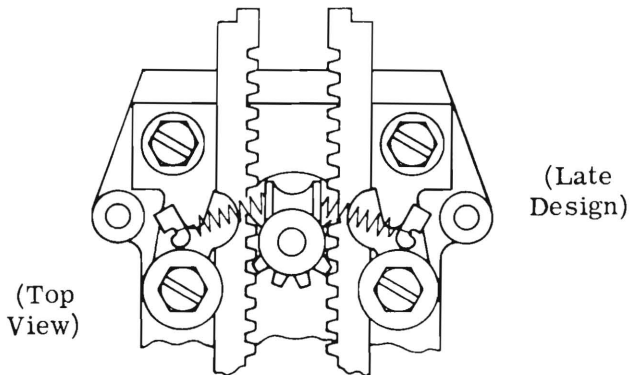

2.45 Carriage Area (continued)

REAR RAIL POSITION

(1) To Check

Position the dashpot plunger just outside the dashpot cylinder. With the selector no. 1 code level in the marking condition, rotate the main shaft until the shift slide is in its uppermost position and contacts the stop plate. Take up all play to minimize the required clearance.

Requirement

Min 0.025 inch---Max 0.040 inch between bottom edge of shift slide and top edge of stop plate.

(2) To Check

Condition the typing unit as in (1) To Check above except place carriage to the right with center of the typewheel 1/2 inch from the right hand margin.

Requirement

Min 0.025 inch---Max 0.040 inch between bottom edge of shift slide and top edge of stop plate.

(3) To Check


Calculate the difference between the recorded measurements in To Check (1) and To Check (2) above.

Requirement

Max 0.010 inch difference between recorded measurements.

To Adjust

Loosen two carriage rear rail mounting screws friction tight, and position carriage rear rail using pry point. Tighten mounting screws.

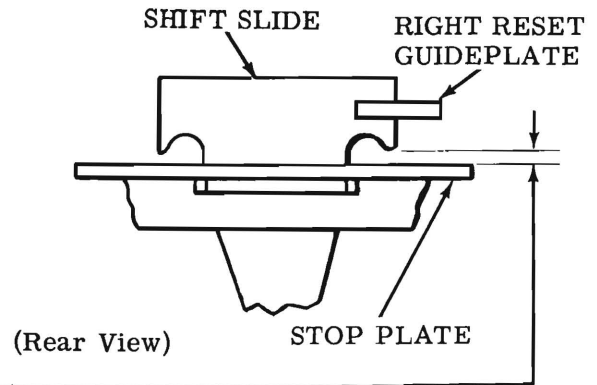


Related Adjustments

Affects

- PRINT DRIVE LEVER POSITIONING (2.48)
- FOURTH PULSE LINKAGE POSITIONING (2.47)
- RESET LEVER POSITIONING (2.49)
- PRINT SUPPRESSION LATCHLEVER RELEASE (2.57)
- PRESSURE ROLLER CLEARANCE (Platen Area) (2.84)
- REAR ROLLER CLEARANCE (2.46)
- RIGHT SLIDE GUIDEPLATE RESET (2.52)
- LEFT SLIDE GUIDEPLATE RESET (2.53)
- PRINT HAMMER TRIP LEVER RELEASE (2.54)
- PRINT HAMMER TRIP LEVER RESET (2.55)
- RIBBON POWER LEVER DRIVE (2.62)
- VERTICAL TYPE ALIGNMENT - F (2.71)
- VERTICAL TYPE ALIGNMENT - S (2.90)

Affected By

- CODEBAR RESET LEVER POSITION (Function Area) (2.28)

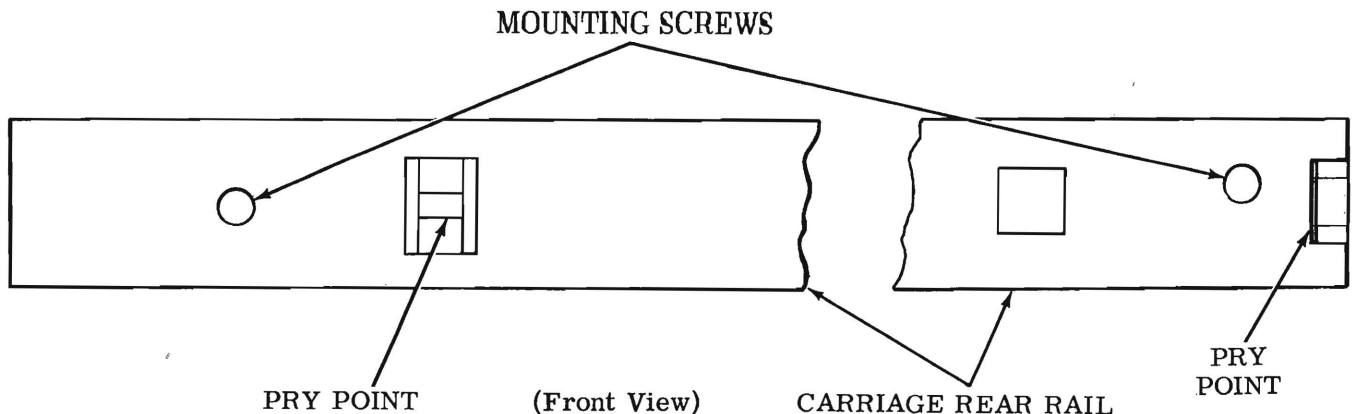

2.46 Carriage Area (continued)

REAR ROLLER CLEARANCE

To Check

Rotate main shaft until carriage drive bail is in rearmost position.

Requirement

Min some---Max 0.008 inch between carriage rear rail and carriage rear roller (upper).

To Adjust

Loosen clamp nut and position eccentric shaft with hex wrench in hex hole. Tighten clamp nut.

Related Adjustments

Affects

FOURTH PULSE LINKAGE POSITIONING  
(2.47)

PRINT DRIVE LEVER POSITIONING  
(2.48)

RESET LEVER POSITIONING (2.49)


RIGHT SLIDE GUIDEPLATE RESET  
(2.52)

PRINT HAMMER TRIP LEVER RELEASE  
(2.54)

PRINT HAMMER TRIP LEVER RESET  
(2.55)

Affected By

REAR RAIL POSITION (2.45)

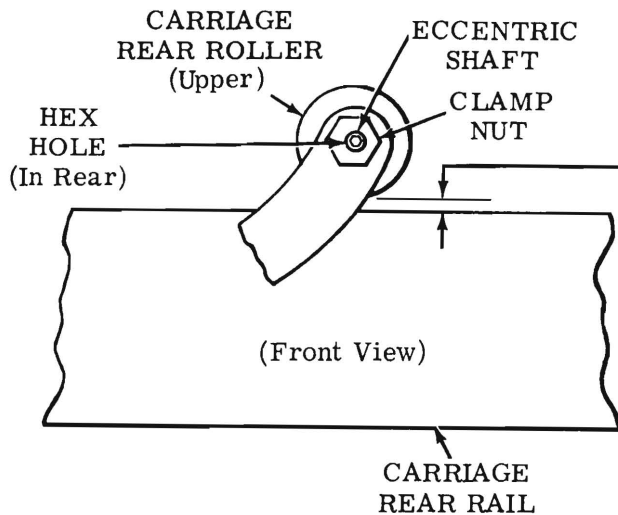

## 2.47 Carriage Area (continued)

FOURTH PULSE LINKAGE POSITIONING**To Check**


Place carriage to left margin. With an all marking code combination set up in selector, manually operate the typing unit until the function clutch just trips. Take up play in left rack in a downward direction. Check requirement, then repeat requirement check with carriage at the right margin.

**Requirement**

Min 0.005 inch---Max 0.055 inch  
between rotary drive arm and left rack.

**To Adjust**

Bend pulse lever using pry points.

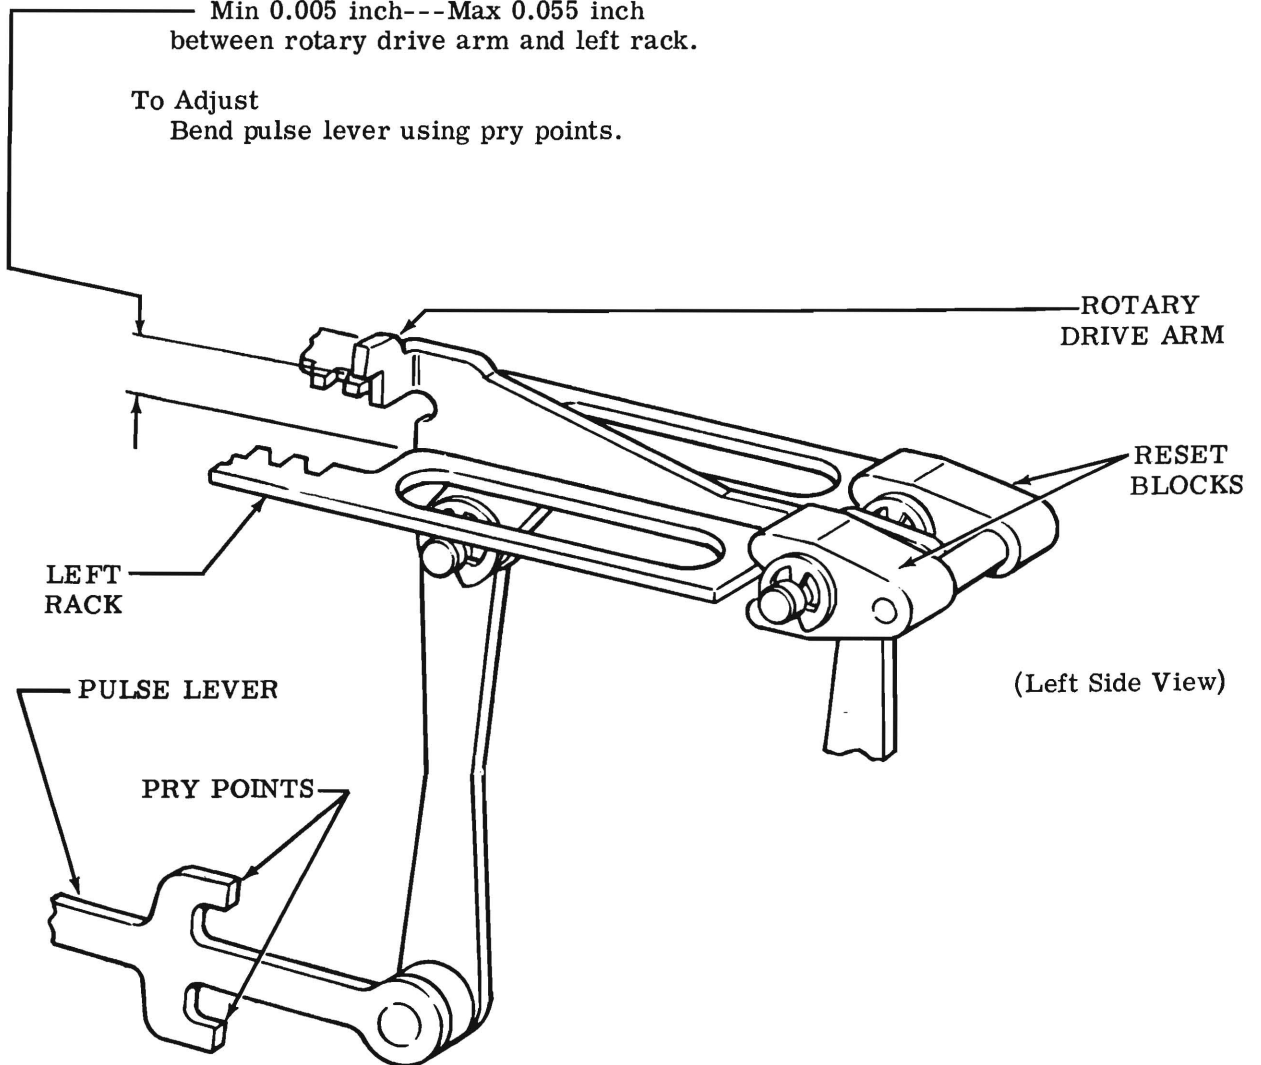**Related Adjustments****Affected By**

CODEBAR RESET LEVER POSITION (Function Area) (2.28)

REAR RAIL POSITION (2.45)

REAR ROLLER CLEARANCE (2.46)

2. 48 Carriage Area (continued)

(B) PRINT DRIVE LEVER POSITIONING

To Check

Place typing unit in stop condition and move carriage until its power bail rollers are positioned directly above the carriage drive link. Take up play in vertical drive bail in a downward direction, and take up play in common stop arm toward the left.

Requirement

Late design typing units equipped with TP183993 function clutch cam sleeve

Min 0.065 inch---Max 0.090 inch  
between vertical drive bail and common stop arm.

Early design typing units equipped with TP180806 function clutch cam sleeve

Min 0.229 inch---Max 0.239 inch  
between vertical drive bail and common stop arm as gauged with a TP180588 adjusting tool.

Note: The TP180588 adjusting tool has a nominal dimension of 0.234 inch.

To Adjust

Loosen print drive lever clampscrew and position print drive lever using pry points. Tighten clampscrew.


Related Adjustments

Affects

- RIGHT SLIDE GUIDEPLATE
- RESET (2.52)
- PRINT HAMMER TRIP LEVER
- RESET (2.55)
- LEFT SLIDE GUIDEPLATE
- RESET (2.53)
- RIBBON POSITIONING (2.56)
- VERTICAL TYPE ALIGNMENT - F  
(2.71)
- VERTICAL TYPE ALIGNMENT - S  
(2.90)
- PRINT SUPPRESSION LATCH-LEVER ENDPLAY (2.50)

Affected By

- REAR RAIL POSITION (2.45)
- FRONT ROLLERS CLEARANCE  
(2.45)
- REAR ROLLER CLEARANCE  
(2.46)

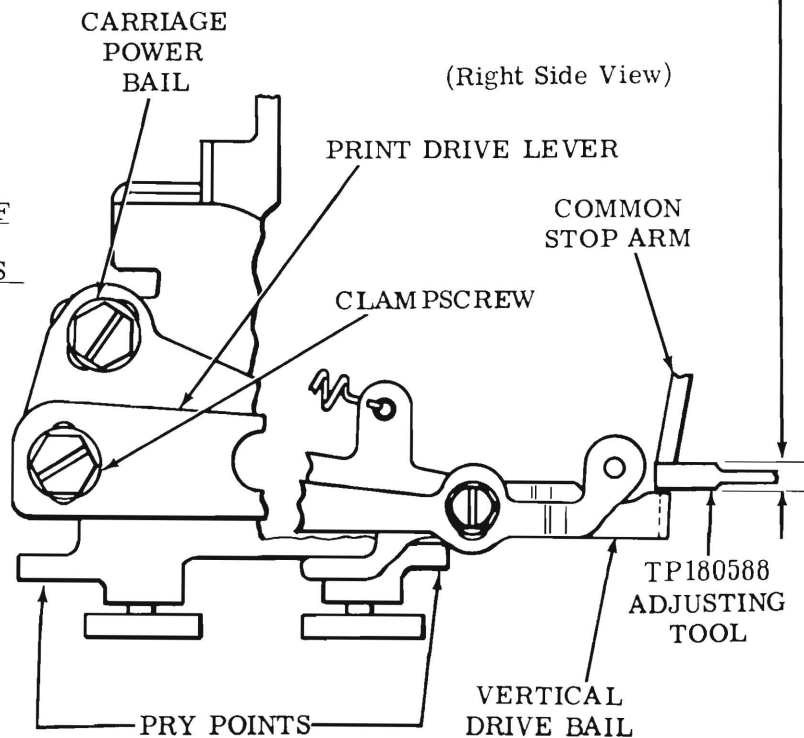

2.49 Carriage Area (continued)

RESET LEVER POSITIONING

**Requirement**

When typing unit returns to stop condition, racks should be completely reset.

**To Adjust**

Place carriage in center of typing unit. Loosen clampscrew and allow positioning spring to fully reset racks. Tighten clampscrew.

**Related Adjustments**


**Affects**

RIBBON POWER LEVER DRIVE (2.62)


**Affected By**

REAR RAIL POSITION (2.45)

REAR ROLLER CLEARANCE (2.46)

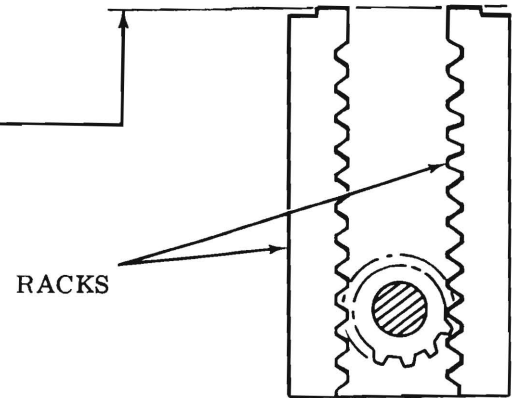

(Top View)

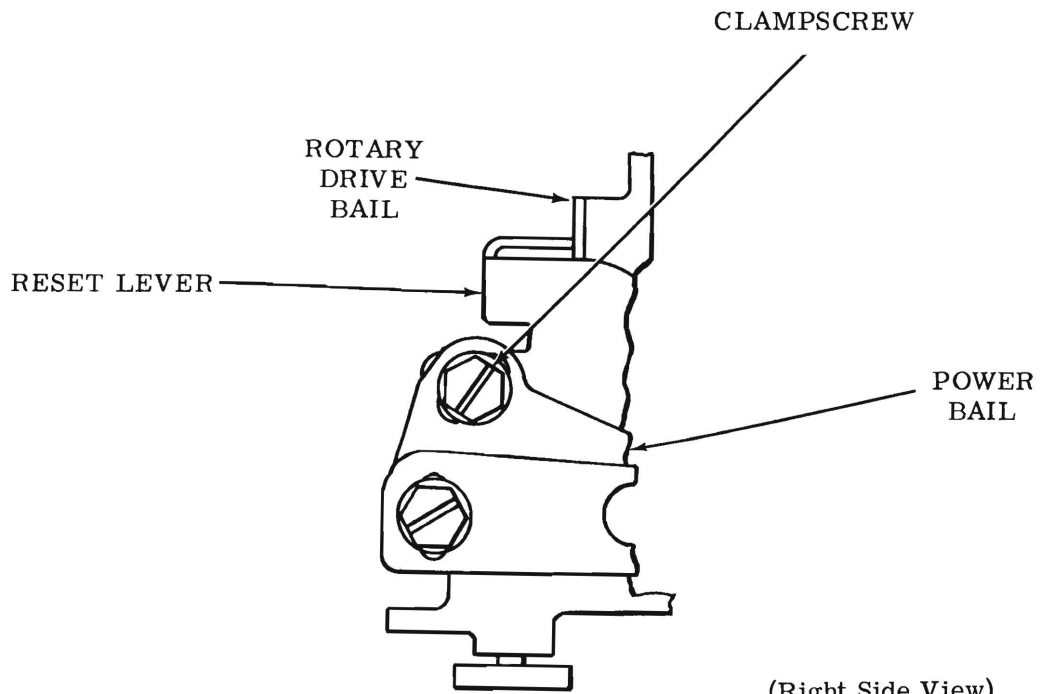

(Right Side View)

2.50 Carriage Area (continued)

PRINT SUPPRESSION LATCHLEVER ENDPLAY

To Check

Take up play in print suppression latchlever towards carriage casting.

Requirement

Print suppression latchlever should fully engage print hammer bail with no binds.


To Adjust

Loosen setscrew with hex key wrench and position collar. Tighten setscrew.

Related Adjustments


Affected By

PRINT DRIVE LEVER POSITIONING (2.48)

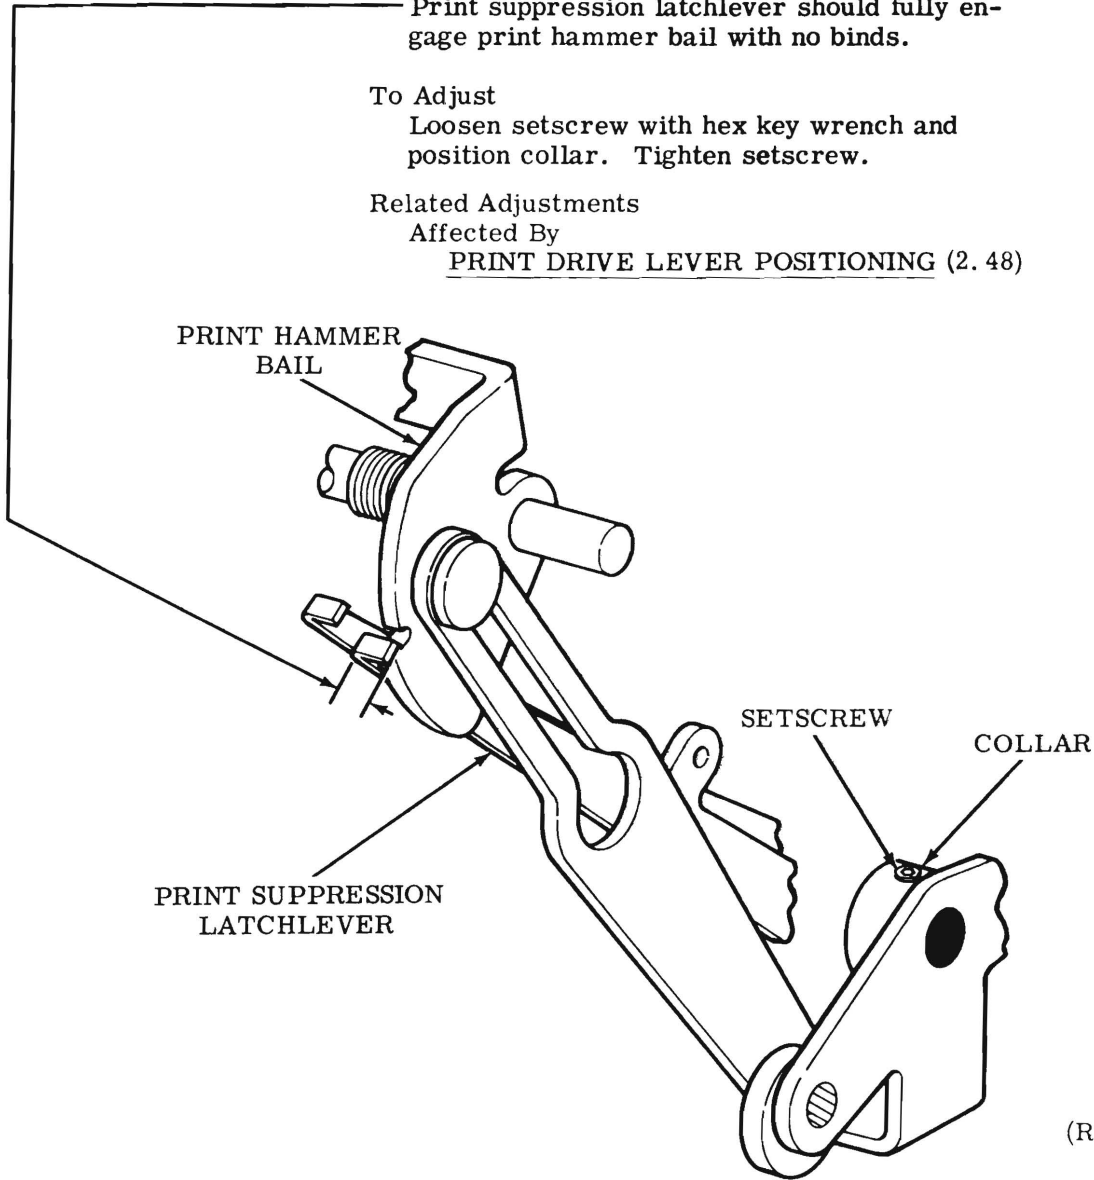

(Right Front View)

2.51 Carriage Area (continued)

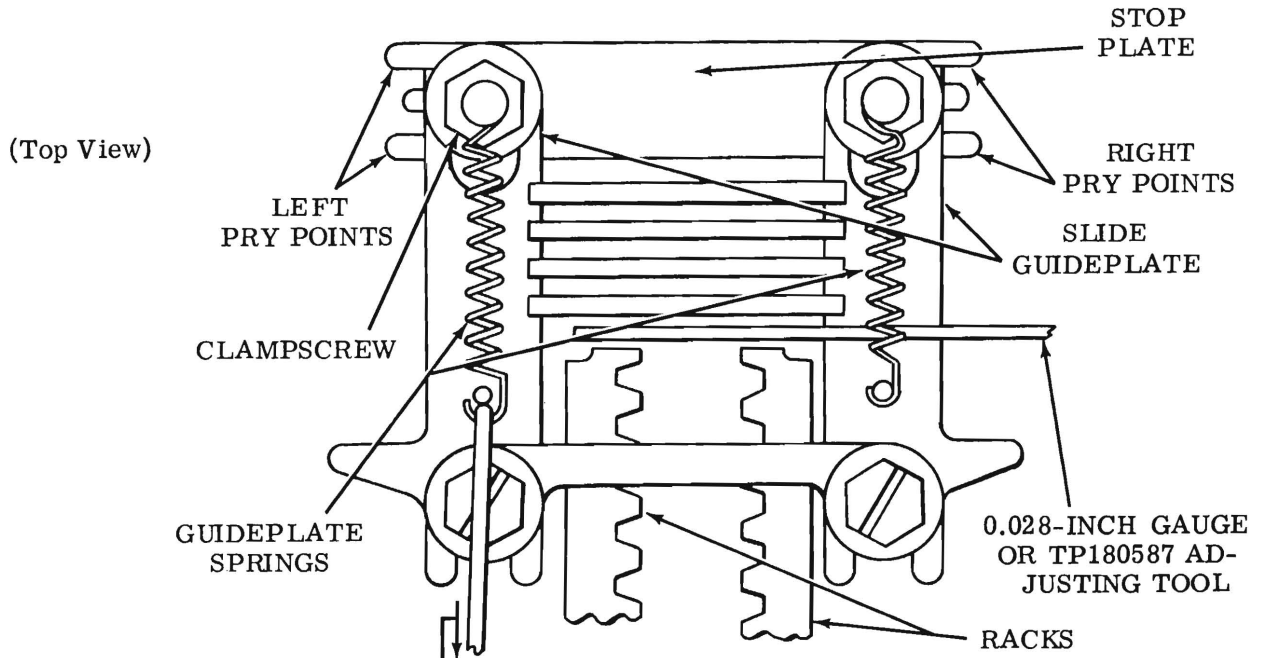

TYPEWHEEL POSITIONING (Preliminary)

Note 1: Final print alignment is found in 2. 124.

To Check

Set up code combination in selector of a character in counterclockwise field of typewheel. Rotate main shaft until carriage drive bail is in rearmost position. Check to see if vertical row containing character is properly selected. Repeat for a character in clockwise field.

Requirement

Typewheel positioning correct in both clockwise and counterclockwise directions.

To Adjust

Place typing unit in stop condition. Open up LEFT SLIDE GUIDEPLATE RESET (2. 53) and RIGHT SLIDE GUIDEPLATE RESET (2. 52) adjustments. Loosen two clampscrews friction tight. Place either 0.028-inch guage or TP180587 adjusting tool across end of racks. Hold reset lever in place and position stop plate so that entire slide assembly is tight against racks and tool.

Related Adjustments

Affects

- LEFT SLIDE GUIDEPLATE RESET (2. 53)
- RIGHT SLIDE GUIDEPLATE RESET (2. 52)

SLIDE GUIDEPLATE SPRINGS


Note 1: To check slide guideplate springs, it is necessary to remove the carriage mechanism from the typing unit. See appropriate dis-assembly and reassembly section. Do not check unless there is reason to believe that the slide guideplate springs will not meet their requirement.

Requirement

Min 1 oz---Max 3 oz \_\_\_\_\_  
to pull each spring to installed length.

Note 2: Check right and left springs.

2.52 Carriage Area (continued)

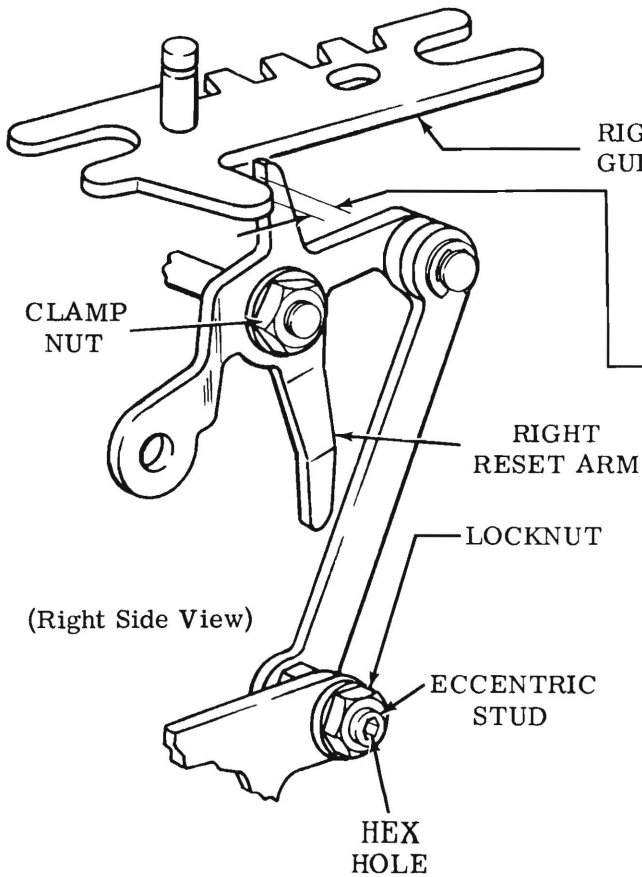

RIGHT SLIDE GUIDEPLATE RESET

Requirement

With typing unit in stop condition  
Min some---Max 0.015 inch  
between right slide guideplate and the right  
reset arm when right and left slide guide-  
plates are held toward front to make clear-  
ance a maximum.

To Adjust

Loosen eccentric stud locknut. Rotate  
eccentric stud with hex wrench in hex hole.  
Tighten locknut.

Related Adjustments

Affects

- LEFT SLIDE GUIDPLATE RESET (2.53)
- PRINT HAMMER TRIP LEVER
- RELEASE (2.54)
- RIBBON POSITIONING (2.56)

Affected By

- REAR RAIL POSITION (2.45)
- REAR ROLLER CLEARANCE (2.46)
- PRINT DRIVE LEVER POSITIONING
- (2.48)
- TYPEWHEEL POSITIONING (2.51)

## 2.53 Carriage Area (continued)

LEFT SLIDE GUIDEPLATE RESET

## Requirement

With typing unit in stop condition  
 Min some---Max 0.015 inch  
 between left slide guideplate and left reset  
 arm when the right and left slide guide-  
 plates are held toward the front to make  
 clearance a maximum.

## To Adjust

Loosen left reset arm clamp nut. Position  
 left reset arm using pry point. Tighten  
 clamp nut.


## Related Adjustments

## Affects

RIBBON POSITIONING (2.56)

## Affected By

REAR RAIL POSITION (2.45)  
PRINT DRIVE LEVER POSITIONING (2.48)  
TYPEWHEEL POSITIONING (2.51)  
RIGHT SLIDE GUIDEPLATE RESET (2.52)

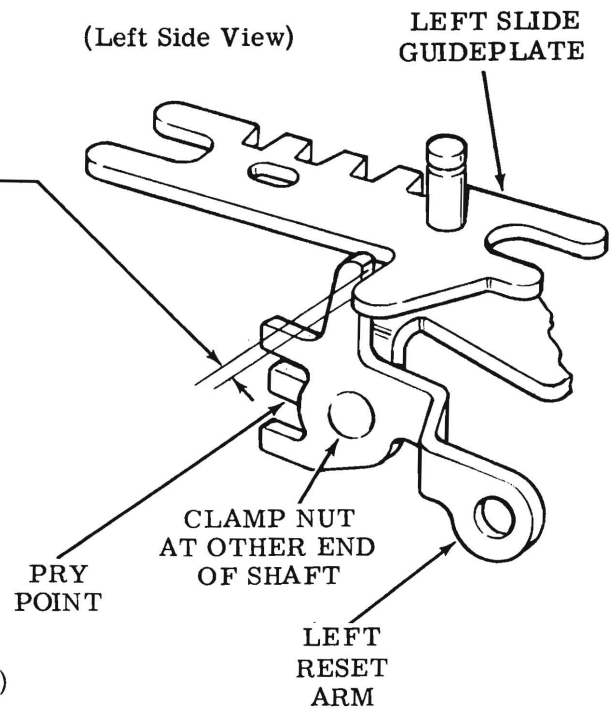

2.54 Carriage Area (continued)

PRINT HAMMER TRIP LEVER RELEASE

To Check

Place carriage at left margin. Rotate main shaft until carriage drive bail reaches its rearmost position. Take up play to minimize required clearance.

(1) Requirement

Min 0.040 inch---Max 0.110 inch between print hammer bail and print hammer trip lever.

To Adjust



Loosen print hammer trip lever clampscrew and position print hammer trip lever using pry point. Tighten clampscrew.

(2) Requirement

With carriage at the right margin, clearance between print hammer bail and print hammer trip lever to be within 0.020 inch of Requirement (1) above.

To Adjust

With carriage drive bail right pivot clampscrew friction tight, position right pivot. Tighten clampscrew.

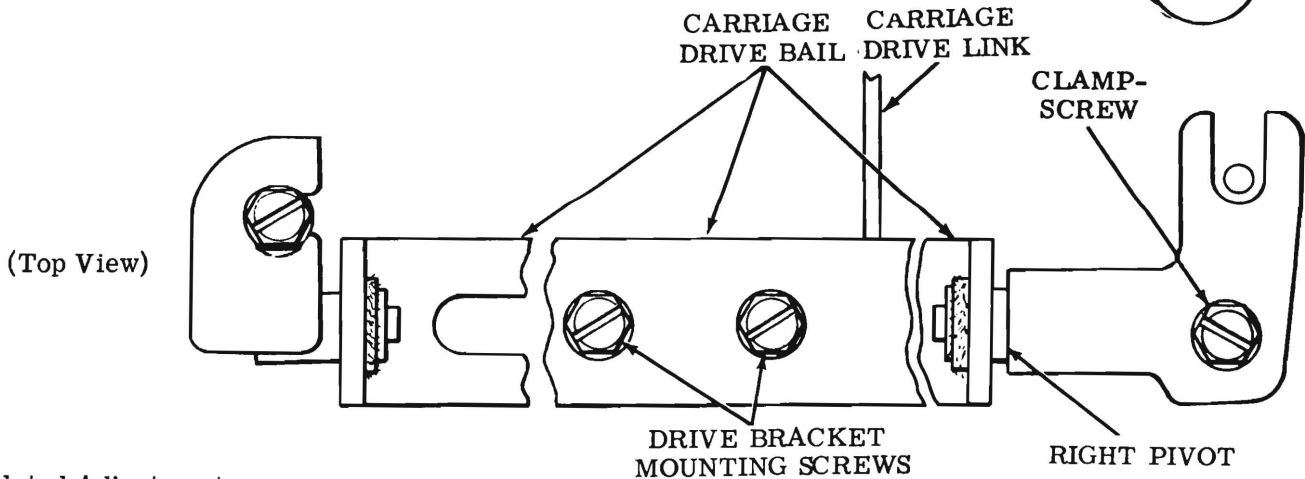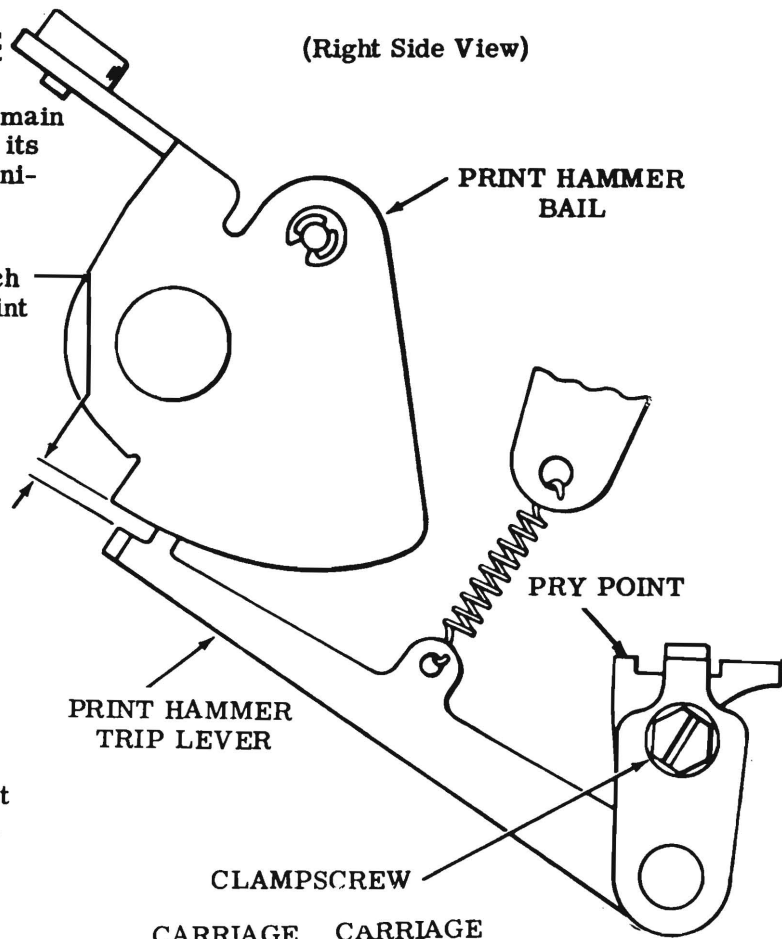

Related Adjustments

Affects

FEED PAWL STOP POSITION (Spacing Area) (2.64)

PRINT HAMMER TRIP LEVER RESET (2.55)

RIGHT SLIDE GUIDEPLATE RESET (2.52)

REAR RAIL POSITION (2.45)

REAR ROLLER CLEARANCE (2.46)

## 2.55 Carriage Area (continued)

PRINT HAMMER TRIP LEVER RESET**Requirement**

With typing unit in stop condition  
 Min 0.010 inch---Max 0.050 inch  
 between print hammer bail and print  
 hammer trip lever.


**To Adjust**

Loosen clamp nut and position print  
 hammer reset arm eccentric pivot  
 with hex key wrench in hex hole.  
 Tighten clamp nut.

Note: Keep high part of eccentric  
 pivot toward front of typing unit.

**Related Adjustment****Affected By**

REAR RAIL POSITION (2.45)  
REAR ROLLER CLEARANCE (2.46)  
PRINT DRIVE LEVER POSITIONING (2.48)  
PRINT HAMMER TRIP LEVER RELEASE (2.54)

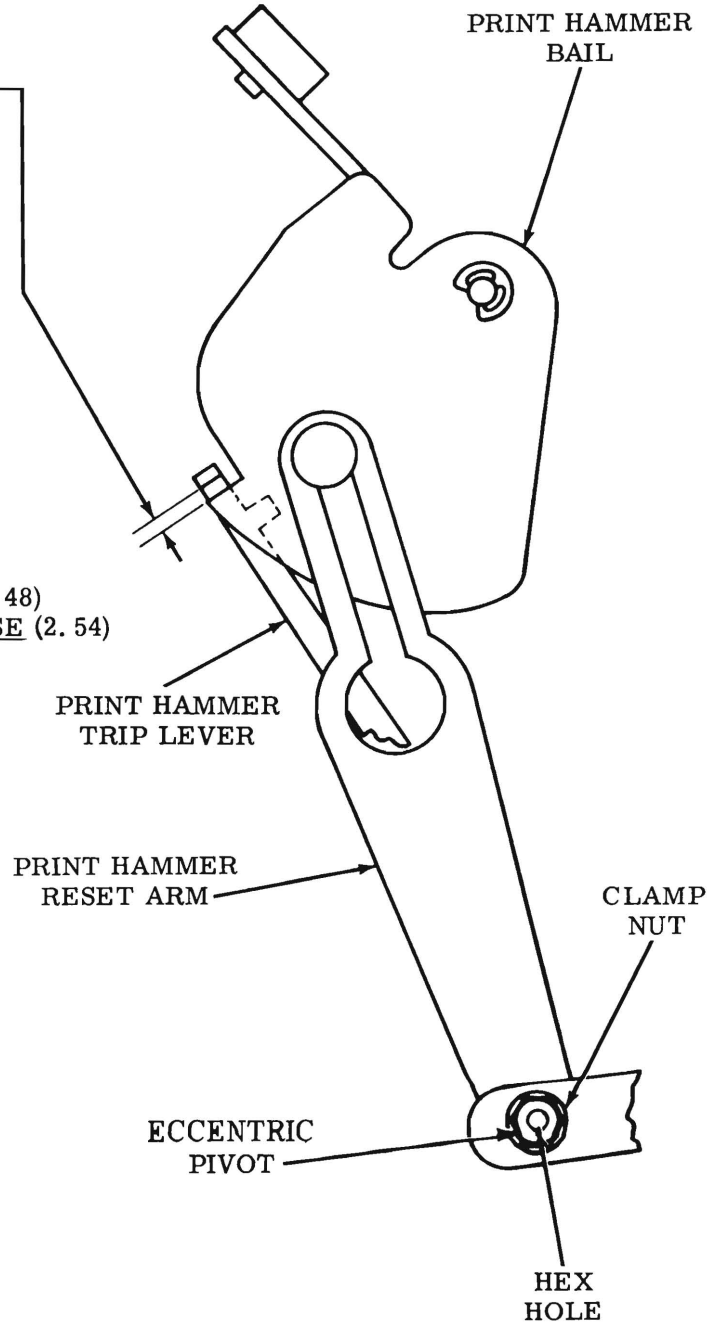

2.56 Carriage Area (continued)

Note: Do not perform the following adjustment on typing units equipped with the two-color printing feature.

RIBBON POSITIONING

To Check

Trip function clutch and rotate main shaft until carriage drive bail is in its rearmost position. Continue rotating main shaft until the right ribbon link, during its downward travel, just contacts the top surface of the ribbon guide.

Requirement

Min some---Max 0.010 inch  
between the left ribbon link and the ribbon guide as gauged by eye.


To Adjust

Loosen left reset arm clamp nut. Position eccentric stud using hex key wrench in hex hole. Tighten clamp nut.

Related Adjustments

Affected By

- LEFT SLIDE GUIDEPLATE RESET (2.53)
- PRINT DRIVE LEVER POSITIONING (2.48)
- RIGHT SLIDE GUIDEPLATE RESET (2.52)

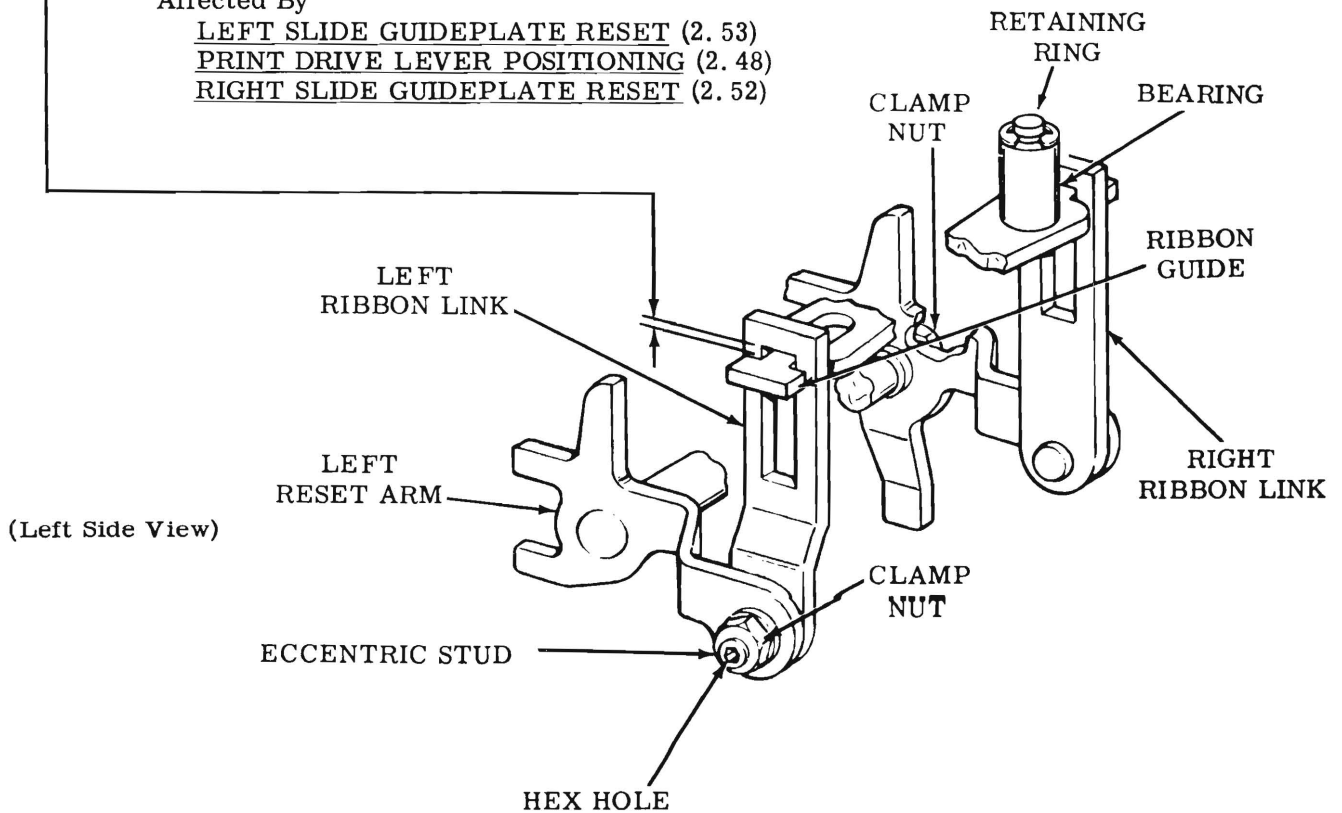

## 2.57 Carriage Area (continued)

PRINT SUPPRESSION LATCHLEVER RELEASE**To Check**

Place carriage approximately 1/2 inch from left margin. Set up the "T" (--3-5-78) code combination in the selector. Rotate main shaft until the carriage drive bail reaches its rearmost position. The print suppression codebar must be all the way (fully) up.

**Requirement**

Min 0.015 inch---Max 0.055 inch  
between print suppression latchlever and print hammer bail.

**To Adjust**

With print suppression latchlever held against print hammer bail, bend print suppression latchlever using pry points.


Note: Use top pry point to make gap larger. Use bottom pry point to make gap smaller.

**Related Adjustments****Affected By**


CODEBAR RESET LEVER POSITION (Function Area) (2.28)

FRONT ROLLERS CLEARANCE (2.43)

REAR RAIL POSITION (2.45)

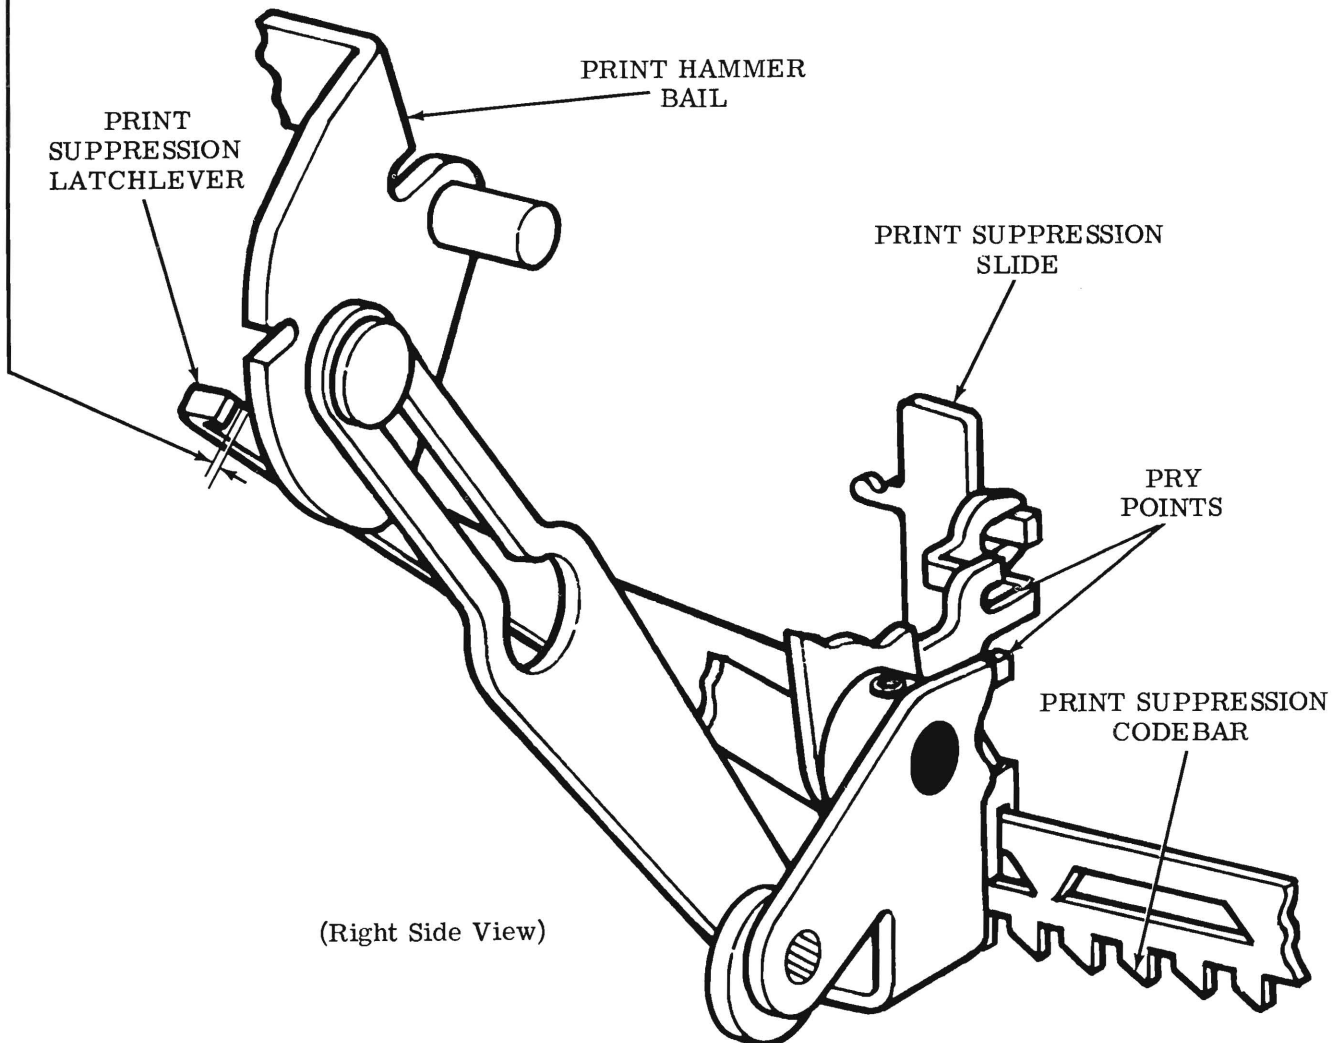

2.58 Carriage Area (continued)

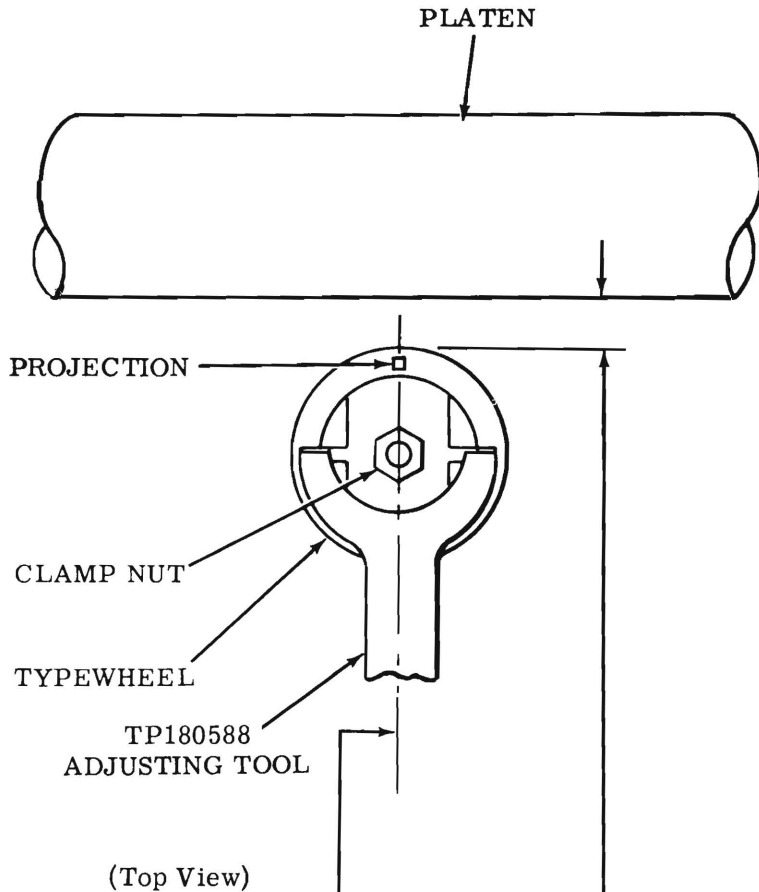

TYPEWHEEL "HOME" POSITION  
(Preliminary)

**To Check**

Place typing unit in the stop condition.

(1) Requirement

The typewheel top surface projection should be at its closest position to the platen.

(2) Requirement

The typewheel top surface projection and the clamp nut should be aligned perpendicular to the platen, as gauged by eye.

**Related Adjustments**

Affects

FINAL PRINTING ALIGNMENT (2.124)

**To Adjust**



Loosen clamp nut and position typewheel using TP180588 adjusting tool. Tighten clamp nut.

2.59 Carriage Area (continued)

PRINT HAMMER BAIL SPRING

**Requirement**

With typing unit in stop condition  
 Min 3 oz---Max 4-1/2 oz  
 to start print hammer moving.

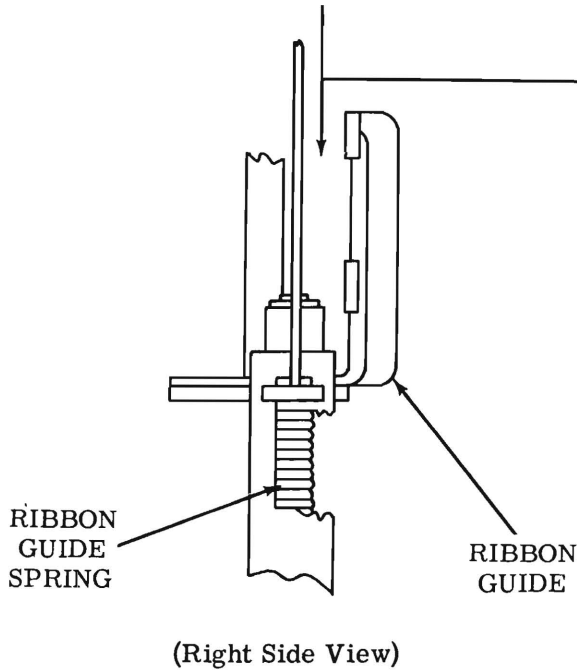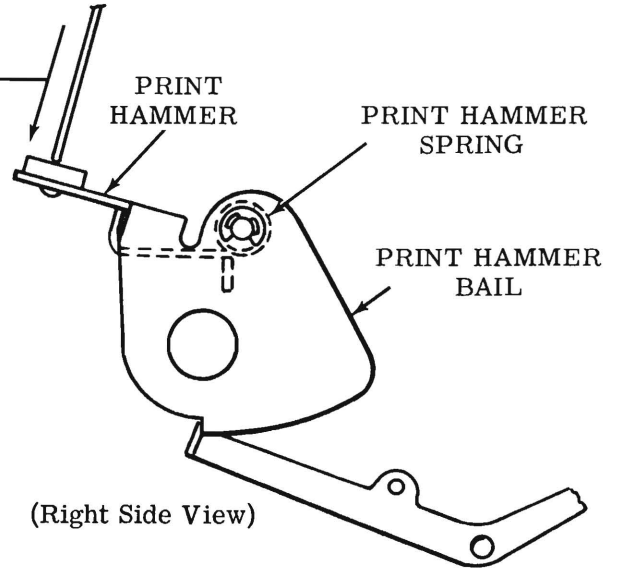


RIBBON GUIDE SPRING

**To Check**

Remove ribbon from ribbon guide. Trip selector clutch and rotate main shaft until carriage drive bail is in rearmost position.

**Requirement**

Min 6 oz---Max 9 oz  
 to start ribbon guide moving.

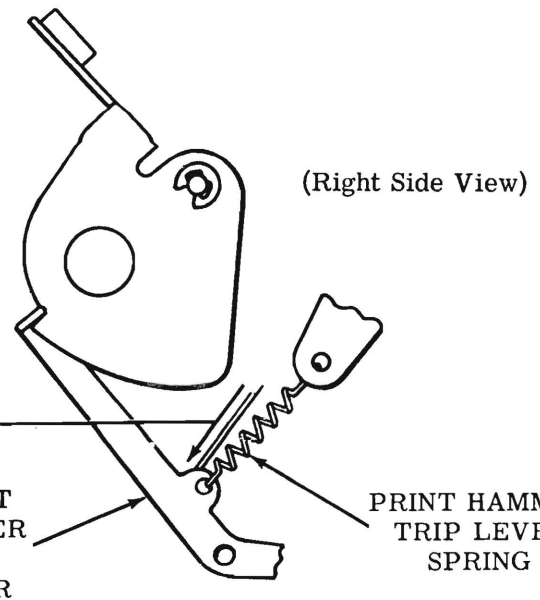

PRINT HAMMER TRIP LEVER SPRING

**Requirement**

With typing unit in stop condition  
 Min 1 oz---Max 2-1/2 oz  
 to start print hammer trip lever moving.

2.60 Carriage Area (continued)

ROTARY DRIVE BAIL SPRING

To Check

Set up an all marking code combination in selector and rotate main shaft until the carriage drive bail is in its rear-most position.

Requirement

Min 17 oz---Max 21-1/2 oz to start rotary drive bail moving.

(Right Side View)



VERTICAL DRIVE BAIL SPRING


Requirement

With typing unit in stop condition Min 13 oz---Max 18 oz to start typewheel moving.


TYPEWHEEL RETURN SPRING

Requirement

With typing unit in stop condition Min 2-1/2 oz---Max 4-1/2 oz to move typewheel to platen.

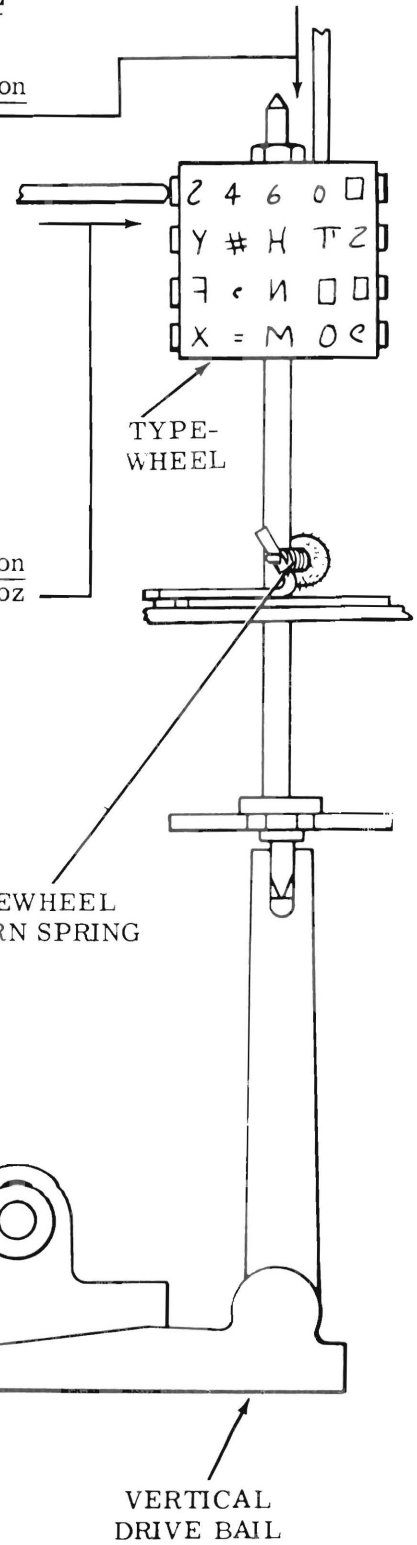

2. 61 Carriage Area (continued)

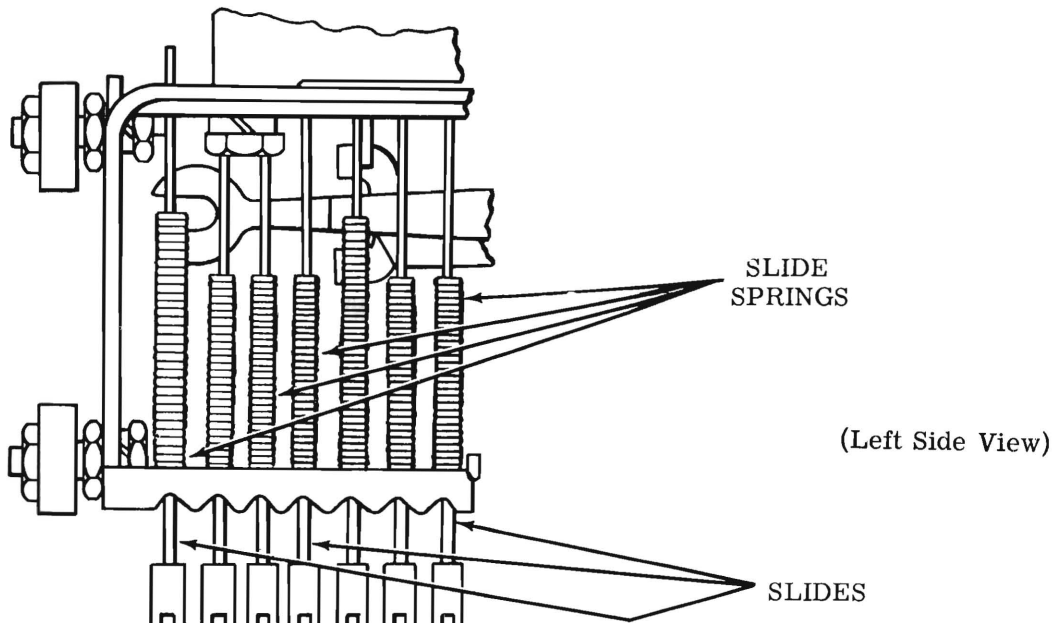

SLIDE SPRINGS

Note: To check tensions of the slide springs, it is necessary to remove the carriage mechanism from typing unit. For instructions see appropriate disassembly and reassembly section. Do not check unless there is reason to believe that the slide springs do not meet their requirements.

Requirement

With carriage power bail in its stop position, towards the front, it should require values as shown in chart, to start slides moving.

\* Print Suppression

SLIDE NO.	5 AND 7	4	2 AND 3	1	PS*
Min	1/4 oz	3-3/4 oz	2 oz	1/4 oz	3-3/4 oz
Max	1-1/4 oz	4-1/2 oz	3 oz	1 oz	4-1/2 oz

2.62 Carriage Area (continued)

RIBBON POWER LEVER DRIVE

(1) To Check

Manually operate the typing unit until the carriage drive bail is in the rearmost position. Rotate left ribbon ratchet until the ribbon spool shaft and ribbon spool pin are approximately aligned with the tip of the feed pawl. Seat feed pawl against left ribbon ratchet.

Requirement

Min 0.010 inch---Max 0.045 inch  
between face of left ribbon ratchet tooth and the corner tip of check pawl.

(2) To Check

Repeat (1) To Check above, except apply all instructions to right ribbon ratchet.

Requirement

Min 0.010 inch---Max 0.045 inch  
between face of right ribbon ratchet tooth and corner tip of check pawl.

To Adjust


Loosen locknut and position the eccentric stud with hex key wrench in hex hole. Tighten locknut.

Note: Position eccentric stud to the bottom of its mounting slot when tightening locknut.

Related Adjustments

Affected By

- FRONT ROLLERS CLEARANCE (2.43)
- REAR RAIL POSITION (2.45)
- RESET LEVER POSITIONING (2.49)

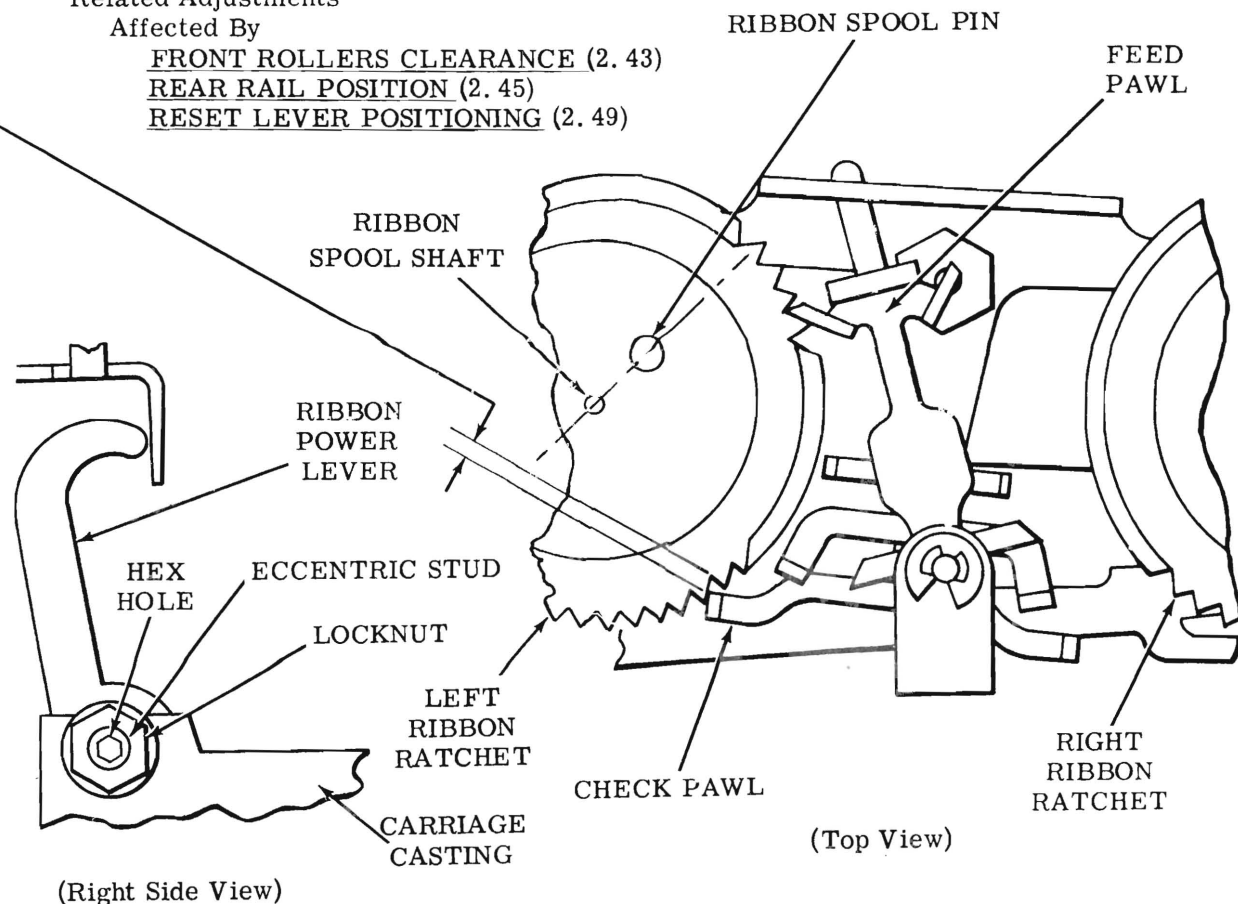

2. 63 Carriage Area (continued)

RIBBON RATCHET SPRING

Requirement

With feed and check pawls disengaged from ratchet wheel.


Min 1-1/2 oz---Max 3-1/2 oz  
to start ratchet wheel moving.

RIBBON REVERSE ARM SPRING

Requirement

With typing unit in stop condition and ribbon removed

Min 1-1/2 oz---Max 3 oz  
to start reverse arm moving.

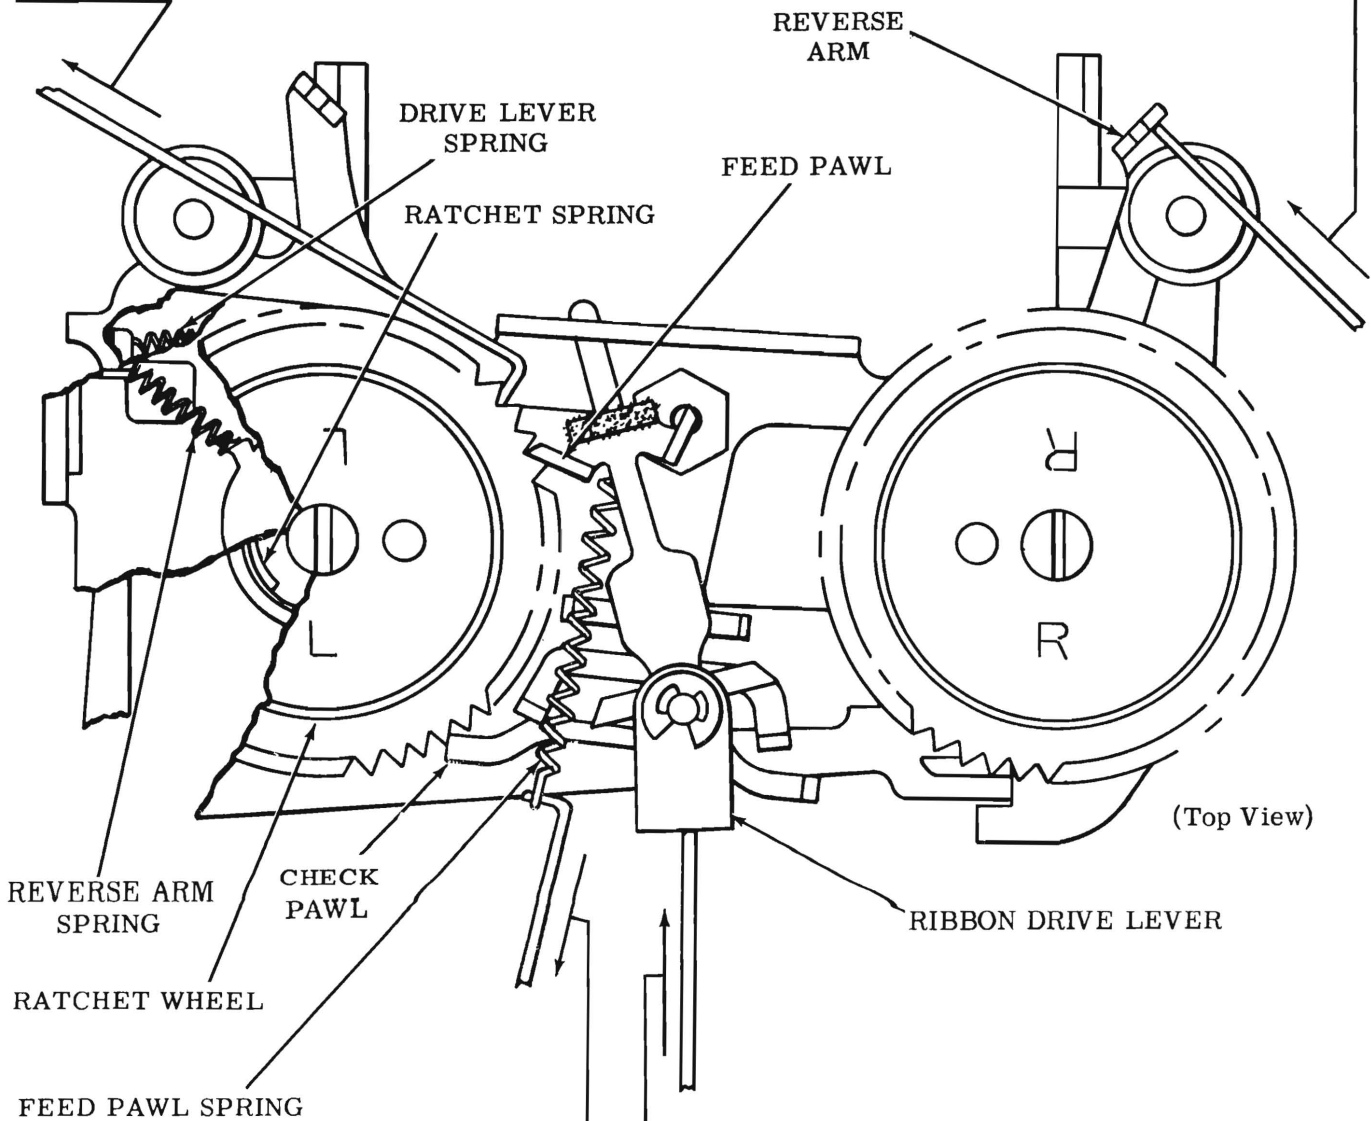

RIBBON FEED PAWL SPRING

Requirement


With typing unit in stop condition  
Min 2-1/2 oz---Max 4 oz  
to pull feed pawl spring to installed length.

RIBBON DRIVE LEVER SPRING

Requirement

With typing unit in stop condition  
Min 5-1/2 oz---Max 9 oz  
to start ribbon drive lever moving.

2. 64 Spacing Area (continued)

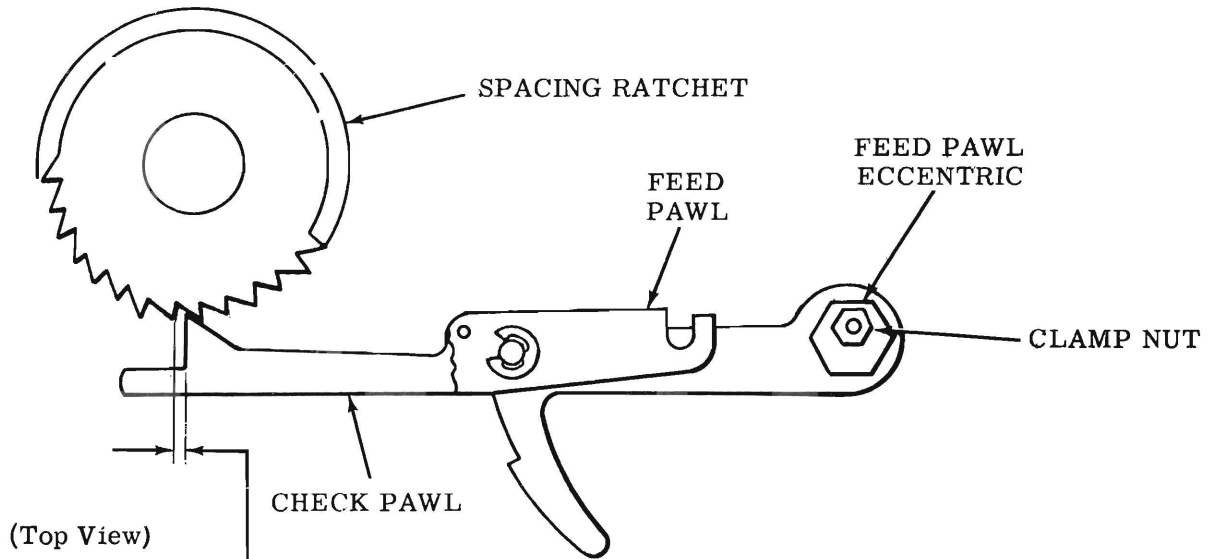

(Top View)

FEED PAWL STOP POSITION

To Check

Place carriage at center of platen. Place typing unit in stop condition.

Requirement

With feed pawl in full engagement with spacing ratchet  
 Min 0.004 inch---Max 0.018 inch  
 between check pawl and spacing ratchet tooth.

To Adjust

Loosen clamp nut. Rotate feed pawl eccentric. Keep high part of eccentric toward front. Tighten clamp nut.

Related Adjustment


Affected By

PRINT HAMMER TRIP LEVER RELEASE  
 (Carriage Area) (2. 54)

SPACE BELLCRANK SPRING

Requirement

With typing unit in stop condition  
 Min 3 oz---Max 5 oz  
 to start bellcrank moving.

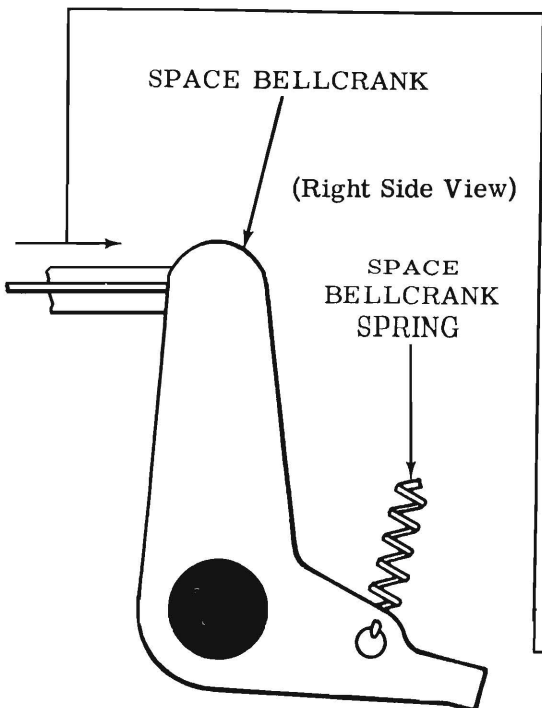

(Right Side View)


## 2. 65 Spacing Area (continued)

SPACE SUPPRESSION LEVER CLEARANCE — PRINTING**To Check**

Move carriage to the center of platen. Set up the @ code combination (-----78) in the selector. Rotate the main shaft until the front vertical surface of the right end of feed pawl is aligned with notch on space suppression lever.

**(1) Requirement**

With all play taken up to minimize gap  
Min 0.005 inch---Max 0.040 inch  
between right end of feed pawl and tip  
of notch on the space suppression lever.

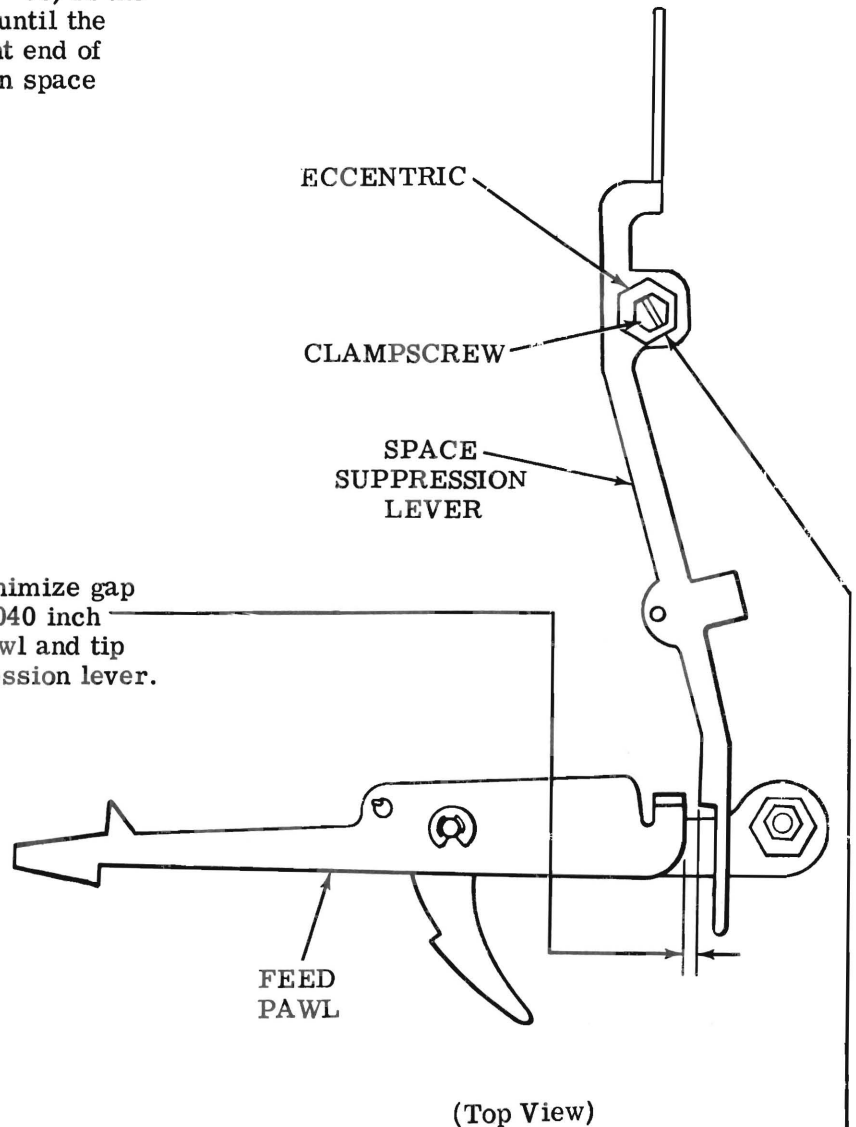**(2) Requirement**

The position of high part of eccentric should be toward the rear of the typing unit.

**To Adjust**

Loosen eccentric clampscrew friction tight.  
Position eccentric. Tighten eccentric  
clampscrew.

**Related Adjustment**

Affected By

CODEBAR RESET LEVER POSITION  
(Function Area) (2. 28)

2.66 Spacing Area (continued)


CARRIAGE RETURN LEVER SPRING

To Check

Place typing unit in stop condition and manually return carriage. Hold feed pawl and check pawl away from carriage return lever.

Requirement

Min 1 oz---Max 3 oz  
to start carriage return lever moving.

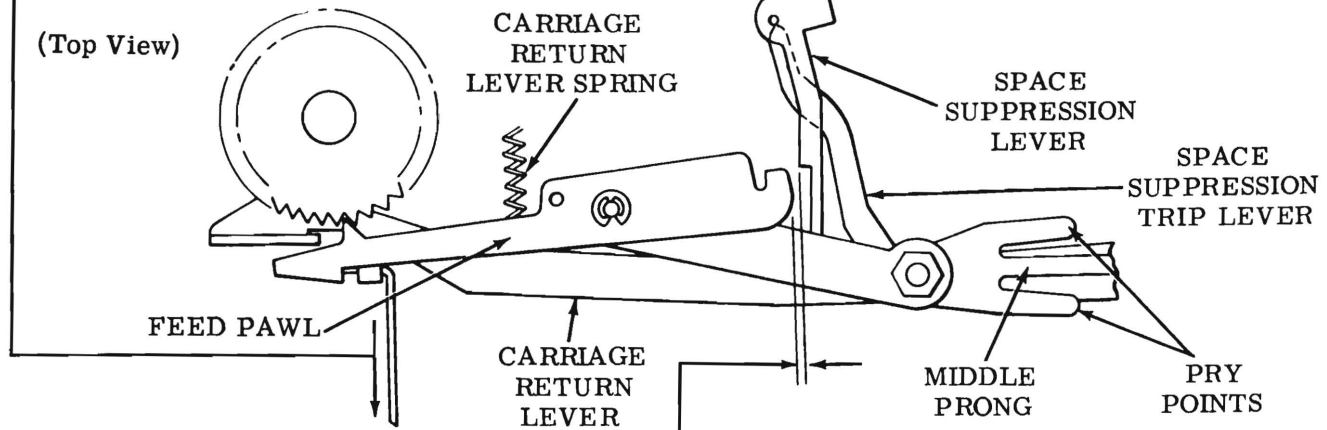

SPACE SUPPRESSION LEVER CLEARANCE — SPACING

To Check

Move carriage to the center of platen. Set up space code combination (-----6-8) in the selector. Rotate main shaft until front vertical surface of right end of feed pawl is aligned with notch on space suppression lever.

Requirement

With all play taken up to minimize gap  
Min some---Max 0.015 inch  
between right end of feed pawl and tip of notch on space suppression lever.


To Adjust

Position the space suppression trip lever by bending the middle prong using the proper pry point.

Note: Use front pry point to increase clearance and rear pry point to decrease clearance between feed pawl and space suppression lever.

Related Adjustments  
Affected By  
LEFT ROCKER DRIVE (2.34)

2.67 Spacing Area

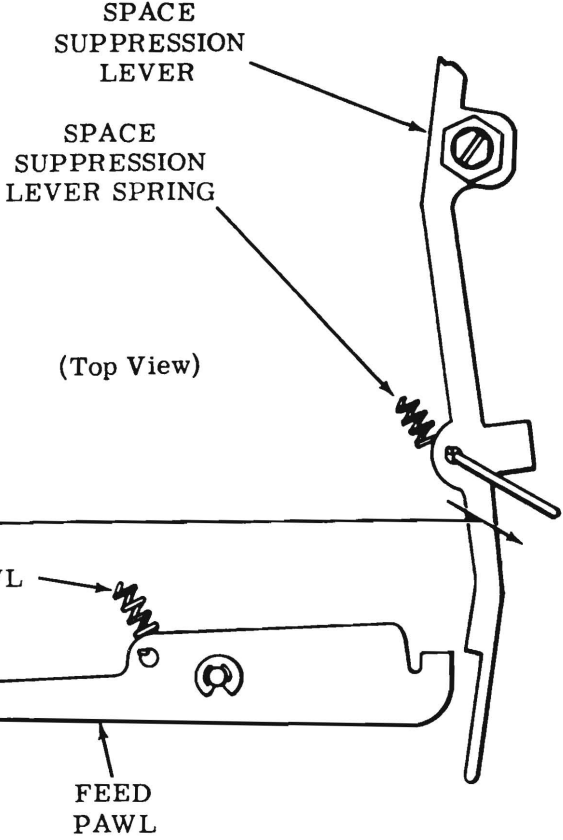

SPACE SUPPRESSION LEVER SPRING

Requirement  
 With typing unit in stop condition  
 Min 1-1/2 oz---Max 3 oz  
 to start space suppression lever moving.

FEED PAWL SPRING

Requirement  
 With typing unit in stop condition  
 and feed pawl disengaged from  
 spacing ratchet  
 Min 2 oz---Max 4 oz  
 to start feed pawl moving.

2. 68 Spacing Area (continued)

FEED PAWL TRAVEL

To Check


Place carriage to left margin and set up the character M code combination (1-34--78) in selector. Rotate main shaft until carriage drive bail reaches its rearmost position. Hold check pawl away from ratchet. Hold check pawl away from ratchet.

To Adjust

Loosen clamp nut. Position spacing drive roller. Tighten clamp nut.

Requirement

Min 0.005 inch---Max 0.030 inch between the feeding surface of the feed pawl and the face of ratchet.

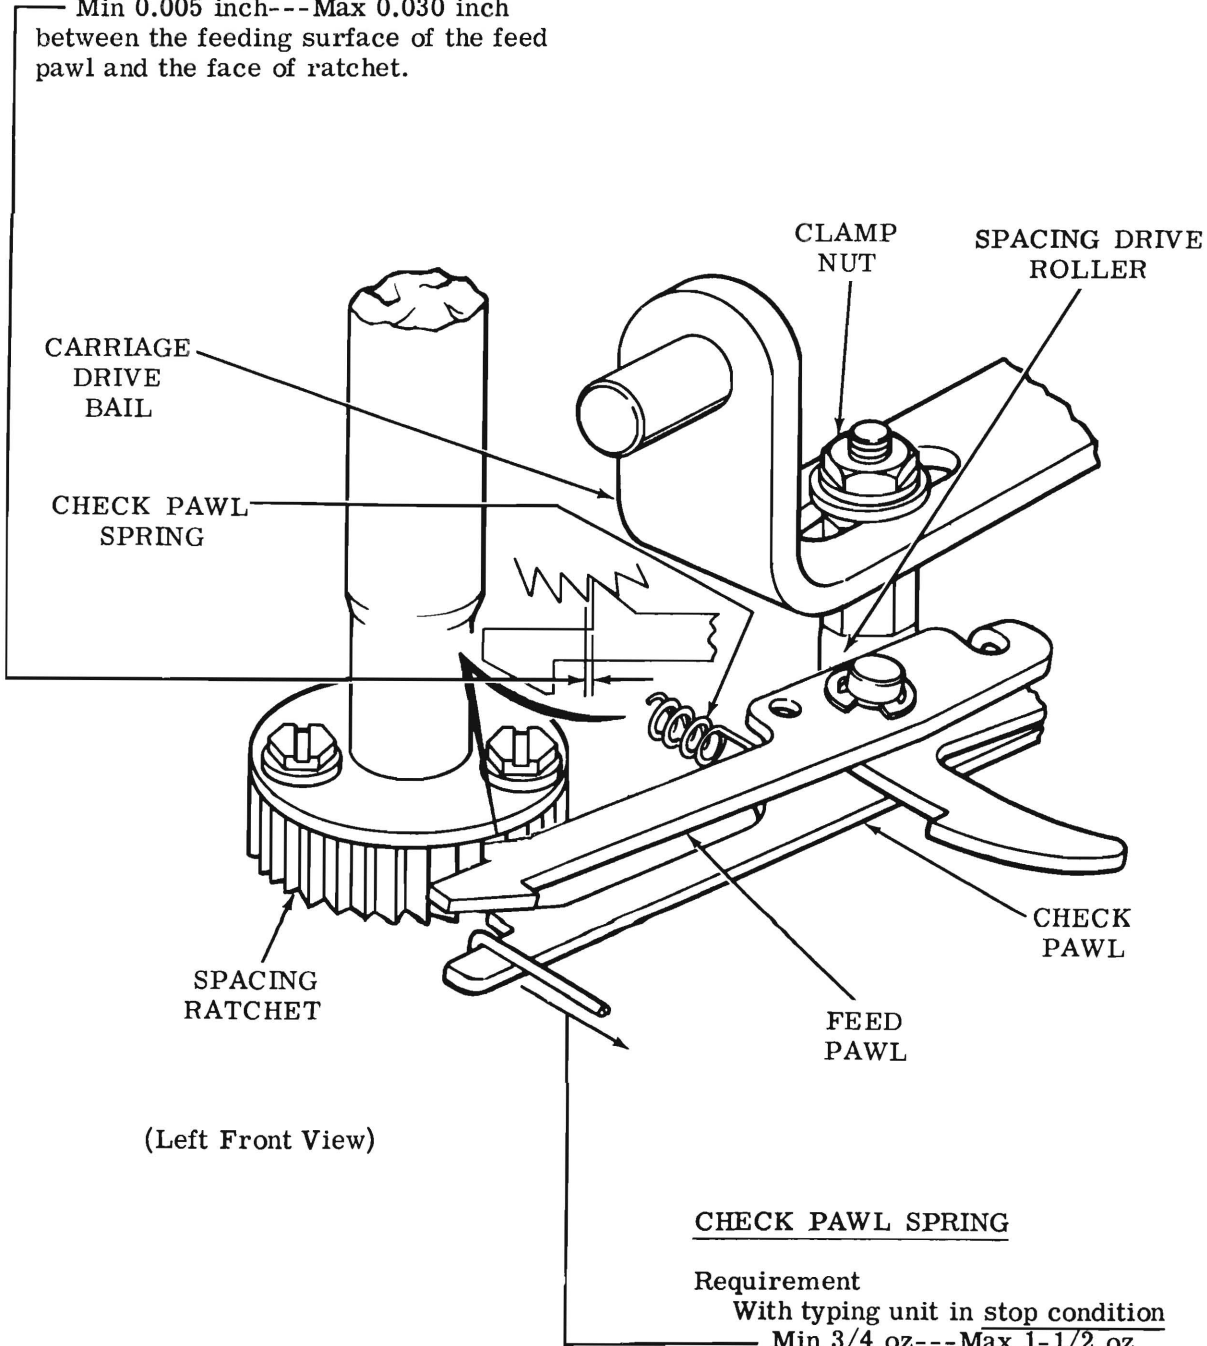

CHECK PAWL SPRING

Requirement

With typing unit in stop condition  
Min 3/4 oz---Max 1-1/2 oz  
to start check pawl moving.

2. 69 Spacing Area (continued)

SPACING BELT TENSION

Requirement

With typing unit in stop condition, carriage at left margin, and from 8 to 11 ounces of pressure applied near center of belt

Min 9/16 inch---Max 11/16 inch between outer surfaces of belt.


To Adjust

Loosen mounting screws and position right pulley bracket. Tighten screws.

Related Adjustment

Affects

LEFT MARGIN PRINTING (2. 120)

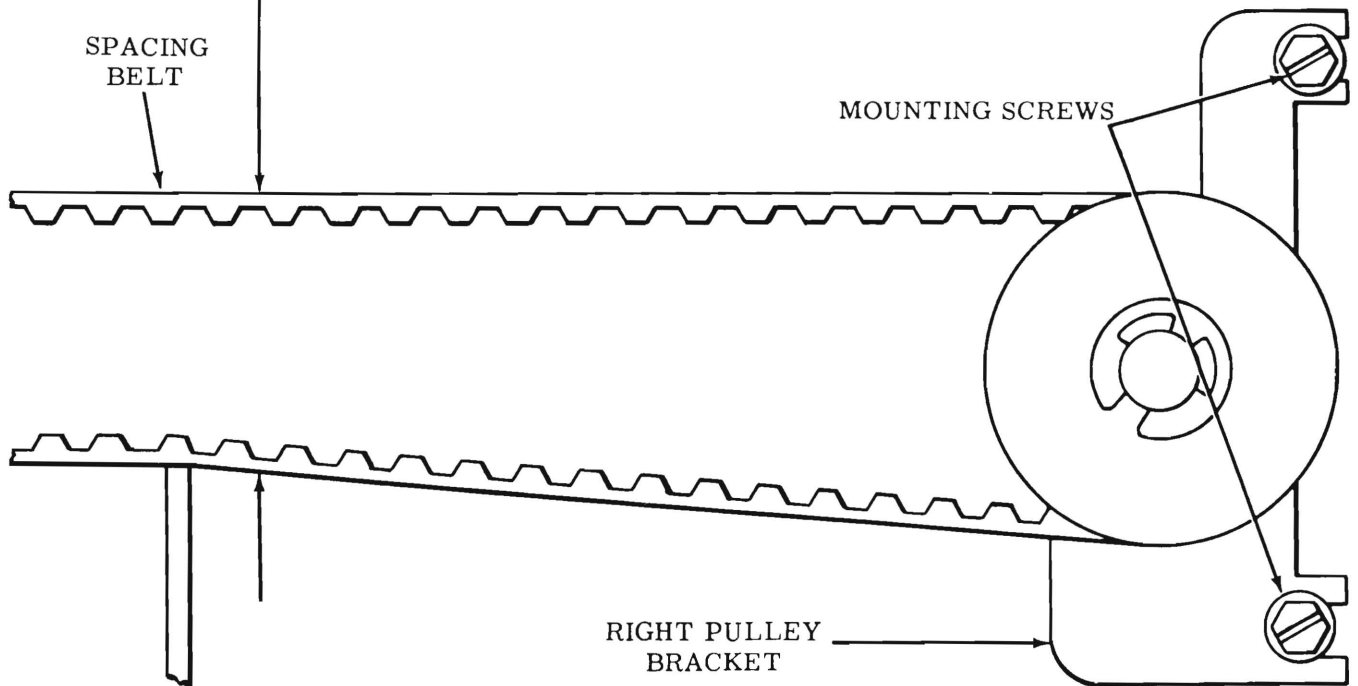

(Top View)

2.70 Platen Area

PLATEN — HORIZONTAL POSITION - F

(1) To Check

Place the flat surface on the left side of the platen up so that it is horizontal to the base casting. Place the carriage at the left margin and check requirement. Move the carriage to the right margin and again check requirement.

Requirement

Min 0.050 inch--- Max 0.065 inch  
between ribbon guide and platen at both left and right margins.

(2) To Check

Place carriage to center of platen and rotate platen until maximum clearance is obtained between platen and ribbon guide. Set up the E code combination (1-3---78) in the selector. Rotate main shaft until carriage drive bail is in its rearmost position. Push typewheel to the rear until it just touches the platen.

Note: The typing unit should not have paper or ribbon installed.

Requirement

Typewheel should not touch inside of either ribbon guide.

To Adjust

Loosen four horizontal positioning screws. Position platen horizontally. Tighten positioning screws.


Related Adjustments

Affects

LINE FEED STRIPPER PLATE CLEARANCE - F (2.85)

Affected By

FRONT ROLLERS CLEARANCE (2.43)

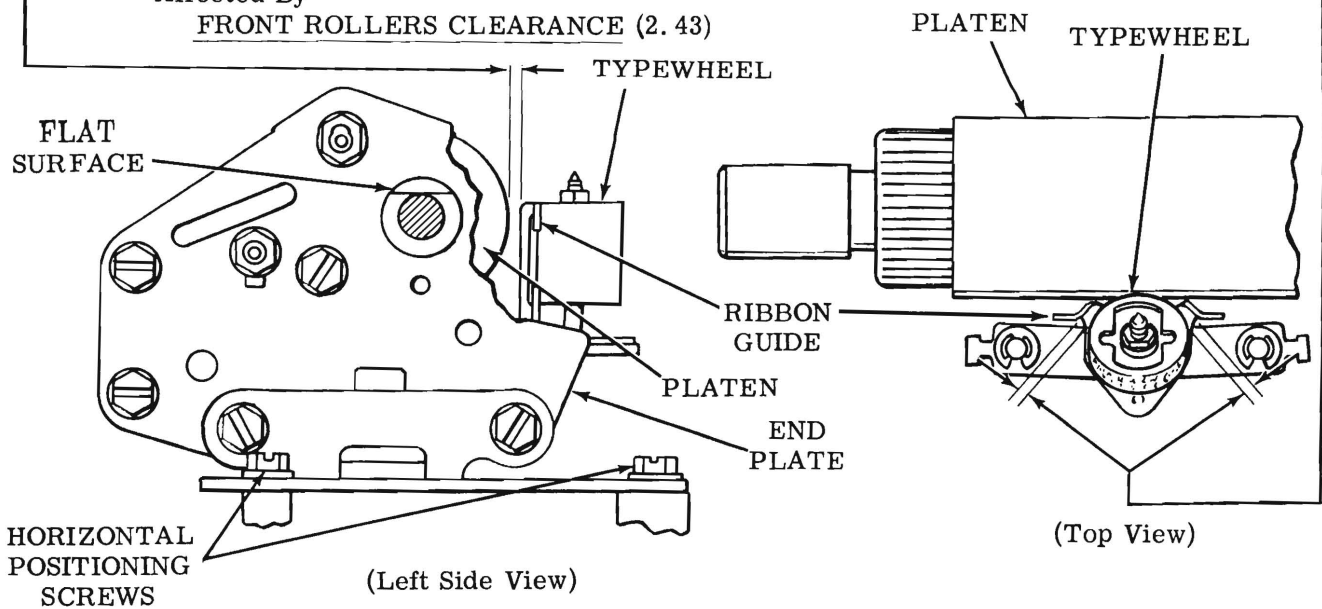

## 2.71 Platen Area (continued)

VERTICAL TYPE ALIGNMENT - F

For typing units equipped with adjustable vertical drive bail such as TP180606:

## (1) To Check


Place paper and ribbon in unit. Place carriage to left margin. Set up the E code combination (1-3---78) in the selector and rotate the main shaft until the character is printed.

## Requirement

When the printed character is examined by eye from top to bottom, the shading should be approximately the same with no overscoring or underscoring.

## To Adjust

Loosen adjusting screw on vertical drive bail and position the typewheel using pry point. Tighten adjusting screw.

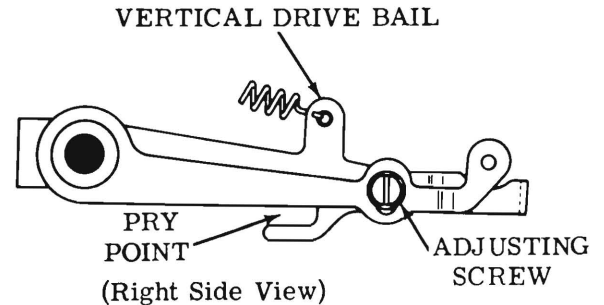

## (2) To Check

Place carriage to right margin. Set up the E code combination (1-3---78) in the selector and rotate main shaft until the character is printed.

## Requirement

When the printed character is examined by eye from top to bottom, the shading should be approximately the same with no overscoring or underscoring.

## To Adjust

Loosen vertical positioning screws on right side. Position the right end of the platen using pry point. Do not twist the platen. Tighten positioning screws.

For typing units equipped with nonadjustable vertical drive bail such as TP180526:

## To Check

Place paper in typing unit. Set up the E code combination (1-3---78) in the selector and rotate the main shaft until the character is printed. Repeat several times along the length of the platen.

## Requirement

When each printed character is examined by eye from top to bottom, the shading should be approximately the same with no overscoring or underscoring.

## To Adjust

Loosen four vertical positioning screws. Position the platen using pry points. Do not twist the platen. Tighten positioning screws.

## Related Adjustments

## Affects

LINE FEED DRIVE ARM CLEARANCE - F  
(2.80)

LINE FEED PAWL DOWNSTOP POSITION - F  
(2.83)

LINE FEED UPSTOP BRACKET POSITION - F  
(2.81)

PRESSURE ROLLER CLEARANCE (2.84)


LINE FEED DRIVE LINK POSITION - F  
(2.82)

## Affected By


REAR RAIL POSITION (2.45)

PRINT DRIVE LEVER


POSITIONING (2.48)

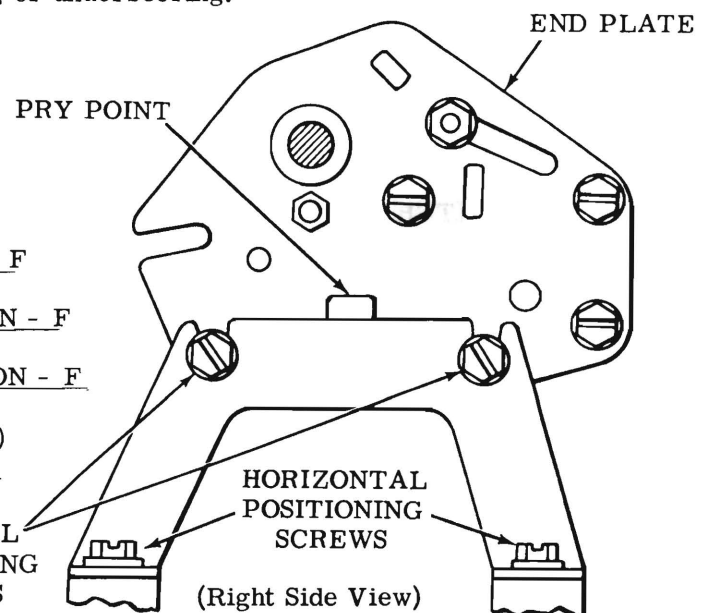

2.72 Platen Area (continued)

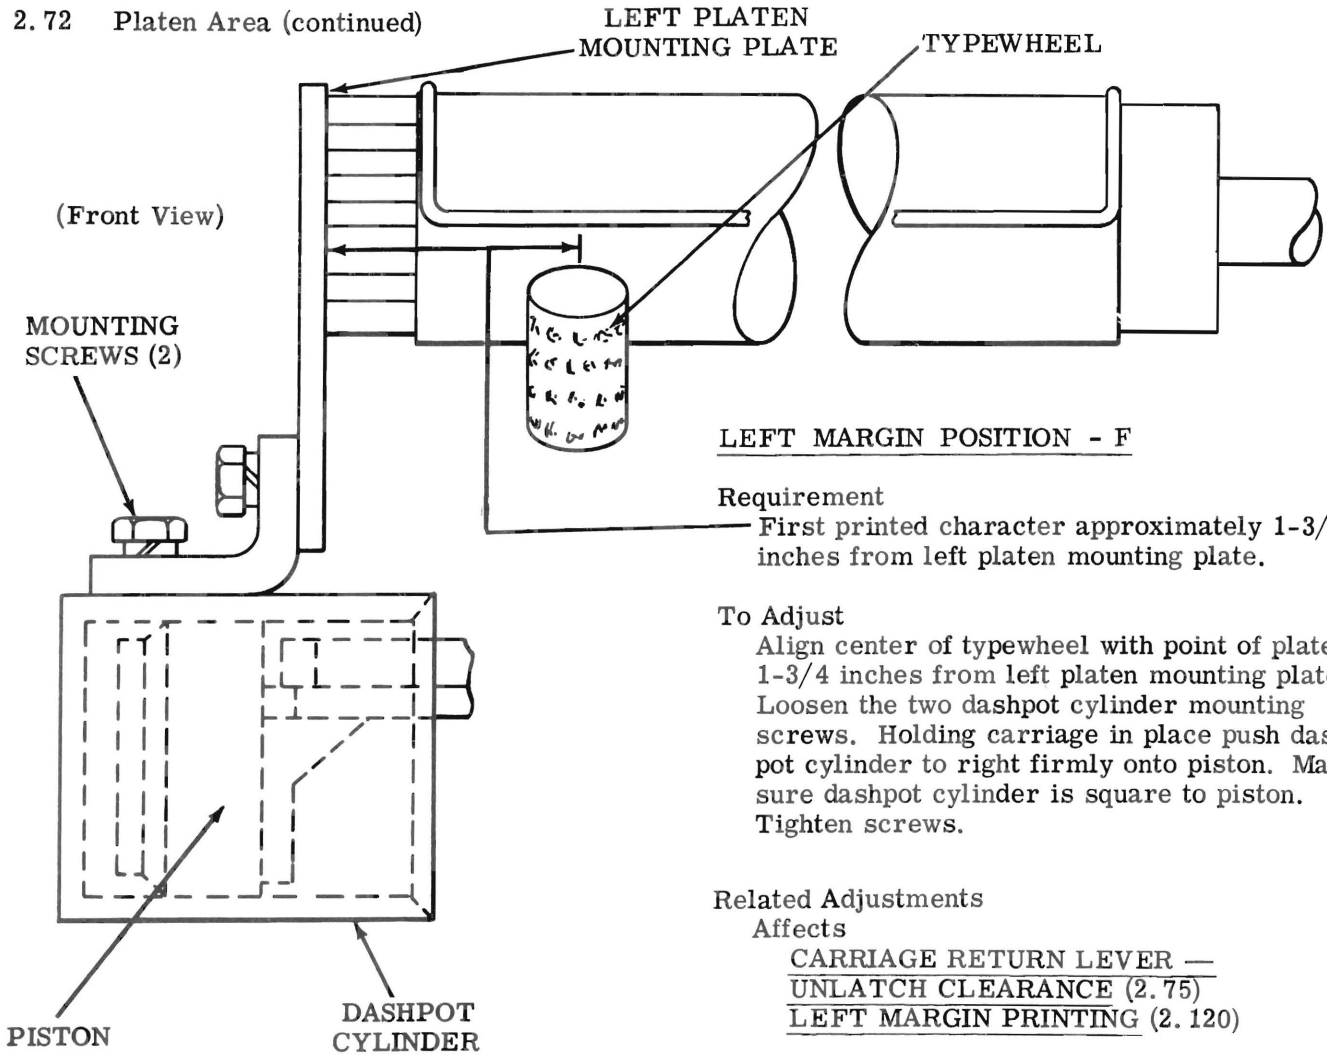

2.73 Function Area (continued)

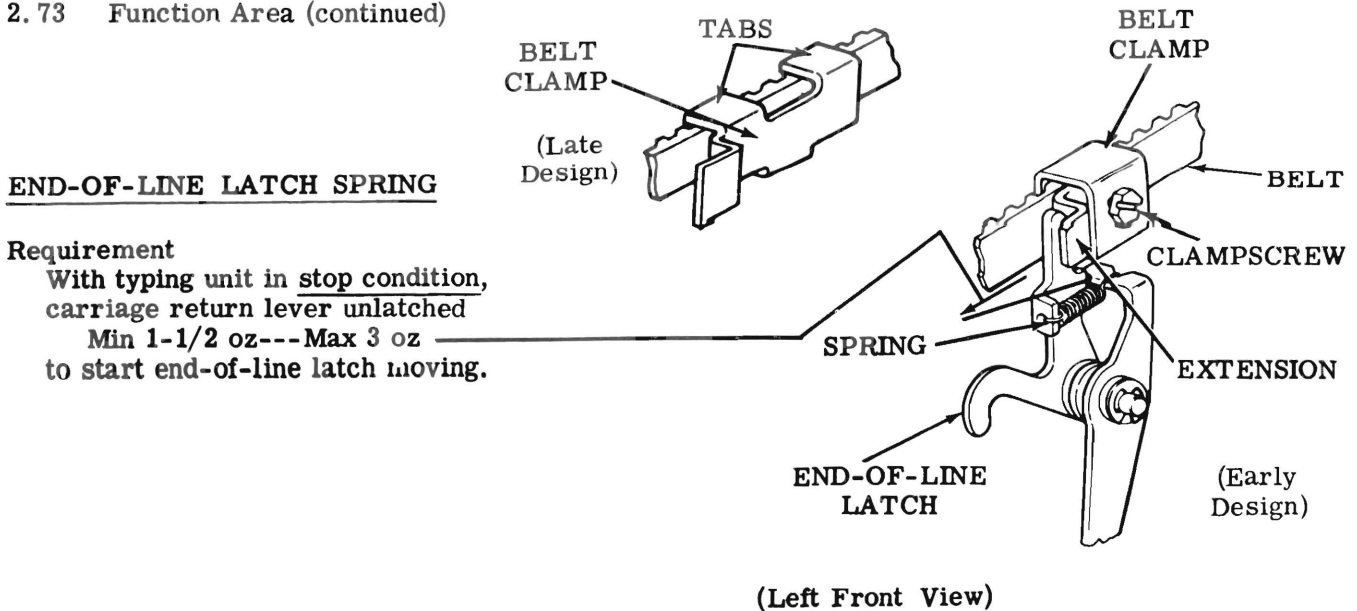


2.74 Platen Area (continued)

PAPER GUIDE SPRINGS - F

Requirement

With scale at either the left or right end of paper guide

Min 1-1/2 oz---Max 3-1/2 oz  
to start paper guide moving.

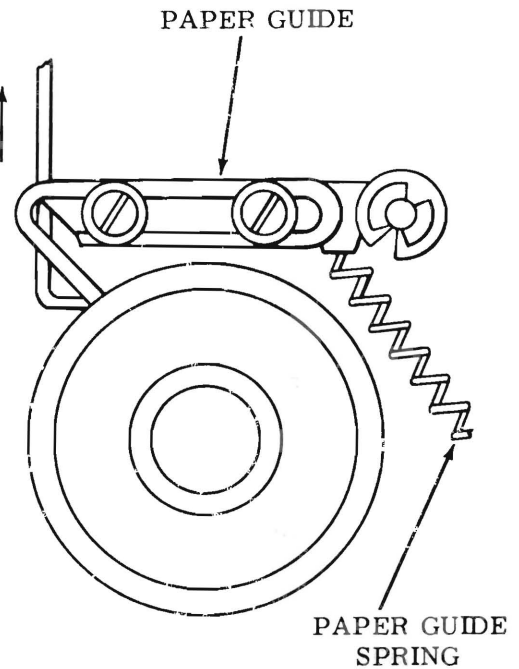

PAPER STRAIGHTENER BAIL SPRING - F

Requirement

With scale at center of paper straightener bail

Min 1 oz---Max 3 oz  
to start paper straightener bail moving.

(Right Side View)


PAPER GUIDEPLATE SPRINGS - F

Requirement

With pressure lever released

Min 3/4 oz---Max 1-3/4 oz  
to start paper guideplate moving.


Note: Check each of two springs.

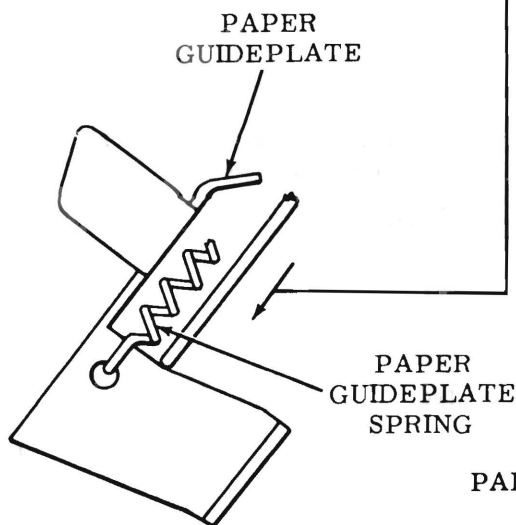

(Right Side View)


PAPER STRAIGHTENER BAIL SPRING

PAPER STRAIGHTENER BAIL

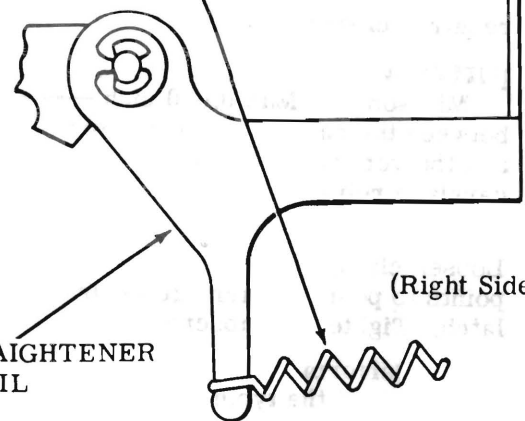

(Right Side View)

2.75 Spacing Area (continued)

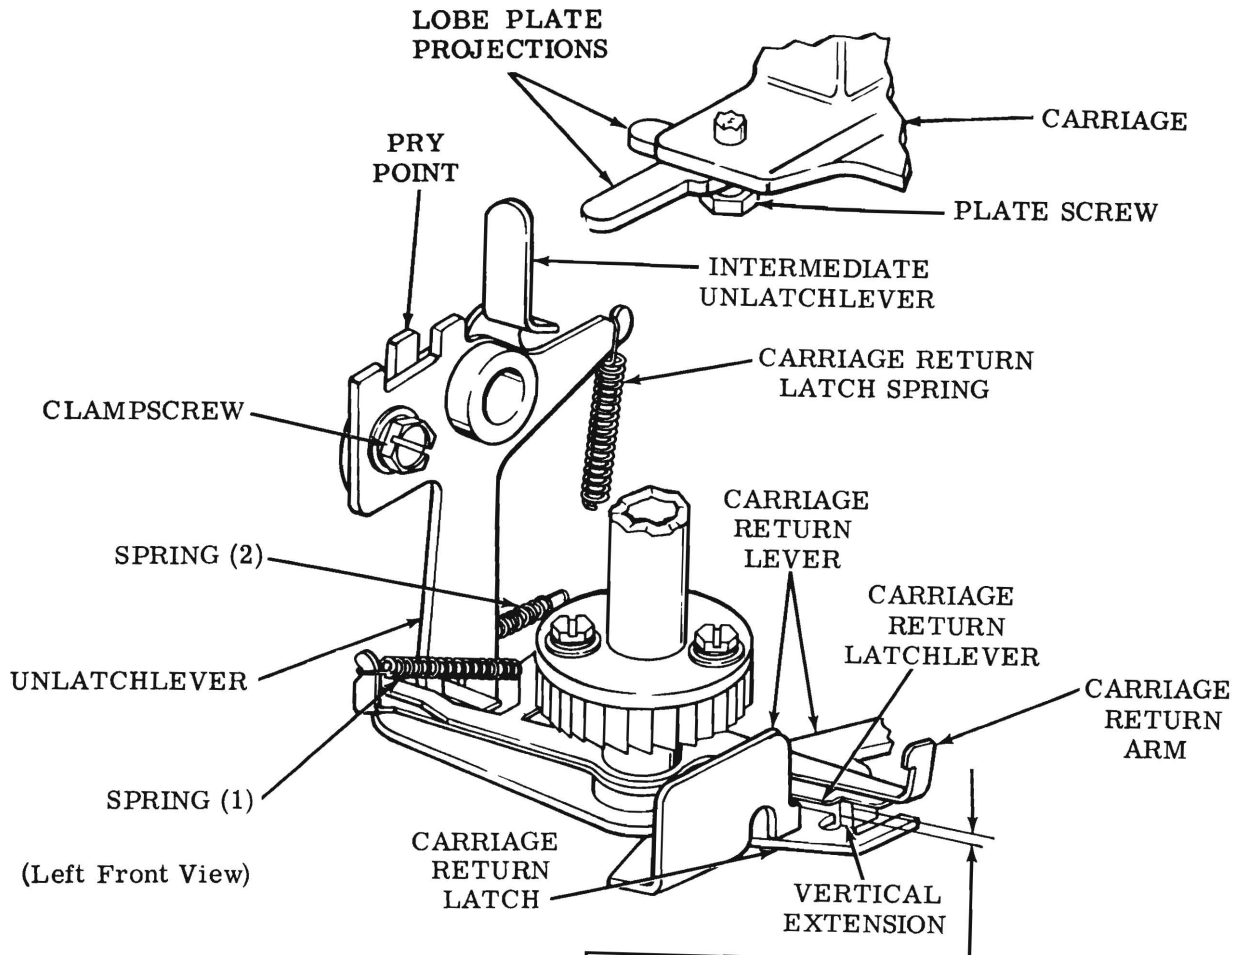

**CARRIAGE RETURN LEVER - UNLATCH CLEARANCE**

**(1) To Check**

Move carriage to left margin by placing carriage return lever in its forward latched position. Take up all play to minimize the required clearances.

**Requirement**

Min some---Max 0.050 inch between the carriage return latch and the vertical extension of the carriage return lever.

**To Adjust**

Loosen clampscrew. Use pry points to position carriage return latch. Tighten clampscrew.

**Note:** Perform the following check only if the typing unit is being completely readjusted.

**(2) To Check**

Repeat To Check (1) above.

**Requirement**

The intermediate unlatch lever should be aligned with the lobe plate projection which most nearly touches it.

**To Adjust**


Loosen plate screw. Position lobe projection plate. Tighten plate screw. Check FRONT ROLLERS CLEARANCE adjustment.

**Related Adjustments**

**Affected By**

- LEFT MARGIN POSITION - S (2.118)
- LEFT MARGIN POSITION - F (2.72)

2.76 Spacing Area (continued)

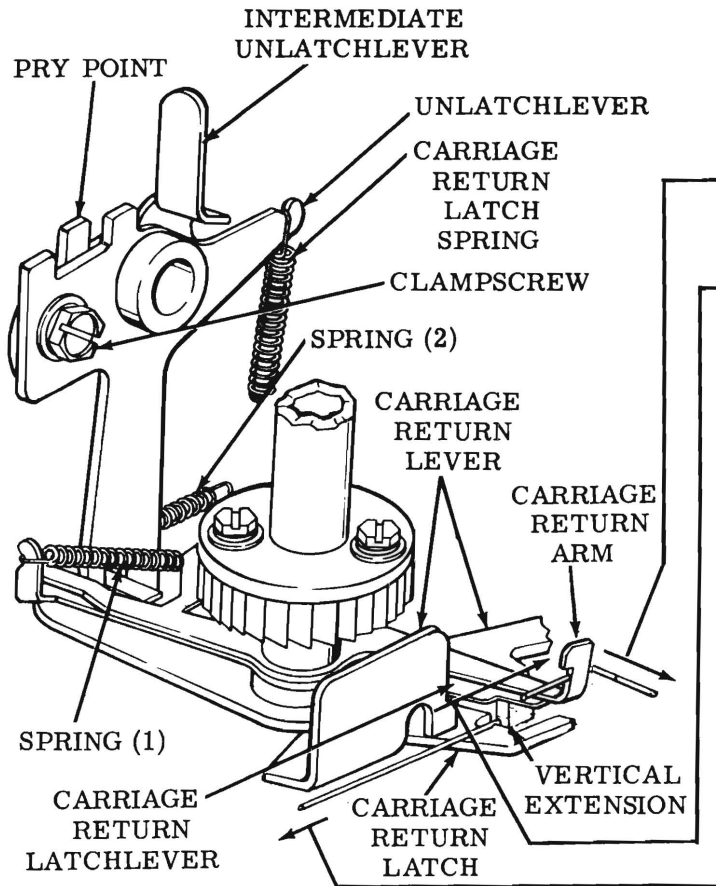

CARRIAGE RETURN ARM SPRINGS

To Check

Place typing unit in stop condition and engage feed pawl and check pawl with spacing ratchet.

(1) Requirement

Min 1 oz---Max 2 oz to start arm moving.

(2) Requirement

Min 1/2 oz---Max 1-1/2 oz to start arm moving.

CARRIAGE RETURN LATCH SPRING

To Check

With typing unit in stop condition and carriage return lever unlatched, place carriage away from left margin.

Requirement

Min 1-1/2 oz---Max 3 oz to start carriage return latch moving.

CARRIAGE BOUNCE

To Check

Place carriage at right margin, manually disengage the check pawl and feed pawl of the spacing mechanism.


Requirement

No pneumatic or mechanical bounce of carriage upon its return.

To Adjust

Loosen orifice adjusting plate clampscrew and close the orifice completely. Then gradually open until pneumatic bounce is eliminated while operating unit. Tighten clampscrew.

Note: The orifice should never become fully uncovered. If it does become fully uncovered, it is possible that the lobe plate projection may be broken.

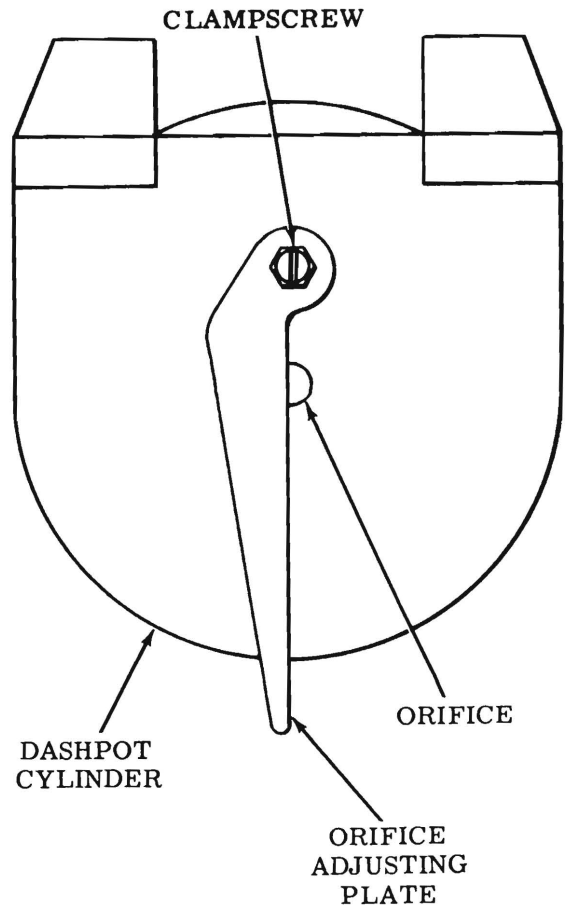

2.77 Platen Area (continued)

LINE FEED SELECTION - F


- (1) Requirement  
Upstop stud should be at bottom of slot for single line feed or at top for double line feed.

To Adjust  
Loosen clamp nut. Position upstop stud. Tighten clamp nut.

Note: The following requirement applies only to typing units equipped with operator-controlled line feed feature containing TP185788 shift lever.

- (2) Requirement  
Same as Requirement (1) above.


To Adjust  
Place TP185788 shift lever in upper detent for single line feed or in lower detent for double line feed.

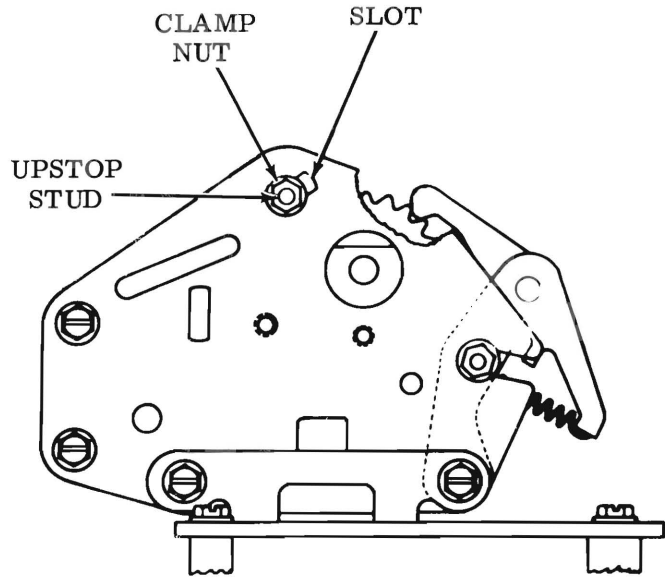

(Left Side View)

Related Adjustments  
Affects

DETENT POSITION - F (2.78)

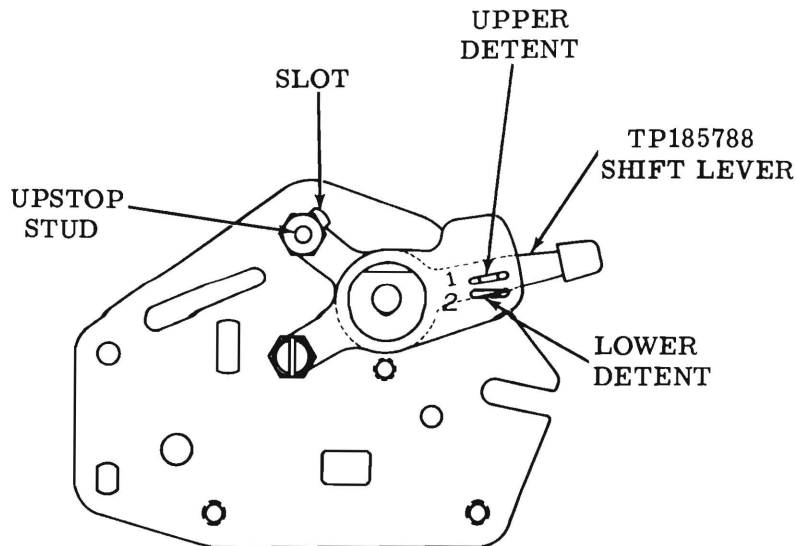

(Left Side View)

2.78 Platen Area (continued)

DETENT POSITION - F

To Check

Place typing unit in single line feed condition.

Requirement

When operated by finger pressure, line feed pawl should fully seat in platen ratchet without interference from teeth.

To Adjust

Early Design (typing units equipped with TP181030 bracket)

Loosen clamp nut (1). Position platen detent pawl pivot. Tighten clamp nut.

Late Design (typing units equipped with TP185796 bracket)

Loosen clamp nuts (2) and (3). Position platen detent pawl. Tighten clamp nuts.

Related Adjustments

Affects


LINE FEED DRIVE LINK POSITION - F  
(2.82)

Affected By


VERTICAL TYPE ALIGNMENT - F  
(2.71)

LINE FEED SELECTION - F (2.77)


Note: This adjustment is affected by VERTICAL TYPE ALIGNMENT - F (2.71) only when equipped with TP180526 nonadjustable vertical drive bail.

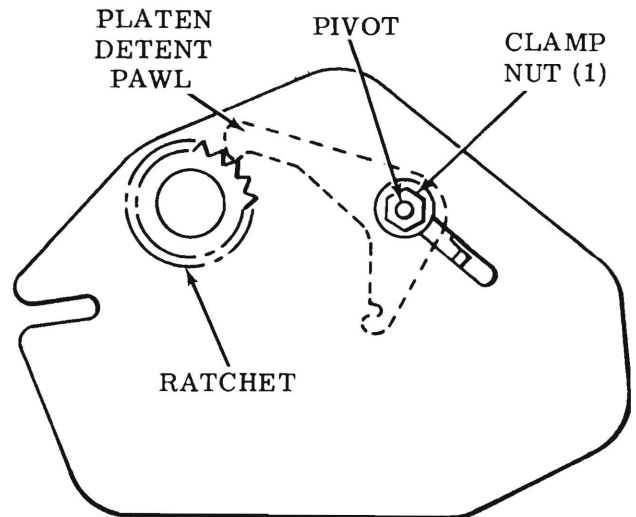

EARLY DESIGN  
(Right Side View)

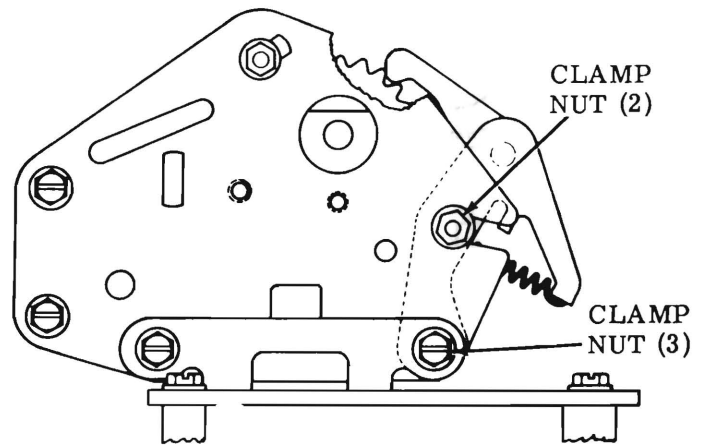

LATE DESIGN  
(Left Side View)

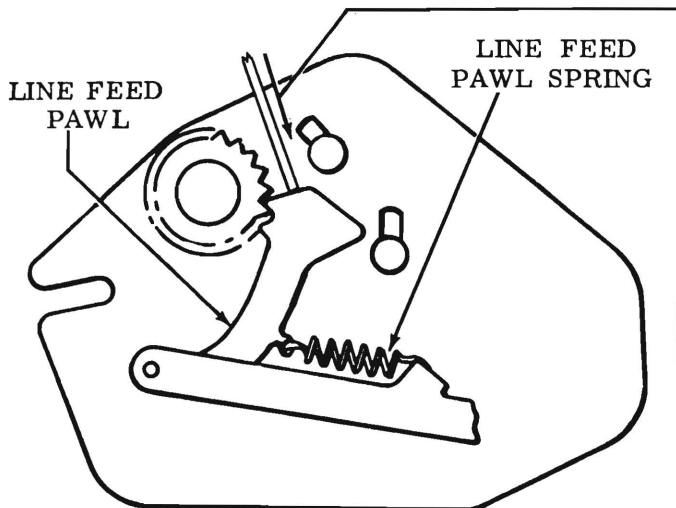

(Right Side View)

LINE FEED PAWL SPRING - F

Requirement

With typing unit in stop condition  
— Min 3/4 oz --- Max 1-3/4 oz  
to start line feed pawl moving.

2.79 Platen Area (continued)

LINE FEED DRIVE LINK SPRING - VERTICAL - F

LINE FEED DRIVE LINK SPRING (Vertical)

Requirement  
With typing unit in stop condition  
Min 6 oz---Max 9 oz  
to start line feed drive link moving.

LINE FEED DRIVE LINK

LINE FEED BLOCKING LEVER SPRING - F

To Check  
Set up any code combination in the selector except the line feed code combination and rotate the main shaft until the function bail is at highest point. Hold line feed drive link away from line feed blocking lever.

Requirement  
Min 2-1/2 oz---Max 4-1/4 oz  
to start line feed blocking lever moving.

LINE FEED DRIVE LINK SPRING (Horizontal)

LINE FEED BLOCKING LEVER


LINE FEED BLOCKING LEVER SPRING

(Left Side View)

LINE FEED DRIVE LINK SPRING - HORIZONTAL - F

Requirement  
With typing unit in stop condition  
Min 5-1/2 oz---Max 8-1/2 oz  
to start line feed drive link moving.

## 2.80 Platen Area (continued)

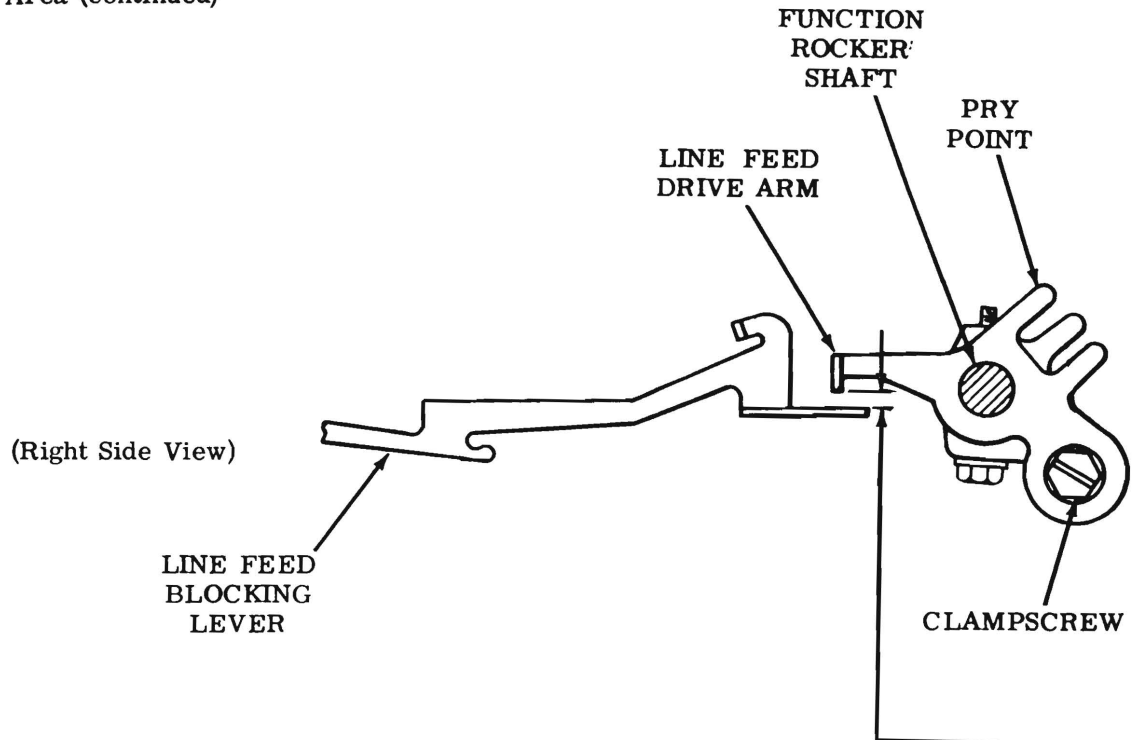LINE FEED DRIVE ARM CLEARANCE - F**To Check**

Place carriage to center of platen. Manually operate typing unit and set up line feed code combination (-2-4---8) in selector. Rotate main shaft until function bail is at highest point. Take up play to make clearance between line feed blocking lever and line feed drive arm a minimum.

**Requirement**

Min some---Max 0.010 inch  
between line feed drive arm and line feed blocking lever.

**Note:** The minimum requirement (some) will be considered met if there is no clearance between the line feed function lever and the function drive bail.

**To Adjust**

Loosen clampscrew. Position line feed drive arm using pry point. Tighten clampscrew.

**Related Adjustments****Affects**

- LINE FEED UPSTOP BRACKET POSITION - F (2.81)
- LINE FEED PAWL DOWNSTOP POSITION - F (2.83)

**Affected By**

- LEFT ROCKER DRIVE (Function Area)(2.34)

2.81 Platen Area (continued)

LINE FEED UPSTOP BRACKET POSITION - F

To Check

Place typing unit in stop condition. Trip function clutch by lifting its trip lever. Rotate main shaft until function bail is at highest point. Push down on line feed drive link to engage and latch line feed blocking lever.

Requirement

Min 0.020 inch---Max 0.040 inch between line feed drive arm and line feed blocking lever.

To Adjust

Loosen mounting screws and position line feed upstop bracket. Tighten mounting screws.


Related Adjustments

Affected By

VERTICAL TYPE ALIGNMENT - F  
(2.71)

LINE FEED DRIVE ARM CLEARANCE - F  
(2.80)

Note: This adjustment is affected by VERTICAL TYPE ALIGNMENT - F (2.71) only when equipped with TP180526 nonadjustable vertical drive bail.

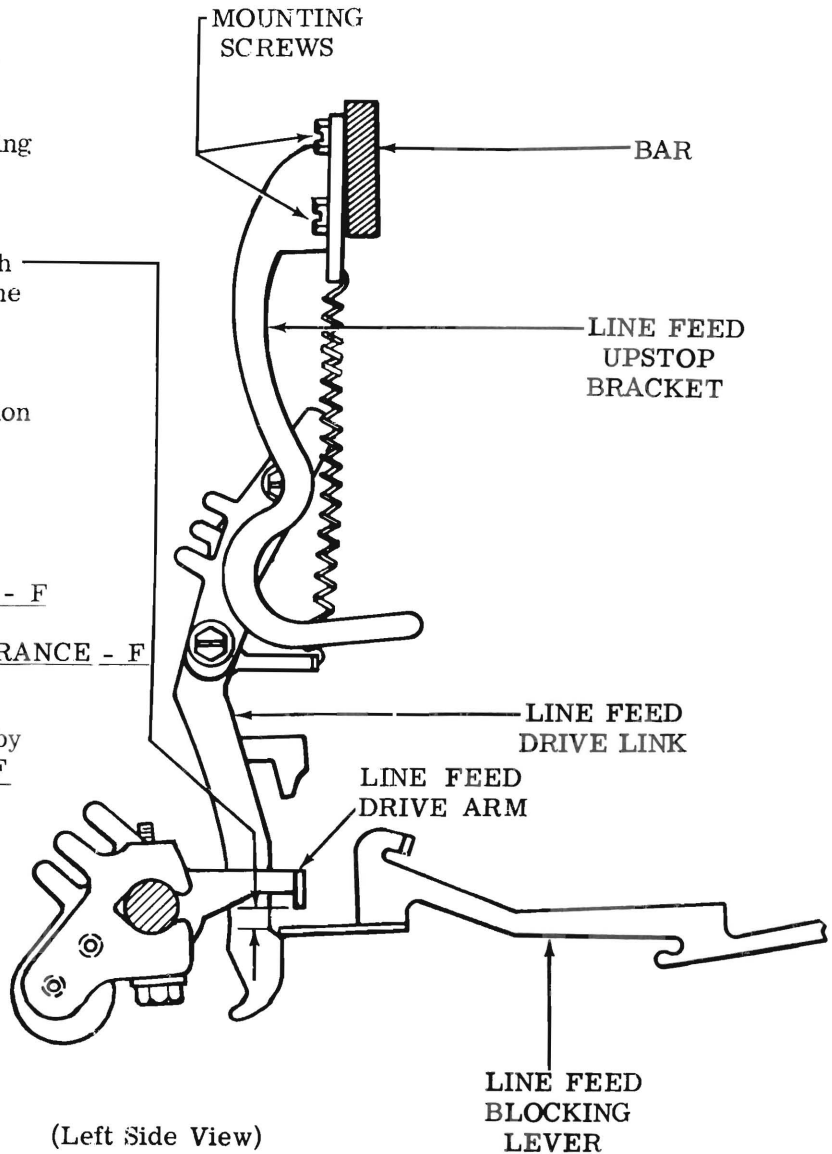

2. 82 Platen Area (continued)

LINE FEED DRIVE LINK POSITION - F

To Check

Place the carriage to the center of the platen. Place the flat surface on left side of platen up and horizontally to base casting, and set up the line feed code combination (-2-3---8) in the selector. Rotate main shaft until function bail reaches its lowest point while noticing the motion supplied by the drive arm of the function rocker shaft to the line feed pawl.

(1) Requirement

The motion supplied by the drive arm of the function rocker shaft to the line feed pawl should be adequate to rotate the platen the required amount.

(2) Requirement

Hold platen detent pawl away from ratchet and rotate main shaft until function bail is in its lowest position. Lower platen detent pawl into its seat between two ratchet teeth. The platen should barely move.

To Adjust

Loosen line feed stripper plate clampscrew and back off line feed stripper plate (see LINE FEED STRIPPER PLATE CLEARANCE adjustment). Loosen downstop nut friction tight (2. 83). Loosen two clampscrews and use pry points to position line feed drive link so that line feed pawl indexes platen one tooth and platen detent pawl seats fully in ratchet. Tighten clampscrews.

Related Adjustments

Affects

LINE FEED PAWL DOWNSTOP POSITION - F (2. 83)

Affected By

DETENT POSITION - F (2. 78)  
VERTICAL TYPE ALIGNMENT - F (2. 71)

PLATEN DETENT PAWL SPRING - F

Requirement



Early Design

Min 24 oz---Max 30 oz


Late Design

Min 31 oz---Max 37 oz

to start platen detent pawl moving.

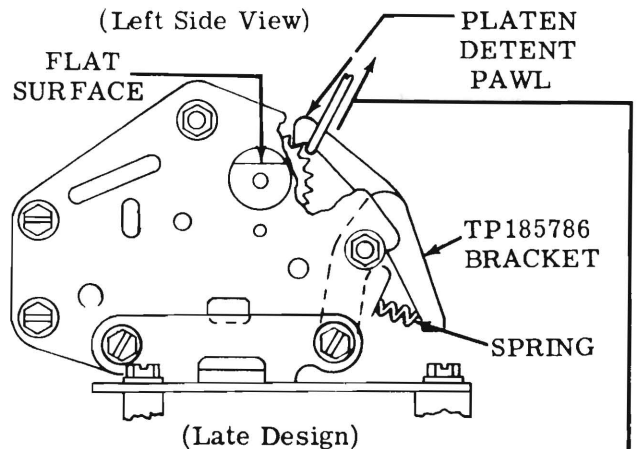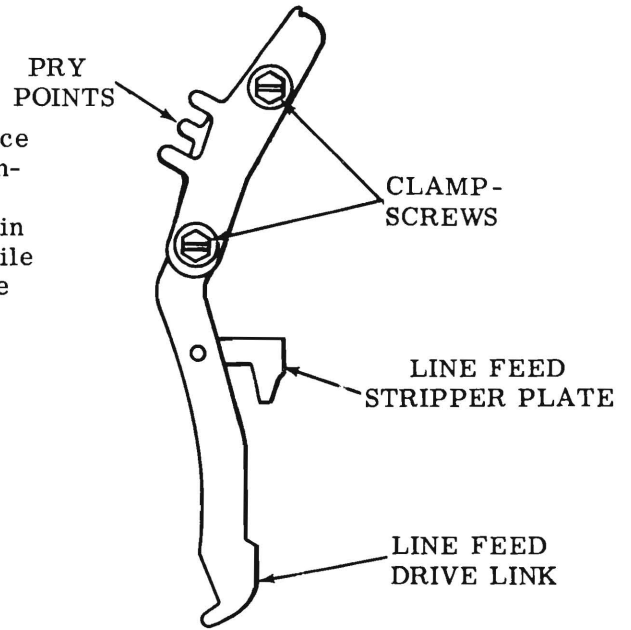

(Left Side View)

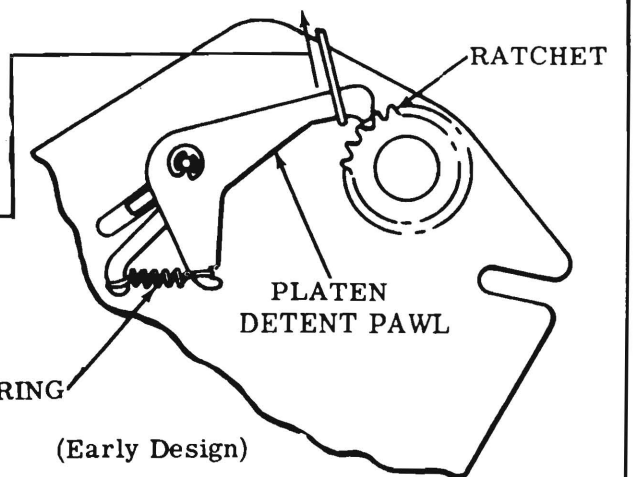

(Left Side View)

2.83 Platen Area (continued)

LINE FEED PAWL DOWNSTOP POSITION - F

To Check

Place the flat surface on the left side of platen up and horizontal to base casting. Set up the line feed code combination (-2-4---8) in the selector. Rotate main shaft until function bail reaches its lowest position. Take up play of platen in left end plate toward the rear.

Requirement

With platen detent pawl fully seated in ratchet

Min some---Max 0.010 inch  
Between back of line feed pawl and its downstop.

To Adjust

Loosen downstop clamp nut. Position downstop. Tighten clamp nut.


Related Adjustments

Affected By

LINE FEED DRIVE ARM CLEARANCE - F (2.80)

LINE FEED DRIVE LINK POSITION - F (2.82)

VERTICAL TYPE ALIGNMENT - F (2.71)

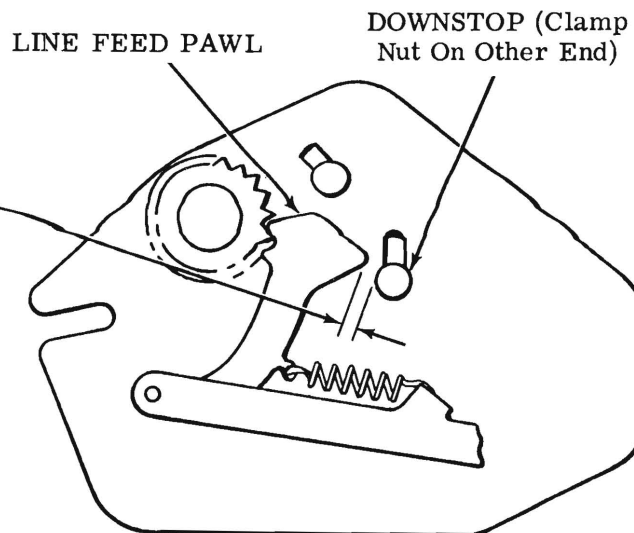

(Right Side View)

## 2.84 Platen Area (continued)

PRESSURE ROLLER CLEARANCE

## To Check

Position carriage with lock bracket left mounting screw directly under pressure roller. Release pressure roller (pressure lever placed in forward position).

## Requirement

— Min 0.010 inch  
between pressure roller and left mounting screw.

Note: Clearance should not be so large that roller is not detented in released position.

## To Adjust

Loosen clampscrew. Position pressure roller adjusting bracket. Tighten clampscrew.


## Related Adjustment

## Affected By

REAR RAIL POSITION (Carriage Area)(2.45)


VERTICAL TYPE ALIGNMENT - F (2.71)

Note: This adjustment is affected by VERTICAL TYPE ALIGNMENT - F (2.71) only when equipped with TP180526 nonadjustable vertical drive bail.

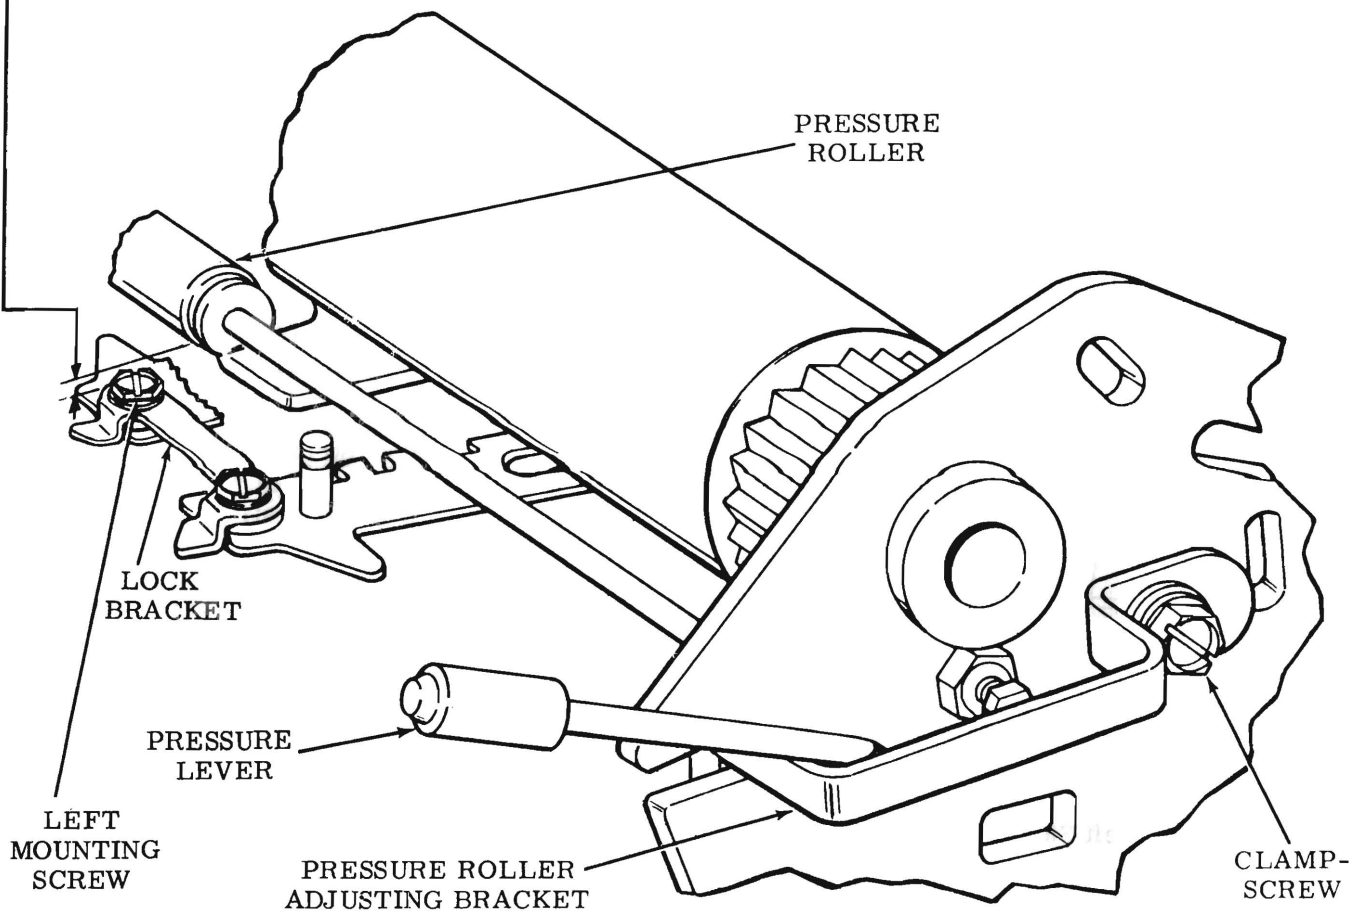

(Right Front View)

2.85 Platen Area (continued)

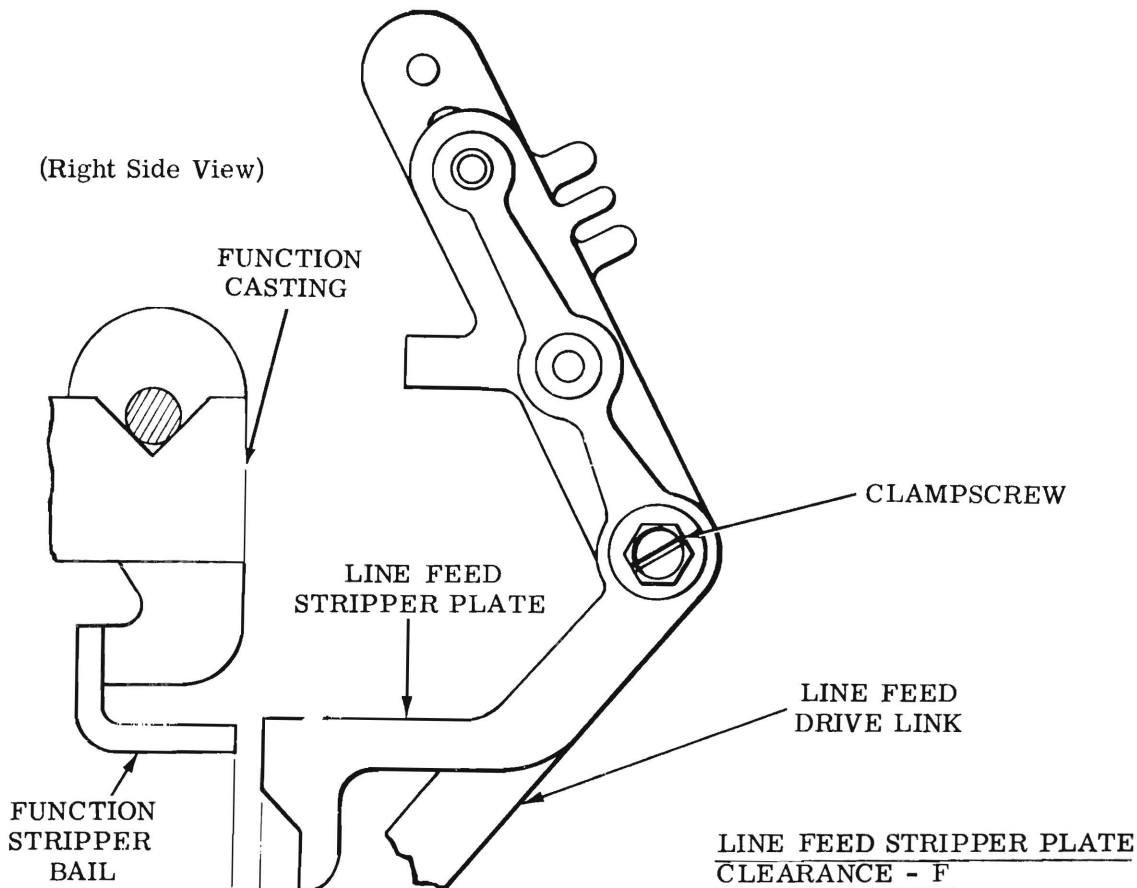

To Check

Set up the line feed code combination (-2-4---8) in the selector. Rotate the main shaft until function bail reaches its lowest point. Hold line feed drive link firmly against line feed blocking lever.

(1) Requirement


The line feed stripper plate should be  
 — Min some---Max 0.005 inch  
 away from function stripper bail.

(2) Requirement

The line feed blocking lever and line  
 feed drive link should fully engage.

To Adjust

Loosen clampscrew. Position line feed  
 stripper plate. Tighten clampscrew.

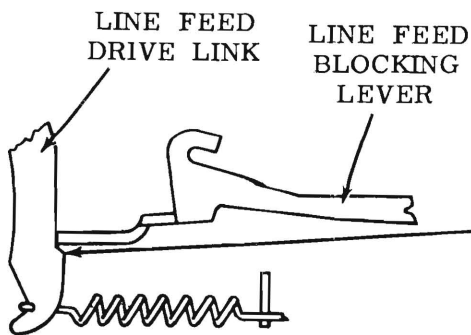

(Left Side View)

Related Adjustments

Affected By

- STRIPPER BAIL CLEARANCE (2.38)
- PLATEN — HORIZONTAL
- POSITION - F (2.70)

## 2.86 Platen Area (continued)

COPYHOLDER WIRE POSITION - F

## (1) Requirement

The copyholder wire should fall somewhere between two lines of printed copy, not obscuring more than 1/2 the height of either line.

## To Adjust


Loosen four mounting screws. Position copyholder wire. Tighten screws.

## (2) Requirement

After raising and releasing, the copyholder wire should return and rest against the platen at its center with a maximum of 0.020 inch between platen and copyholder wire at both the left and right ends.

## To Adjust

Bend copyholder wire.

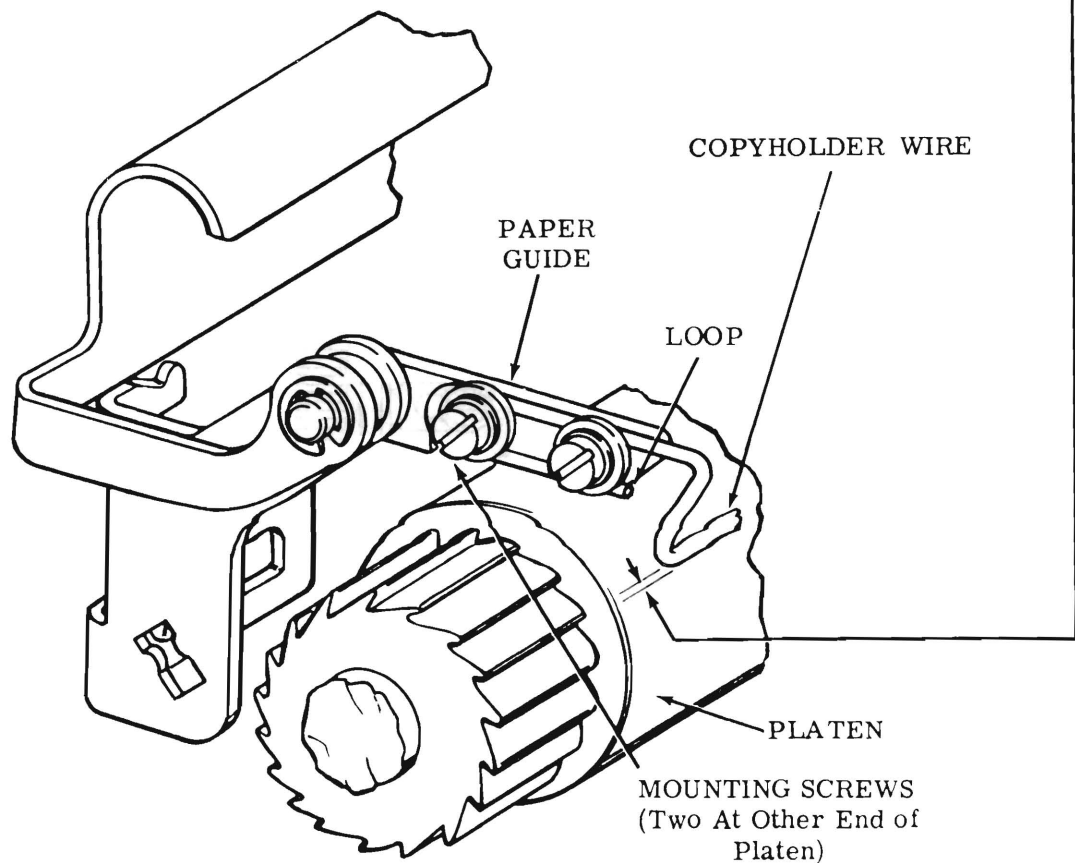

(Left Side View)

2.87 Platen Area (continued)

PAPER GUIDE SPRING - S

**Requirement**

With paper guides resting on platen



Min 16 oz---Max 18 oz to pull each paper guide spring to installed length.

PAPER GUIDEPLATE SPRING - S

**Requirement**

With a spring scale positioned at middle of paper guideplate

Min 3-1/2 oz---Max 7-1/2 oz to start paper guideplate moving.

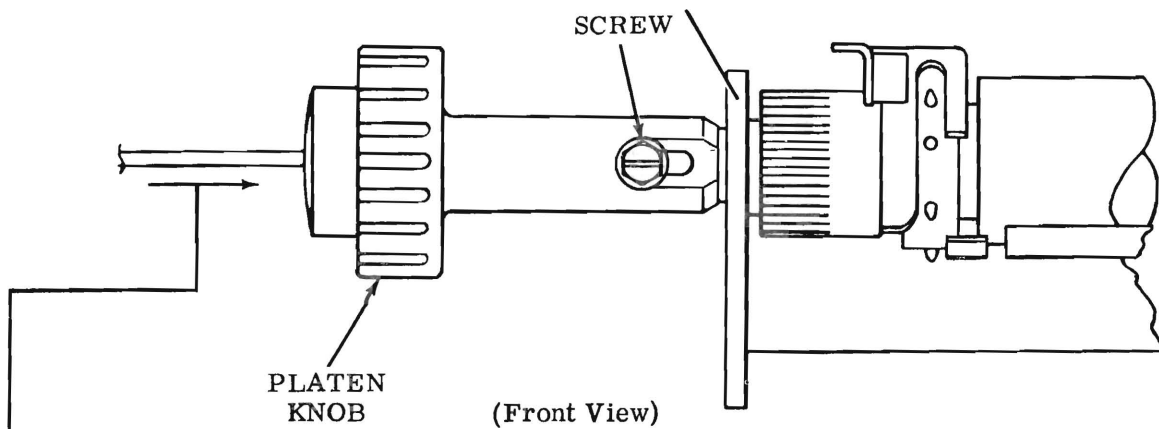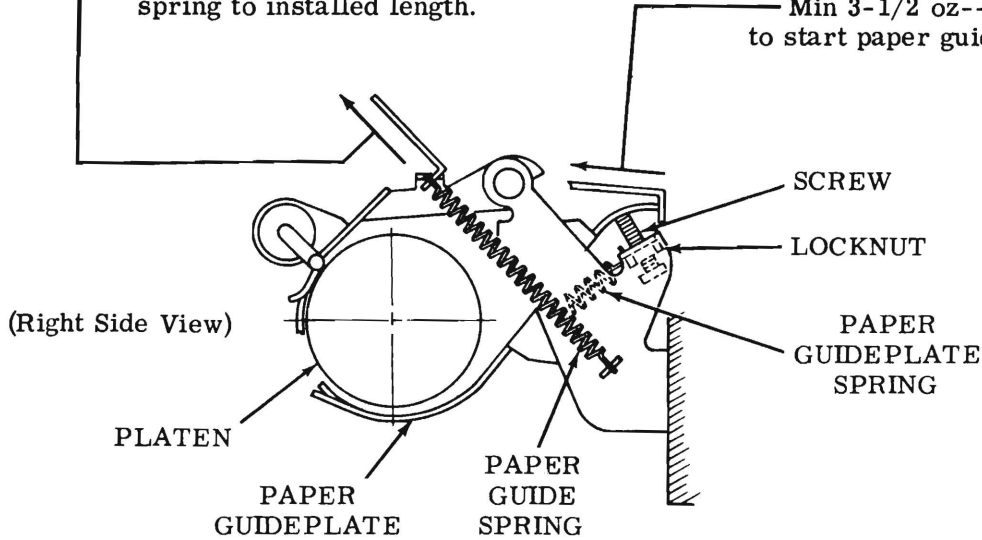

PLATEN KNOB SPRING - S

**Requirement**

With a spring scale positioned on platen knob

Min 15 oz---Max 23 oz to start platen knob moving.

PLATEN KNOB POSITION - S

**Requirement**

The platen knob should be fully seated toward the right.

**To Adjust**

When typing unit is on its subbase and cover is installed, loosen screw and position platen knob. Tighten screw.

2.88 Platen Area (continued)


PLATEN ENDPLAY - F

Note: This adjustment applies only to typing units equipped with TP185816 adjusting screw.

To Check  
Position platen against the left end plate.

Requirement  
Min 0.002 inch--Max 0.015 inch  
between the TP185816 adjusting screw and the right end of the platen.

To Adjust  
Loosen the locknut. Position platen against the left end plate. Position the TP185816 adjusting screw. Tighten locknut.

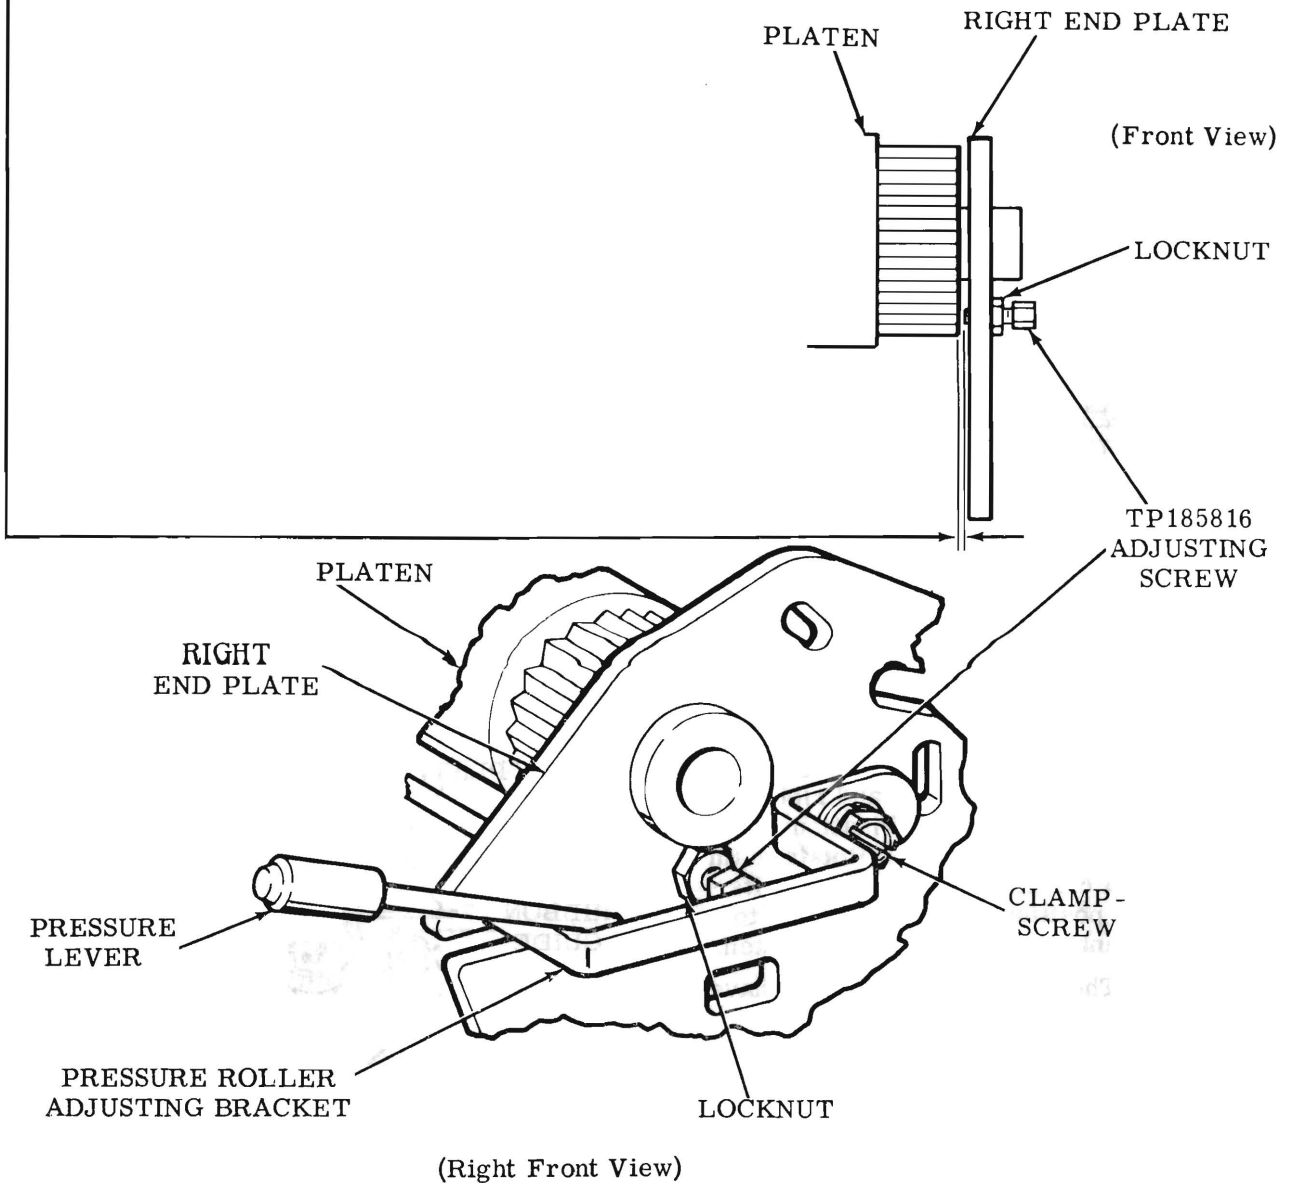

2.89 Platen Area (continued)

**Note 1:** If the idler has not previously been backed off, loosen the nut securing the idler post and position idler to low point in slot before making the following adjustment.


**PLATEN – HORIZONTAL POSITION - S**

(1) To Check

Place the platen knob screw up and permit the detent ratchet pawl to seat in a groove of the detent ratchet. Place the carriage at the left margin and check requirement. Move the carriage to the right margin and again check requirement.

**Requirement**

Min 0.050 inch---Max 0.065 inch  
between ribbon guide and platen at both left and right margins.

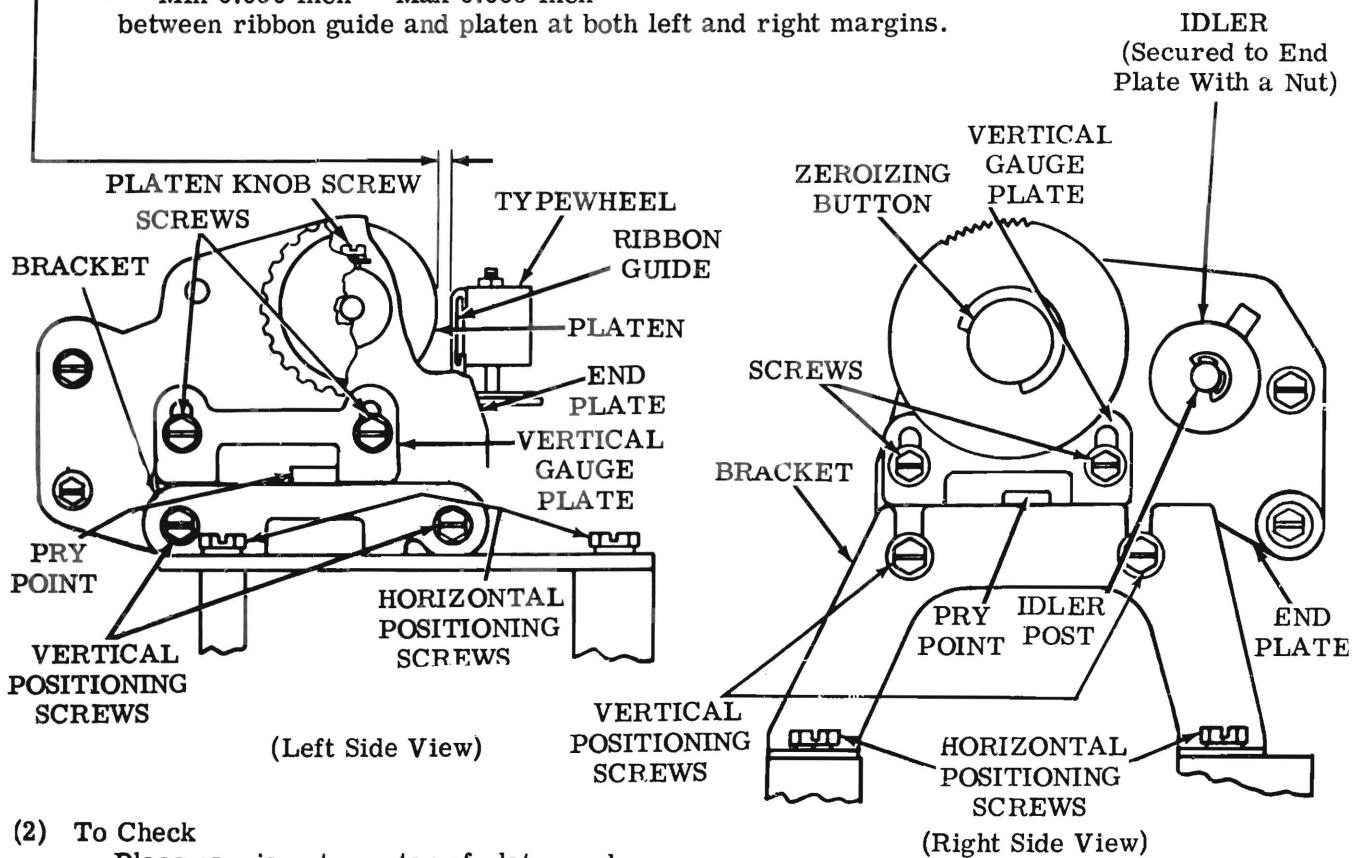

(2) To Check

Place carriage to center of platen and rotate platen until maximum clearance is obtained between platen and ribbon guide. Set up E code combination (1-3---78) in the selector. Rotate main shaft until carriage drive bail is in its rearmost position. Push typewheel to the rear until it just touches the platen.

**Note 2:** The typing unit should not have sprocket forms or ribbon installed.

**Requirement**

Typewheel should not touch side of either ribbon guide.

**Related Adjustments**

Affected By

FRONT ROLLERS CLEARANCE (2.43)

## 2.90 Platen Area (continued)

PLATEN — HORIZONTAL POSITION - S (continued)**To Adjust**

Loosen four horizontal positioning screws. Position platen horizontally. Tighten the four horizontal positioning screws.

**Related Adjustments****Affects**

VERTICAL TYPE ALIGNMENT - S (2.90)

IDLER POSITION - S (2.100)

DETENT POSITION - S (2.109)

FORM FEED BELT TENSION - S (2.94)

CAM ZERO POSITION (2.110)

WIRE GUIDE POSITION - S (2.47)

Note: If the idler has not previously been backed off, loosen the nut securing the idler post and back off the idler before making the VERTICAL TYPE ALIGNMENT - S (2.90) adjustment.

VERTICAL TYPE ALIGNMENT - S

Typing units equipped with adjustable vertical drive bail such as TP180606:

**(1) To Check**

Place carriage to left margin. Set up the E code combination (1-3---78) in the selector and rotate the main shaft until the character is printed.

**Requirement**

When the printed character is examined by eye from top to bottom, the shading should be approximately the same with no overscoring or underscoring.

**To Adjust**

Loosen adjusting screw on vertical drive bail and position the typewheel using pry point.

**(2) To Check**


Place carriage to right margin. Set up the E code combination (1-3---78) in the selector and rotate main shaft until the character is printed.

**Requirement**

When the printed character is examined by eye from top to bottom, the shading should be approximately the same with no overscoring or underscoring.

**To Adjust**

Loosen the vertical gauge plate screws on the right side of the platen mechanism and back off the vertical gauge plate. Loosen vertical positioning screws on right side. Position the right end of the platen using pry point. Do not twist the platen. After adjusting, position the vertical gauge plate on the right side so that it is resting on its associated bracket. Tighten all screws.

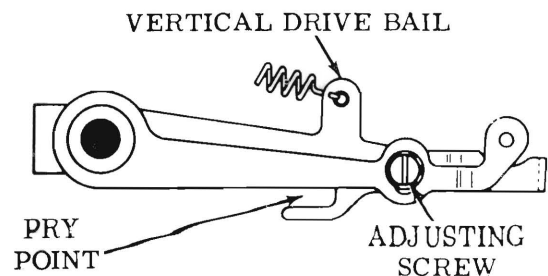

(Right Side View)

2.91 Platen Area (continued)

VERTICAL TYPE ALIGNMENT - S (continued)

Typing units equipped with nonadjustable vertical drive bail such as TP180526:

To Check

Place paper in typing unit. Set up the E code combination (1-3---78) in the selector and rotate the main shaft until the character is printed. Repeat several times along the length of the platen.

Requirement

When each printed character is examined by eye from top to bottom, the shading should be approximately the same with no overscoring or underscoring.

To Adjust

Loosen the vertical gauge plate screws and back off the vertical gauge plate on each side of the platen mechanism. Loosen four vertical positioning screws and position the platen using pry points. Do not twist the platen. After adjusting, position each vertical gauge plate so that it is resting on the top of its associated bracket. Tighten all screws.


Related Adjustments

Affects

- IDLER POSITION - S (2. 100)
- DETENT POSITION - S (2. 109)
- CAM ZERO POSITION (2. 110)
- WIRE GUIDE POSITION (2. 117)

Affected By

- PLATEN — HORIZONTAL POSITION - S (2. 89)
- REAR RAIL POSITION (2. 45)
- PRINT DRIVE LEVER POSITIONING (2. 48)

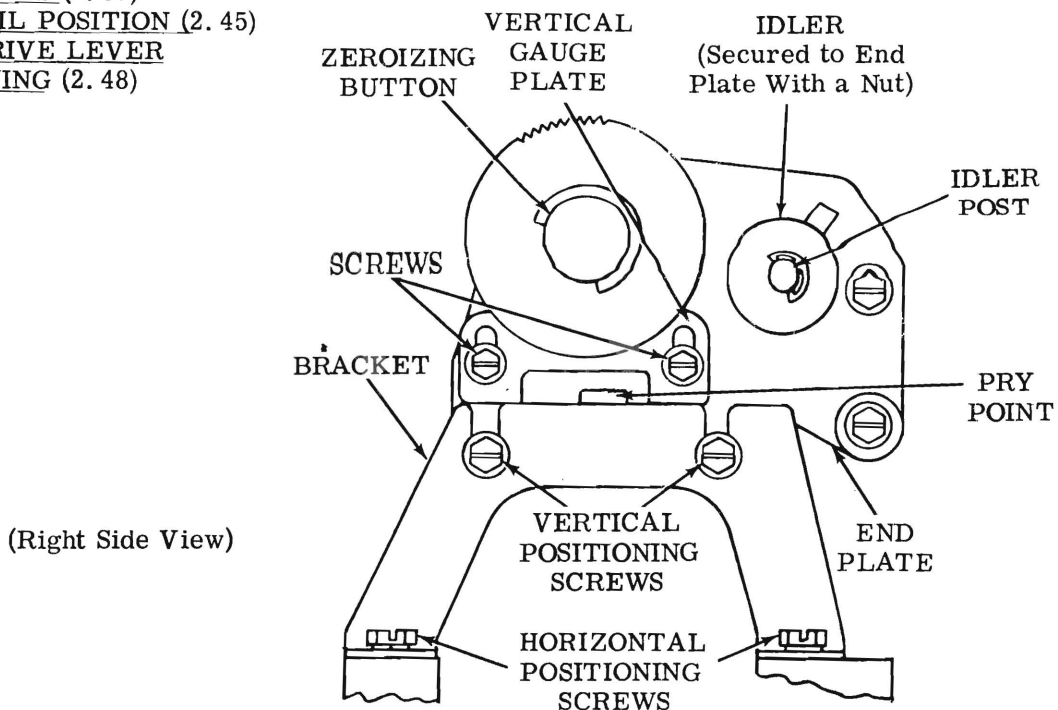

2.92 Platen Area (continued)

PAPER GUIDEPLATE CLEARANCE - S

**Requirement**

With no sprocket forms in the platen mechanism

Min 0.008 inch---Max 0.025 inch between the platen and the left and right ends of the paper guideplate adjacent to the fingers. Record the two clearances (see Note 2).

**To Adjust**

Loosen locknut and adjust screw. Tighten locknut.

**Note 1:** If the adjustment cannot be made as indicated above, remove the platen mechanism from the typing unit. For instructions, see appropriate disassembly and reassembly section. Then, preliminary adjust as follows:

**Preliminary Requirement**


With the screw backed off and no sprocket forms in the platen mechanism

Min zero---Max 0.012 inch between the platen and the left and right ends of the paper guideplate — adjacent to the fingers. Record the two clearances (see Note 2).

**Preliminary Adjust**

Loosen end plate screws friction tight and position end plates. Tighten screws.

**Note 2:** The fingers at both the left and right ends of the platen should be Min some---Max 0.015 inch beyond the recorded gap between the platen and the left and right ends of the paper guideplate. Bend fingers to meet the requirement.

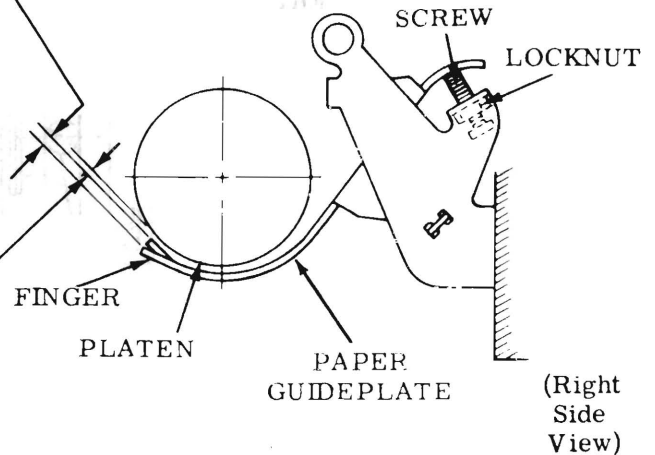


**Note 3:** Replace platen mechanism onto the typing unit. For instructions see appropriate disassembly and reassembly section. Check requirement.


**Related Adjustments**

Affects

PAPER ALARM CONTACT LEVER CLEARANCE - S (2.119)

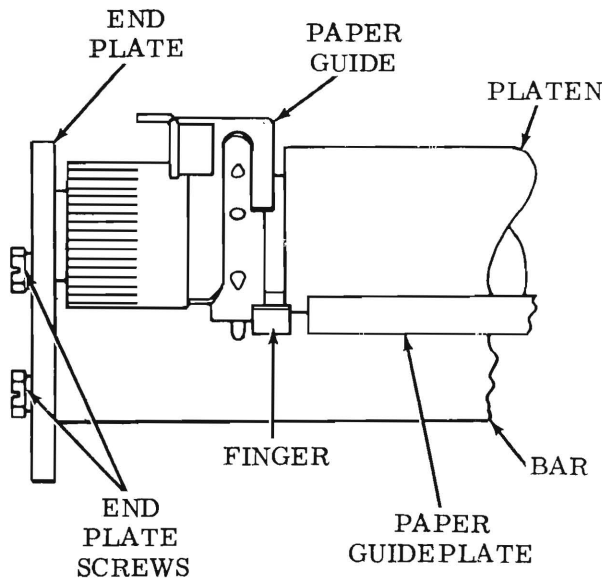

2.93 Main Shaft Area (continued)

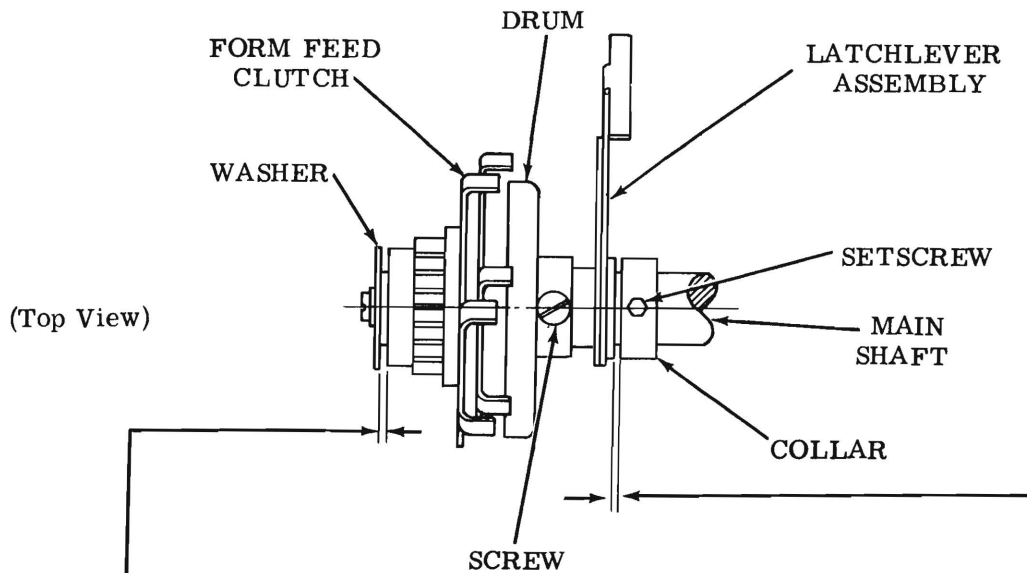

(A) FORM FEED CLUTCH ENDPLAY - S

Requirement

Min some---Max 0.012 inch  
endplay between washer and form  
feed clutch.

To Adjust

Loosen drum screw and position drum.

(B) LATCHLEVER ENDPLAY

Requirement

Min some---Max 0.012 inch  
endplay between latchlever assembly and collar.

To Adjust

Loosen setscrew and position collar.  
Tighten screw.

## 2.94 Form Feed Area

FORM FEED BELT TENSION - S

Note 1: Check tension only if the form feed belt is suspected of not meeting its requirement.

Requirement


The form feed belt tension should not be too tight or too loose.

To Adjust

Loosen three form feed assembly bracket mounting screws and hook a spring scale under the trip shaft at the latchlever. Position and pull up with a force of 7 pounds and hold. Tighten the three form feed assembly bracket mounting screws in the following order: first, the right front mounting screw; then, the right rear mounting screw, and finally, the left mounting screw.

Related AdjustmentsAffects

FORM-OUT LEVER OVERTRAVEL - S  
(2.98)  
FORM-OUT LEVER — RESET  
CLEARANCE - S (Late Design) (2.102) -  
and (Early Design) (2.101)  
TRIP LEVER ENGAGEMENT — LINE  
FEED - S (Early Design) (2.104)  
TRIP LEVER UPSTOP POSITION - S  
(Early Design) (2.106)  
LINE FEED SELECTION - S (2.108)  
IDLER POSITION - S (2.100)  
DETENT POSITION - S (2.109)  
RESET FOLLOWER LEVER — RESET  
POSITION - S (2.110)  
CAM ZERO POSITION - S (2.110)  
CLUTCH SHOE LEVER GAP - S (2.95)  
TRIP SHAFT ENDPLAY - S (2.97)  
TRIP LEVER ENGAGEMENT — FORM-  
OUT - S (2.103)  
FORM-OUT CONTACT PRESSURE AND  
GAP - S (2.113)

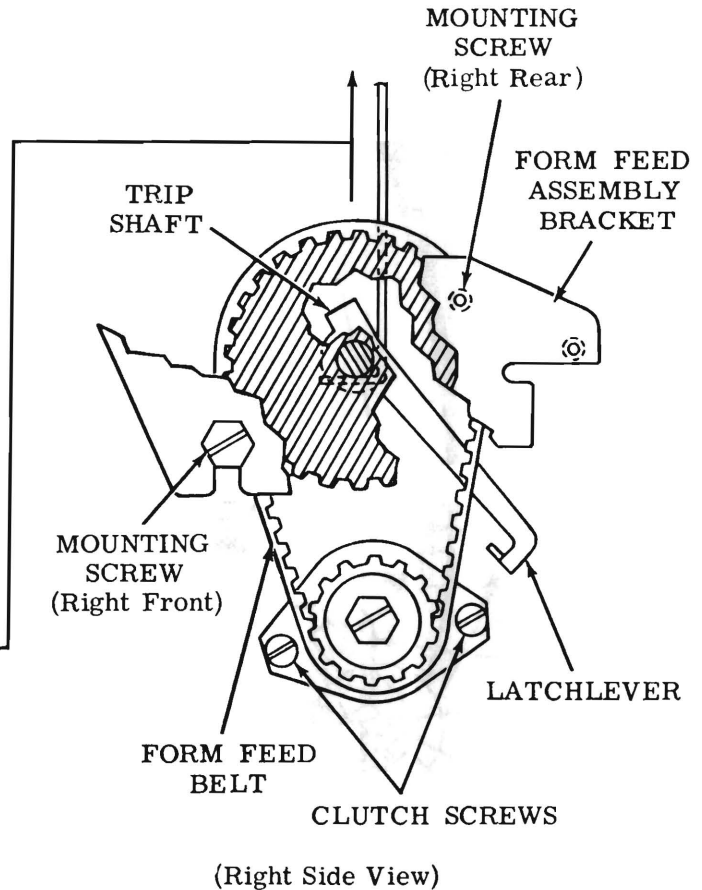


Note 2: Make certain that the shaft is free by rotating reset follower lever. If necessary, free trip shaft by repositioning the left mounting bracket of the form feed assembly bracket against the form feed assembly bracket.

Note 3: The left mounting screw is located on the left side of the form feed bracket.

2.95 Form Feed Area (continued)

**CAUTION: DO NOT DISTURB THE CLUTCH SCREWS UNLESS ABSOLUTELY NECESSARY. CLUTCH SCREWS ARE SECURED BY AN ADHESIVE AT THE FACTORY.**

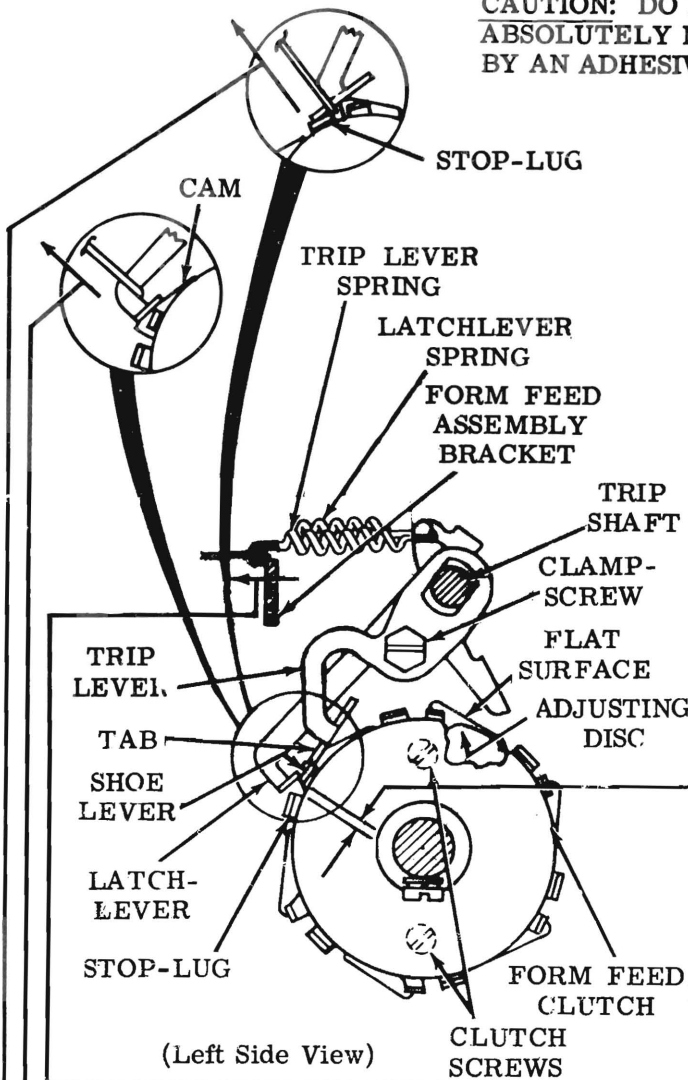

CLUTCH SHOE LEVER GAP - S

(1) To Check

Rotate the main shaft until the form feed clutch is in that stop position which brings the flat surface of the adjusting disc to the position illustrated. Disengage (latch) the form feed clutch.

Requirement

Min 0.015 inch---Max 0.040 inch between the stop-lug and the shoe lever.

To Adjust

Loosen clampscrew and position trip lever. Tighten clampscrew.

Note: Do not make the following adjustment unless requirement (1) cannot be met. If the clutch screws are disturbed, they must be resealed with and application of TP186171 Glyptal adhesive.

(2) To Check

With form feed clutch conditioned as in (1) To Check, measure and record clearance between shoe lever and stop-lug. Raise trip lever to trip (engage) form feed clutch. Fully seat clutch shoes by applying slight pressure against shoe lever along its normal path of forward travel. Again measure and record shoe lever, stop-lug clearance.

Requirement

Clearance between stop-lug and shoe lever.

Min 0.055 inch---Max 0.085 inch greater when form feed clutch is engaged than when disengaged.

To Adjust

Loosen the two clutch screws friction tight and position adjusting disc. Apply appropriate adhesive (Glyptal) to clutch screw threads. Tighten both screws before adhesive dries.

Related Adjustments

Affects

TRIP LEVER ENGAGEMENT — LINE

FEED - S (Early Design) (2.104)

TRIP LEVER ENGAGEMENT — FORM-OUT - S (2.103)

TRIP LEVER ENGAGEMENT — (Preliminary) - S (2.96)

Affected By

FORM FEED BELT TENSION - S (2.94)

LATCHLEVER SPRING - S

Requirement

With latchlever resting on the high part of the cam

Min 3 oz---Max 7 oz to start latchlever moving.

TRIP LEVER SPRING - S

Requirement

With trip lever tab resting on top of a stop-iug  
Early Design

Min 3 oz---Max 4-1/2 oz to start lever moving.

Late Design

Min 14 oz---Max 18 oz to pull trip lever spring to installed length.

2.96 Form Feed Area (continued)

TRIP LEVER ENGAGEMENT (Preliminary) - S

Note: This adjustment applies to late design typing units containing the TP185998 nickel plated plate.

**To Check**


Rotate form feed clutch until a shoe lever is just about to contact the trip lever.

**Requirement**

Top surface of trip lever should be flush to 0.010 inch below top surface of shoe lever.

**To Adjust**

Loosen the two adjusting plate screws and position adjusting plate. Tighten both screws.

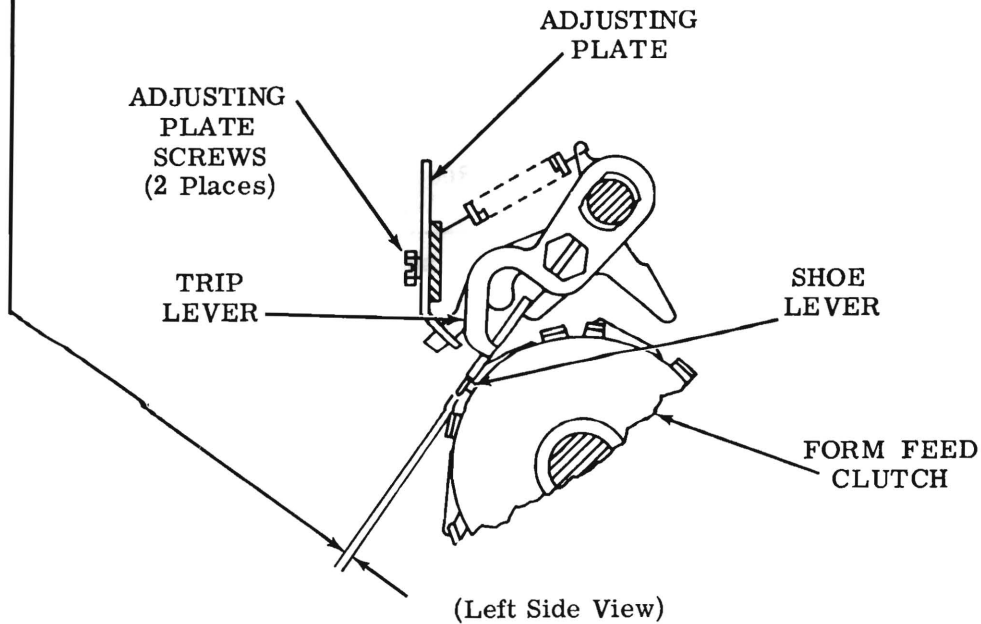

**Related Adjustments**

Affects

TRIP LEVER ENGAGEMENT (Final) - S (Late Design) (2.104)

Affected By

CLUTCH SHOE LEVER GAP - S (2.95)

2.97 Form Feed Area (continued)

TRIP SHAFT ENDPLAY - S

Requirement

Min some---Max 0.012 inch endplay of the trip shaft.


To Adjust

Loosen clampscrew and position reset follower lever on trip shaft. Tighten clampscrew.

Related Adjustments

Affected By

FORM FEED BELT TENSION - S (2.94)

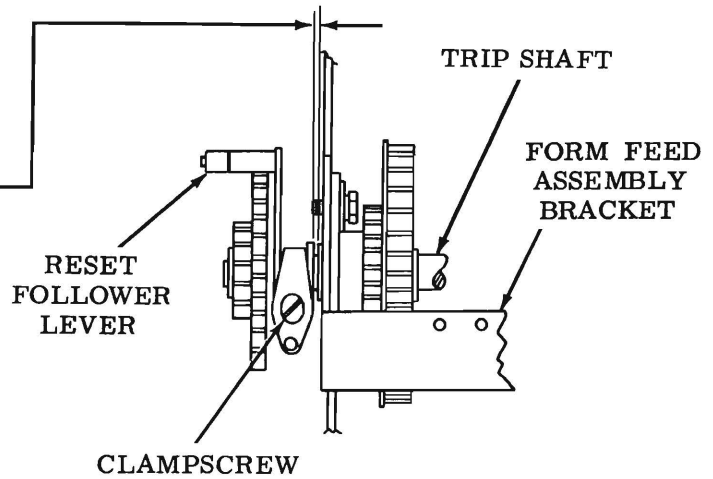

(Rear View)

LINE FEED LEVER LINE-UP AND ENDPLAY - S

(1) Requirement

The line feed pawl should engage the flat on the tab of the line feed lever.

(2) Requirement

With all endplay taken up toward the right Min some---Max 0.012 inch between line feed lever and collar.

(3) Requirement

There must be some clearance between the line feed lever and the main shaft gear.


To Adjust

Loosen collar setscrews and position collars to meet Requirements (1) and (2). Loosen main shaft gear screw and position main shaft gear to meet Requirement (3). Tighten all screws.

Related Adjustment

Affected By

FORM FEED BELT TENSION - S (2.94)

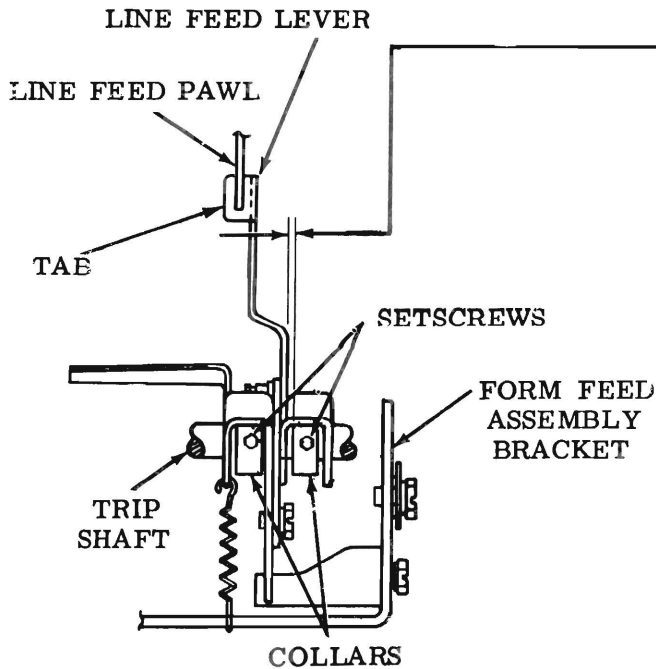

(Front View)

2.98 Form Feed Area (continued)

FORM-OUT LEVER OVERTRAVEL - S

To Check

With the form-out code combination (--34---8) set up in selector, rotate the main shaft until the form-out function lever is in its lowermost position.

Requirement

Min 0.010 inch---Max 0.020 inch clearance between form-out lever and notch of arm.

To Adjust

Loosen screw, hold form-out function lever against its pawl, and position arm using pry points. Tighten screw.

Related Adjustment

Affected By


RIGHT ROCKER DRIVE (Function Area)  
(2.36)

FORM FEED BELT TENSION - S  
(2.94)

FORM-OUT LEVER SPRING - S

Requirement

With the form-out lever latched  
Min 34 oz---Max 44 oz  
to pull form-out lever spring to installed length.

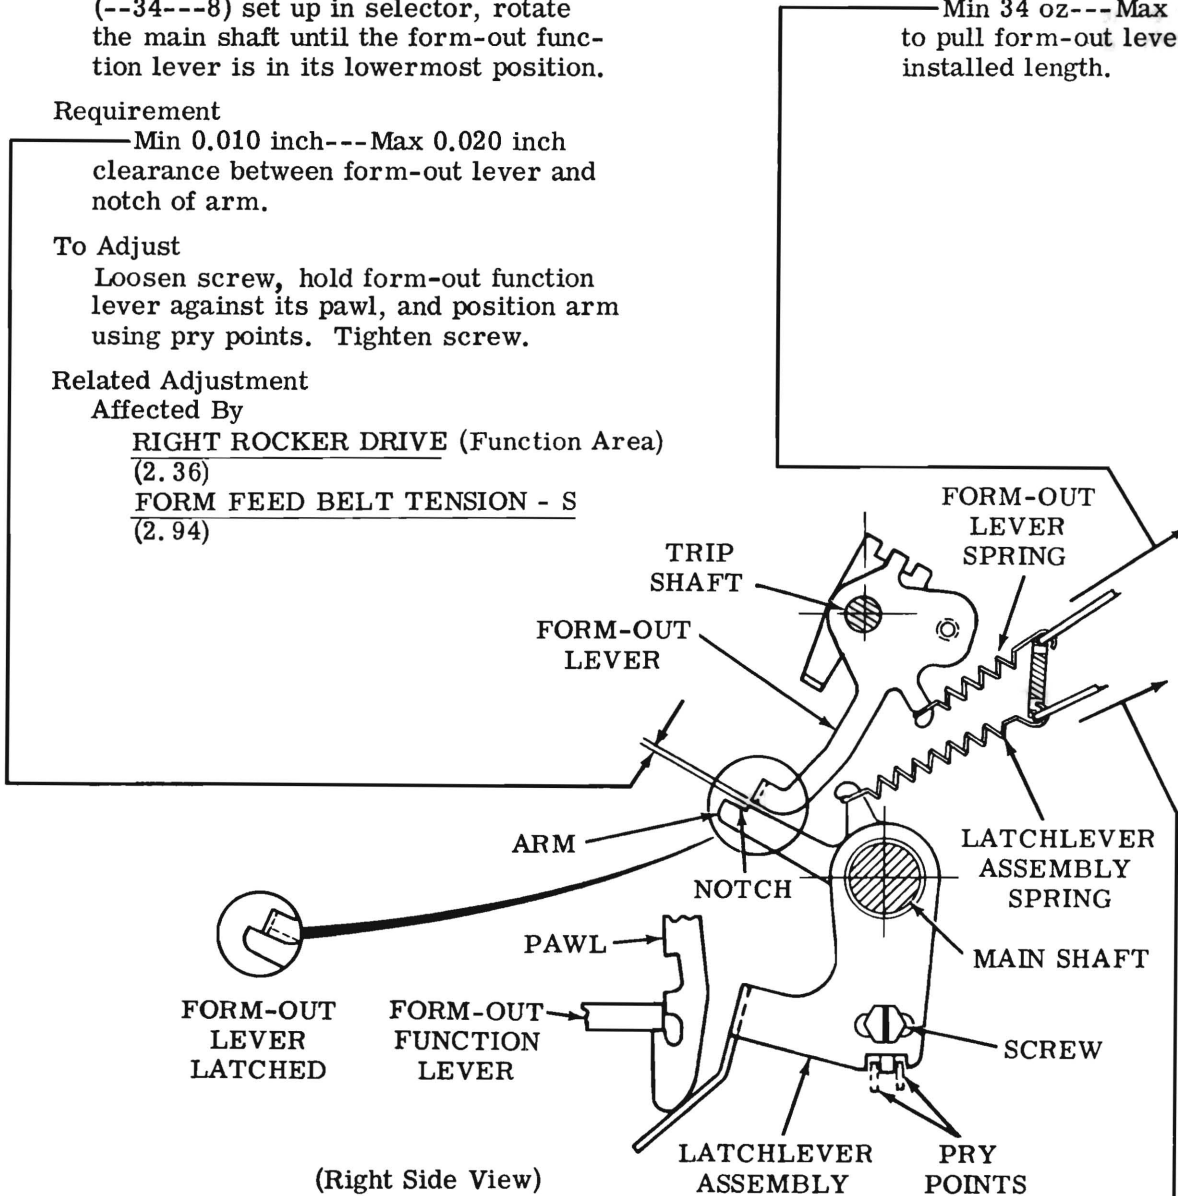

LATCHLEVER ASSEMBLY SPRING - S

Requirement

With the form-out lever latched  
Min 9 oz---Max 11 oz  
to pull latchlever assembly spring  
to installed length.


2.99 Form Feed Area (continued)

RESET FOLLOWER LEVER SPRING - S

Requirement

With reset follower lever on low part of cam

Min 12 oz---Max 16 oz to pull reset follower lever spring to installed length.

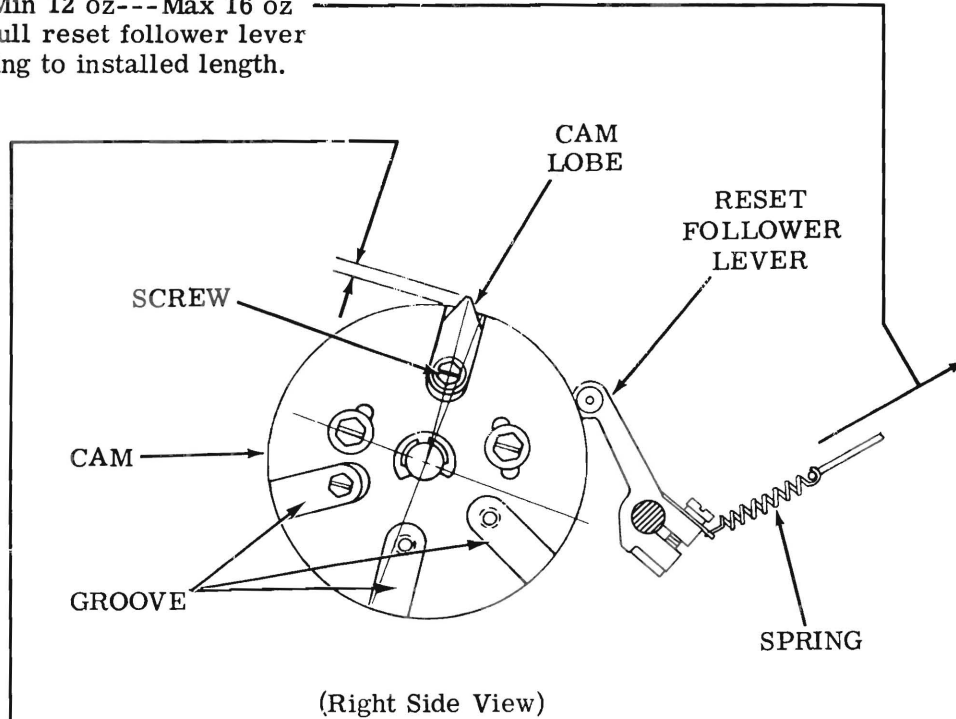

CAM LOBE POSITION - S

Note: Cam lobes, in addition to the one opposite the three closely spaced grooves, should be adjusted according to the FORM-OUT LEVER — RESET CLEARANCE - S (2.101 or 2.102) adjustment.

Requirement

The top of the cam lobe should be Min 0.065 inch---Max 0.070 inch above the low point of the cam.

To Adjust

Loosen screw and position the cam lobe.  
Tighten screw.

Related Adjustment

Affects


FORM-OUT LEVER — RESET CLEARANCE - S (2.101 or 2.102)

2.100 Platen Area (continued)

**ZEROIZING BUTTON - S**

**Requirement**

With a spring scale positioned on zeroizing button  
 Min 15 oz---Max 23 oz  
 to start zeroizing button moving.

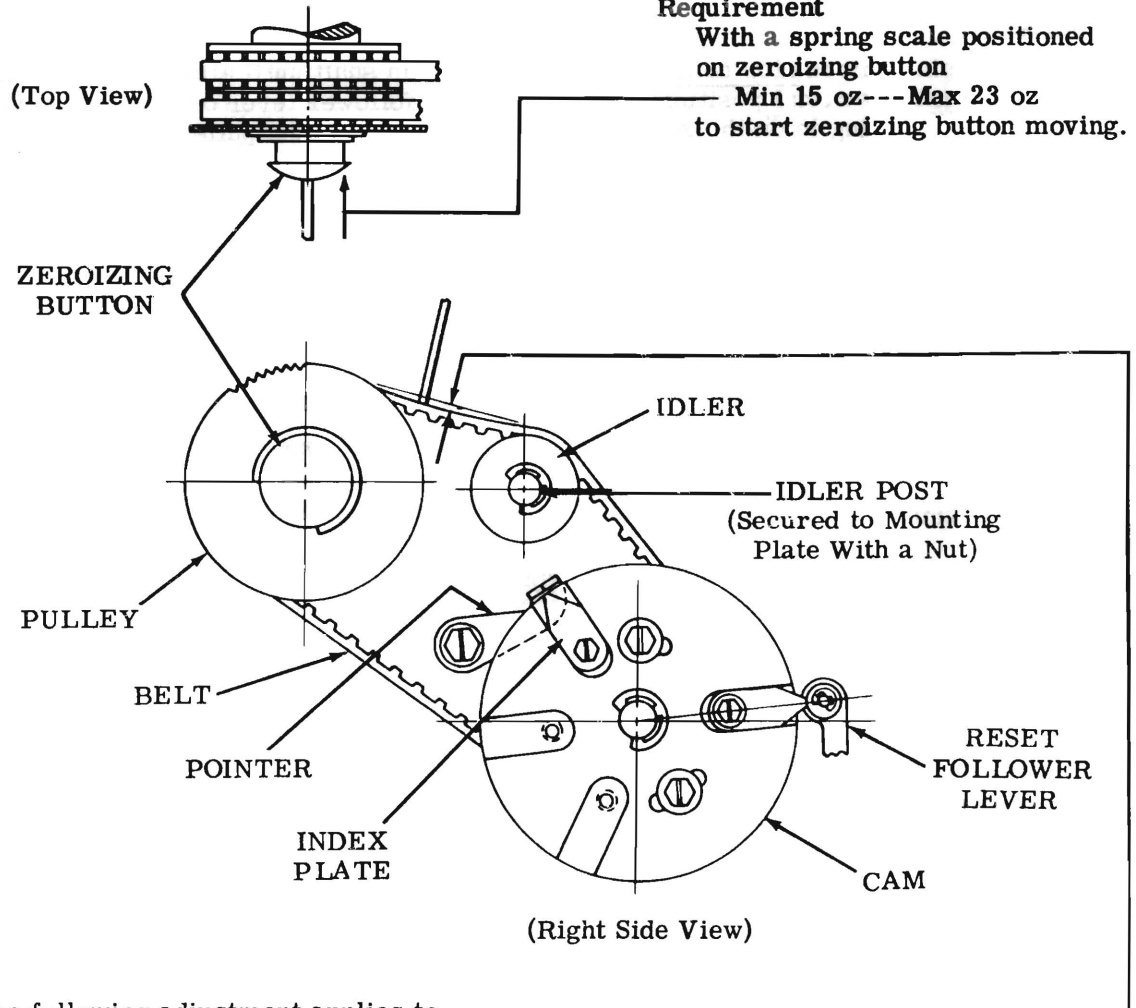

Note: The following adjustment applies to the tighter of two belts. If there is little difference in tightness of the two belts, the adjustment applies to the outer belt.

IDLER POSITION - S

To Check

Place a 16 oz spring load to the belt between the idler and the pulley and note the amount of deflection.

Requirement

Min 0.062 inch---Max 0.125 inch deflection of belt.

To Adjust

Loosen idler post and position. Tighten idler post.

Related Adjustments

Affects

- DETENT POSITION - S (2.109)
- RESET FOLLOWER LEVER --
- RESET POSITION - S (2.110)
- CAM ZERO POSITION (2.110)
- PRINTING LINE POSITION FINAL - S (2.115)

Affected By

- PLATEN -- HORIZONTAL POSITION - S (2.89)
- VERTICAL TYPE ALIGNMENT - S (2.90)

2.101 Form Feed Area (continued)

FORM-OUT LEVER — RESET CLEARANCE - S (Early Design)

To Check

With the typing unit in stop condition, rotate the main shaft until all clutch mounting screw-heads are in the vertical position. Place the reset follower lever on the high point of the cam lobe by pushing in on the zeroizing button and rotating the pulley.

(1) Requirement

Min 0.005 inch---Max 0.020 inch  
between the latching surface of the arm and the form-out lever.

(2) Requirement

The trip lever and latchlever should have  
Min some---Max 0.012 inch  
endplay.

To Adjust

Place reset follower lever on high point of cam lobe. Loosen clampscrew friction tight and, using pry point, position the reset lever. Tighten clampscrew.

Related Adjustments

Affects

TRIP LEVER ENGAGEMENT — LINE FEED - S (Early Design) (2.104)

FORM-OUT CONTACT OPERATING BAIL CLEARANCE - S (2.113)


Affected By

FORM FEED BELT TENSION - S

(2.94)

CAM LOBE POSITION - S

(2.99)

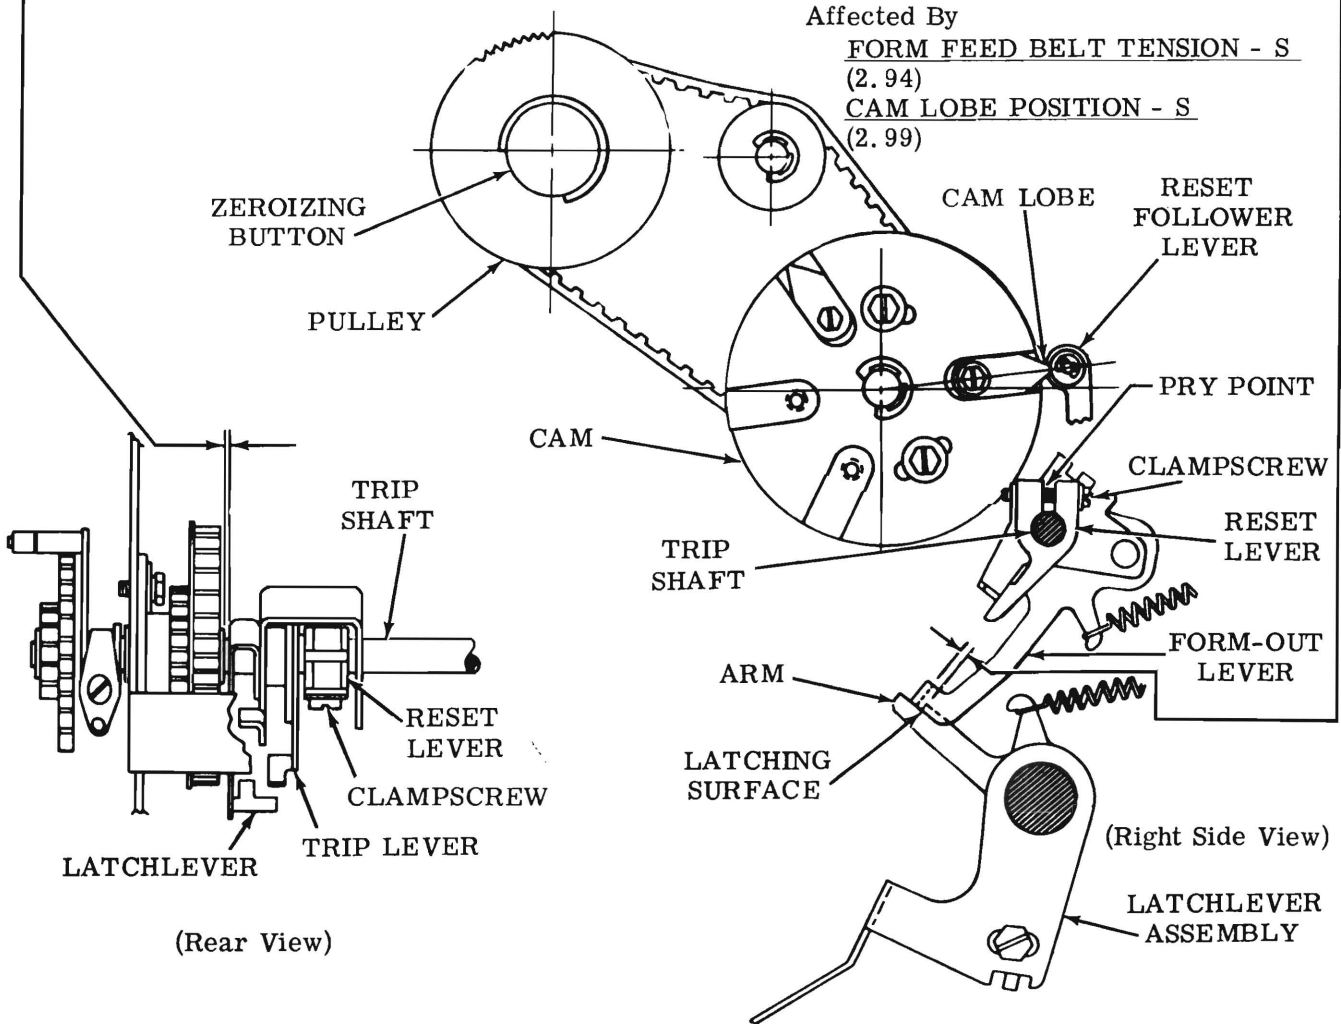

2.102 Form Feed Area (continued)

**FORM-OUT LEVER — RESET CLEARANCE - S (Late Design)**

Note: Check To Check (1) only when making a complete readjustment of typing unit.

(1) To Check


With typing unit in stop condition rotate main shaft until all clutch mounting screwheads are in vertical position. Place reset follower lever on low part of cam by pushing in on zeroizing button and rotating pulley. Push down on arm of latchlever assembly to unlatch form-out lever.

Requirement

- (a) Reset lever should just touch underside of form-out lever extension.
- (b) The trip lever and latchlever should have  
Min some---Max 0.012 inch  
endplay.

To Adjust

Loosen reset lever clampscrew and position reset lever using pry point. Tighten clampscrew.

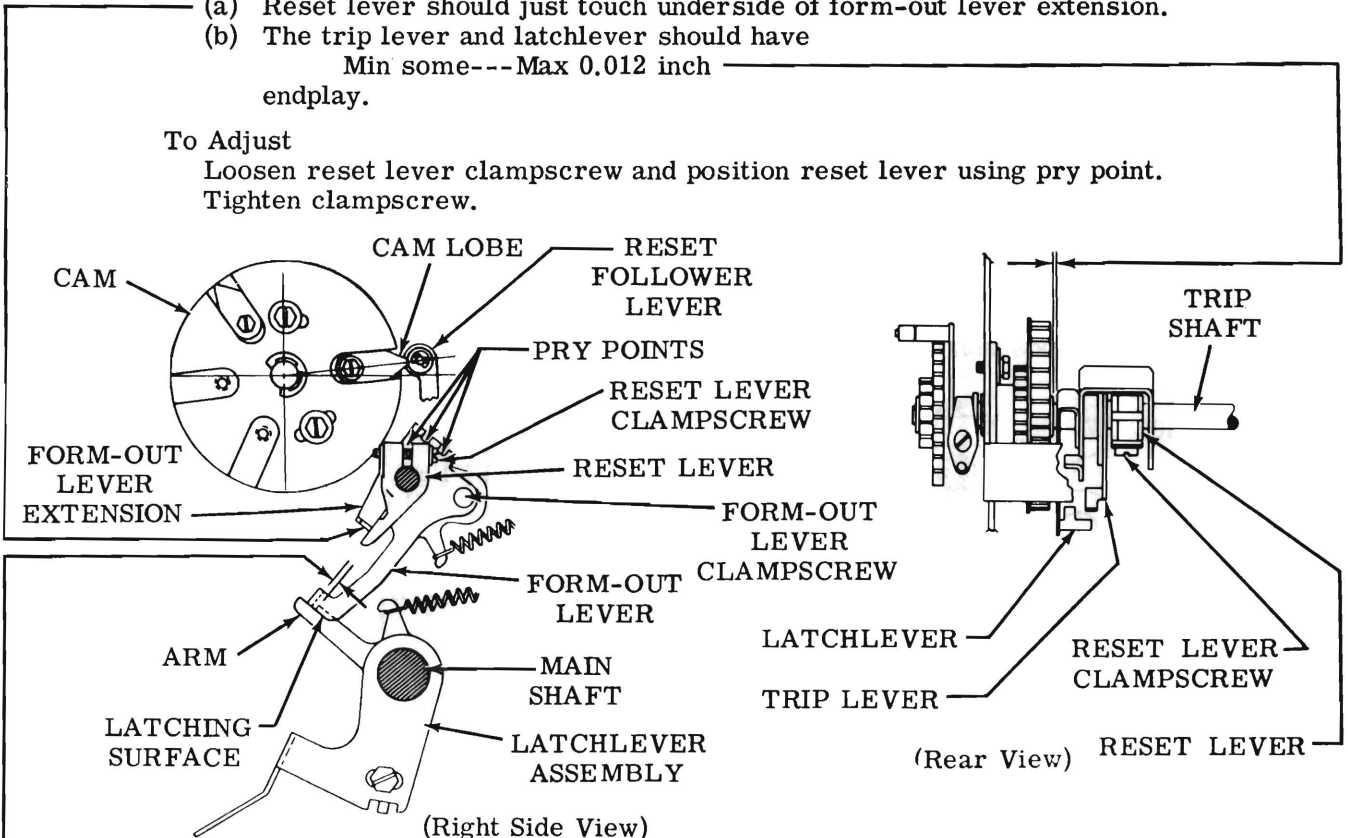

(2) To Check

With typing unit in stop condition rotate main shaft until all clutch mounting screwheads are in vertical position. Place reset follower lever on high point of cam lobe by pushing in on zeroizing button and rotating pulley.

Requirement

Min 0.005 inch---Max 0.020 inch  
between latching surface of arm and form-out lever.

To Adjust

With form-out lever clampscrew friction tight, position form-out lever using pry points. Tighten clampscrew.

Related Adjustments

Affected By

- FORM FEED BELT TENSION - S (2.94)
- CAM LOBE POSITION - S (2.99)

2.103 Form Feed Area (continued)

TRIP LEVER ENGAGEMENT — FORM-OUT - S

Note 1: The following adjustment applies only to early design typing units.

To Check

Rotate form feed clutch until a shoe lever just about contacts the trip lever. Hold form-out lever against latching surface of latchlever assembly.

Note 2: If the reset lever and/or line feed bail interfere when checking this adjustment,

- (a) Loosen reset lever clampscrew and position reset lever so that it does not interfere.
- (b) Loosen line feed downstop screw and position downstop to lowermost position. Position line feed lever so that line feed bail does not interfere.

(1) Requirement

Top surface of shoe lever should not be above top surface of trip lever.

(2) Requirement

Shoe lever should engage trip lever  
— Min 2/3 thickness  
of trip lever.

Note 3: Check requirements at each of the six shoe levers.

To Adjust

Loosen form-out lever screw. Hold form-out lever against latching surface of latchlever assembly and position trip lever using form-out lever pry points. Tighten all screws.


Related Adjustments

Affects


- TRIP LEVER ENGAGEMENT —
- LINE FEED - S (Early Design) (2.104)
- LINE FEED SELECTION (2.108)

Affected By


- FORM FEED BELT TENSION - S (2.94)
- CLUTCH SHOE LEVER GAP - S
- (2.95)

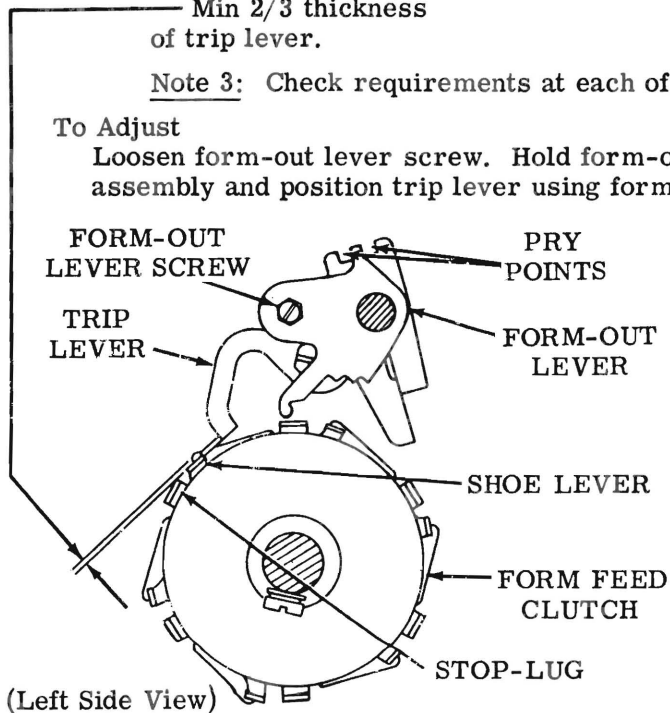

(Left Side View)

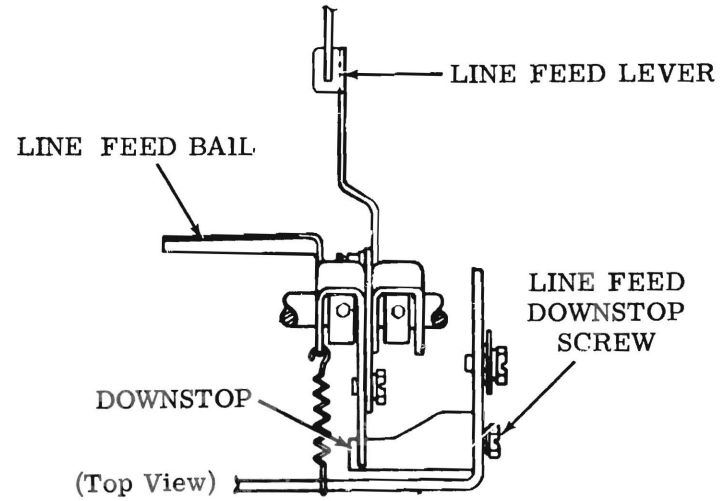

(Top View)

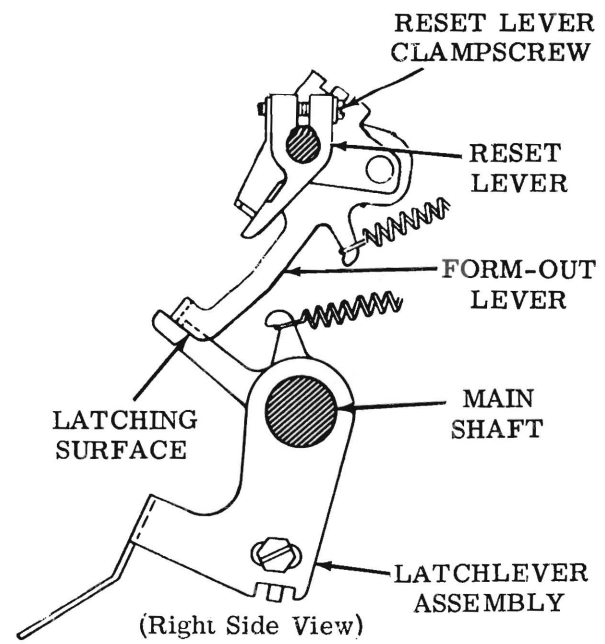

(Right Side View)

## 2.104 Form Feed Area (continued)

**Note 1:** The following adjustment applies only to early design typing units.

**TRIP LEVER ENGAGEMENT — LINE FEED - S (Early Design)**

**To Check**

Rotate form feed clutch until a shoe lever just about contacts the trip lever. Place the reset follower lever on the high point of the cam lobe by pushing in on the zeroizing button and rotating the pulley.

**(1) Requirement**

Top surface of shoe lever should never be above top surface of trip lever.

**(2) Requirement**

Shoe lever should engage trip lever  
Min 2/3 thickness of trip lever.

**Note 2:** Check Requirement (1) and (2) at each of six shoe levers.

**To Adjust**

Loosen downstop screw and position downstop so that line feed bail positions trip lever to meet Requirements (1) and (2). Tighten screw.

**Related Adjustments**


**Affects**

LINE FEED SELECTION - S (2.108)

**Affected By**

CLUTCH SHOE LEVER GAP - S (2.95)

TRIP LEVER ENGAGEMENT — FORM-OUT - S (2.103)

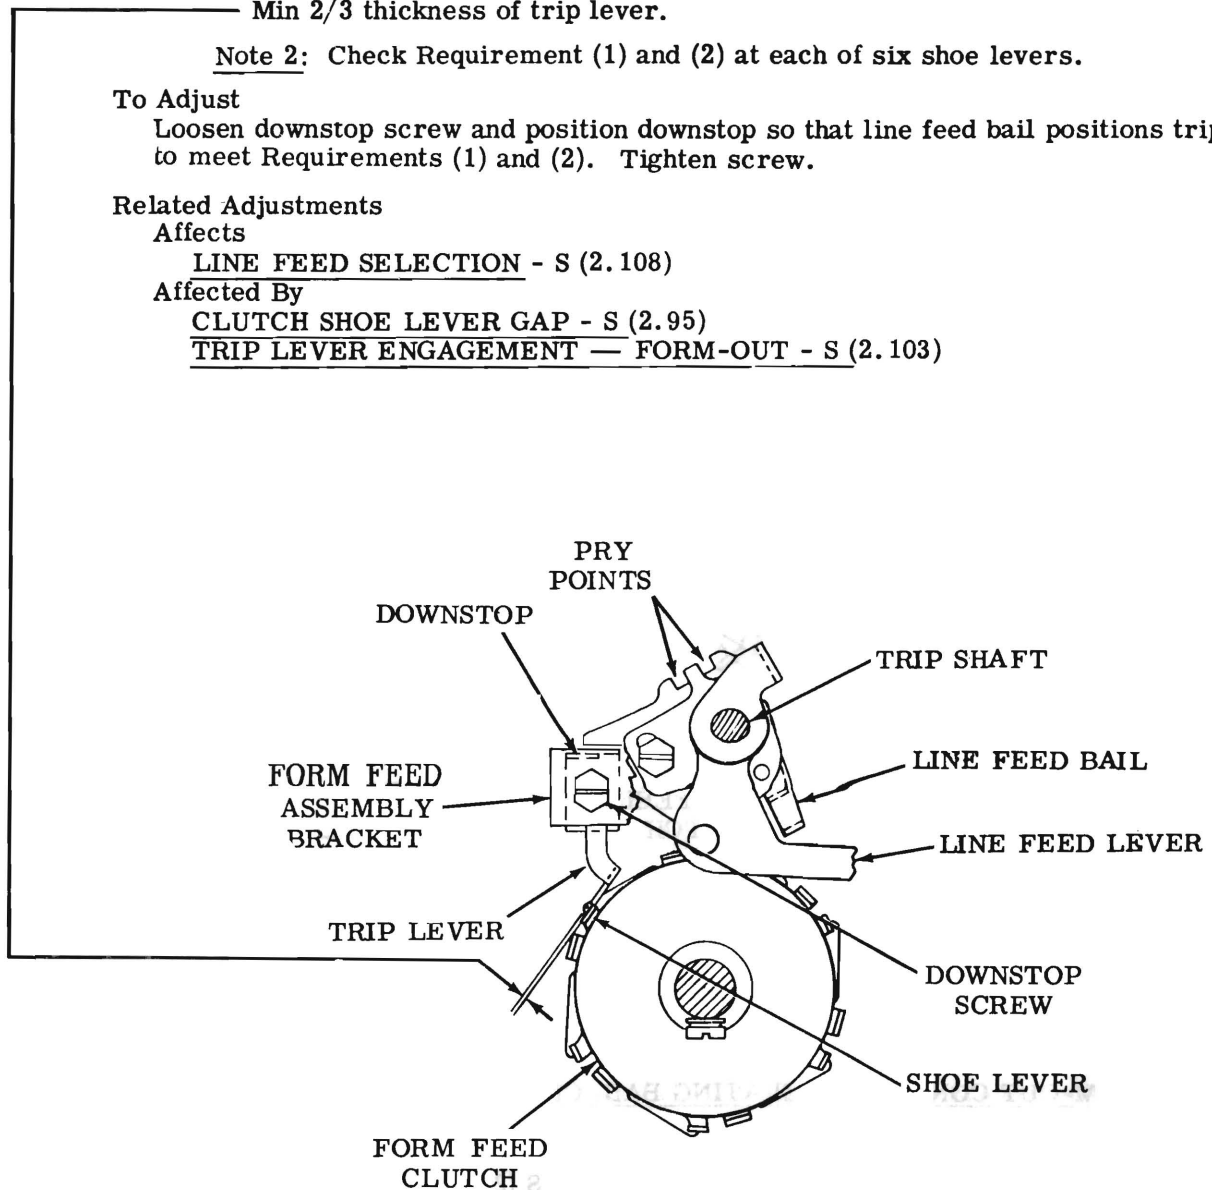

(Left Side View)

2.105 Form Feed Area (continued)

TRIP LEVER ENGAGEMENT (Final) - S (Late Design)

Note: This adjustment applies to late design typing units containing the TP185998 nickel plated plate.

To Check


Rotate main shaft until the flat surface of the form feed clutch adjusting disc is positioned as illustrated. Disengage (latch) form feed clutch. Continue rotating main shaft until all clutch mounting screwheads are in a vertical position. Trip form feed clutch and rotate main shaft until the advancing shoe lever is just about to contact the trip lever.

Requirement

Shoe lever should be aligned with trip lever.

To Adjust

Loosen two adjusting plate screws and position adjusting plate. Tighten both screws.

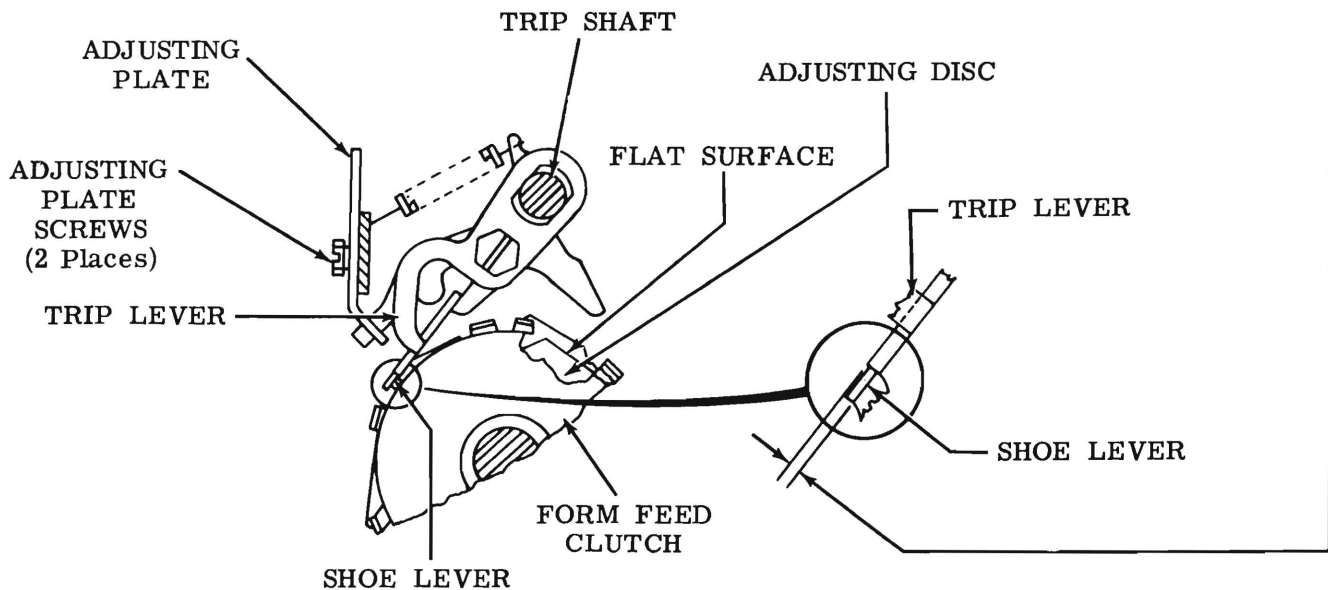

(Left Side View)

Related Adjustments

Affects

FORM-OUT CONTACT OPERATING BAIL CLEARANCE - S (2.113)

Affected By

TRIP LEVER ENGAGEMENT (Preliminary) - S (2.96)

## 2.106 Form Feed Area (continued)

TRIP LEVER UPSTOP POSITION - S (Early Design)

Note: The following adjustment applies only to early design typing units.

**To Check**

Rotate main shaft until the flat surface of the form feed clutch adjusting disc is positioned as illustrated. Disengage (latch) the form feed clutch. Resume rotating the main shaft until all the clutch mounting screwheads are in a vertical position. Press down the line feed bail to trip clutch and rotate main shaft until stop-lug is directly under the trip lever.

**Requirement**

Min 0.020 inch---Max 0.035 inch  
between trip lever and stop-lug.

**To Adjust**


Loosen upstop screws and position upstop. Tighten screws.

**Related Adjustments****Affects**

FORM-OUT CONTACT PRESSURE AND GAP - S (2.112)

**Affected By**

FORM FEED BELT TENSION - S (2.94)

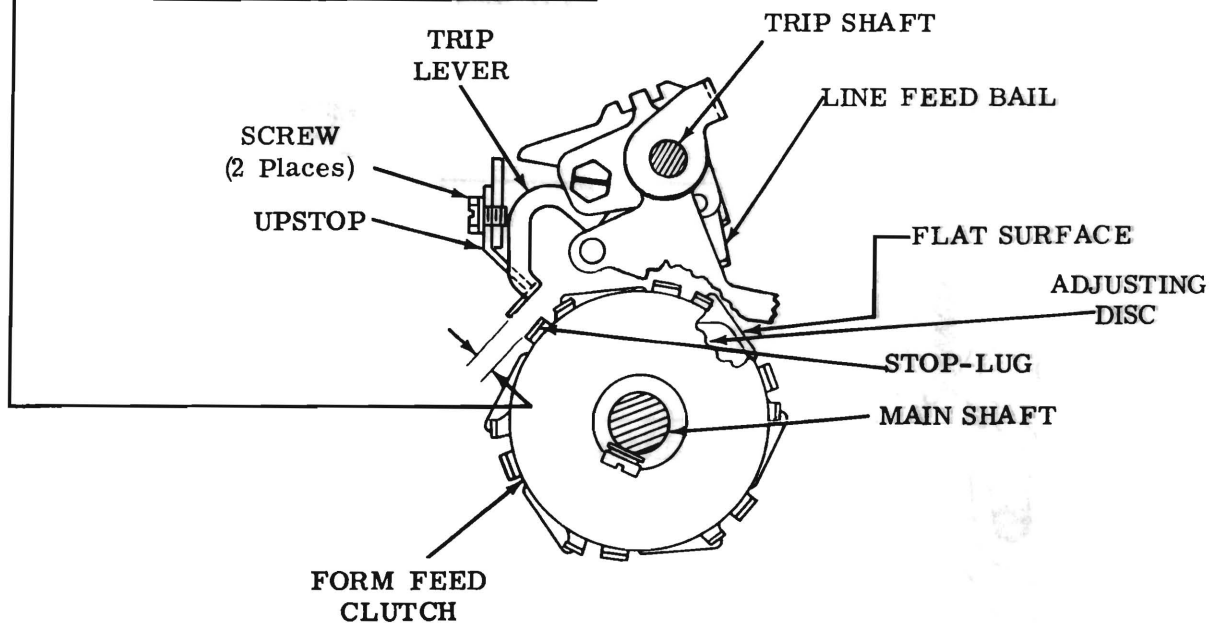

(Left Side View)

2. 107 Form Feed Area (continued)

LINE FEED PAWL STRIPPING - S

To Check

Set up the typing unit for single line feed (LINE FEED SELECTION - S (2. 105) adjustment). Push the line feed strip lever down and allow the line feed upstop pawl to assume its normal position against the line feed strip lever. Manually set up the line feed code combination (-2-4---8) in the selector and rotate the main shaft until the line feed pawl just strips off the line feed function lever.

Requirement


The trip lever should fall  
 Min on---Max 0.035 inch  
 before stop-lug.

To Adjust

- (a) Loosen screw friction tight. Using pry points position line feed strip lever rearward three-fourths of its full adjusting range.
- (b) Check LINE FEED SELECTION - S (2. 108) adjustment for single line feed.
- (c) Set up line feed code combination (-2-4---8) in selector and rotate main shaft until line feed pawl just strips off line feed function lever.
- (d) Check requirement and tighten screw if requirement is met.
- (e) If requirement is not met, move line feed function lever slightly toward front of typing unit. Repeat steps (b), (c), and (d). Continue this procedure until requirement is met.

Related Adjustments

Affected By  
RIGHT ROCKER DRIVE (Function Area)  
 (2. 36)

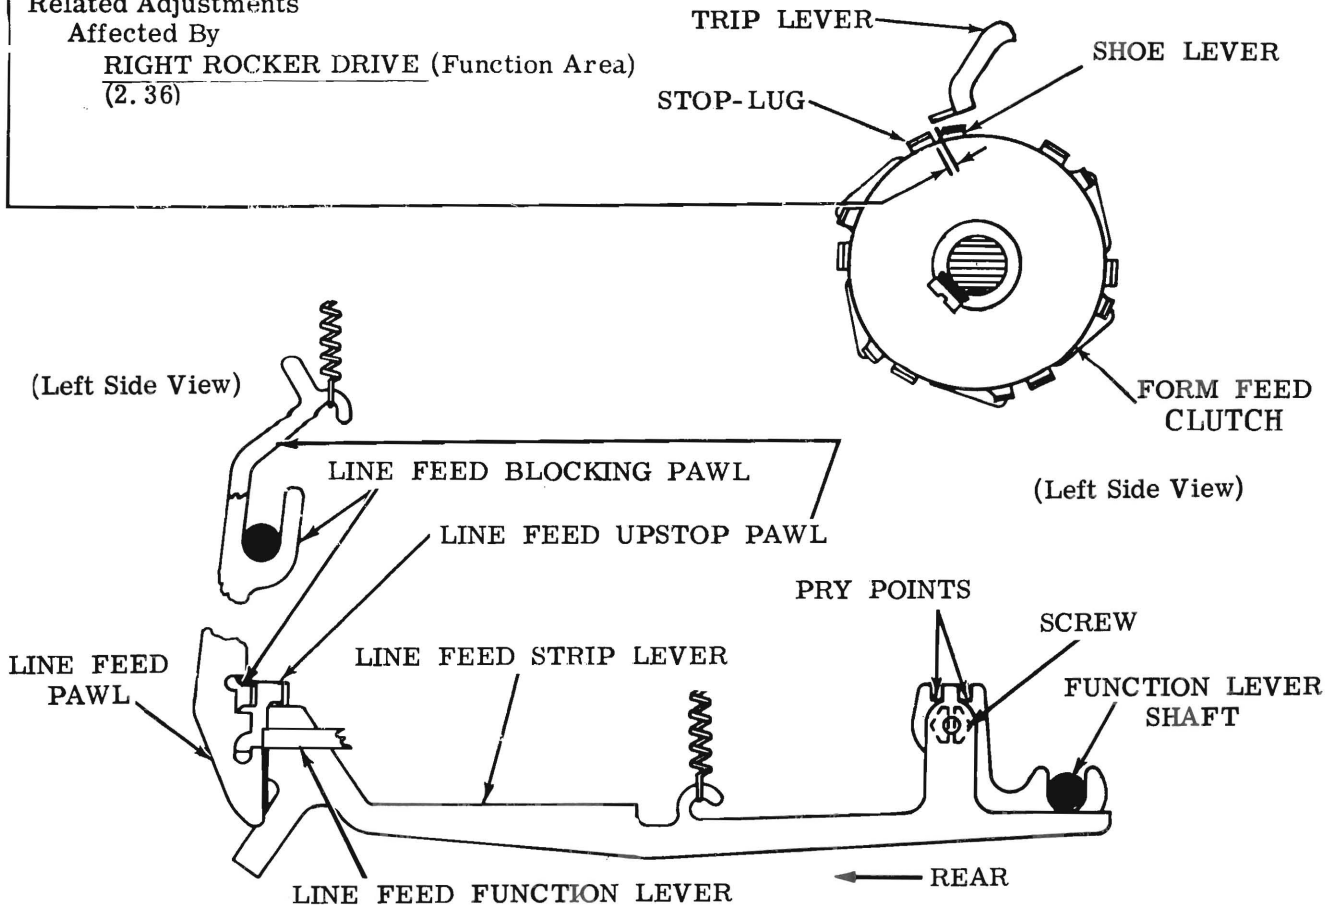

2.108 Form Feed Area (continued)


LINE FEED BAIL SPRING - S

Requirement  
Early Design

Min 4 oz---Max 8 oz

Late Design

Min 2 oz---Max 4 oz  
to pull line feed bail spring to installed length.

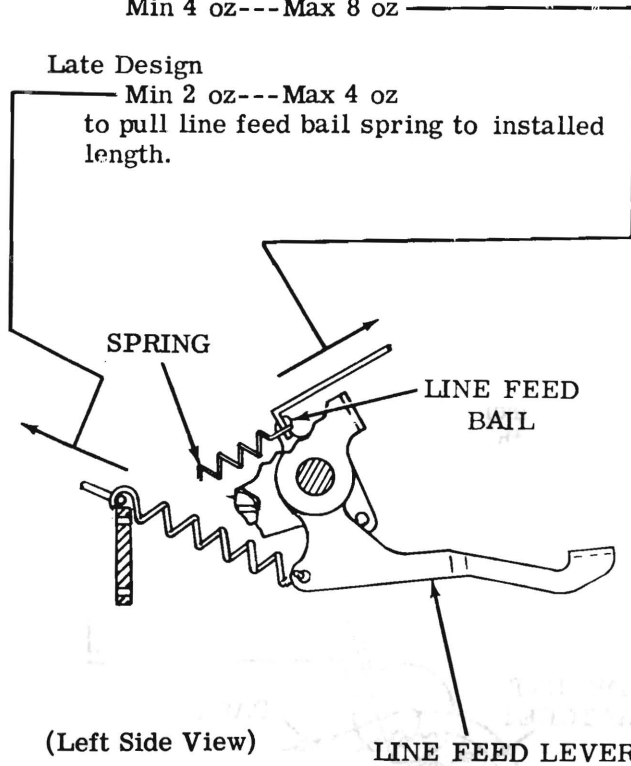

(Left Side View)

LINE FEED LEVER SPRING - S


Requirement  
Early Design

With arm held against downstop  
Min 21 oz---Max 35 oz  
to start line feed lever moving.

Late Design

Min 27 oz---Max 40 oz  
to push arm down until line feed lever contacts pawl.

Note: Late design typing units are not equipped with a downstop.

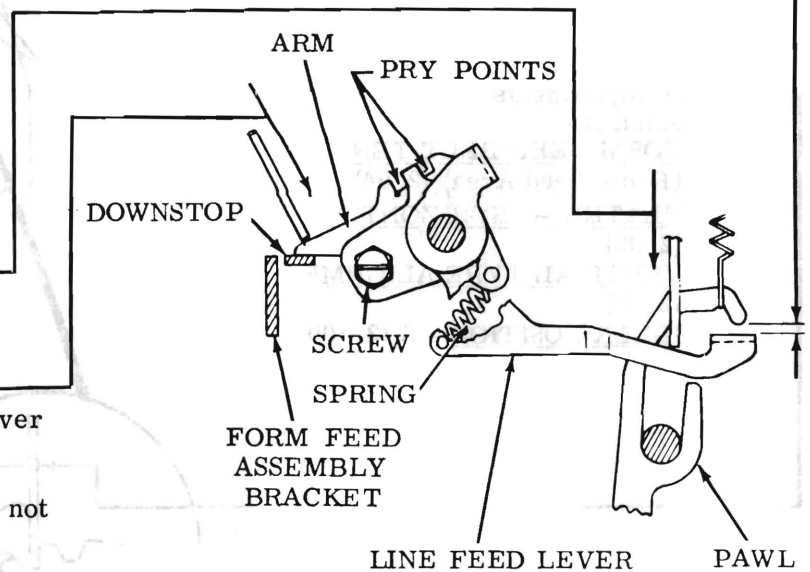

(Left Side View)

LINE FEED SELECTION

To Check

Place typing unit in stop condition.

Requirement

Single line feed

Min 0.110---Max 0.130 inch  
between pawl and line feed lever.

Double line feed

Min zero---Max 0.010 inch  
between pawl and line feed lever.

To Adjust

Early Design

While holding rear part of line feed lever against downstop, loosen screw friction tight. Position line feed lever using pry points. Tighten screw.

Late Design

With screw friction tight, position line feed lever using pry points. Tighten screw.

Related Adjustments

Affected By

FORM FEED BELT TENSION - S  
(2.94)

TRIP LEVER ENGAGEMENT -

LINE FEED - S (Early Design) (2.104)

TRIP LEVER ENGAGEMENT -

FORM-OUT - S (2.103)

2.109 Platen Area (continued)

DETENT POSITION - S

**CAUTION: TO PREVENT ELECTRICAL SHOCK EXERCISE CARE WHEN WORKING WITH TYPING UNIT UNDER POWER.**

To Check

Set up line feed code combination (-2-4---8) in selector. Place TP185832 armature clip so as to hold armature attracted. Plug in typing unit plugs into proper call control receptacles and apply power to typing unit. Engage code-bar clutch to permit a line feed cycle to complete itself under power. Check requirement. Remove all power connections.

(1) Requirement

The pawl should be fully seated with a Max 0.007 inch between pawl and detent ratchet tooth.

(2) Requirement

Min some---Max 0.030 inch between the plate and detent ratchet.

To Adjust

Loosen both setscrews. Use finger pressure to engage and hold pawl firmly in detent ratchet. Depress line feed keytop. Tighten setscrews.

Related Adjustments

Affected By

FORM FEED BELT TENSION - S

(Form Feed Area) (2.94)


PLATEN — HORIZONTAL POSITION - S

(2.89)

VERTICAL TYPE ALIGNMENT - S

(2.90)



IDLER POSITION - S (2.100)

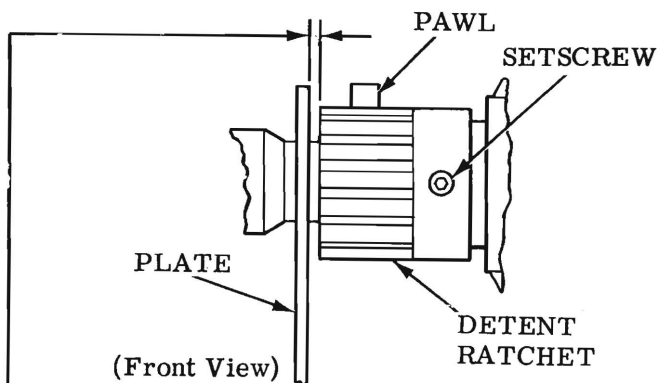


DETENT RATCHET PAWL SPRING - S

Requirement

With a spring scale positioned under detent ratchet pawl  
Min 24 oz---Max 30 oz  
to start pawl moving.

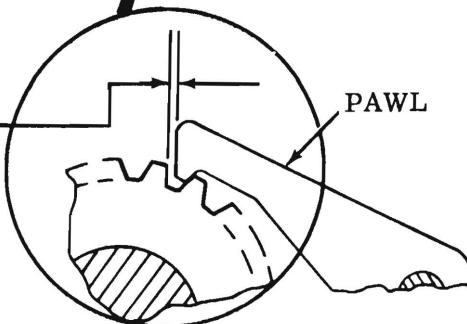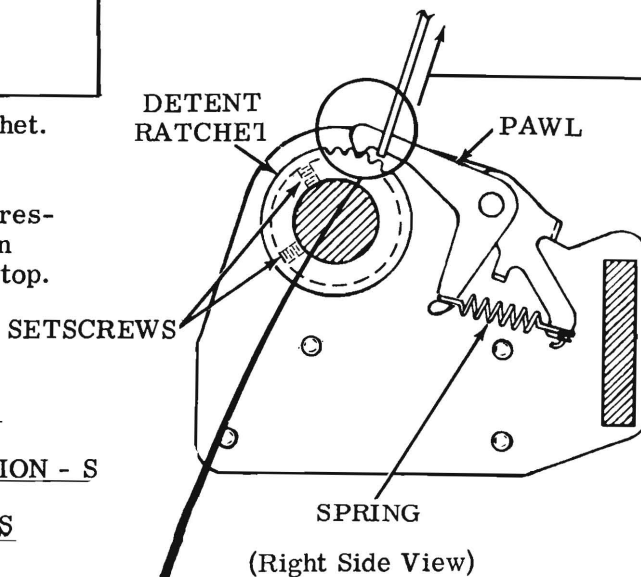

2.110 Platen Area (continued)

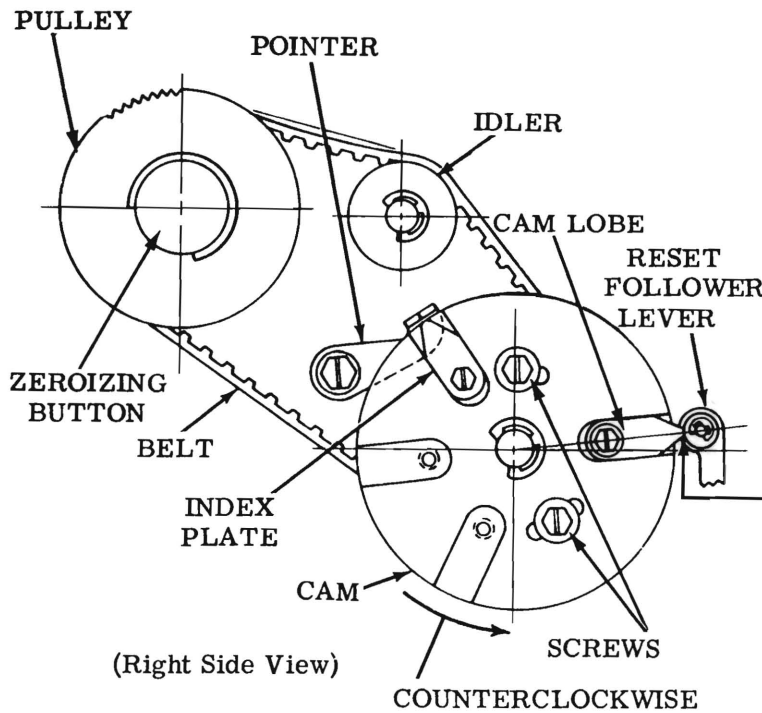

(A) RESET FOLLOWER LEVER — RESET POSITION - S

**CAUTION: TO PREVENT ELECTRICAL SHOCK EXERCISE CARE WHEN WORKING WITH TYPING UNIT UNDER POWER.**

**To Check**

Set up form-out code combination (--34--8) in selector. Place TP185832 armature clip so as to hold armature attracted. Plug typing unit plugs into proper call control unit receptacles and apply power to typing unit. Engage codebar clutch to permit a-form-out cycle to complete itself under power. Check requirement. Remove all power connections.

**Requirement**

At the end of form-out cycle, reset follower lever should come to rest on flat surface of cam lobe.

**To Adjust**

Loosen screws and adjust cam. Tighten screws.

**Related Adjustments**

Affects

CAM ZERO POSITION (2.110)

Affected By

FORM FEED BELT TENSION - S (2.94)

IDLER POSITION - S (2.100)

PLATEN — HORIZONTAL POSITION - S (2.89)

VERTICAL TYPE ALIGNMENT - S (2.90)

(B) CAM ZERO POSITION

**To Check**

With cam lobes and index plates located on cam as shown on associated line drawings, place typing unit in stop condition.

**Note:** Reset follower lever must rest on proper cam lobe to zero a sprocket form. Place it in such position by depressing zeroizing button and rotating pulley until reset follower lever rests on cam lobe opposite three closely spaced grooves (on cam) facing toward the front of typing unit.

One cam lobe:


(1) **Requirement**

With reset follower lever on flat surface of cam lobe and zeroizing button in its right most position

Min some---Max 0.035 inch between bottom surface of pointer and low part of cam.

(2) **Requirement**

When viewed along line-of-sight shown, tip of pointer should be aligned with index plate aluminized surface, as gauged by eye.

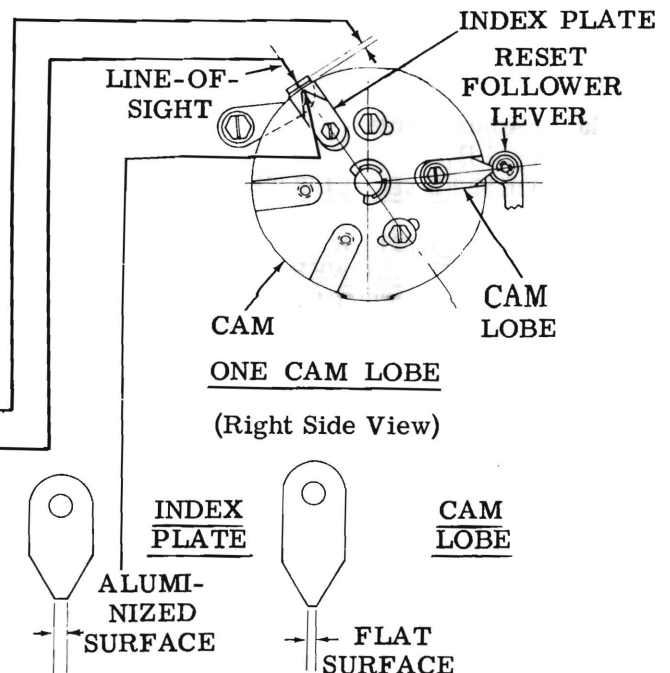


2.111 Platen Area (continued)

CAM ZERO POSITION (continued)

Two cam lobes:

- (1) Requirement  
With reset follower lever on flat surface of cam lobe and zeroizing button in its rightmost position  
Min some---Max 0.035 inch  
between bottom surface of pointer and low part of cam.

- (2) Requirement  
When viewed along line-of-sight shown, tip of pointer should be aligned with index plate aluminized surface, as gauged by eye.

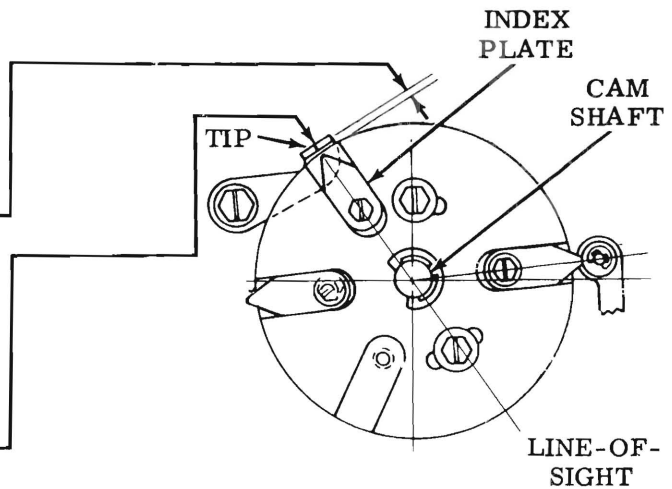


TWO CAM LOBES

Three cam lobes:

- (1) Requirement  
With reset follower lever on flat surface of cam lobe A and zeroizing button in its rightmost position  
Min some---Max 0.035 inch  
between bottom surface of pointer and low part of cam.

- (2) Requirement  
When viewed along line-of-sight shown, tip of pointer should be aligned with flat surface of lobe B, as gauged by eye.

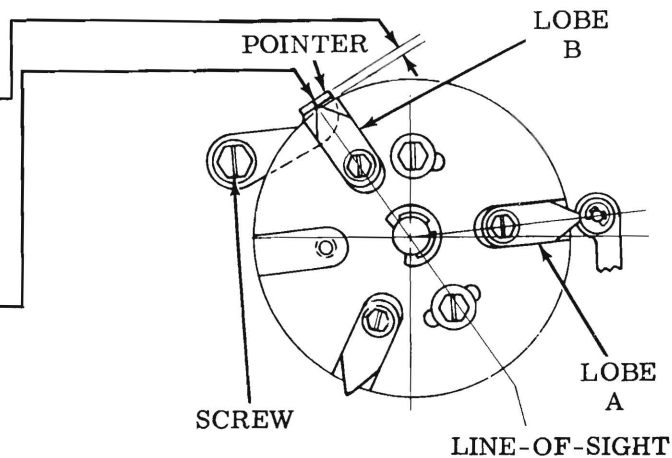

THREE CAM LOBES

(Right Side Views)

To Adjust

Loosen screw and position pointer. Tighten screw.

Related Adjustments

Affected By

- FORM FEED BELT TENSION - S  
(2.94)
- IDLER POSITION - S (2.100)
- RESET FOLLOWER LEVER —
- RESET POSITION - S (2.110)

## 2. 112 Platen Area (continued)

FORM LENGTH SELECTION - S**To Check**

The control cam of the platen drive mechanism normally will come with two cam lobes. This causes sprocket forms to feed out one-half the basic form length.


**Requirement**

A longer form length.

**To Adjust**

Line up the pointer with the aluminized surface of the index plate. Remove and discard the cam lobe which is located in the other side of the control cam opposite the reset follower lever.

Note: A listing of gears which provide various form feed lengths can be found in the appropriate parts section.

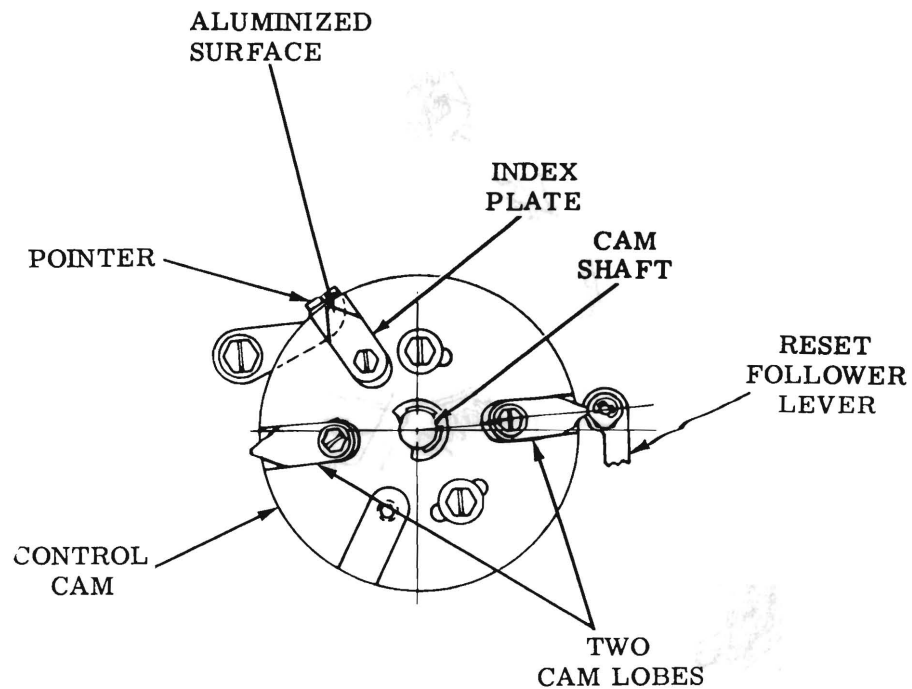

(Right Side View)

2.113 Form Feed Area (continued)

FORM-OUT CONTACT OPERATING BAIL CLEARANCE - S

To Check

With the typing unit in stop condition, place the reset follower lever on the low part of the cam by pushing in on the zeroizing button and rotating the pulley until the required situation is obtained.

Requirement

Min 0.005 inch---Max 0.015 inch between form-out bail and insulator.

To Adjust

Loosen clampscrew and position contact bracket. Tighten clampscrew.

Related Adjustments

Affected By

TRIP LEVER ENGAGEMENT - S (2.103)


FORM-OUT CONTACT PRESSURE AND GAP - S

(1) Requirement

With the form-out bail not in contact with the insulator  
Min 0.008 inch---Max 0.018 inch between a contact of the break-make contact spring and the contact of the normally open contact spring.

To Adjust


Bend the normally open contact spring.

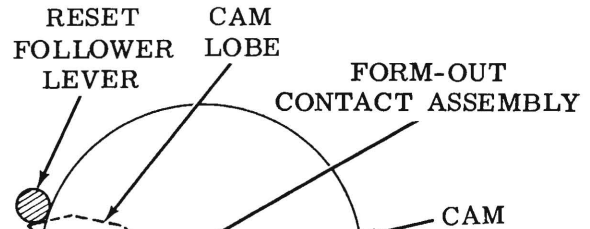

FORM-OUT BAIL SPRING - S

Requirement

With the form-out lever latched  
Min 4 oz---Max 8 oz to start form-out bail spring moving.

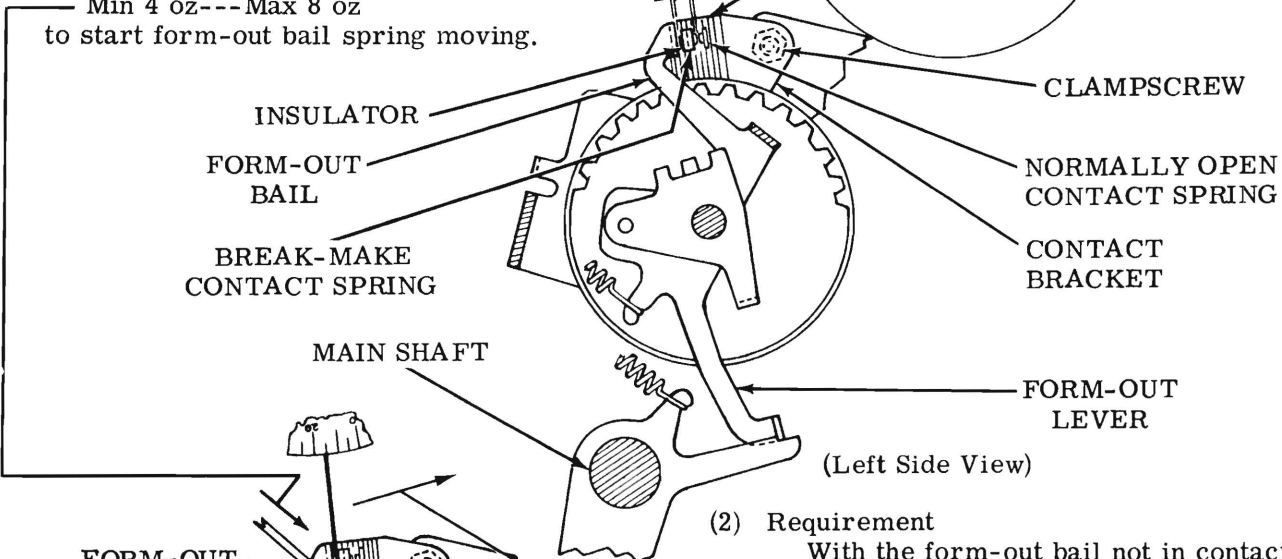


(2) Requirement

With the form-out bail not in contact with the insulator  
Min 15 grams---Max 20 grams to separate break-make contact spring and the normally closed contact spring.

To Adjust

Bend the normally closed contact spring.

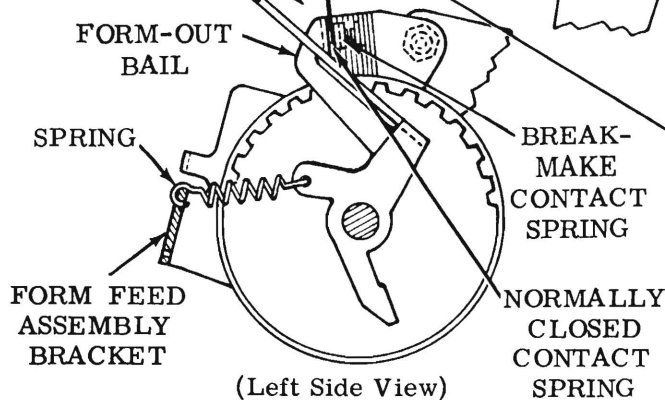

Related Adjustments

Affected By

FORM FEED BELT TENSION - S (2.94)  
TRIP LEVER UPSTOP POSITION - S (Early Design) (2.106)

2.114 Platen Area (continued)

PRINTING LINE POSITION (Preliminary) - S

(1) Requirement

The left sprocket ring pins should be centrally located within the paper guide slot.

To Adjust

Loosen setscrews and position the left sprocket ring.

Note: Do not tighten setscrews until adjustment has been completed.

(2) Requirement

With the setscrews of the left and right sprocket rings in line, place a single sprocket form on the platen with the sprocket form feed holes over the left and right sprocket ring pins. The left and right sprocket ring pins should be in line and centrally located in the sprocket form feed holes.


To Adjust

Loosen setscrews and position the left and/or right sprocket rings as required. Tighten all setscrews.

Related Adjustments

Affects

RIGHT PAPER GUIDE POSITION - S  
(2.117)

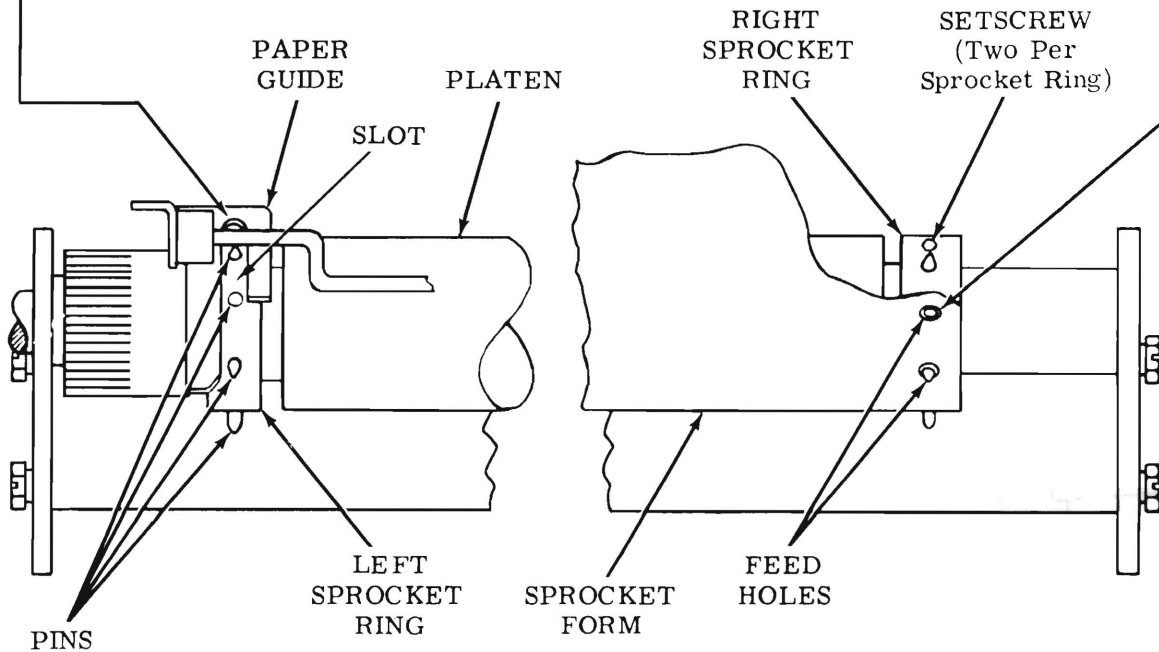

(Front View)

2.115 Platen Area (continued)

PRINTING LINE POSITION (Final) - S

To Check

Place a single sheet of sprocket form in platen mechanism. Print the character M several times to establish a printed line.

Note: On nonprinted forms, draw a horizontal line across form connecting bottom of sprocket feed holes.

Requirement

Printed Form

Printed line should be aligned with sprocket form lines.

Nonprinted Form

- (a) Printed line should be aligned with drawn line.
- (b) Printed line should not touch drawn line.
- (c) Printed line should not be more than 1/16 inch above drawn line with no more than 1/32 inch variation along its entire length.

To Adjust

Early Design

Modify Requirement (2) of PRINTING LINE POSITION (Preliminary) - S (2.114)

Late Design (containing adjusting clampscrew)

Loosen clampscrew and position platen. Tighten clampscrew.


Related Adjustments

Affects

RIGHT PAPER GUIDE POSITION - S (2.117)

Affected By

PRINTING LINE POSITION (Preliminary) - S (2.114)

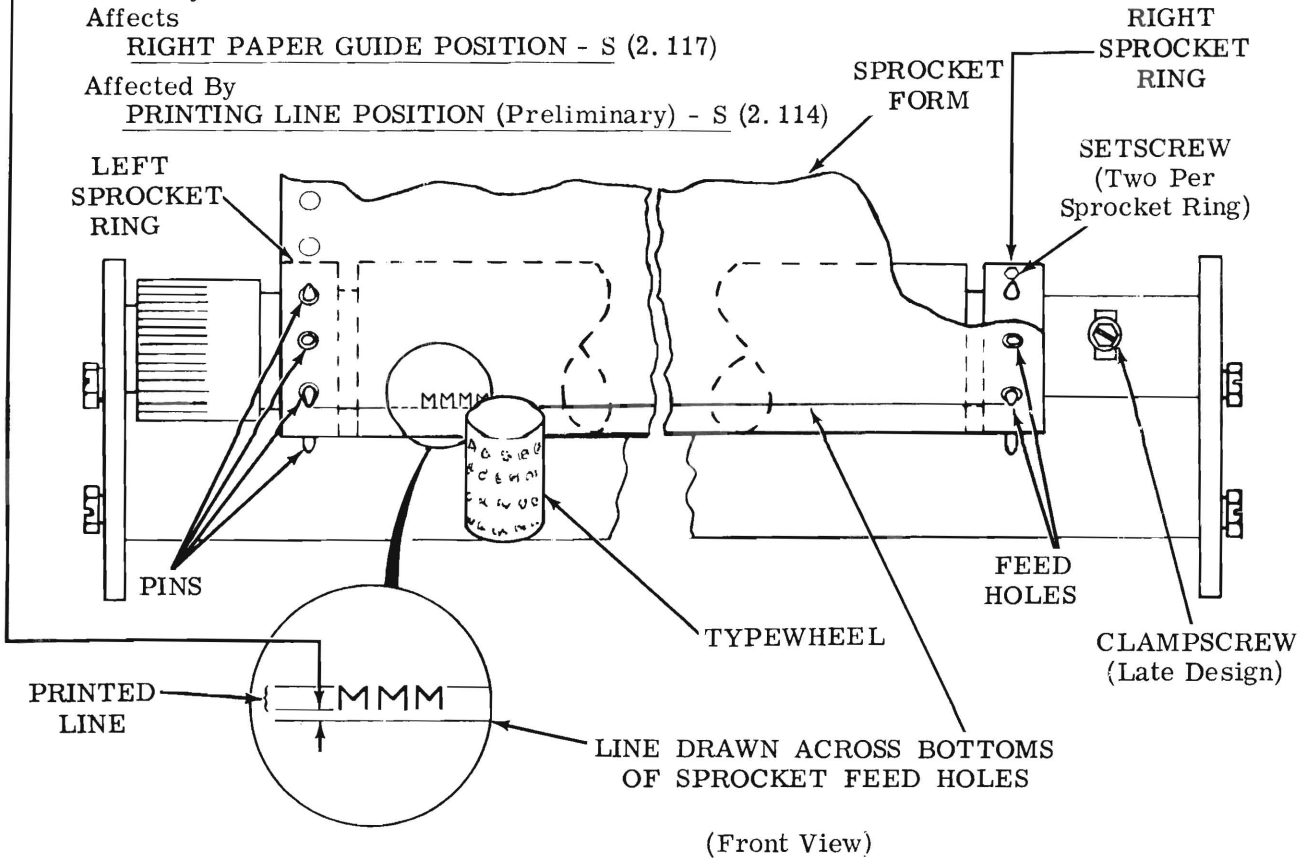

## 2.116 Platen Area (continued)


11001 237

RIGHT PAPER GUIDE POSITION - S**Requirement**

The right sprocket ring pins should be centrally located within the paper guide slot.

**To Adjust**

Loosen screws and position right paper guide.  
Tighten screws.

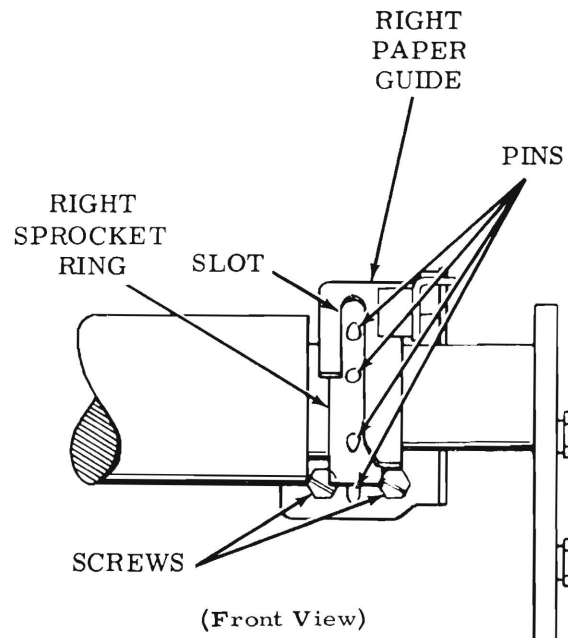**Related Adjustments****Affected By**

PRINTING LINE POSITION (Final) - S (2.115)

2.117 Platen Area (continued)

WIRE GUIDE POSITION - S

To Check


Put a sprocket form containing several lines of printed copy in the unit. Place platen in its detented position with top edge of form feed holes engaging top edge of sprocket ring pins. Place left and right paper guides in contact with their associated sprocket rings.

Requirement

The wire guide should fully contact the sprocket form and should be centrally located between the lines of printed copy with a maximum of 1/2 line overlap.

To Adjust

Loosen setscrew at each end of wire guide. Hold paper guides against their sprocket rings and position wire guide. Tighten both setscrews.

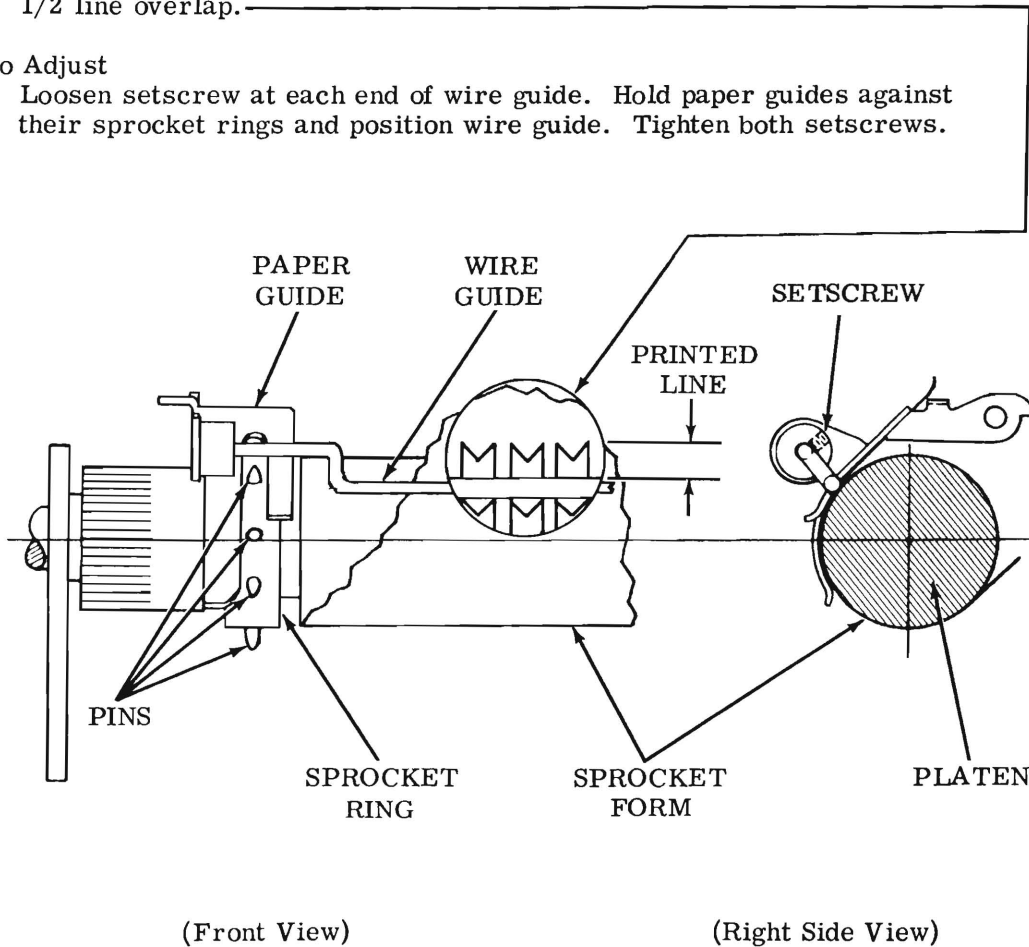

Related Adjustments

Affected By

PLATEN — HORIZONTAL POSITION - S (2. 89)

VERTICAL TYPE ALIGNMENT - S (2. 90)

2.118 Platen Area (continued)

LEFT MARGIN POSITION - S

To Check

Place platen knob screw in a vertical position and carriage to the left hand margin. Fully seat piston in dashpot cylinder.

(1) Requirement

Approximately 3/8 inch between edge of sprocket ring pin and V-projection.

(2) Requirement

Min 0.030 inch between the closest sprocket ring pin and ribbon guide.

To Adjust

Loosen two dashpot cylinder mounting screws and position dashpot cylinder. Tighten screws.

Related Adjustments

Affects

- RIGHT MARGIN POSITION - S (2.118)
- CARRIAGE RETURN LEVER —
- UNLATCH CLEARANCE (2.75)
- LEFT MARGIN PRINTING (2.120)

RIGHT MARGIN POSITION - S

To Check

Place carriage to the right to the 72nd character position. Hold feed pawl out of engagement with spacing ratchet, so that only check pawl is engaged.

Requirement

Min 0.030 inch between right sprocket ring pin and ribbon guide.


To Adjust

Refine LEFT MARGIN POSITION - S (2.118) adjustment.

Related Adjustments

Affected By

LEFT MARGIN POSITION - S (2.118)

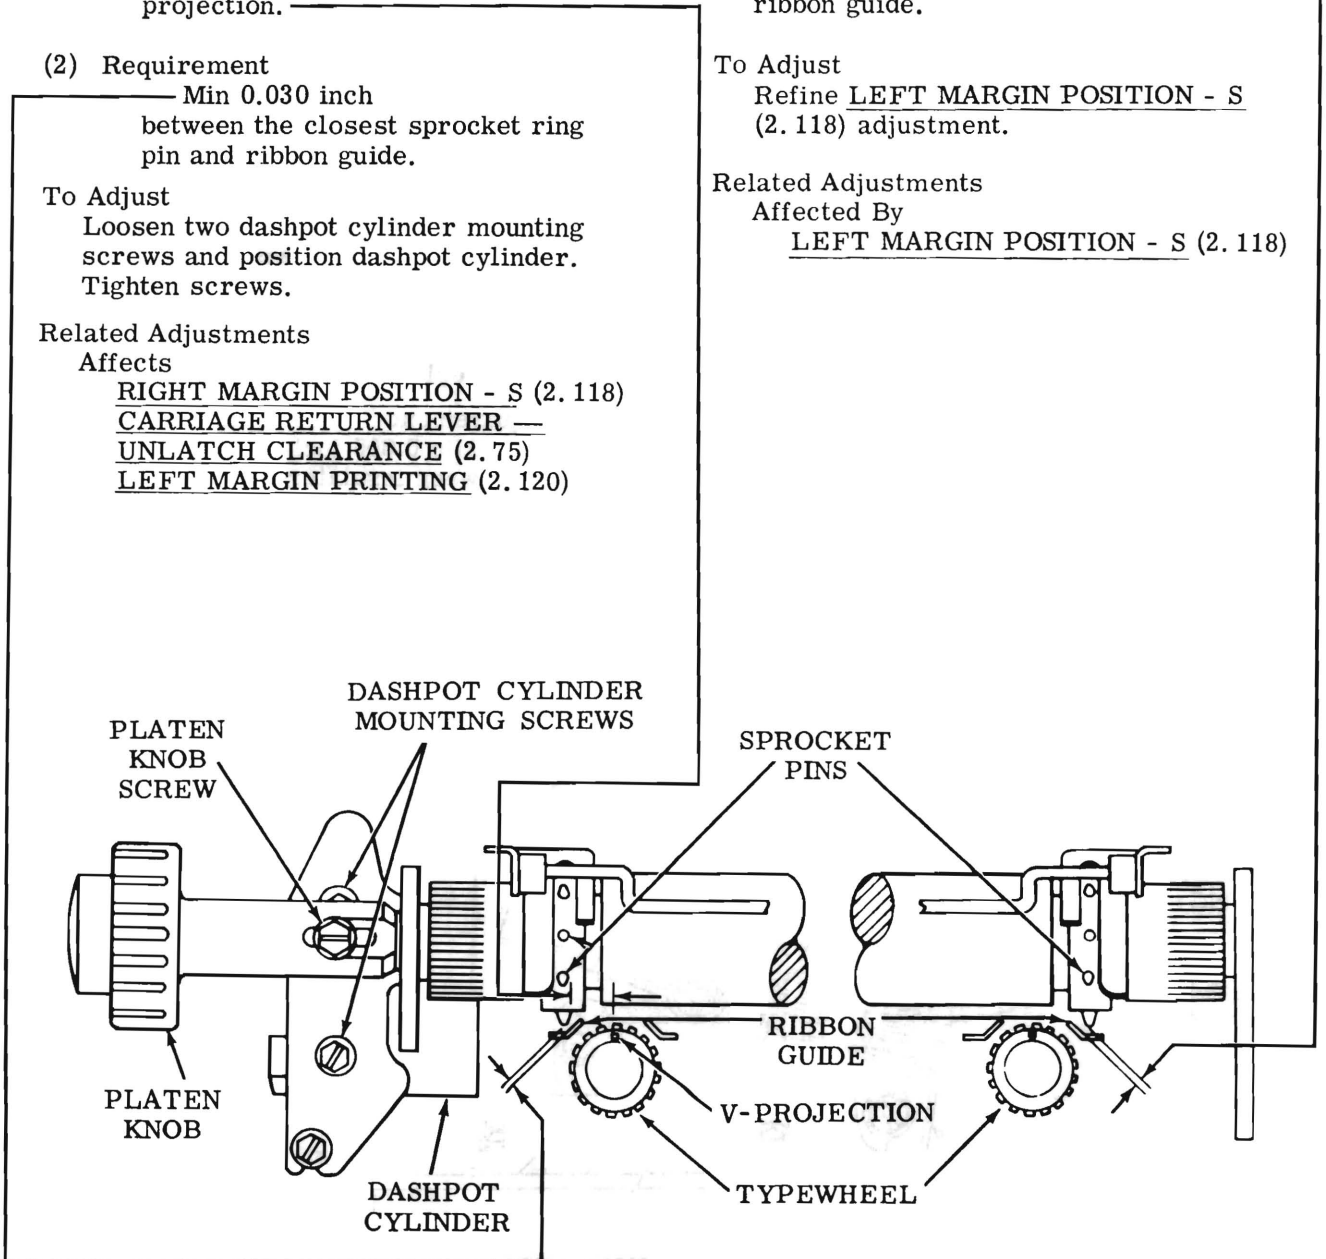

(Top View)

2.119 Paper Controls (Paper Alarm Control Area)

(A) PAPER ALARM CONTACT PRESSURE AND GAP - S

(1) Requirement

With the paper alarm lever not in contact with insulator  
 --- Min 15 grams---Max 20 grams to separate the contacts of the break-make contact spring and normally closed contact spring.

(C) PAPER LEVER SPRING - S

To Check

Place a single sheet of a sprocket form between the paper alarm lever and paper guideplate. Hold the sprocket form taut over the cutout in the paper guideplate and allow the paper alarm lever to rest on the sprocket form. Position a spring scale over the paper alarm lever at the rectangular opening in the paper guideplate.

Requirement

Min 1 oz---Max 1-1/2 oz to move paper alarm lever from sprocket form.

(2) Requirement

With the paper alarm lever not in contact with insulator  
 --- Min 0.010 inch---Max 0.020 inch between the contacts of the break-make contact spring and the normally open contact spring.

To Adjust

Bend normally closed contact spring.

Related Adjustment

Affected By

PAPER GUIDEPLATE CLEARANCE - S (Platen Area) (2.92)

(B) PAPER ALARM CONTACT LEVER CLEARANCE - S

To Check

Place a single sheet of a sprocket form between the paper alarm lever and paper guideplate. Hold the sprocket form taut over the cutout in the paper guideplate.

Requirement

--- Min 0.005 inch---Max 0.030 inch between insulator and paper alarm lever.


To Adjust

Loosen screw and position bracket. Tighten screw.

Related Adjustment


Affected By

PAPER GUIDEPLATE CLEARANCE - S (Platen Area) (2.92)

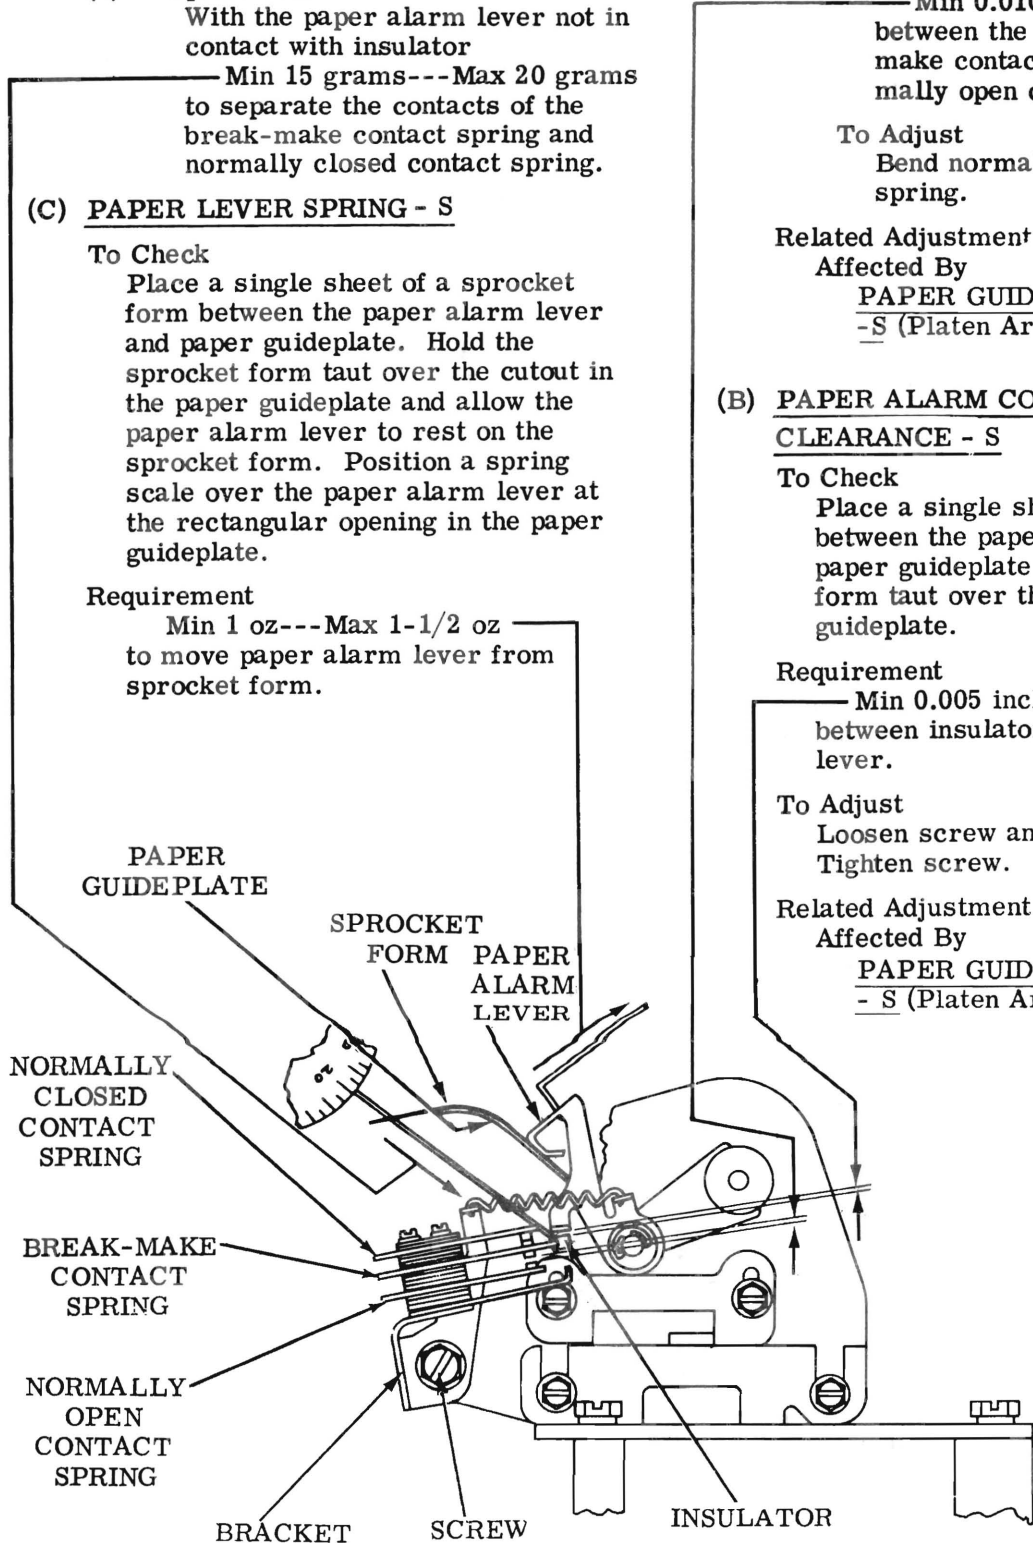

(Left Side View)

## 2.120 Spacing Area (continued)

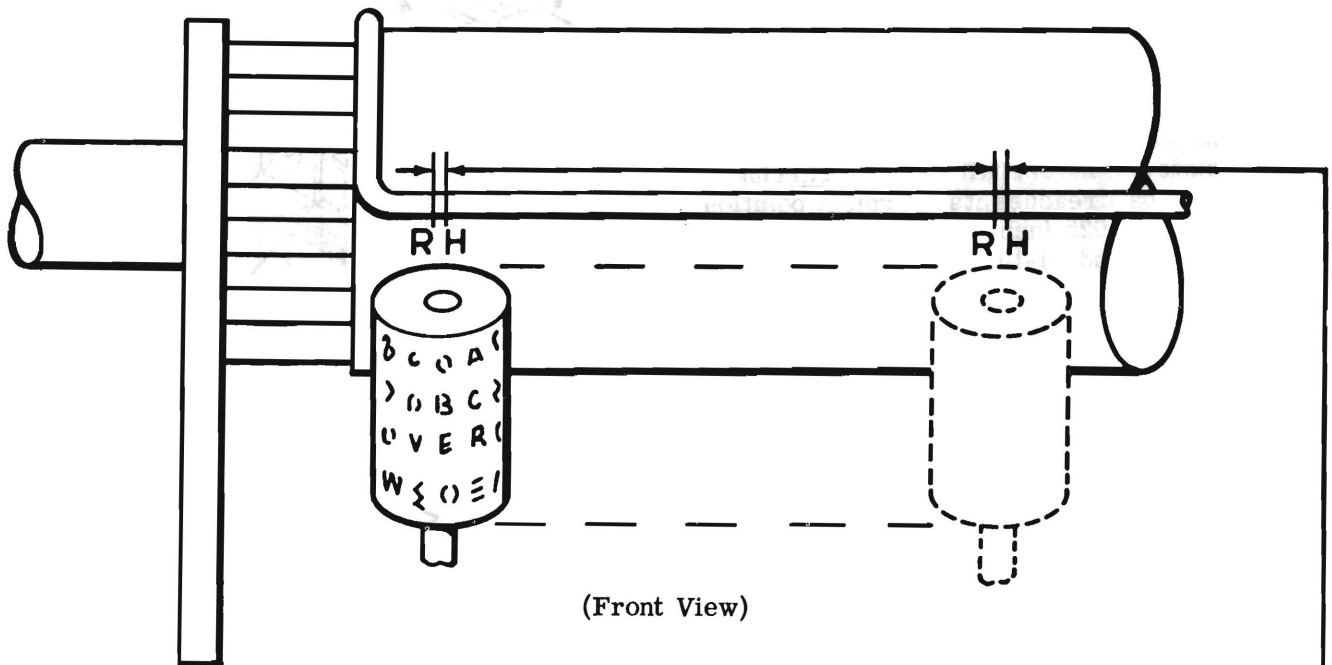LEFT MARGIN PRINTING**To Check**

Print two or more characters such as RH at left margin and at center of line.

**Requirement**

Character to character spacing approximately same as center of line as at left margin.

**To Adjust**

With spacing ratchet clampscrews friction tight, seat piston firmly in the dashpot. Rotate the carriage return arm counter-clockwise to permit the feed pawl and check pawl to move toward the spacing ratchet. Position the spacing ratchet so that the check pawl rests on top of a spacing ratchet tooth. Tighten spacing ratchet clampscrews. Recheck Requirement and refine adjustment if necessary.

**Related Adjustments****Affected By**

SPACING BELT TENSION (2.69)


LEFT MARGIN POSITION - S

(Platen Area) (2.118)

LEFT MARGIN POSITION - F

(Platen Area) (2.72)

RIGHT MARGIN POSITION (2.118)

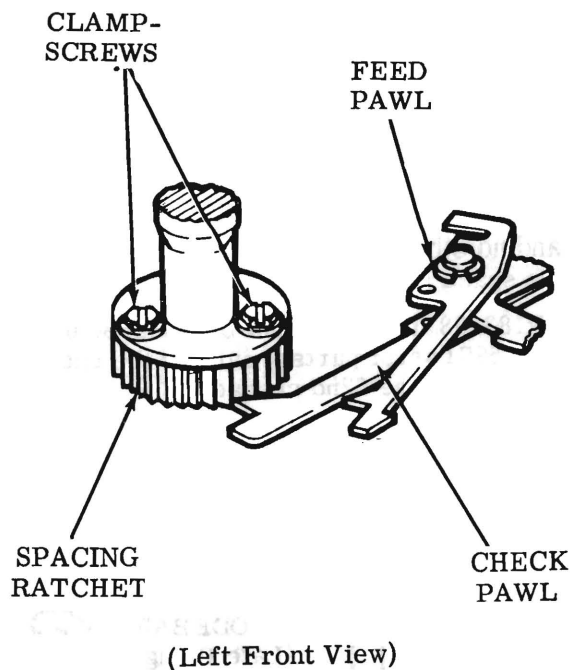

2.121 Function Area (continued)

LINE LENGTH SELECTION

- (1) Requirement (Units with end-of-line space suppression)

Select the proper line length as follows:  
 With the carriage located one character before the end of a line (for example: character 71 on a 72 character line), rotate the main shaft until the carriage drive bail reaches its rearmost position  
 Min 0.025 inch---Max 0.100 inch between end-of-line lever and spacing toggle link.

To Adjust

Early Design: Loosen clampscrew and position belt clamp and extension. Tighten clampscrew.

Late Design: Bend tabs away from belt and position belt clamp. Crimp belt clamp and tabs securely on belt.

Note: Use either TP180948 or TP183498 automatic codebar and no other on typing units equipped with end-of-line space suppression.

- (2) Requirement (Units with automatic carriage return-line feed)

Select either a 69, 72, or 74 character line length.


To Adjust

TP180948 Automatic Codebar: Break off projection(s) as follows:

Line Length (Characters)	Projection Removed
69	None
72	1
74	1 and 2

TP183495, TP183496, TP183497 automatic codebars: Use the proper automatic codebar as follows:

Line Length (Characters)	Automatic Codebar
69	TP183495
72	TP183496
74	TP183497

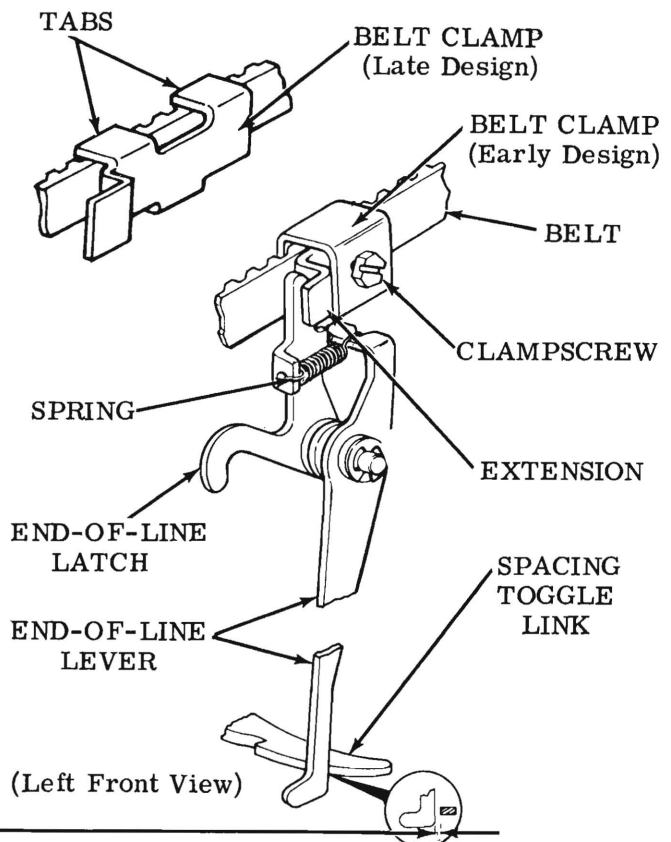

Note 1: On friction feed typing units using TP180948 automatic codebar, break off projection(s) as instructed in Automatic Carriage Return — Line Feed above so that the end-of-line bell will ring at the proper time.

Note 2: On sprocket feed typing units using TP180948 automatic codebar, do not break off any projections. Leave the automatic codebar as shown on the line drawing so that the end-of-line bell will ring at the proper time.



Note 3: Use either TP180948 or TP183498 automatic codebar and no other on typing units equipped with end-of-line space suppression.

Note 4: TP183498 automatic code bar must be used with the TP185971 set of parts providing the end-of-line bell to ring on the 62nd character.


Related Adjustments

Affected By

- LEFT MARGIN PRINTING (2.120)
- LEFT MARGIN POSITION - S (2.118)

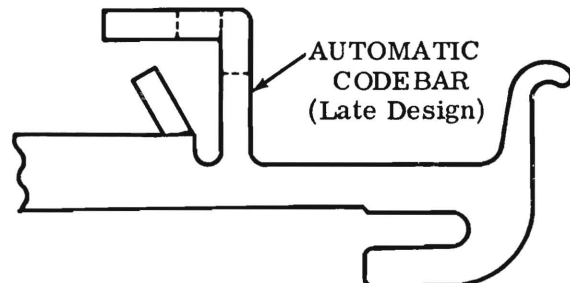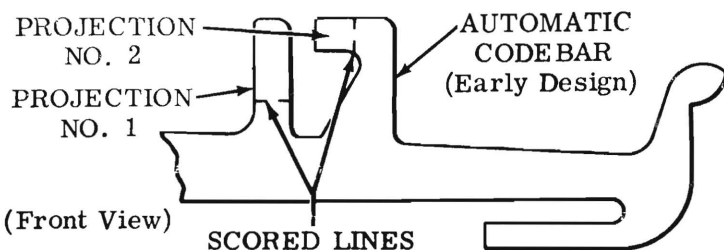

2.122 Function Area (continued)

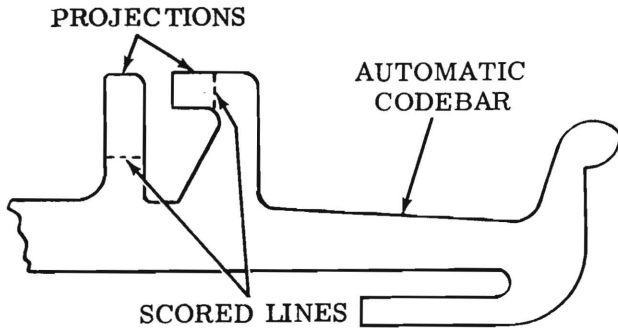

(Front View)

END-OF-LINE BELL SIGNAL - S

Note: This requirement applies only to sprocket feed typing units equipped with TP180948 automatic codebar.

Requirement


The automatic codebar projections must not be removed.

To Adjust

Replace codebar.

MARGIN BELL BELLCRANK CLEARANCE

Note: This adjustment applies only to typing units equipped with the end-of-line bell to ring on approximately the 62nd character.

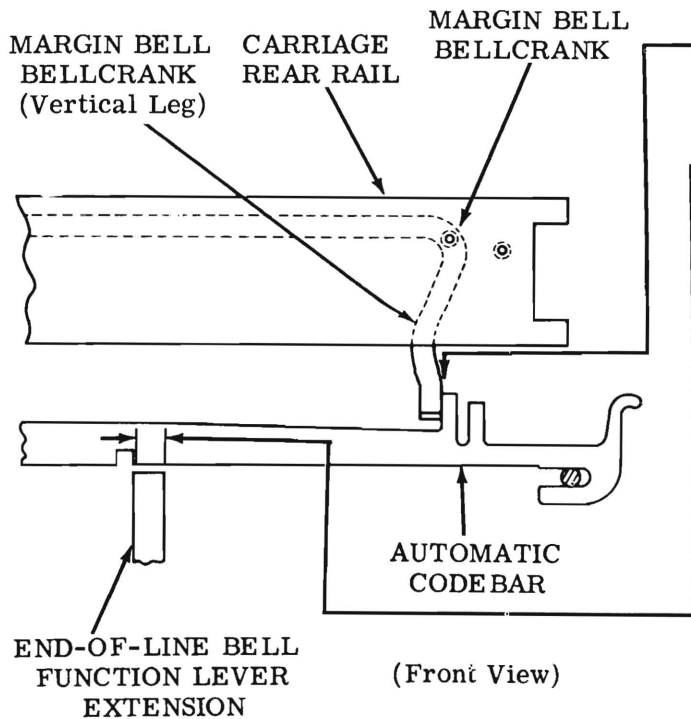

(Front View)

To Check

Place carriage at left margin. Function bail at high point of its travel and the end-of-line bell function lever unselected.

(1) Requirement

No play between the bellcrank extension and the automatic codebar.

(2) Requirement

The end-of-line bell function lever extension and the automatic codebar should fully engage.

To Adjust

Using the TP180993 bending tool, bend vertical leg of bellcrank to meet Requirement (1) and bend the end of line bell function lever extension to meet Requirement (2).

SECTION 574-122-700TC

2.123 Selector Area (continued)

RECEIVING MARGINS

To Check

Set up test situation using typing unit and Signal Distortion Test Set to check selector receiving margins.

Requirement

Obtain minimum selector receiving margins as follows:

<u>SPEED</u>	<u>RANGE ZERO DISTORTION</u>	<u>OVERALL BIAS</u>	<u>END DISTORTION</u>
All Speeds	No Requirement	35 Percent*	33 Percent*

\*At same range scale setting.

To Adjust

Refine ARMATURE SPRING (2.20) and, if necessary, refine ARMATURE BRACKET POSITION (Preliminary) (2.18) and/or BELT TENSION (Motor Area) (2.02) adjustments.

Note: The refinement of the ARMATURE BRACKET POSITION (2.18) or BELT TENSION (Motor Area) (2.02) adjustment need not be performed unless the refinement of the ARMATURE SPRING (2.20) adjustment fails to bring about the minimum selector receiving margins.

Related Adjustments

Affected By

ARMATURE BRACKET POSITION (2.18)

ARMATURE SPRING (2.20)

SHOE LEVER GAP AND TRIP LEVER ENGAGEMENT (2.19)

## 2. 124 Carriage Area (continued)

**FINAL PRINTING ALIGNMENT**

**Note:** When typing unit is adjusted as instructed on previous pages, quality of printed copy should be good. However, minor readjustments may be necessary.

**To Check**

Print TH at various points along length of printing line.

**Requirement**

Quality of printed characters should be good.

**To Adjust**

Use the following guide in making readjustments.

Shading of top and bottom of characters not equal and/or underscoring or overscoring of characters ---

---refine VERTICAL TYPE ALIGNMENT - FS (Platen Area) (2. 71 - F and 2. 90 - S) adjustment by either moving typewheel vertically (late design) or moving platen toward portion of light shading (early design).

Left character T or poor quality ---

---using left pry points, refine TYPEWHEEL POSITIONING (2. 51) adjustment.

Right character H of poor quality ---

---using right pry points, refine TYPEWHEEL POSITIONING (2. 51) adjustment.

Characters spread out ---

---refine TYPEWHEEL POSITIONING (2. 51) adjustment by moving plate forward.

Characters run together ---

---refine TYPEWHEEL POSITIONING (2. 51) adjustment by moving plate rearward.

Both characters of light shading on left side ---

---refine TYPEWHEEL "HOME" POSITION (2. 58) adjustment by rotating wheel clockwise as viewed from top.

Both characters of light shading on right side ---

---refine TYPEWHEEL "HOME" POSITION (2. 58) adjustment by rotating wheel counterclockwise as viewed from top.

**Related Adjustments**

Affected By

TYPEWHEEL "HOME POSITION (2. 58)

3. VARIATIONS TO BASIC ADJUSTMENTS

3.01 Answer-Back Area

Note: The answer-back trip lever adjusting tap should clear the control lever before proceeding with the following adjustments.

BLOCKING LINK CLEARANCE

To Check


Disengage (latch) distributor and function clutches, engage the answer-back blocking lever fully in indent of answer-back blocking pawl. Take up play in the answer-back blocking pawl toward the front of the typing unit.

Requirement

Min some---Max 0.020 inch between the blocking link and tab on answer-back blocking pawl.


To Adjust

Bend adjusting tab on blocking follower lever with TP180993 bending tool.

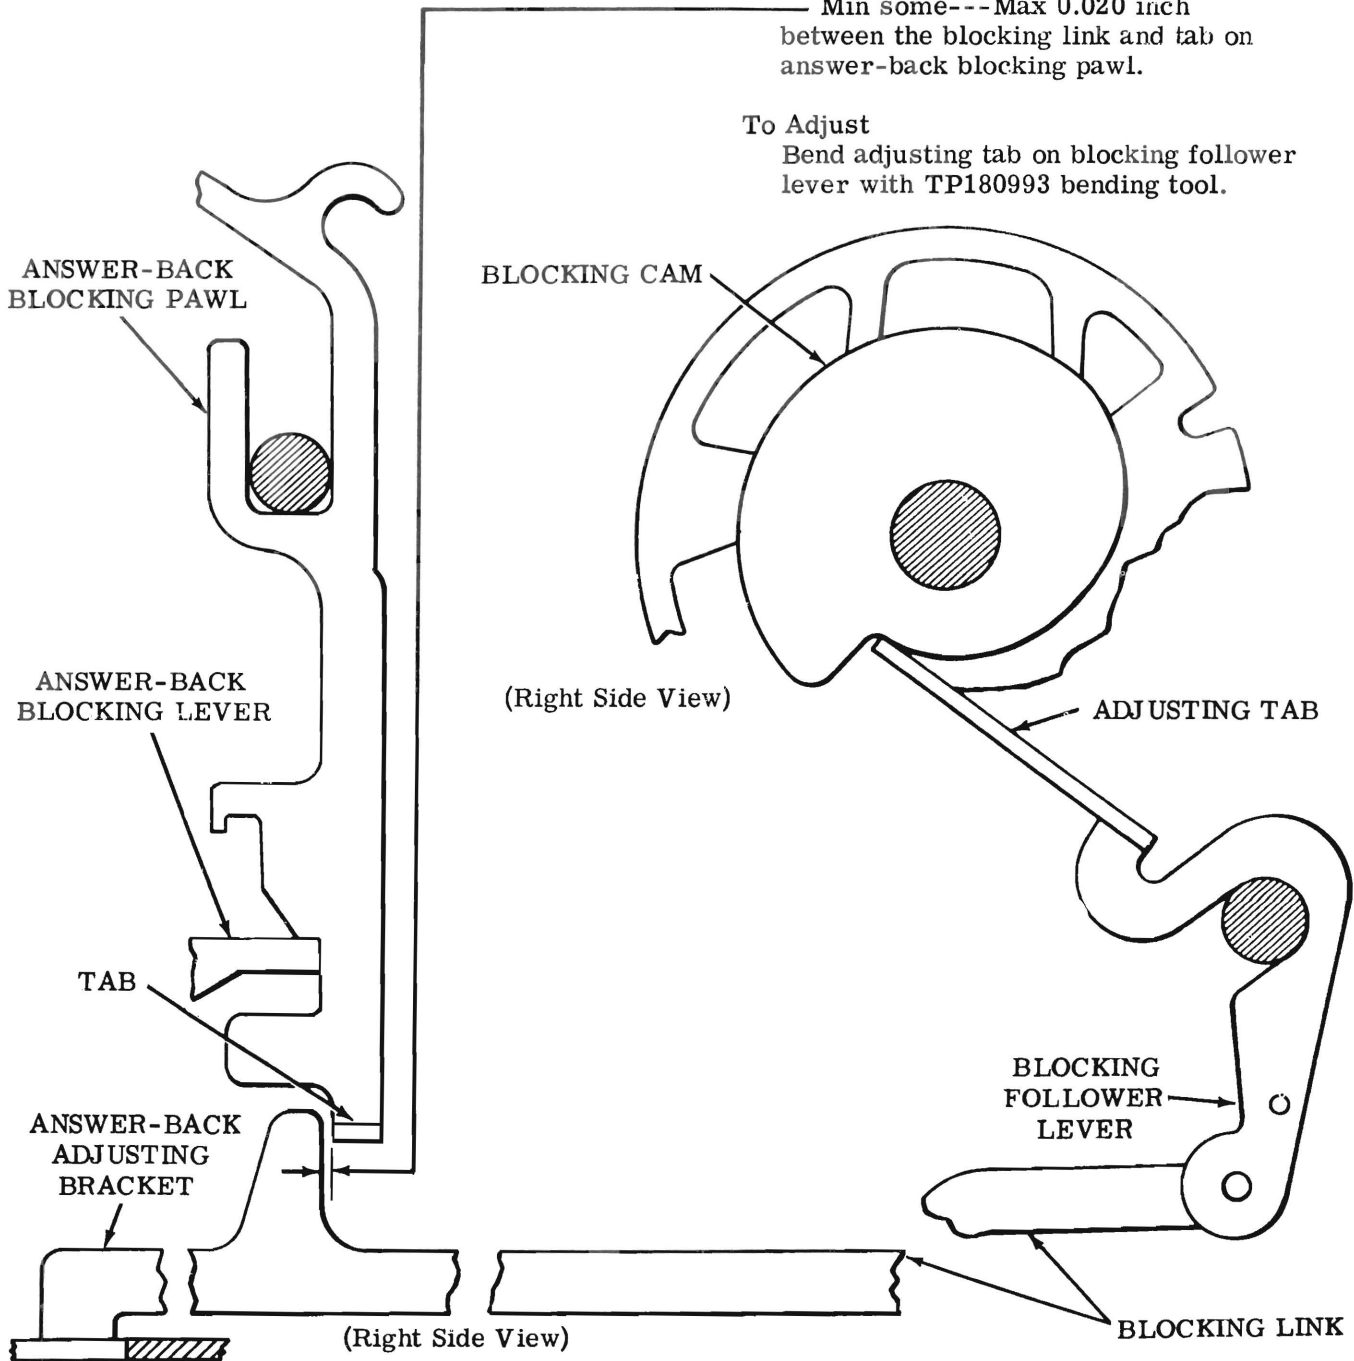

3.02 Answer-Back Area (continued)

CONTROL LEVER SPRING — HORIZONTAL

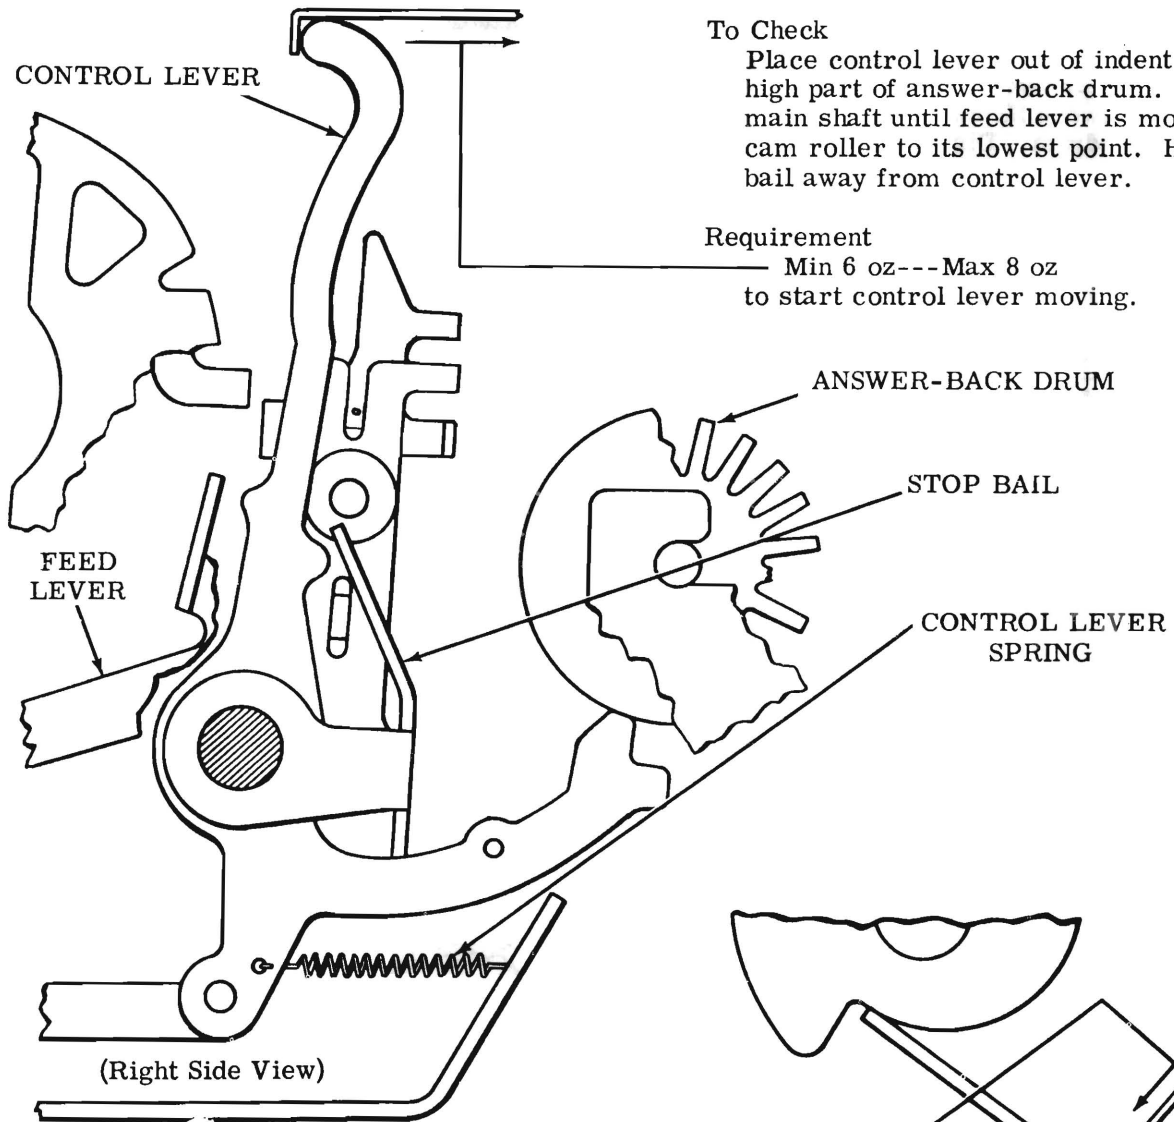

To Check

Place control lever out of indent and on high part of answer-back drum. Rotate main shaft until feed lever is moved by cam roller to its lowest point. Hold stop bail away from control lever.


Requirement

Min 6 oz---Max 8 oz  
to start control lever moving.

BLOCKING FOLLOWER LEVER SPRING

Requirement

With distributor clutch disengaged (latched)  
Min 1 oz---Max 2-1/4 oz  
to start blocking follower lever moving.

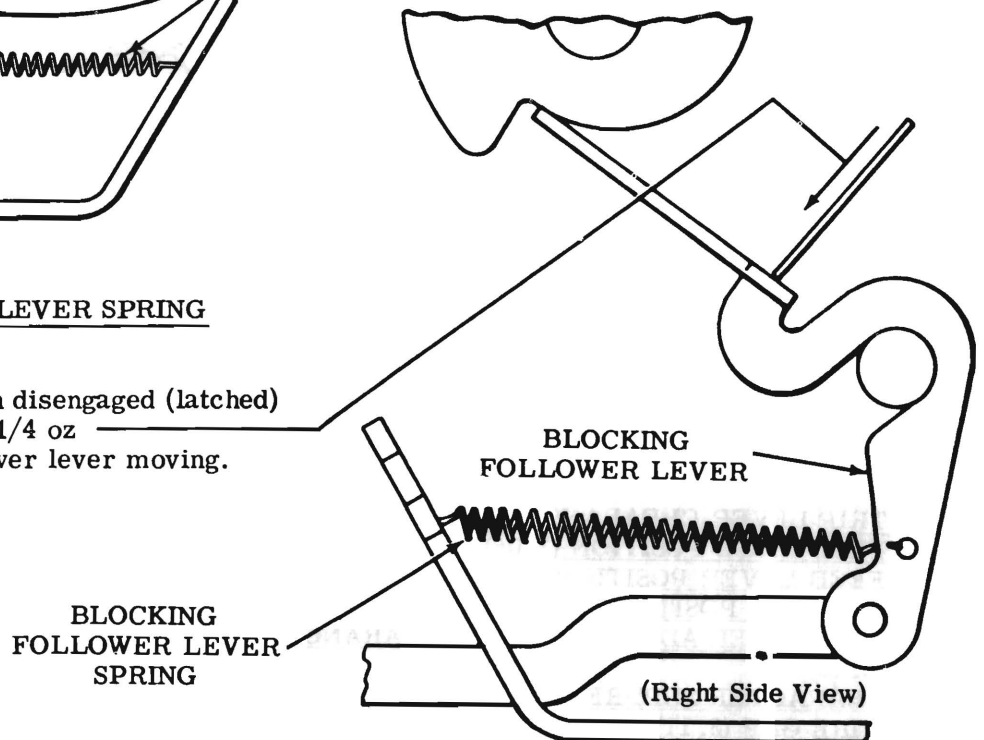

3.03 Answer-Back Area (continued)

DRUM POSITION

To Check

Engage lower extension of control lever in indent of answer-back drum and locate detent lever between ST and 20 rows on answer-back drum. Disengage (latch) distributor clutch. Hold the feed pawl out of engagement with the answer-back drum and manually move the upper extension of the control lever toward the rear of the typing unit while checking to see that the answer-back drum is fully detented. Move the upper extension of the control lever toward the front of the typing unit while noticing any clockwise movement of the answer-back drum.

**Note 1:** For instructions on coding the answer-back drum, see the appropriate installation section.

**Note 2:** If necessary to insure clearance between the feed lever adjusting tab and the control lever, bend the feed lever adjusting tab toward the front of the typing unit.

(1) Requirement


Barely perceptible clockwise movement of answer-back drum from its fully detented position when upper extension of control lever is moved toward front of typing unit.

(2) Requirement

The axis of the answer-back drum should be parallel to the trip pivot shaft as gauged by eye.

To Adjust

Loosen **HERE** IS adjusting bracket clampscrew and answer-back bracket clampscrew. With answer-back block mounting screws friction tight, position block to meet requirements. Tighten screws.

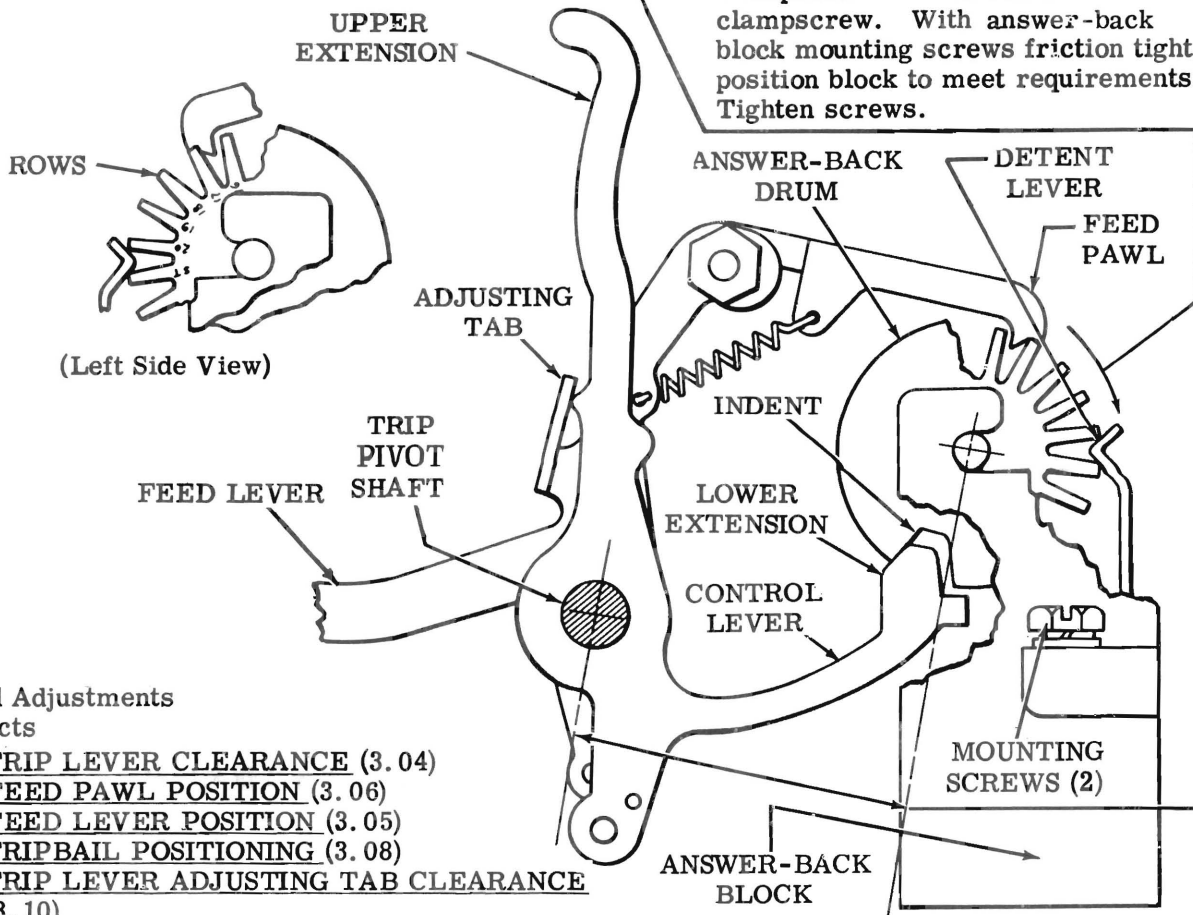

Related Adjustments  
Affects

- TRIP LEVER CLEARANCE (3.04)
- FEED PAWL POSITION (3.06)
- FEED LEVER POSITION (3.05)
- TRIPBAIL POSITIONING (3.08)
- TRIP LEVER ADJUSTING TAB CLEARANCE (3.10)
- CHARACTER SUPPRESSION CONTACT WIRE GAP (3.11)

3.04 Answer-Back Area (continued)

**TRIP LEVER CLEARANCE**

**To Check**

Trip distributor clutch and manually rotate main shaft to place upper edge of clutch shoe lever in line with upper edge of trip lever. Lift feed pawl and manually rotate answer-back drum counterclockwise until detent lever is located between row 1 and 2 on answer-back drum. Take up play in clutch shoe lever toward trip lever.

**Requirement**

Min 0.015 inch---Max 0.035 inch  
between clutch shoe lever and trip lever.


**To Adjust**

Bend right adjusting tab using TP180993 bending tool.

Note: The plane of right adjusting tab should be parallel to the axis of trip pivot shaft, as gauged by eye.

**Related Adjustments**

Affected By  
DRUM POSITION (3.03)

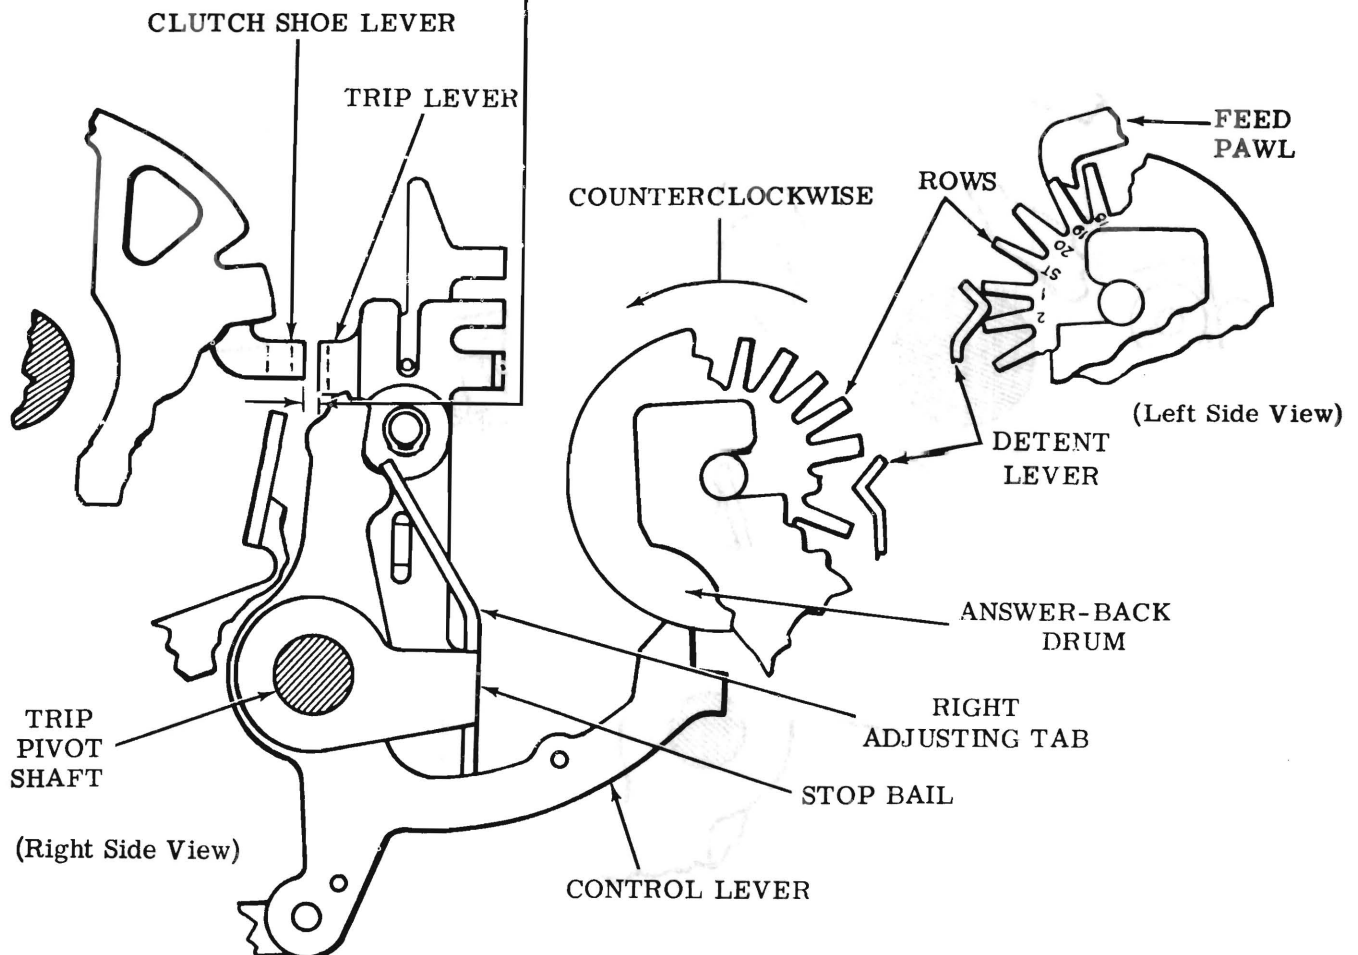

3.05 Answer-Back Area (continued)

FEED LEVER POSITION

To Check

With answer-back drum fully detented in its home position, trip distributor clutch and manually rotate main shaft until cam roller is adjacent to high part of feed lever. Rotate cam roller to minimize clearance. Hold feed pawl clear of answer-back drum.

Requirement

Min some---Max 0.010 inch  
between feed lever and cam roller.

To Adjust

Bend feed lever adjusting tab with TP180993  
bending tool.

Related Adjustments

Affects


TRIPBALL POSITIONING (3.08)

FEED PAWL POSITION (3.06)

Affected By

DRUM POSITION (3.03)

Note: The minimum requirement is met if there is no perceptible movement of the answer-back feed pawl when rotating the distributor shaft to its stop position.

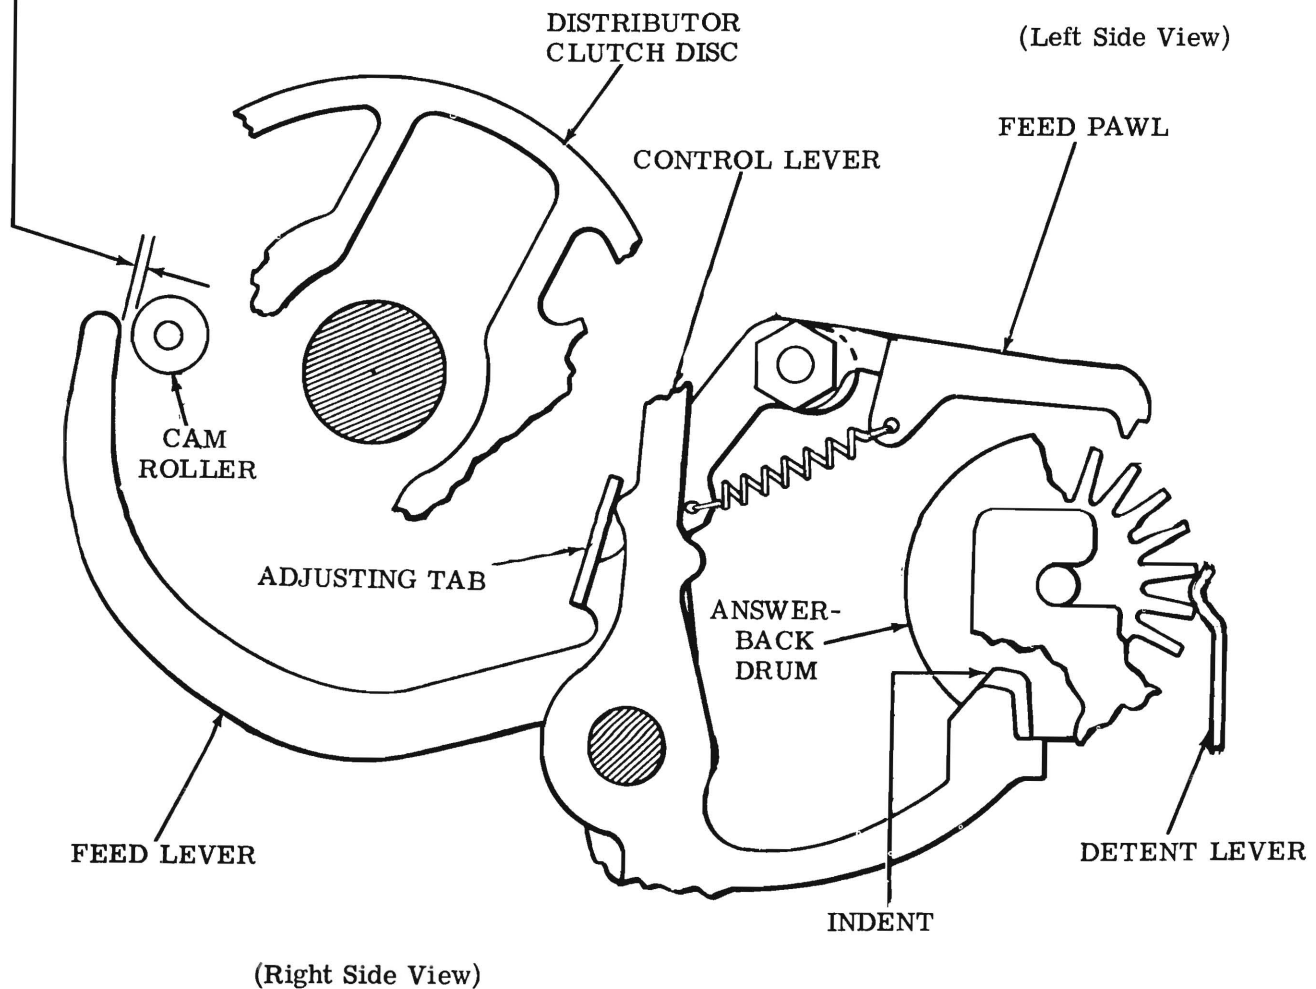

3.06 Answer-Back Area (continued)

FEED PAWL POSITION

(1) To Check

With answer-back drum fully detented in its home position, disengage (latch) distributor clutch. Manually trip distributor clutch and rotate main shaft until the cam roller is adjacent to high part of feed lever. With feed pawl positioned fully within answer-back ratchet, take up all play to minimize required clearance.

Requirement

Min some---Max 0.005 inch between feed pawl and rear face of no. 16 drum tooth.

Note: The minimum requirement is met if the feed pawl spring repositions the pawl after the pawl has been raised and then released above answer-back drum.

To Adjust

With adjusting nut and screw friction tight, position feed pawl. Tighten nut and screw.

(2) To Check

Push the top of the control lever toward the rear of typing unit and simultaneously rotate the main shaft. Observe the operation of the feed pawl.

Requirement

While operating, the feed pawl should be centrally located on feed ratchet teeth.

To Adjust

Bend feed lever just below feed pawl.

Related Adjustments


Affects

TRIPBAIL POSITIONING (3.08)

Affected By

DRUM POSITION (3.03)

FEED LEVER POSITION (3.05)

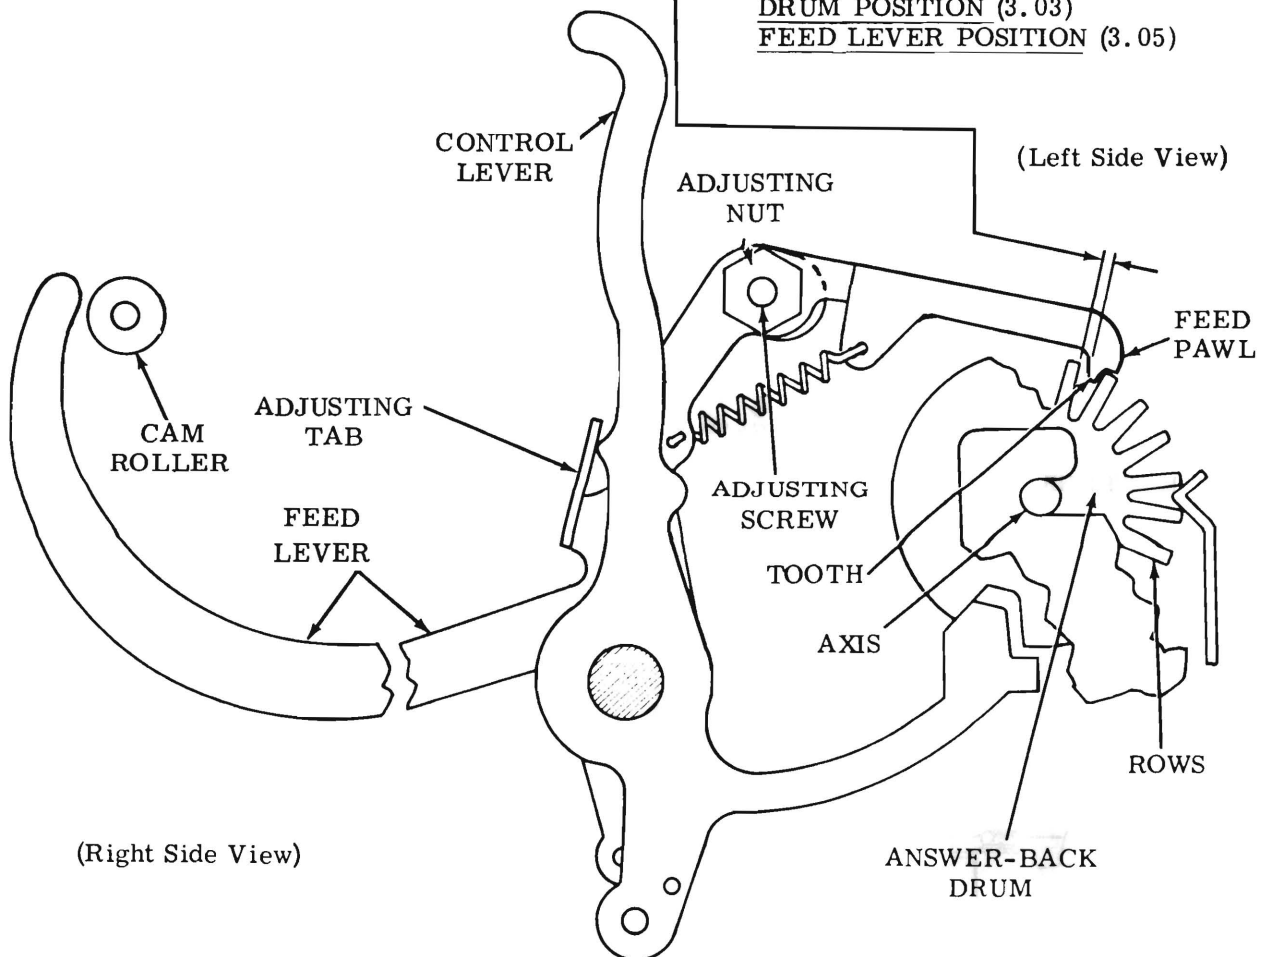

3.07 Answer-Back Area (continued)

"HERE IS" BELLCRANK POSITIONING

**Note:** This adjustment cannot be checked unless the typing unit is replaced on the subbase with the keyboard.

(1) To Check

With answer-back drum fully detented in its home position, trip distributor clutch and manually rotate main shaft until cam roller is positioned above the top edge of feed lever. Depress HERE IS key with a force of from 20 oz to 24 oz.

**Requirement**

Early design typing units — HERE IS adjusting bracket does not have a stop projection:

Min 0.015 inch---Max 0.030 inch overtravel between feed pawl and face of answer-back drum feed ratchet tooth of row 17.

Late design typing units — HERE IS adjusting bracket has a stop projection:

Min 0.010 inch---Max 0.040 inch overtravel between feed pawl and face of answer-back drum feed ratchet tooth of row 17.

(2) To Check

With the answer-back drum fully detented in its home position and HERE IS key in its unoperated position, disengage (latch) distributor clutch.

**Requirement**

Some clearance between tip of HERE IS key and bell-crank.

**To Adjust**

With clampscrew friction tight, position HERE IS adjusting bracket using pry points. Tighten clampscrew.


**Related Adjustments**

Affects

TRIPBAIL POSITIONING (3.05)  
CHARACTER SUPPRESSION CONTACT WIRE GAP (3.11)

Affected By

DRUM POSITION (3.03)  
FEED PAWL POSITION (3.06)  
FEED LEVER POSITION (3.05)

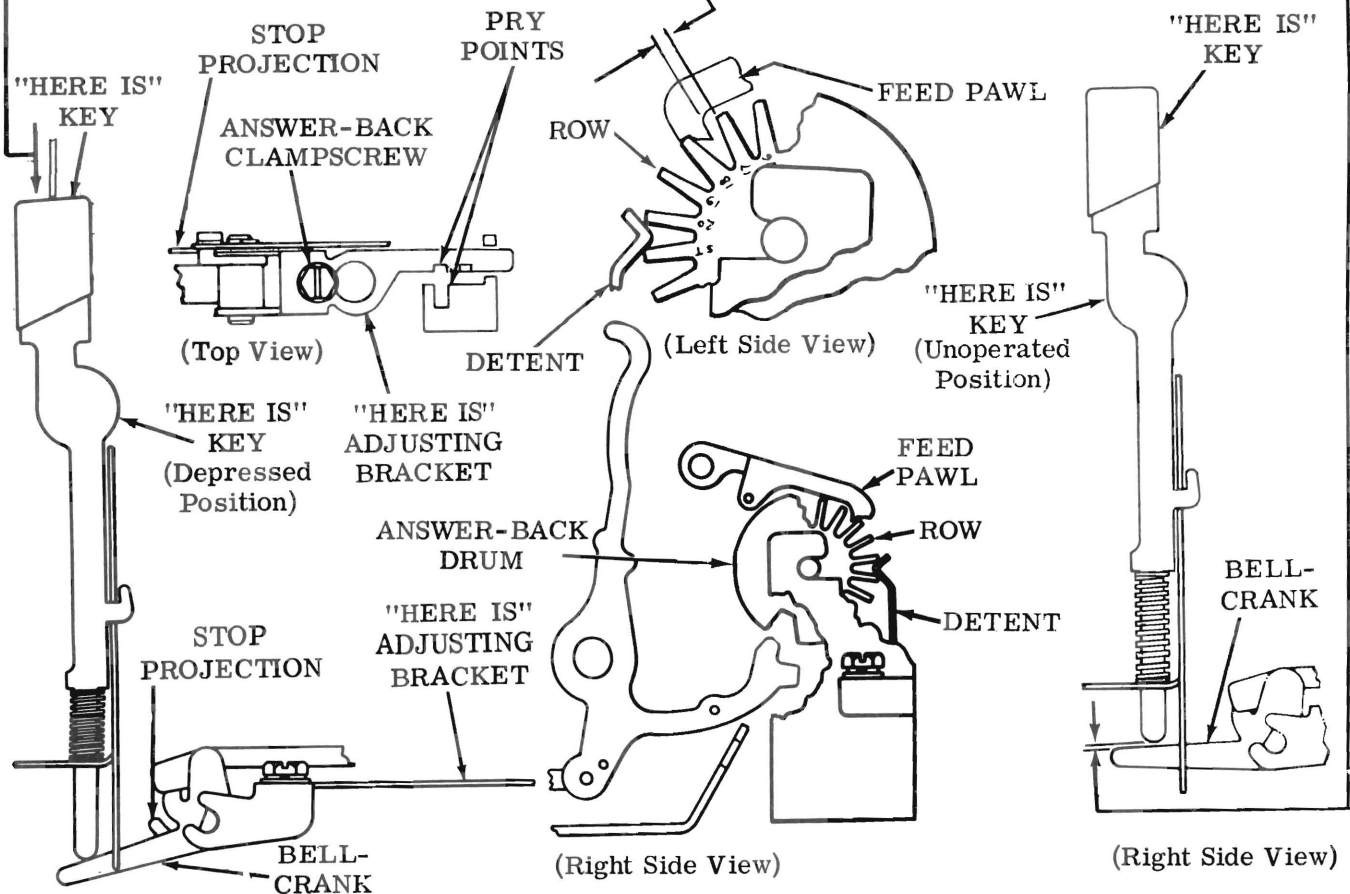

3.08 Answer-Back Area (continued)


TRIPBAIL POSITIONING

(1) To Check

Place the typing unit in stop condition. Trip function clutch and rotate main shaft until the function bail is in its highest position. Push the answer-back function pawl down until its notch is engaged by its function lever. Trip the distributor clutch and continue to rotate the main shaft until the answer-back function pawl reaches its lowest point of travel.


Note: The feed pawl will move back to pick up the next tooth on the answer-back drum feed ratchet.

With the feed pawl centered on the answer-back drum feed ratchet, take up play in feed pawl toward the rear.

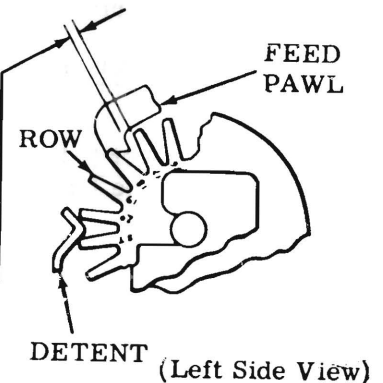

Requirement

Min 0.010 inch---Max 0.040 inch overtravel between feed pawl and face of answer-back drum feed ratchet of row 17.

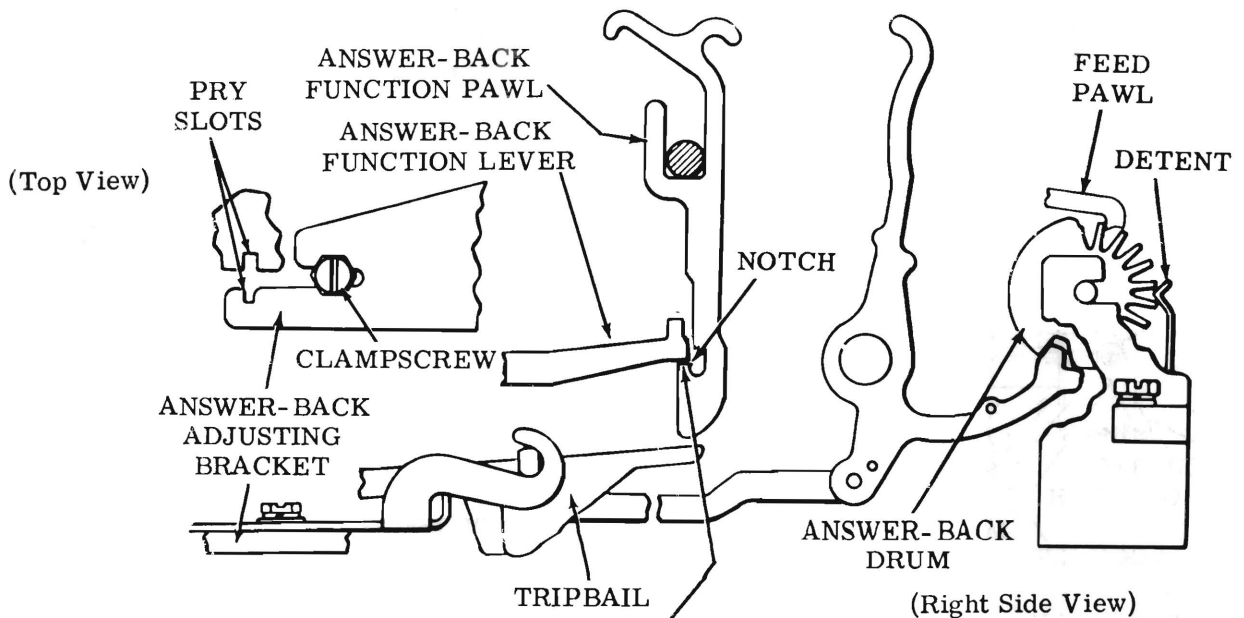

(2) To Check

With typing unit in stop condition, set up the code combination for the answer-back call character in the selector. Rotate the main shaft until the answer-back function pawl moves forward to its selected position. Observe the forward movement of the answer-back function pawl.

Requirement

Answer-back function pawl must move forward freely to its selected position without hesitation.

To Adjust

Loosen clampscrew friction tight. Position answer-back adjusting bracket using pry slots. Tighten clampscrew.

Related Adjustments

- Affected By
- DRUM POSITION (3.03)
- FEED PAWL POSITION (3.06)
- RIGHT ROCKER DRIVE (2.36)

3.09 Answer-Back Area (continued)

Note: The adjustments on this page apply only to typing units equipped with an answer-back trip magnet mechanism.

TRIP MAGNET POSITION

Requirement

Magnet bracket to be positioned as far forward and to the left on base casting post as possible.

To Adjust

Loosen three mounting screws. Position magnet bracket. Tighten screws.

Related Adjustments

Affects

- TRIP LEVER OVERTRAVEL AND ARMATURE GAP (3.09)
- TRIP LEVER ADJUSTING TAB CLEARANCE (3.10)
- TRIP MAGNET (Appropriate tape reader section)
- CHARACTER SUPPRESSION CONTACT WIRE GAP (3.11)

TRIP LEVER OVERTRAVEL AND ARMATURE GAP

To Check

With the answer-back drum fully detented in its home position, trip distributor clutch and rotate main shaft until the pointer of the distributor brush holder is in line with the intersection of the conductor path and the stop segment. Control lever must be clear of answer-back to trip lever adjusting tab — if necessary, bend tab forward to provide clearance. Place armature in its attracted position, and take up play toward rear of typing unit.

(1) Requirement

Min 0.006 inch---Max 0.015 inch between the end of armature extension and end of answer-back blocking latch.

To Adjust

Loosen armature extension mounting screw friction tight. Position the armature extension using pry points. Tighten screw.

(2) Requirement

Front end of armature extension should be vertically centered between the top and bottom surfaces of the answer-back blocking latch as gauged by eye.

To Adjust

Loosen armature extension adjusting screw locknut friction tight. Position armature extension using armature extension adjusting screw. Tighten locknut.




Related Adjustments

Affects

- TRIP LEVER ADJUSTING TAB CLEARANCE (3.10)
- CHARACTER SUPPRESSION CONTACT WIRE GAP (3.11)

Affected By

- TRIP MAGNET POSITION (3.09)

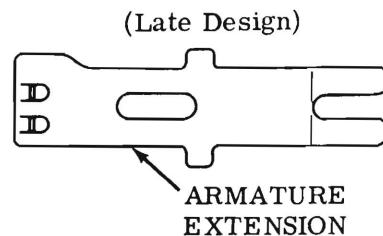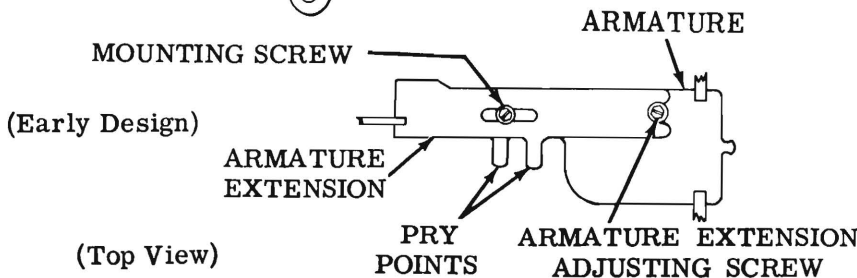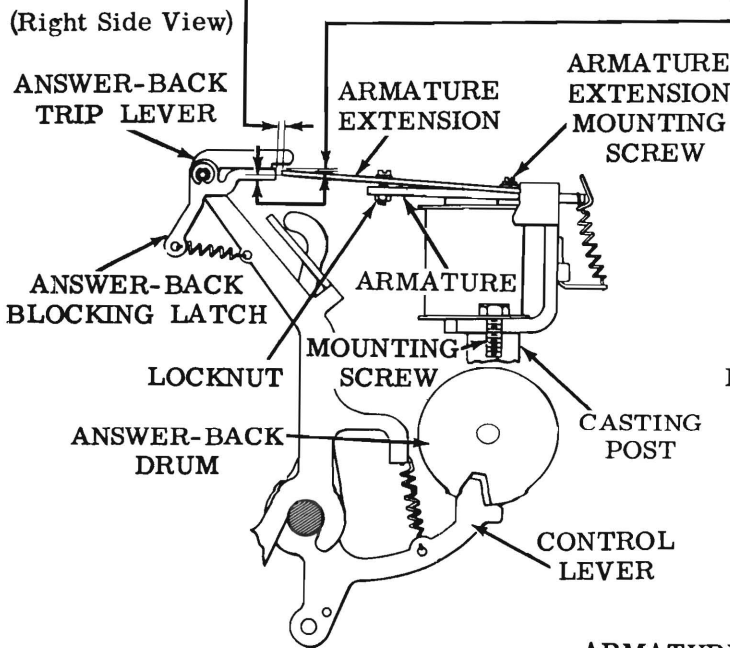

3.10 Answer-Back Area (continued)

Note: The following adjustment applies only to typing units equipped with an answer-back trip magnet mechanism.

TRIP LEVER ADJUSTING TAB CLEARANCE

To Check

With the answer-back drum fully detented in its home position, place the typing unit in its stop condition. With the armature in its unattracted position, take up the play in the trip lever toward the right and the play in the control lever toward the left. Take up play in the armature toward the rear.

Requirement

Min some---Max 0.020 inch between adjusting tab and tip of control lever.

To Adjust

Bend adjusting tab with TP180993 bending tool.


Related Adjustments

Affects

CHARACTER SUPPRESSION CONTACT WIRE GAP (3.11)

Affected By

TRIP MAGNET POSITION (3.09)  
TRIP LEVER OVERTRAVEL AND ARMATURE GAP (3.09)  
DRUM POSITION (3.03)

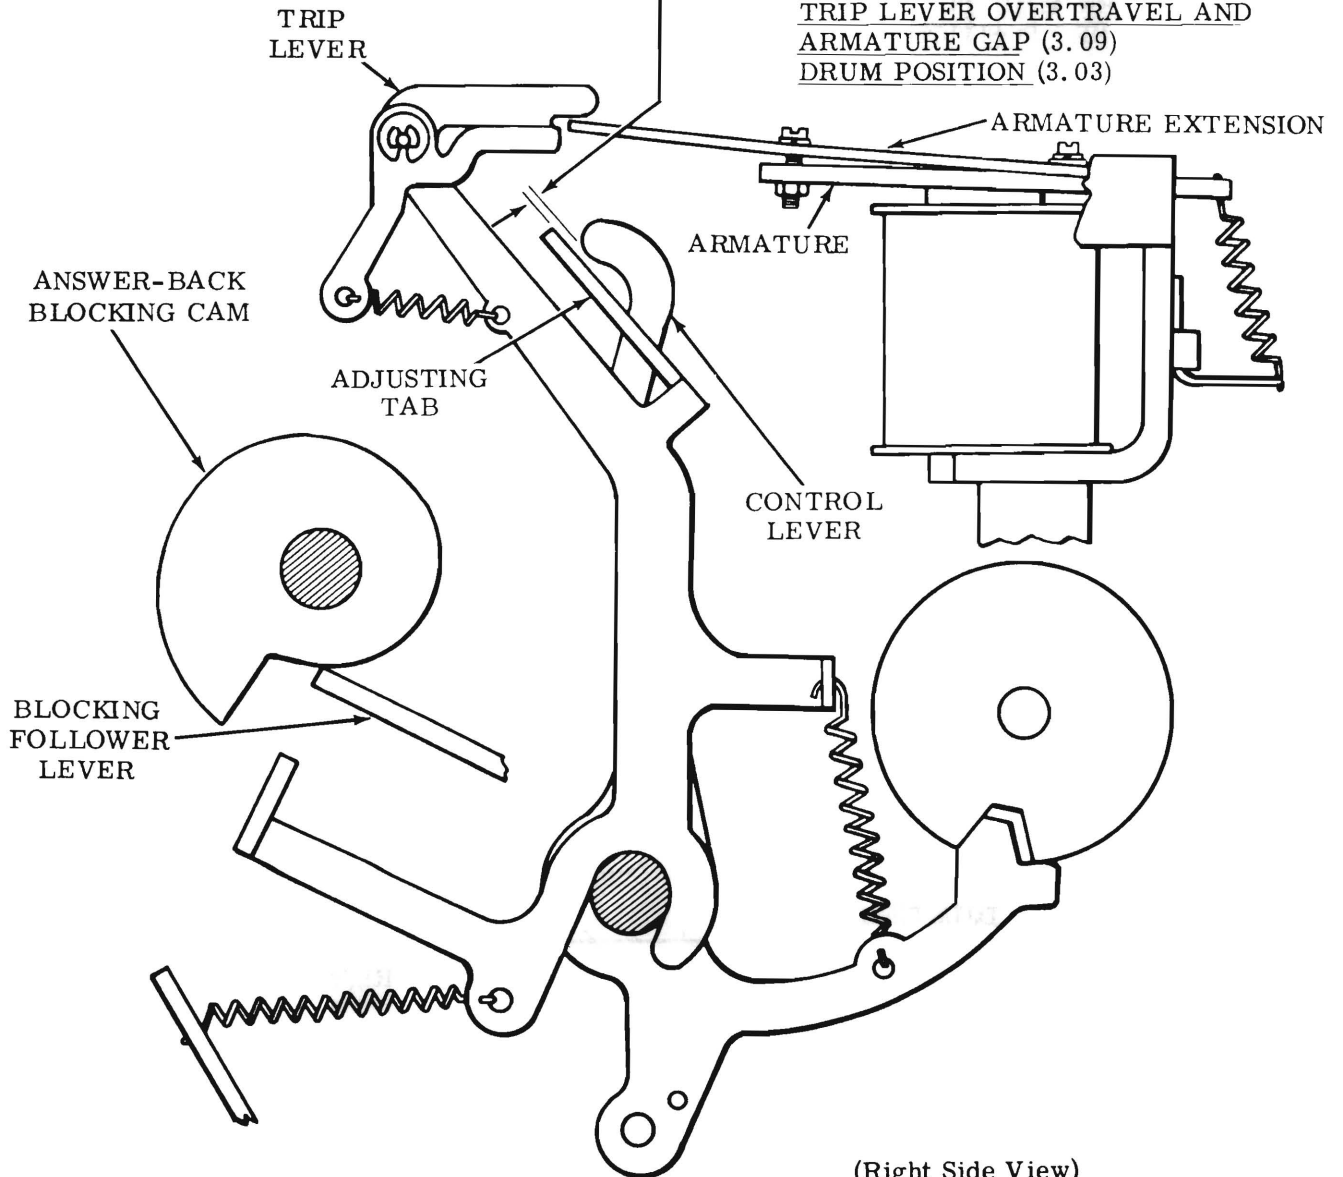

(Right Side View)

3.11 Answer-Back Area (continued)

CHARACTER SUPPRESSION CONTACT WIRE GAP

To Check

With answer-back drum fully detented in its home position, disengage (latch) distributor clutch.

Requirement

Min 0.030 inch---Max 0.055 inch  
between suppression contact wire and  
common contact.

To Adjust

Position adjusting spring on the tie link.

Related Adjustments


Affected By

TRIP LEVER OVERTRAVEL AND ARMATURE GAP (3.09)

DRUM POSITION (3.03)

TRIP LEVER ADJUSTING TAB CLEARANCE (3.10)

TRIP MAGNET POSITION (3.09)

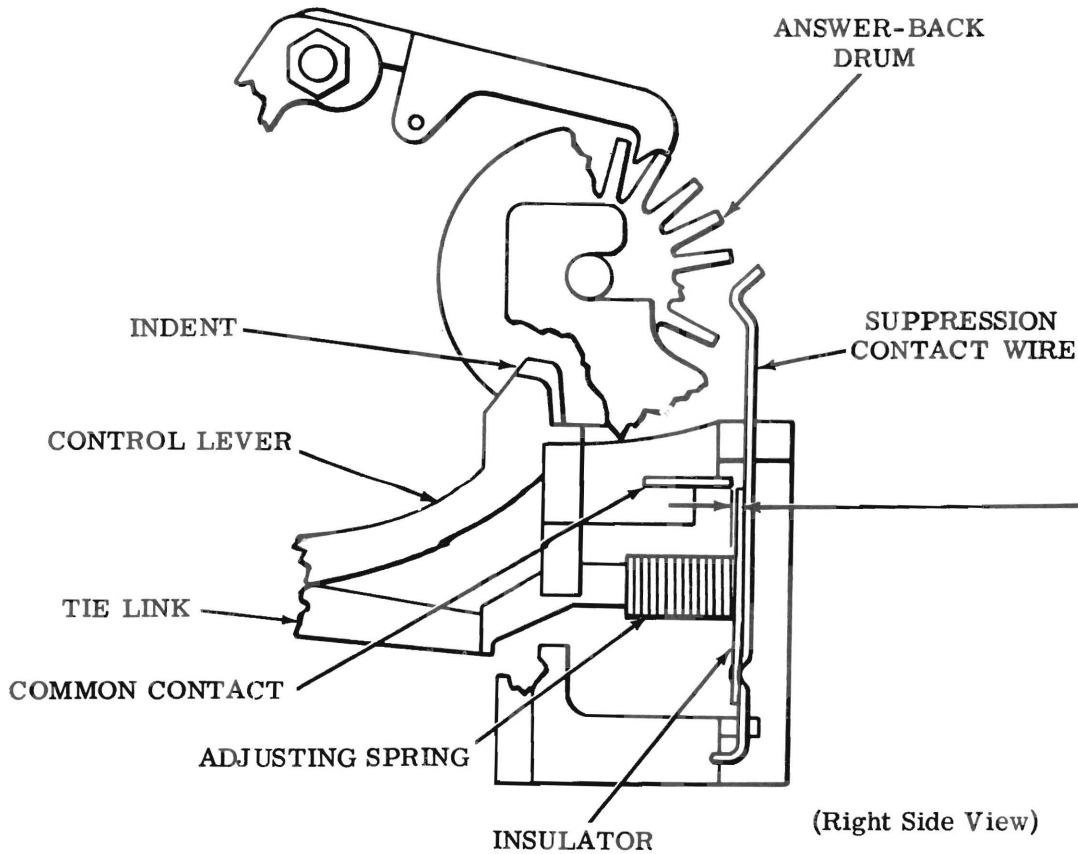

3.12 Answer-Back Area (continued)

CONTROL LEVER SPRING — VERTICAL (Early Design)

Note: This adjustment applies to early design typing units with TP180843 trip lever.


Requirement

With distributor clutch tripped and blocking follower lever on high part of blocking cam  
 Min 7-1/2 oz---Max 10-1/2 oz  
 to start control lever moving.

BLOCKING LATCH SPRING

Requirement

With distributor clutch disengaged (latched)  
 Min some\*---Max 3/4 oz  
 to start blocking latch moving.

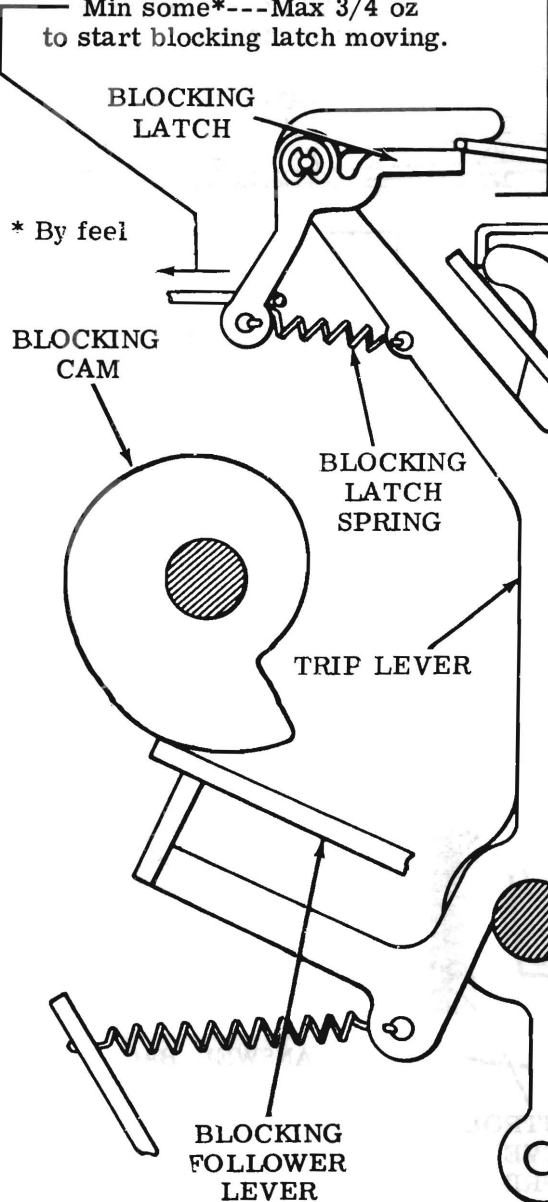


ARMATURE SPRING

To Check

Trip distributor clutch. Rotate main shaft until blocking follower lever is on high part of blocking cam and armature is in its un-attracted position.

Requirement

Min 2-1/2 oz---Max 3-1/2 oz  
 to start armature moving.

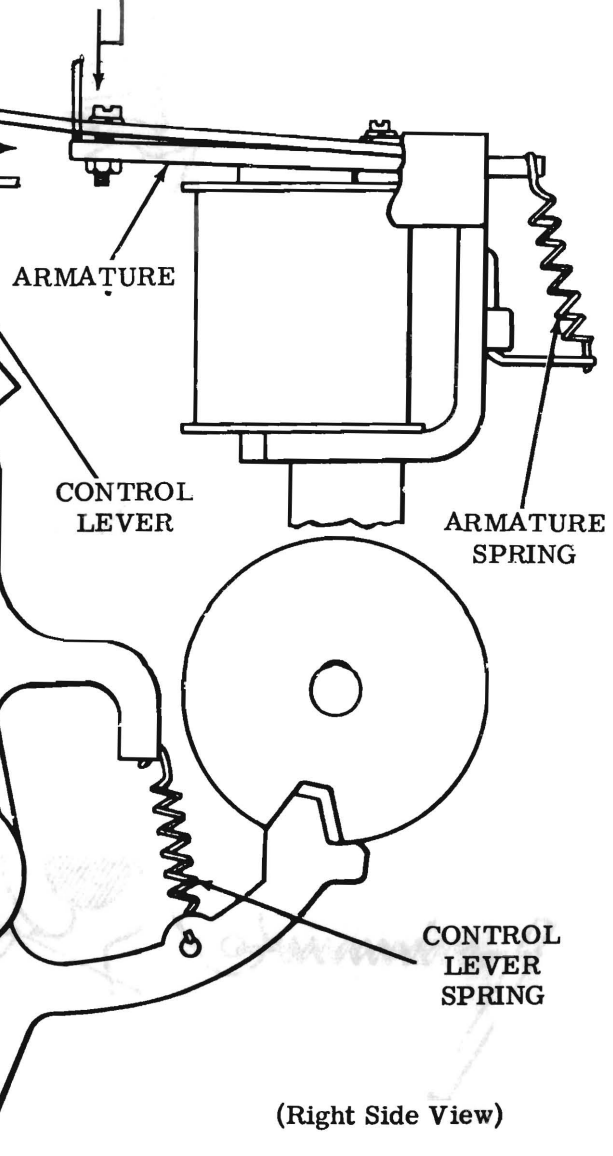

(Right Side View)

3.13 Answer-Back Area (continued)

TRIP LEVER SPRING

To Check

Disengage (latch) distributor clutch. Manually trip armature. Position stop bail so that its adjusting tab does not interfere with control lever. Hold armature in its attracted position.

Requirement

Min 3 oz---Max 4-1/2 oz  
to start trip lever moving.

CONTROL LEVER SPRING — VERTICAL  
(Late Design)


Note: This adjustment applies to late design typing units with TP182276 trip lever.

To Check


Disengage (latch) distributor clutch. Manually rotate the answer-back drum until control lever is on high part of answer-back drum. Position stop bail so that its adjusting tab does not interfere with control lever.

Requirement

Min 6 oz---Max 8 oz  
to start control lever moving.

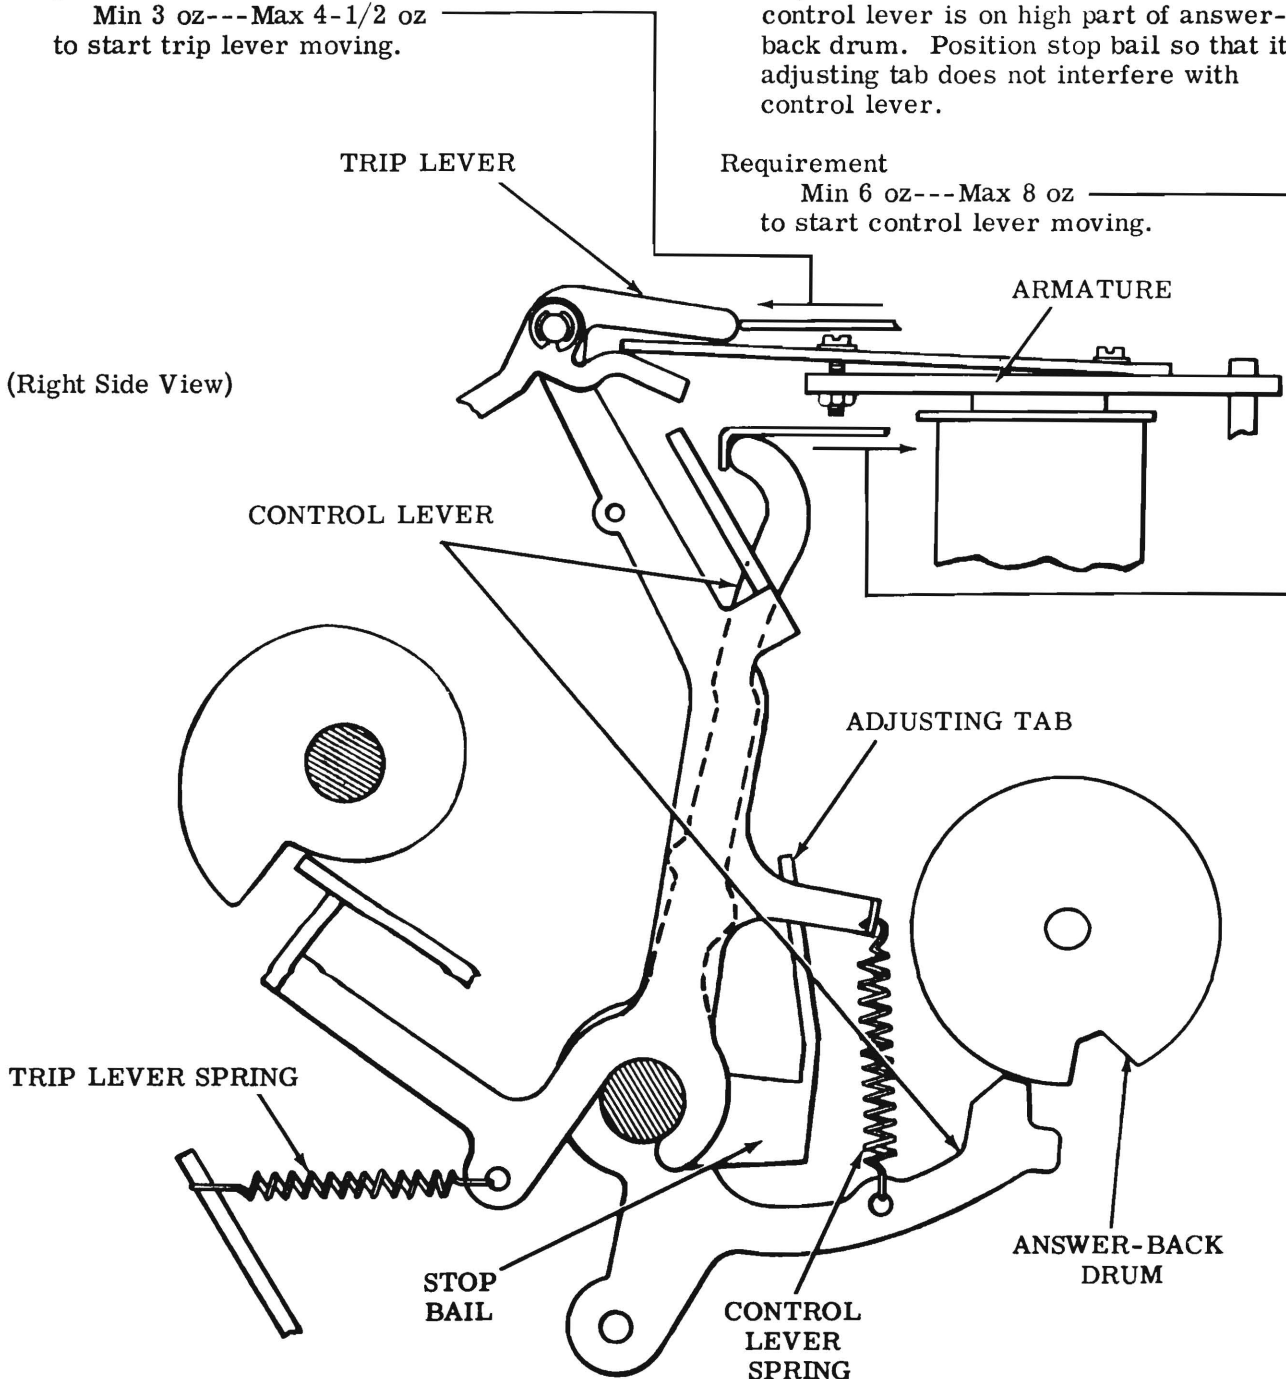

3.14 Answer-Back Area (continued)

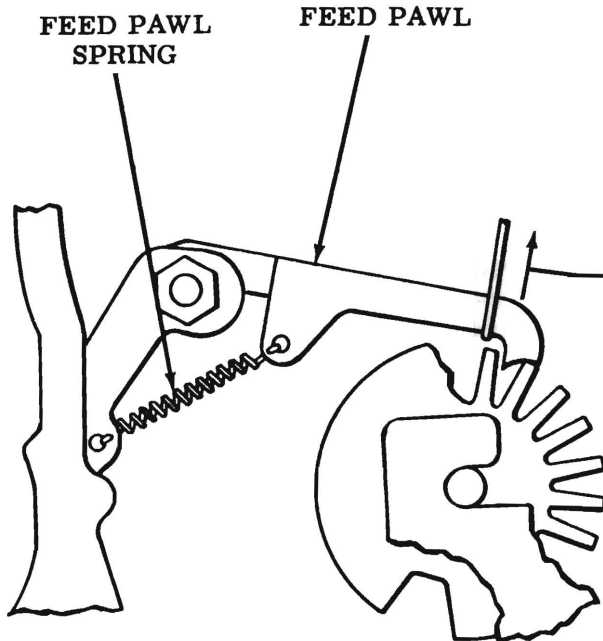

(Right Side View)

FEED PAWL SPRING

Requirement


With distributor clutch disengaged (latched)

Min 1/2 oz---Max 1-1/4 oz to start feed pawl moving.

DETENT SPRING

Requirement

Min 8 oz---Max 12 oz to start detent moving.

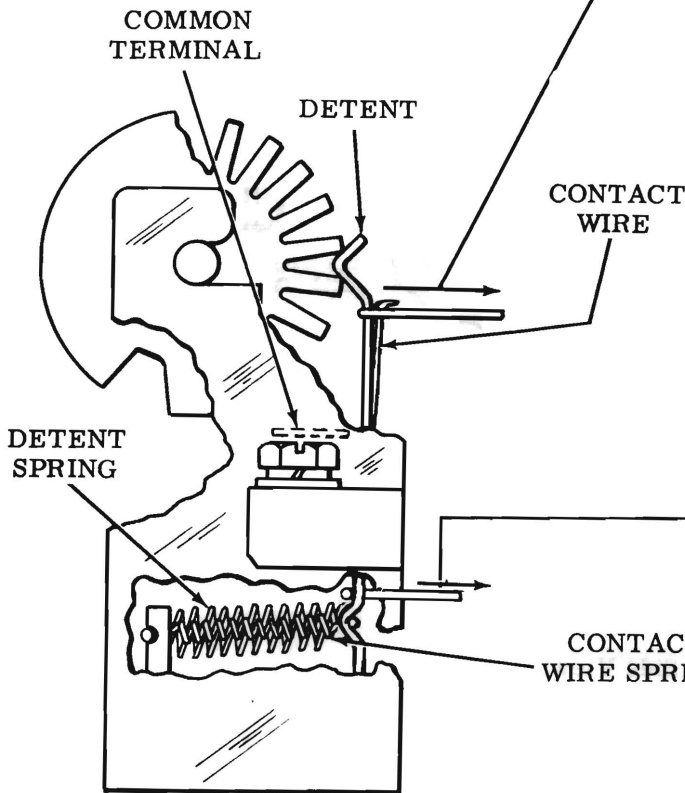

(Right Side View)

CONTACT WIRE SPRING

Requirement

Min 1 oz---Max 2 oz to start contact wire moving away from common terminal.


3.15 Answer-Back Area (continued)

FEEED LEVER SPRING

Requirement

With distributor clutch disengaged (latched) and feed pawl held out of engagement with answer-back drum

— Min 4-1/4 oz---Max 5-1/4 oz to start feed lever moving.

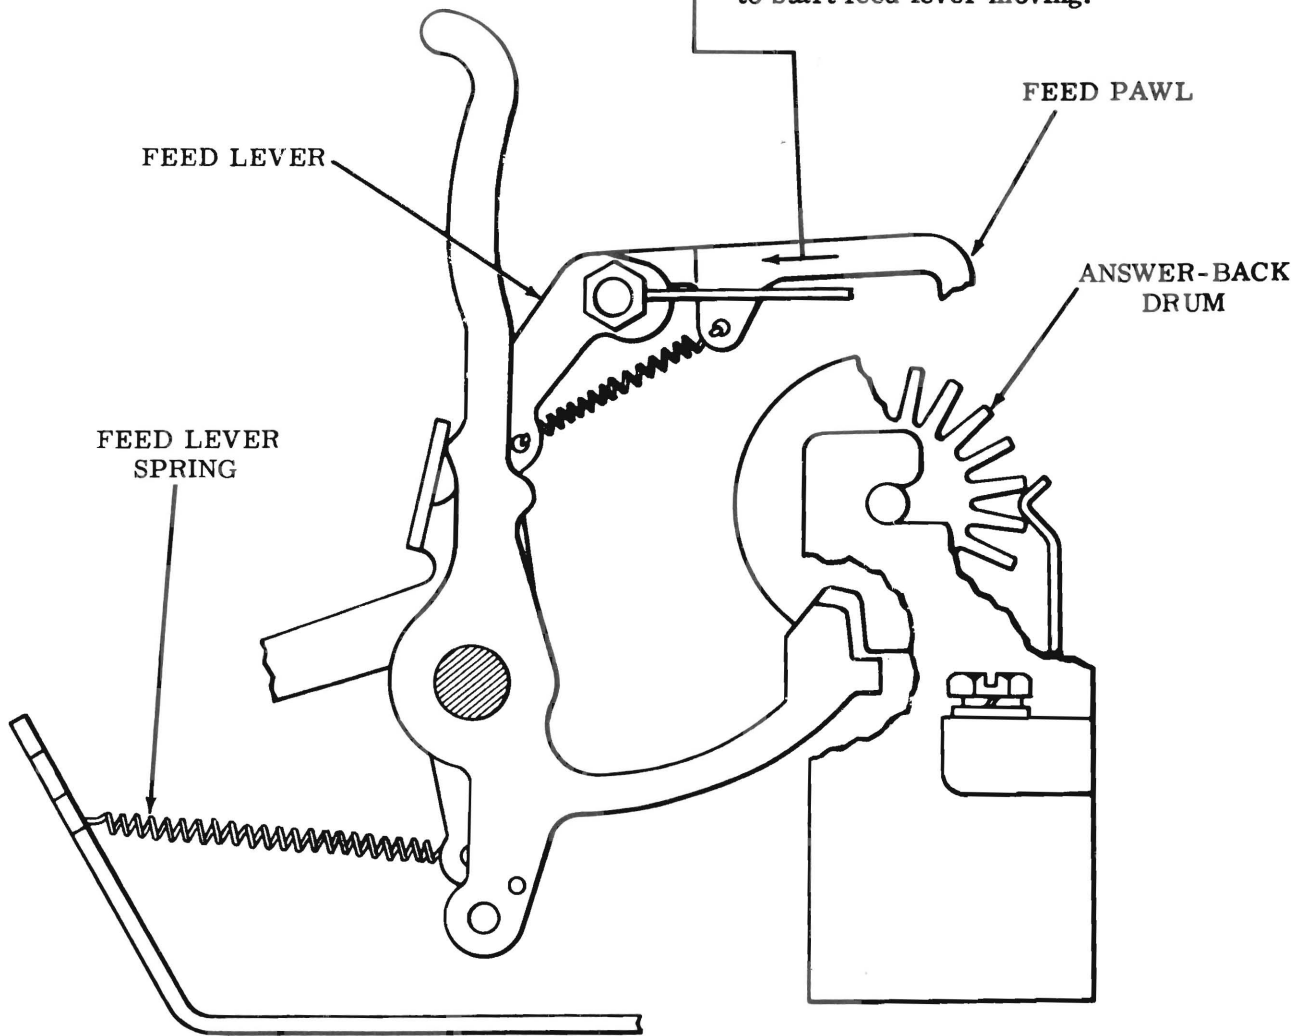

(Right Side View)

## 3.16 Function Box Switches (Function Area)

CONTACT ASSEMBLY POSITION

## (1) To Check

Set up code combination in selector that is to operate the function pawl associated with a contact arm and rotate the main shaft until the function bail is in its highest position.

## Requirement

Min 0.010 inch---Max 0.020 inch  
between the contact arm and the contact at the closest point as illustrated.

## (2) To Check

Place typing unit in stop condition.


## Requirement

Min some  
clearance between the function pawl and the tip of the contact arm.

## To Adjust


With two clampscrews friction tight, position the contact assembly on the function casting. If necessary, bend the upper contact. Tighten clampscrews.

Note: For (1) To Check, be sure that the contact arm lines up with and is in contact with the function pawl.

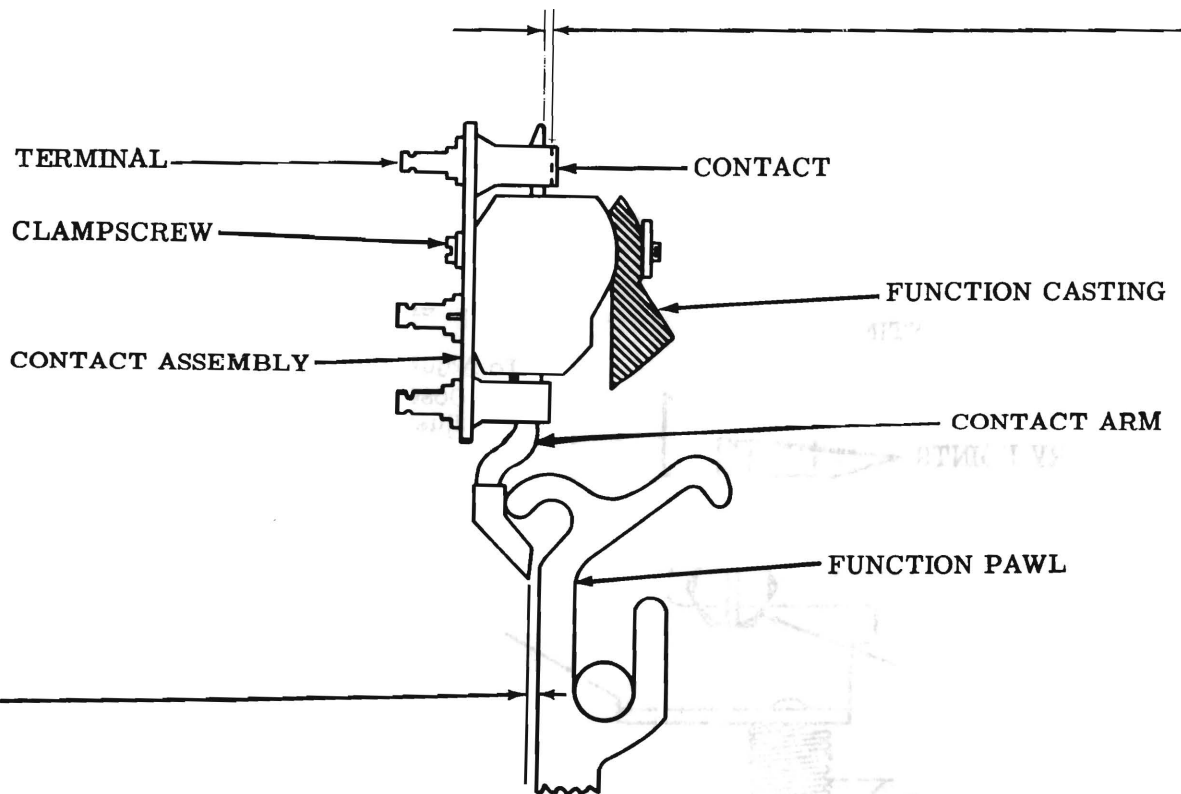

(Left Side View)

3.17 Receive-Only Sets (Distributor Area)

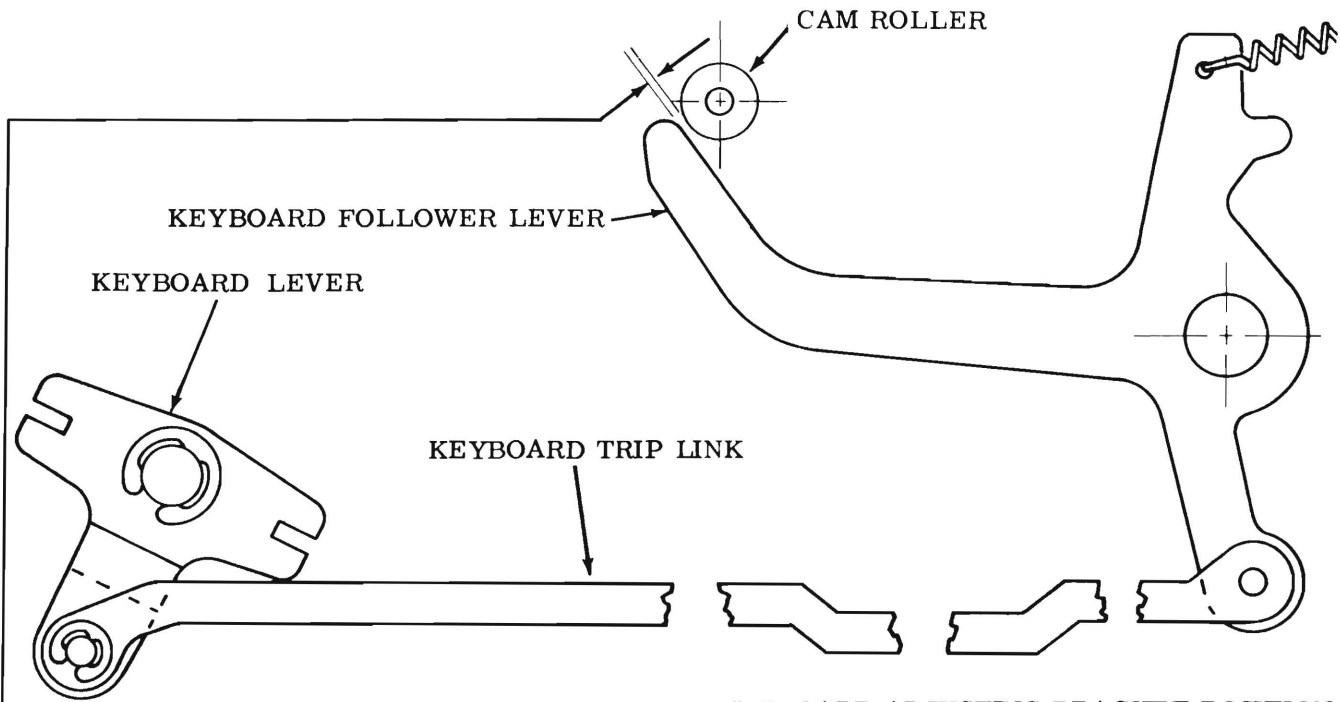

(Right Side View)

KEYBOARD ADJUSTING BRACKET POSITION

To Check


Trip distributor clutch and rotate main shaft until cam roller is on high part of keyboard follower lever. Place keyboard lever in its lowest position.

Requirement

Min some---Max 0.025 inch between keyboard follower lever and cam roller as gauged by eye.

To Adjust

Loosen clampscrew friction tight. Move adjusting bracket using pry points. Tighten clampscrew.

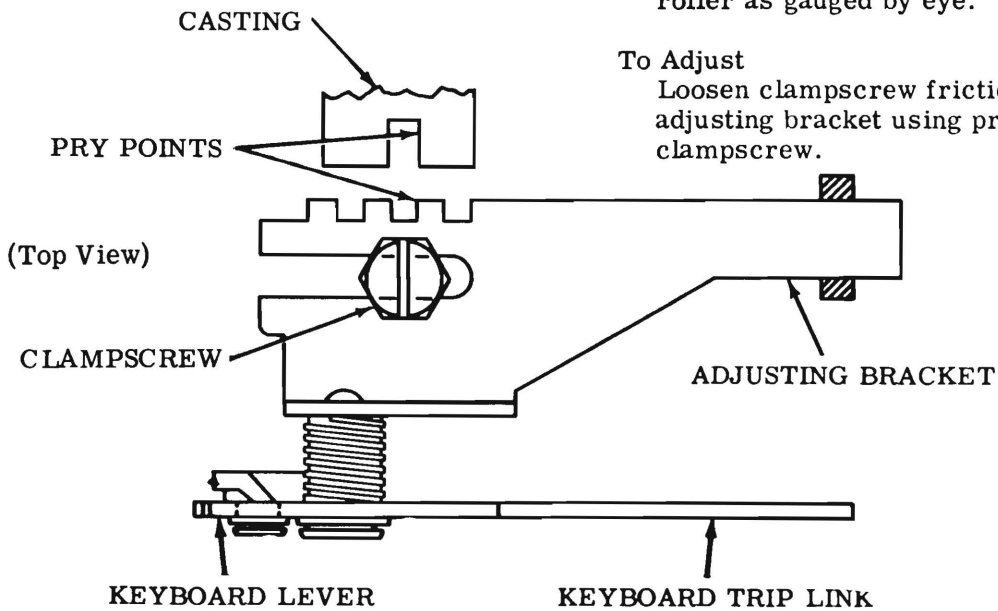

(Top View)

3.18 Auxiliary Contact Assembly (TP183594) (Main Shaft Area)

TIME DELAY CONTACT BRACKET POSITION

**To Check**

Place the typing unit in the stop condition. Engage the function clutch and rotate the main shaft until the cam follower is on high part of its cam.

**Requirement**

Max 0.010 inch separation of front contact spring from stiffener.


**To Adjust**

Loosen mounting screw and position bracket. Tighten screw.

FRONT CONTACT SPRING

**Requirement**

With typing unit in stop condition  
Min 4-1/2 oz---Max 6 oz  
to just separate the front contact spring from the stiffener.

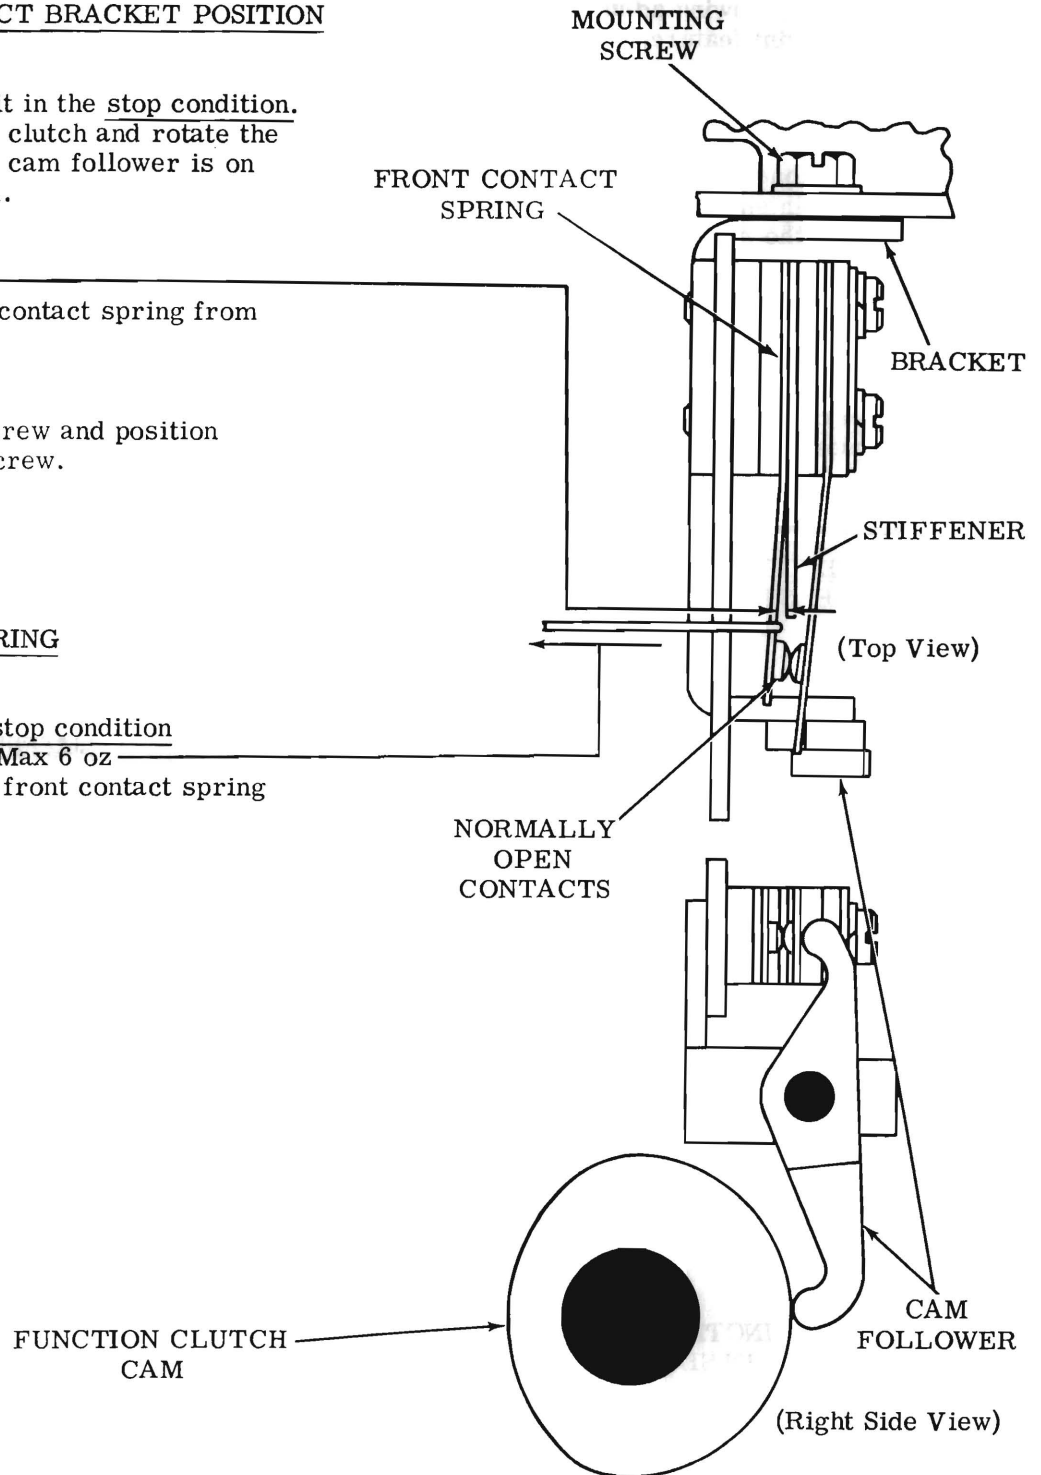

3.19 Print-Nonprint (Function Area)

Note: The following adjustment applies only to typing units equipped with automatic print-nonprint feature.

NONPRINT FUNCTION LEVER CLEARANCE

To Check

Push the nonprint codebar to the right until trip armature latches the latch bellcrank. Rotate main shaft until function lever is at its highest point of travel. Take up all play to minimize the required clearance.

Requirement

Min 0.005 inch---Max 0.025 inch  
between the function lever in slot 4 in function casting and tine of nonprint codebar.

To Adjust


Loosen clampscrews and adjust length of trip armature using pry point. Tighten clampscrews.

Related Adjustments

Affects

SOLENOID BRACKET POSITION (3.20 or 3.22)

RELEASE MAGNET OVERTRAVEL (3.21)

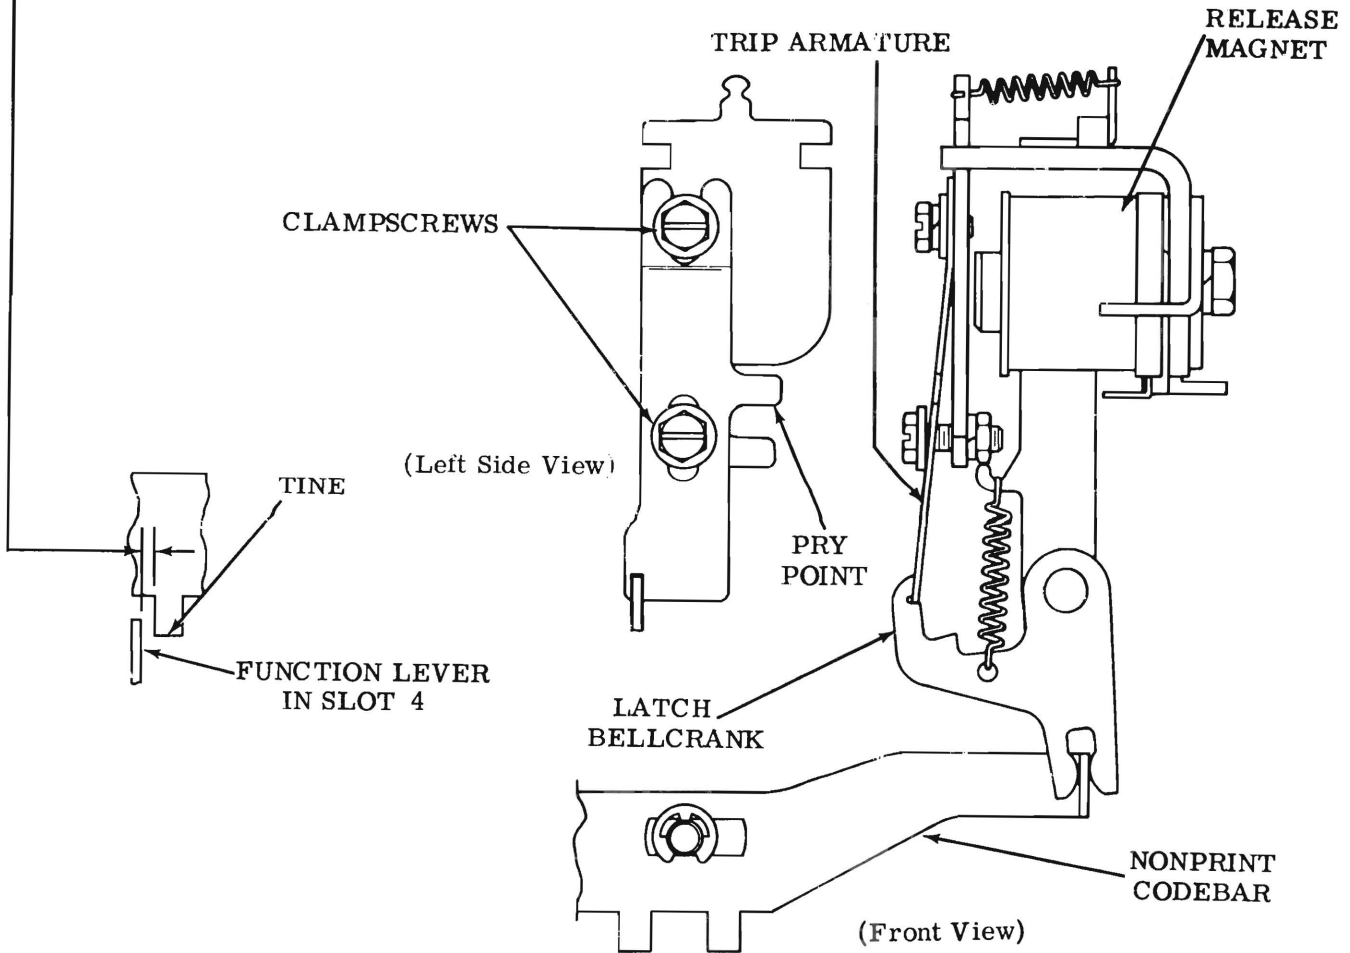

3.20 Print-Nonprint (Function Area)(continued)

Note: The following adjustments apply only to typing units equipped with the automatic print-nonprint feature — for units containing the manual print-nonprint feature, refer to 3.22.

SOLENOID BRACKET POSITION

To Check  
Energize solenoid.

Requirement  
Min 0.015 inch---Max 0.030 inch  
between trip armature and latch bellcrank.



To Adjust  
Loosen mounting screws and position  
solenoid using pry points. Tighten  
mounting screws.

Related Adjustment  
Affected By  
NONPRINT FUNCTION LEVER CLEARANCE  
(3.19)

ARMATURE SPRING

To Check  
With release magnet de-energized, place  
plunger to position it assumes when  
solenoid is energized. Hold plunger  
seated in that position.

Requirement  
Min 2-1/2 oz---Max 3-1/2 oz  
to start armature moving.

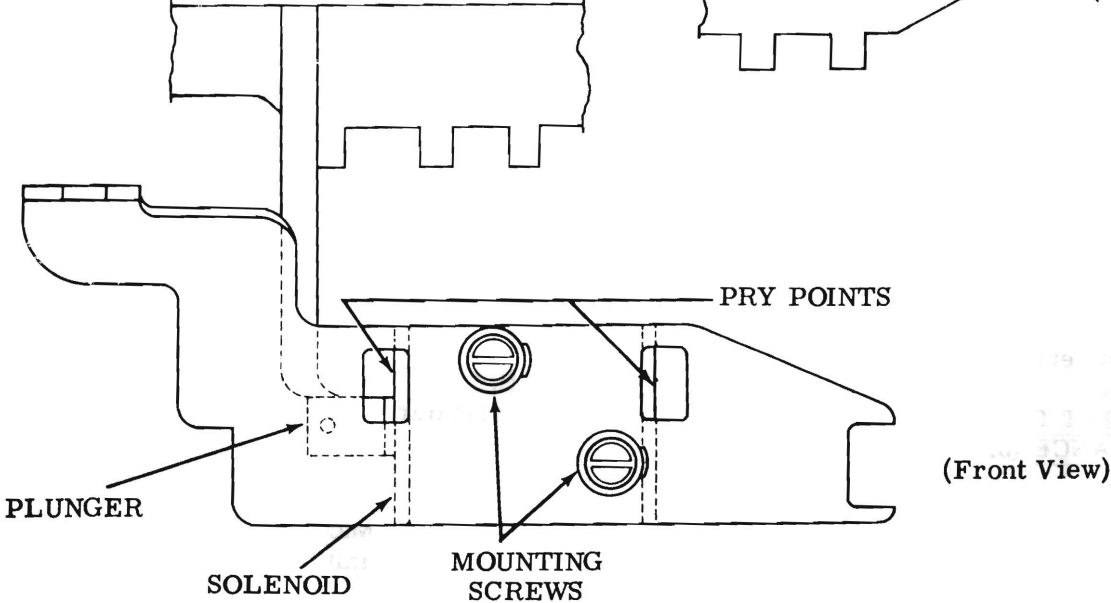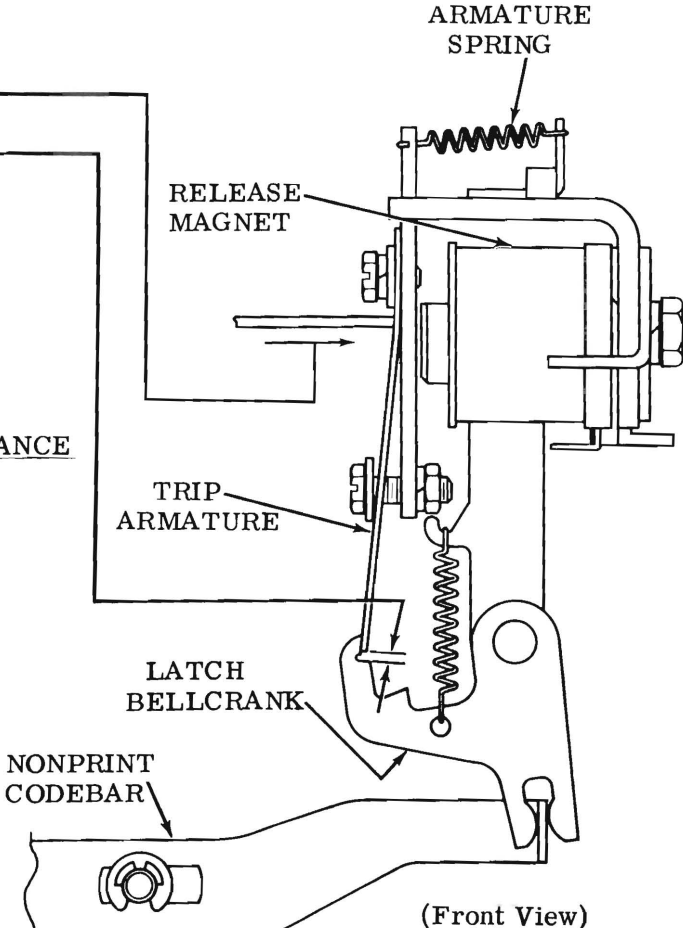

3.21 Print-Nonprint (Function Area) (continued)

RELEASE MAGNET OVERTRAVEL

To Check

Hold armature against release magnet pole face.


Requirement

Min 0.010 inch---Max 0.015 inch between trip armature and latch bellcrank.

To Adjust

Loosen clamp nut and position trip armature by turning adjusting screw. Tighten clamp nut.

Note: The following adjustments apply only to typing units equipped with the automatic print-nonprint feature.

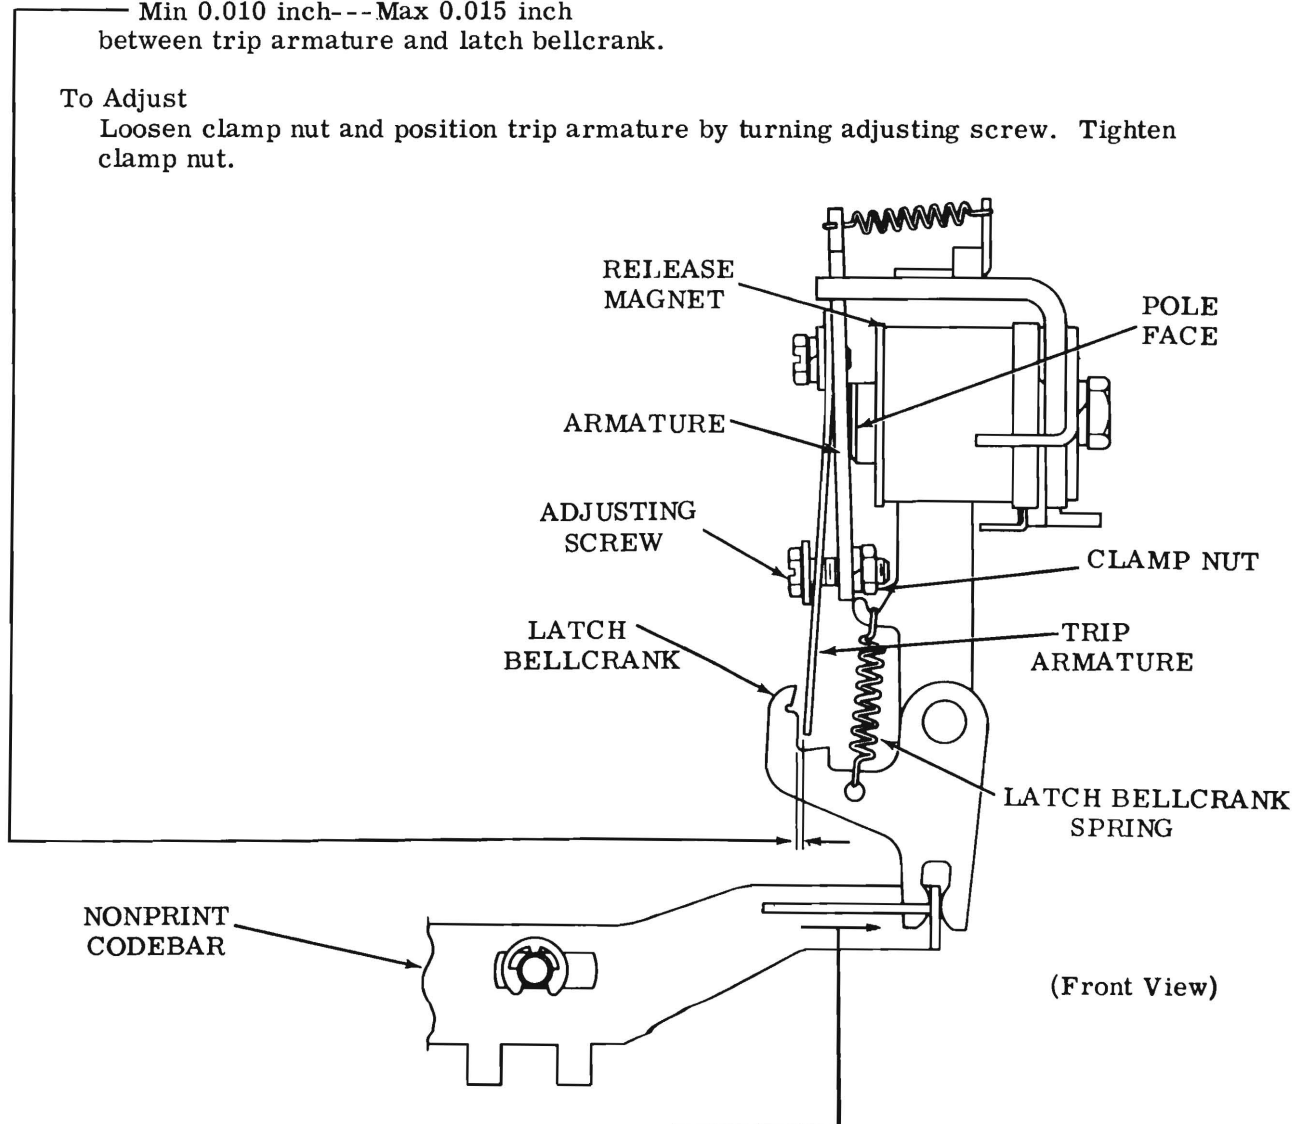

Related Adjustment

Affected By

NONPRINT FUNCTION LEVER CLEARANCE (3.19)

LATCH BELLCRANK SPRING

To Check

Hold armature against pole face of release magnet.

Requirement

Min 2 oz---Max 3 oz to start typing unit suppression codebar moving.

### 3.22 Print-Nonprint (Function Area) (continued)

Note: The following adjustment applies only to typing units equipped with the manual print-nonprint feature — for units containing the automatic print-nonprint feature, refer to 3.21.

#### SOLENOID BRACKET POSITION

##### To Check

Place plunger to position it assumes when solenoid is energized. Hold plunger seated in that position.


##### Requirement

Min 0.005 inch---Max 0.025 inch

between the function lever in slot 4 in function casting and tine of nonprint codebar.


##### To Adjust

Loosen mounting screws and position solenoid using pry points.

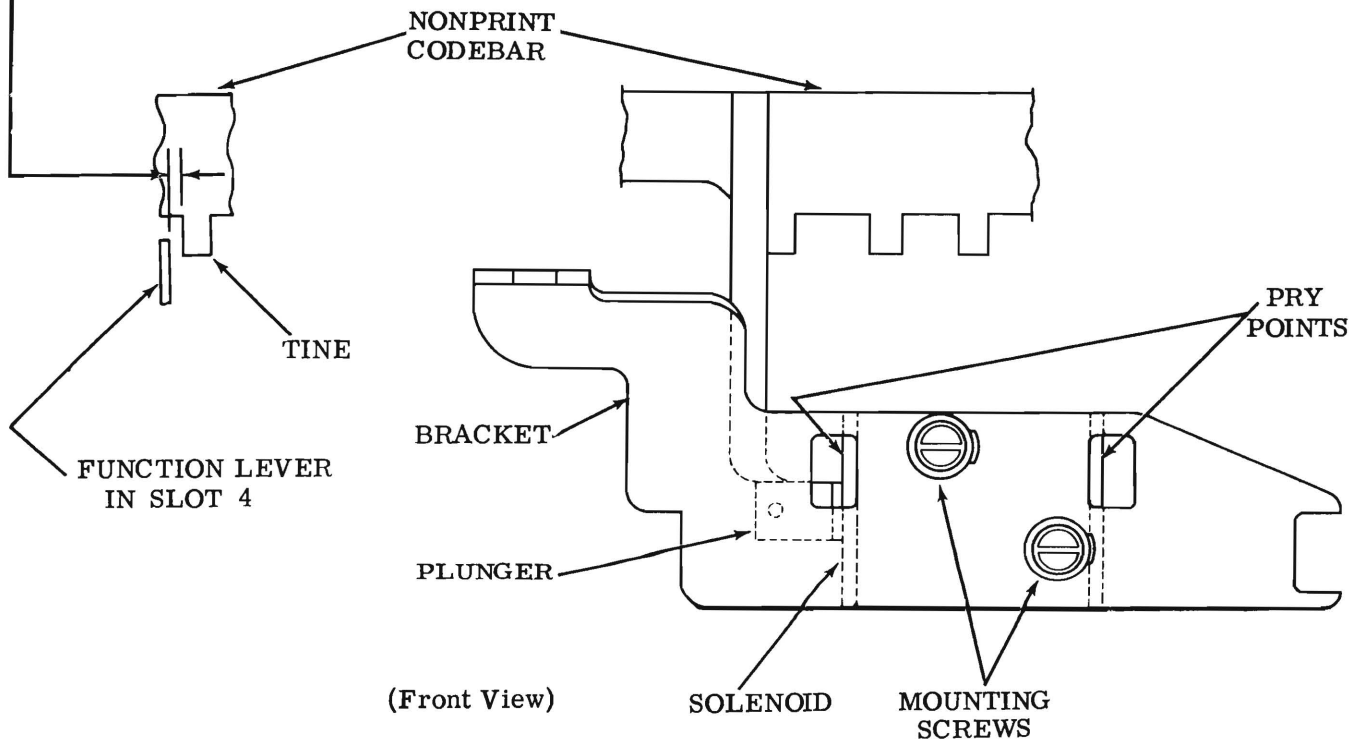

3.23 Print-Nonprint (Function Area) (continued)

Note: The following adjustment applies only to typing units equipped with the manual print-nonprint feature.

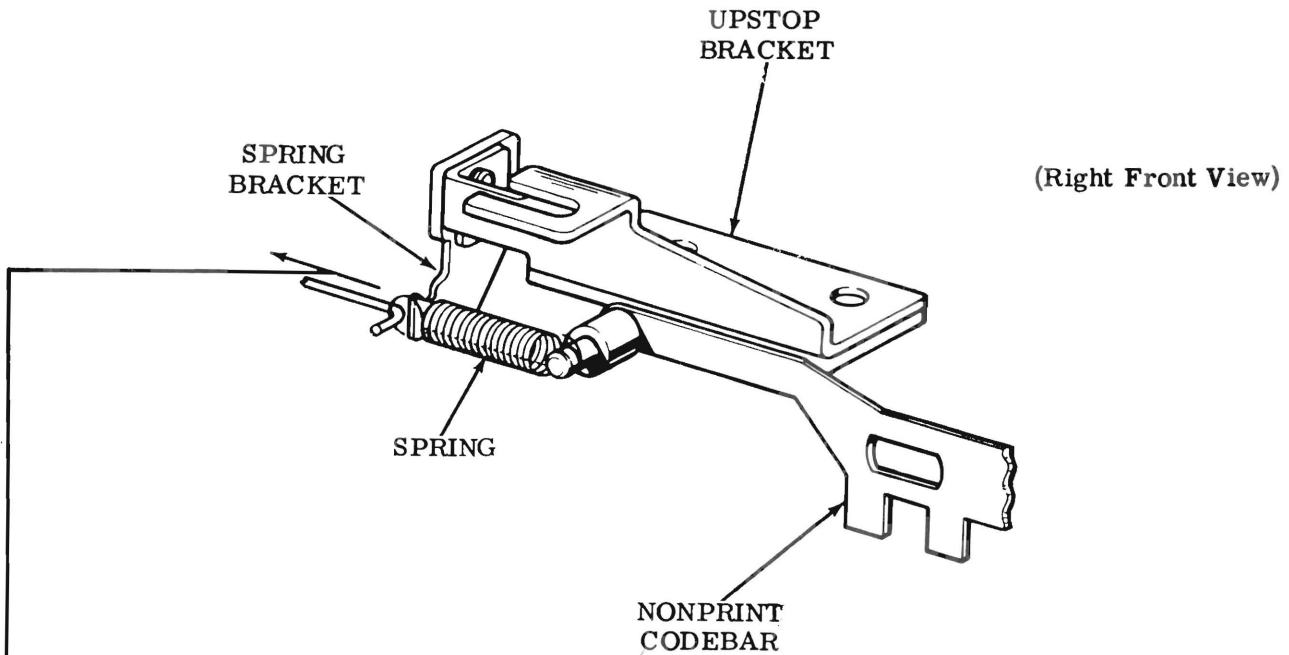

NONPRINT CODEBAR SPRING

To Check  
Place nonprint codebar in its unoperated position.

Requirement  
Min 3 oz---Max 3-1/2 oz  
to pull spring to installed length.

## 3.24 Function Area

**CODING AND INSTALLATION OF TP180801 UNIVERSAL FUNCTION LEVER**

**Note:** The following instructions do not apply to the answer-back function lever and the carriage return drive function lever.

- (a) The tines on the universal function lever are numbered from right to left in the illustration as follows: PS, 1, 2, 3, 4, 5, 7, 6, 8.
- (b) There are two rows of tines on the universal function lever. The straight row of tines corresponds to the marking pulses of a given code combination. The bent row of tines corresponds to the spacing pulses of a given code combination.
- (c) Break both the marking and spacing no. 8 tines on units without parity. On units with parity do not break off the marking and spacing no. 8 tines.
- (d) The tines on the universal function lever are easily broken off with long nose pliers.
- (e) The TP180801 universal function lever is to be installed only in the numbered slots of the function casting.
- (f) If the typing unit is equipped with a function lever retainer, lower the retainer sufficiently to allow the universal function lever to be installed under the codebar basket. Readjust the function lever retainer.
- (g) Place the universal function lever under the codebar basket with the open end of the pivot slot on the pivot shaft.
- (h) Holding the lever vertically, squeeze it onto the pivot shaft with a pair of pliers. This is a "snap" fit and sufficient pressure should be applied with the pliers to get the lever fully on the shaft. The lever should pivot freely once on the shaft.
- (i) Locate the proper numerical slot on the function casting, place the lever in the slot, and install a TP91120 spring.

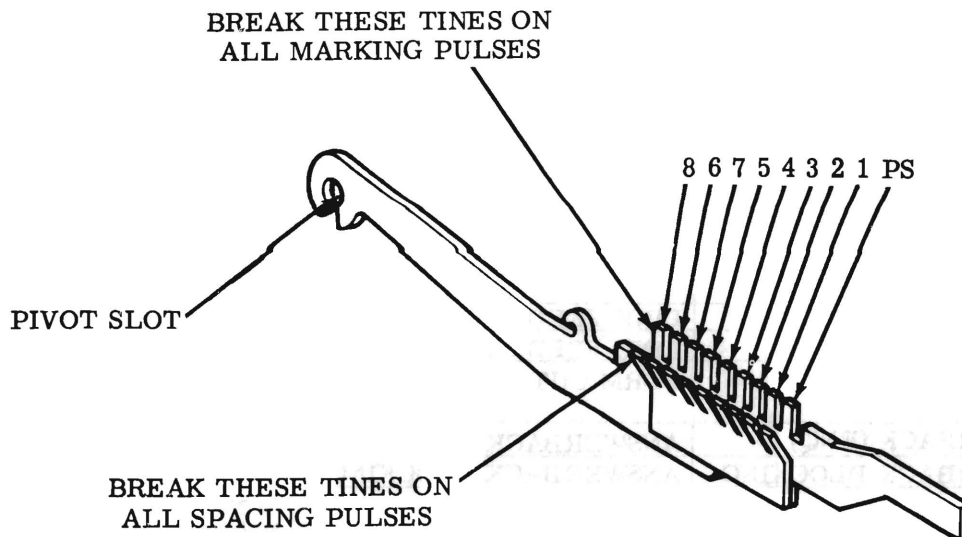


CHART  
FUNCTION LEVER CODE ARRANGEMENT

SLOTS	FRICITION FEED	SPROCKET FEED
* SEE NOTE 2	LINE FEED BLOCKING	
1 SEE NOTE 2	LINE FEED NEW LINE	NEW LINE
A	AUTOMATIC CARRIAGE RETURN NEW LINE	NEW LINE
2	CARRIAGE RETURN NEW LINE	CARRIAGE RETURN NEW LINE
B	CARRIAGE RETURN ACTUATING	CARRIAGE RETURN ACTUATING
3	SPACE	SPACE
4	PRINT SUPPRESSION ON DELETE, DCI, AND NUL	PRINT SUPPRESSION ON DELETE, DCI, AND NUL
5	PRINT SUPPRESSION ON DELETE	PRINT SUPPRESSION ON DELETE
6	PRINT SUPPRESSION ON ALL CONTROL CHARAC- TERS	PRINT SUPPRESSION ON ALL CONTROL CHARAC- TERS
7	BELL	BELL
F	MARGIN BELL	MARGIN BELL
8	SO ENQ	SO ENQ
9	SI ACK DC1	SI ACK DC1
10	ACK ENQ EOT ENQ/EOT (See Note 3) DC1 DC2	ACK ENQ/EOT (See Note 3) DC1 DC2
11	DC3 DC4 ACK DC3/DC1 (See Note 3)	DC3 DC4 DC3/DC1 (See Note 3)
12	BELL EOT ETX ENQ	EOT ENQ ETX
13	EOT	LINE FEED
M		LINE FEED STRIP
14	ACK ETX	FORM OUT
15	ANSWERBACK (ENQ)	ANSWERBACK (ENQ)
0	ANSWERBACK BLOCKING	ANSWERBACK BLOCKING

Note 1: Some slots have more than one function lever designation. The particular function lever for these slots depends on the set. Some sets have no function lever in these slots.

Note 2: The function levers in the \* and 1 positions do not occupy slots in the function casting. They are guided by slots in brackets. The brackets are illustrated in the appropriate parts sections.


Note 3: The function lever will respond to either code combination and momentarily open a normally closed contact on the function casting.

Abbreviations:

DC1 - Reader On  
DC2 - Punch On  
DC3 - Reader Off  
DC4 - Punch Off  
SI - Shift In  
SO - Shift Off  
ACK - Acknowledge  
ENQ - Enquire  
EOT - End of Transmission  
ETX - End of Text  
NUL - Null  
LF - Line Feed  
BEL - Bell

Note 4: This figure is to be used with the function lever arrangement shown in Figure 6.

Note 5: The following slots have no function levers at present: C, D, E, G, H, J, K, L, N.

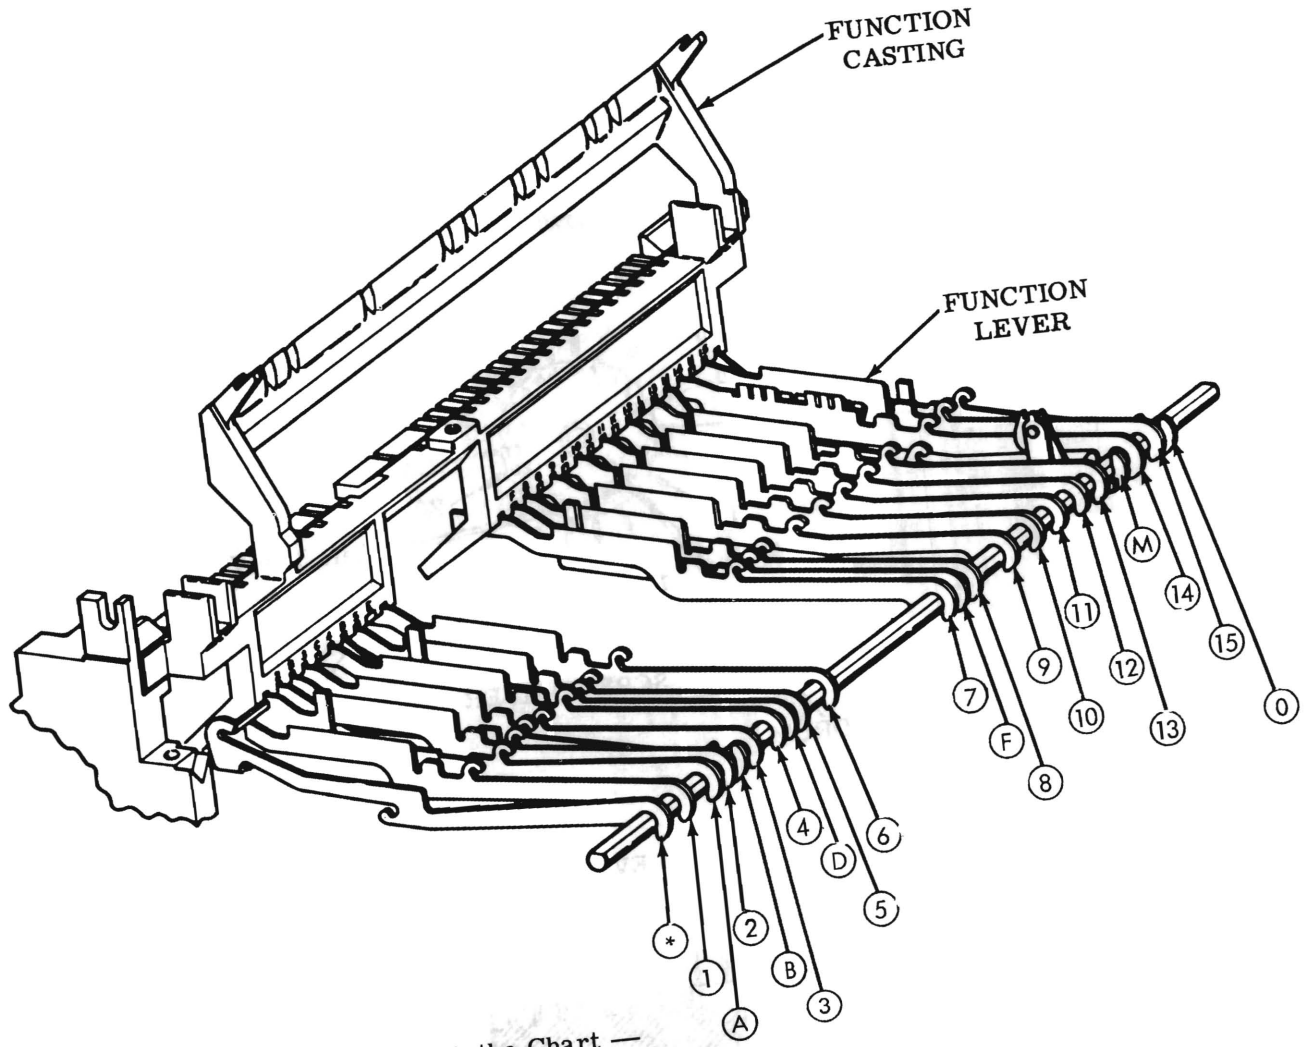

Note: This figure is to be used with the Chart —  
Function Lever Code Arrangement.

Figure 5 - Function Lever Code Arrangement

3.25 Answer-Back Area (continued)

CODING THE ANSWER-BACK DRUM

- (a) To remove the answer-back drum for coding, press back and down on the tab portion of the TP180854 brace until it becomes detented in its open position. Lift feed pawl slightly (do not overextend its spring) and remove drum.
- (b) Code the answer-back drum in a counterclockwise direction starting with row no. 1 (see illustration).

Note: The ST row is the first row sensed at the beginning of an answer-back cycle. It is coded at the factory for character suppression and must not be recorded.

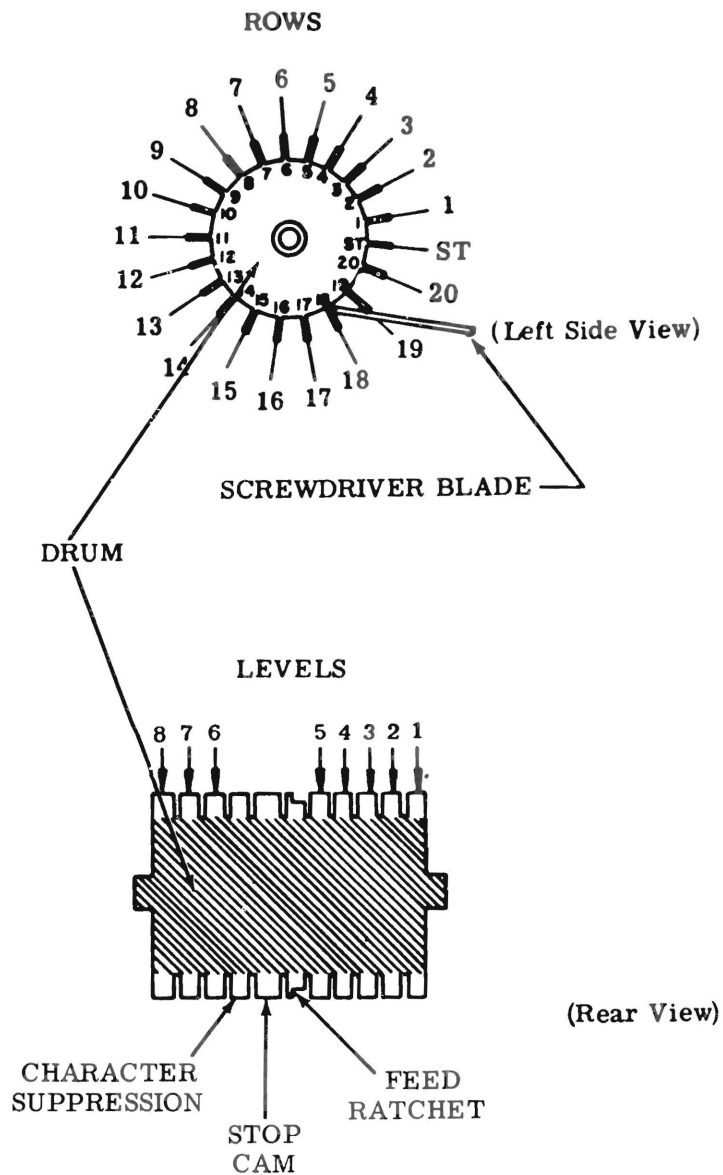


Figure 7 - Answer-Back Drum

3.26 Answer-Back Area (continued)

- (c) A particular character is coded by either retaining or removing tines within a row, as illustrated in Figure 7. A tine may be removed by either of the two following methods:

**Method 1:** Place the end of a screwdriver blade at the base of a tine in the row previously coded. Press the side of the blade against the top of the unwanted tine until the tine breaks off. Figure 7 illustrates this method — pressure applied to base of row no. 18 and against top of adjacent tine being removed from row no. 19.

**Method 2:** Place the unwanted tine in the slot of a TP161686 tine tool, or grasp the tine firmly with long-nose pliers. With the tool or pliers held stationary, rotate the answer-back drum back and forth until the tine breaks off near its base. Do not damage adjacent tines.

**Note:** If a coding error is made, or for some other reason it is necessary to suppress (erase) characters from the answer-back drum, remove the character suppression tine from the row(s) affected.

- (d) The length of an answer-back sequence can be varied either by removing the stop cam tine(s) and/or the character suppression tine(s).
- (e) For short sequences, code the drum for either 2- or 3-cycle operation by removing the appropriate tine(s) as indicated in Figure 8.
- (f) Removal of the character suppression tine from any row presents transmission from the answer-back mechanism. To shorten the answer-back sequence, remove the suppression tine from any unused row(s) after the end of a message.

**Note:** On sets used in systems where a response to each answer-back activation signal must be obtained, do not remove the character suppression tine from the last row of each segment of the answer-back drum. For answer-back drums coded for 1-cycle operation this is row no. 20. The last row can be coded with any other character that is compatible with the particular system.

- (g) The number of rows available for message coding is shown below for 1-, 2-, or 3-cycle operation.

CYCLE OPERATION	TOTAL ROWS	AVAILABLE ROWS
1	21	20
2	10(11)*	9(10)*
3	7	6

\*Alternately one, then the other.

- (h) The number of rows available for actual station identification is less than shown above because each coded message should begin and end with CARRIAGE RETURN and LINE FEED (this may be altered in specific applications). This assures that the transmitted message will appear at the beginning of a line of the receiving teletypewriter set and eliminates overprinting.

3.27 Answer-Back Area (continued)

- (i) In switched network service, the station identification for 1-cycle operation may not exceed 14 characters, including spaces. The answer-back drum should be coded as follows:

<u>ABBREVIATION</u>	<u>KEY TO ABBREVIATION</u>
ACK	Acknowledge
CR	Carriage Return
LF	Line Feed
RO	Rub Out
SP	Space
SUP	Character Suppression

(a) Example 1:

```
SUP CR LF RO
TELETYPE SP NILES CR LF ACK
Company      City
```

Station Identification  
(Maximum - 14 characters)

Note: In this system, the ACK character code combination must be the final significant character code combination in the coded answer-back message.

(b) Example 2:

```
SUP CR LF RO
ERIE SP BOST CR LF ACK SUP SUP SUP SUP SUP
Company  City
```

Station Identification  
(Less than maximum number of characters)

Note: If the station identification is less than the maximum of 14 characters in length, then the remaining rows on the answer-back drum must be coded with the character suppression code according to Example 2 above.

- (j) To replace the answer-back drum, place the TP180854 brace in its detented open position, and lift feed pawl (do not overextend its spring). Replace drum with its shaft firmly seated in the contact block slots. Release feed pawl and TP180854 brace. Rotate answer-back drum to assure proper seating of its associated parts. Check that the contact wires are located in their proper slots.

ASCII CODE			
1967 Edition	1965 Edition	1963 Edition	MARKING REMOVE TINES
NUL		NULL	NONE
SOH		SOM	1-8
STX		EOA	2-8
ETX		EOM	1-2
EOT			3-8
ENQ		WRU	1-3
ACK		RU	2-3
BEL		BELL	1-2-3-8
BS		FE <sub>o</sub>	4-8
HT		HT/SK	1-4
LF			2-4
VT		VTAB	1-2-4-8
FF			3-4
CR			1-3-4-8
SO			2-3-4-8
SI			1-2-3-4
DLE		DC <sub>o</sub>	5-8
DC1			1-5
DC2			2-5
DC3			1-2-5-8
DC4		DC4 (STOP)	3-5
NAK		ERR	1-3-5-8
SYN		SYNC	2-3-5-8
ETB		LEM	1-2-3-5
CAN		S <sub>o</sub>	4-5
EM		S <sub>i</sub>	1-4-5-8
SUB	SS	S <sub>z</sub>	2-4-5-8
ESC		S <sub>j</sub>	1-2-4-5
FS		S <sub>4</sub>	3-4-5-8
GS		S <sub>5</sub>	1-3-4-5
RS		S <sub>6</sub>	2-3-4-5
US		S <sub>7</sub>	1-2-3-4-5-8
SP		b	6-8
			1-6
"			2-6
#			1-2-6-8
\$			3-6
%			1-3-6-8
&			2-3-6-8
'		'	1-2-3-6
(			4-6
)			1-4-6-8
*			2-4-6-8
+			1-2-4-6
,			3-4-6-8
-			1-3-4-6
.			2-3-4-6
/			1-2-3-4-6-8
0			5-6
!			1-5-6-8

ASCII CODE			
1967 Edition	1965 Edition	1963 Edition	MARKING REMOVE TINES
2			2-5-6-8
3			1-2-5-6
4			3-5-6-8
5			1-3-5-6
6			2-3-5-6
7			1-2-3-5-6-8
8			4-5-6-8
9			1-4-5-6
:			2-4-5-6
;			1-2-4-5-6-8
<			3-4-5-6
=			1-3-4-5-6-8
>			2-3-4-5-6-8
?			1-2-3-4-5-6
@		@	7-8
A			1-7
B			2-7
C			1-2-7-8
D			3-7
E			1-3-7-8
F			2-3-7-8
G			1-2-3-7
H			4-7
I			1-4-7-8
J			2-4-7-8
K			1-2-4-7
L			3-4-7-8
M			1-3-4-7
N			2-3-4-7
O			1-2-3-4-7-8
P			5-7
Q			1-5-7-8
R			2-5-7-8
S			1-2-5-7
T			3-5-7-8
U			1-3-5-7
V			2-3-5-7
W			1-2-3-5-7-8
X			4-5-7-8
Y			1-4-5-7
Z			2-4-5-7
[			1-2-4-5-7-8
\	~	\	3-4-5-7
]			1-3-4-5-7-8
^		†	2-3-4-5-7-8
_		←	1-2-3-4-5-7
!	—	ACK	3-4-5-6-7-8
}		ALT. MODE	1-3-4-5-6-7
~		ESC	2-3-4-5-6-7
DEL			1-2-3-4-5-6-7-8
{			1-2-4-5-6-7

REMOVE TINES IN THE FOLLOWING ROWS TO GET THE PROPER CYCLE		
CYCLES	CHARACTER SUPPRESSION	STOP CAM
1 Cycle	Row ST	Row 6
2 Cycle	Row ST Row 11	Row 6 Row 17
3 Cycle	Row ST Row 7 Row 14	Row 6 Row 13 Row 20

Note 1: Blank spaces in the ASCII (United States of America Standard Code for Information Interchange) columns indicate no change from the latest edition of the code.


Note 2: Codes shown are for even parity operation. For nonparity operation, remove the eighth level tine.

Note 3: Tines present on the drum represent spacing bits. Tines removed from the drum represent marking bits.

Figure 8 - Answer-Back Drum Code Arrangement





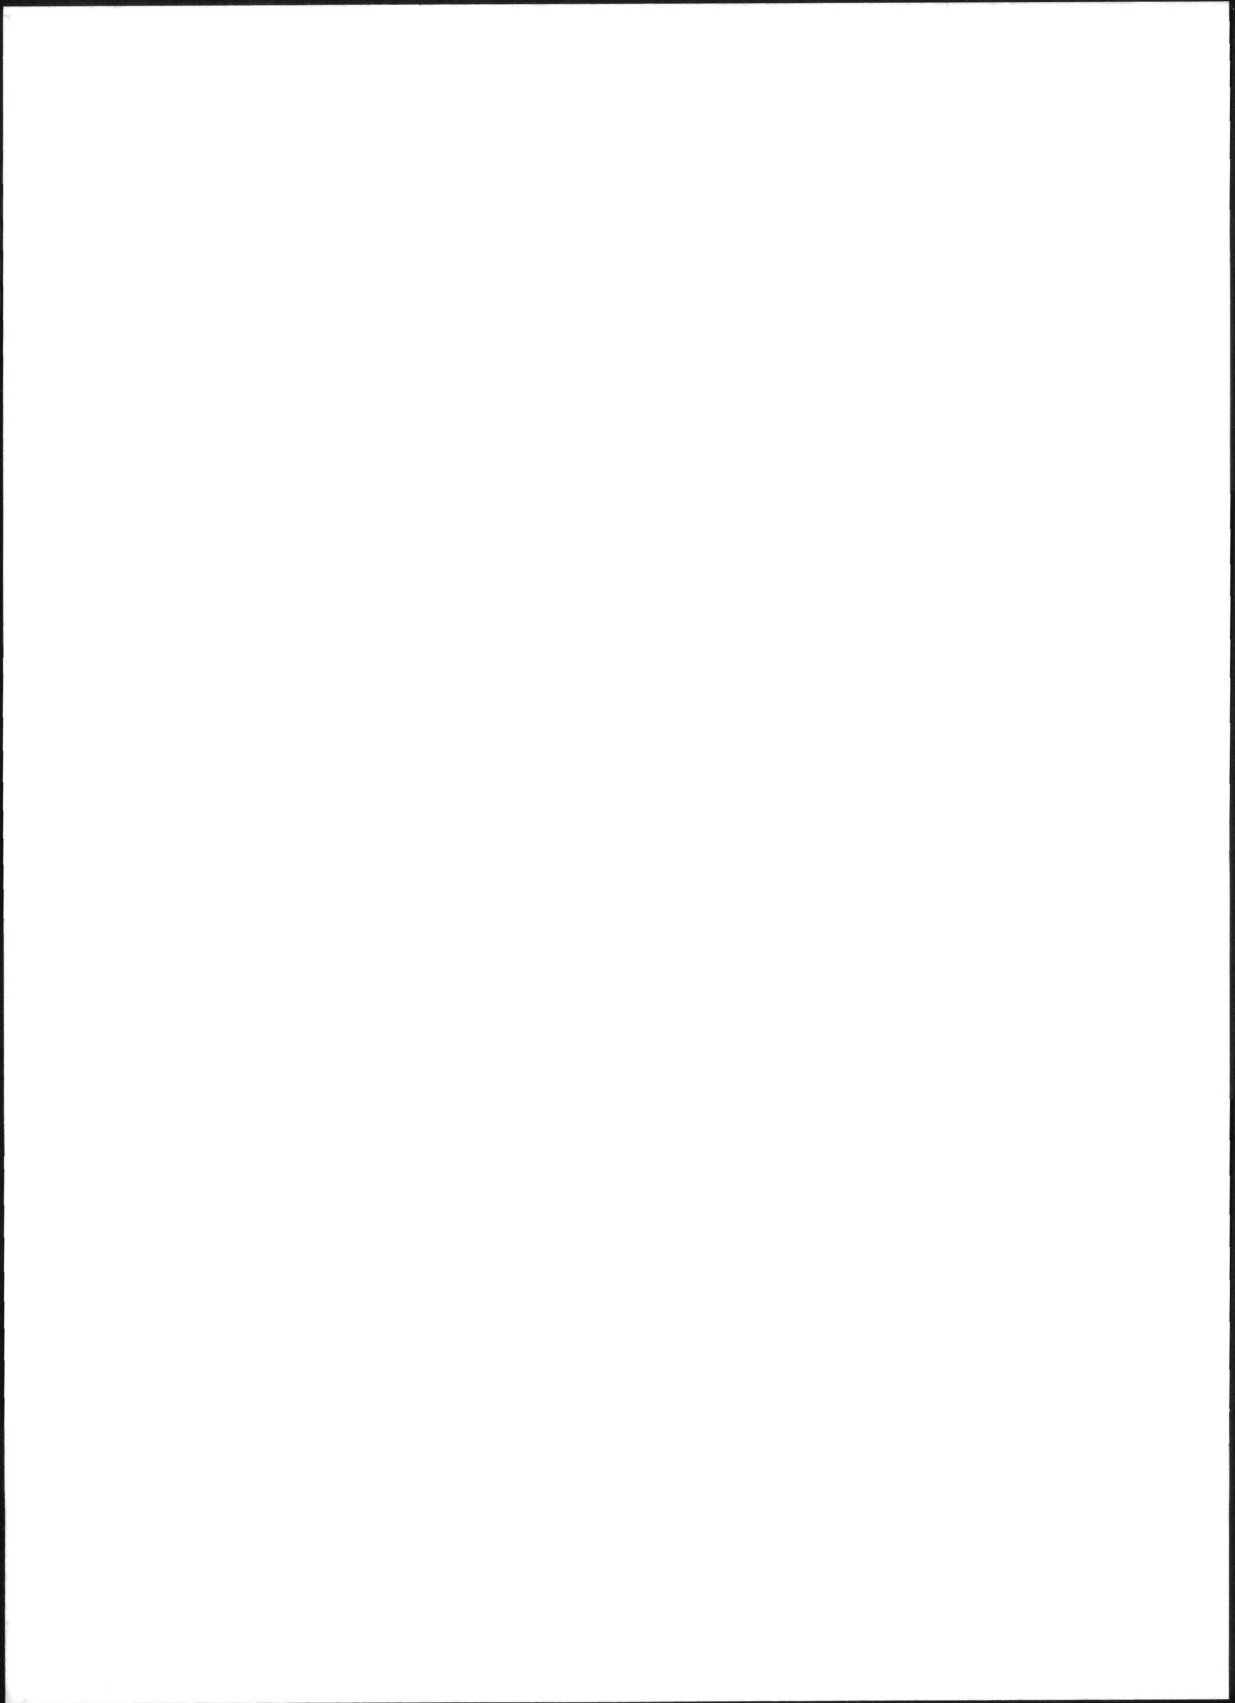

33 TAPE READER

ADJUSTMENTS

CONTENTS	PAGE
1. GENERAL . . . . .	1
2. BASIC UNIT . . . . .	5
Clutch Trip Area	
Armature extension . . . . .	7
Contact gap . . . . .	8
Feed magnet contact spring . . . . .	9
Magnet core . . . . .	5
Reader trip lever spring . . . . .	9
Shoe lever . . . . .	7
Trip magnet . . . . .	5
Trip lever overtravel . . . . .	6
Trip magnet armature spring . . . . .	6
Tape Reader Area	
Armature spring . . . . .	20
Blocking pawl . . . . .	14
Blocking pawl spring . . . . .	11
Contact wires spring . . . . .	16
Control (or tape-out) contact wires . . . . .	16
Control detent spring . . . . .	19
Detent lever . . . . .	10
Detent lever spring . . . . .	10
Feed pawl (adjustment with gauge TP183103) . . . . .	11
Feed pawl (adjustment without gauge TP183103) . . . . .	13
Latch spring . . . . .	21
Reader mounting bracket (early design) . . . . .	22
Reader mounting bracket (late design) . . . . .	23
Sensing contact wire spring . . . . .	19
Sensing pin . . . . .	15
Sensing pin spring . . . . .	15
Start contact wires . . . . .	17
Tape lid latch handle . . . . .	18
Tape lid spring . . . . .	18
Tape-out pin spring . . . . .	20
Tight tape lever spring . . . . .	19
Upstop spring . . . . .	11
3. VARIATIONS TO THE BASIC UNIT . . . . .	24
Reset and busy switch timing . . . . .	24

1. GENERAL

1.01 This section provides adjustment and maintenance information for the 33 tape reader. It is reissued to include engineering changes. Since this is a general revision, marginal arrows ordinarily used to indicate changes and additions are omitted.

1.02 In the adjustments covered in this section, location of clearances, position of parts, and point and angle of scale applications are illustrated by line drawings. Tools required to perform adjustments are contained in TP185830 Tool Kit and are listed in Maintenance Tool Section 570-005-800TC.

Note: An adjustment must be performed even if the accompanying illustration is not an exact duplication of the adjustment area.

1.03 The sequence in which the adjustments appear should be followed when a complete readjustment of the tape reader is undertaken. No adjustment should be undertaken without completely understanding the procedure and the requirements. Read a procedure all the way through before making an adjustment or checking a spring tension.

Note 1: Be sure to check all related adjustments (1.07).

Note 2: Remove all electric power before checking or performing adjustments.

1.04 References to left, right, front, rear, etc consider the tape reader to be viewed from a position where the feed wheel faces up and the lid latch is located to the viewer's right. Orientation references to the clutch trip area consider the armature extension to be facing up with the contact bracket pry points located to the viewer's right.

TAPE READER AREA

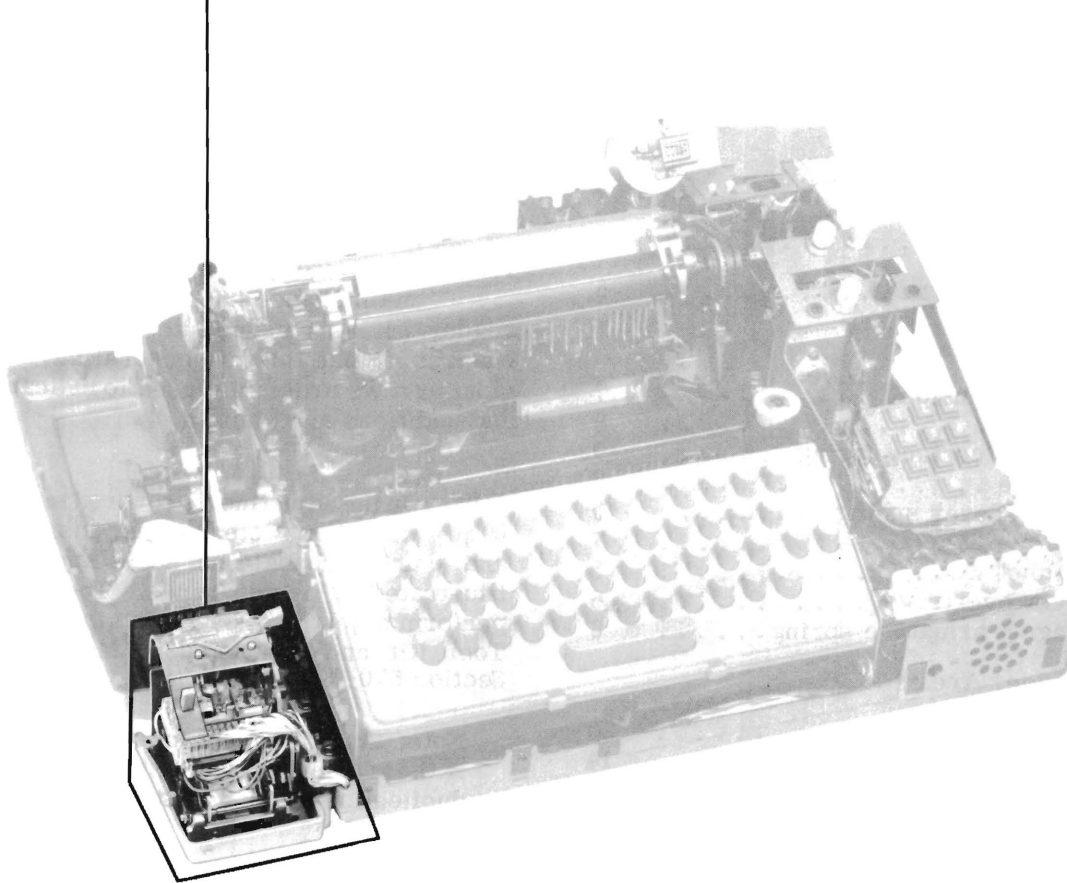


Figure 1 - Tape Reader Area

1.05 When a procedure calls for using pry points or slots to make an adjustment, place a screwdriver between the points or in the slots and pry parts in the proper direction.

1.06 If parts are removed from the tape reader to facilitate making an adjustment, be sure that they are replaced.

Note: Recheck any adjustment that may have been affected by the removal of parts.

1.07 Related adjustments are listed with some of the adjustment text and are primarily intended to aid in troubleshooting the equipment. As an example, suppose that in searching for a trouble it is discovered that the BLOCKING PAWL (Tape Reader Area) adjustment does not meet its requirement. Under "Related Adjustment," it is indicated that this adjustment is affected by the DETENT LEVER (Tape Reader

Area) and FEED PAWL (Tape Reader Area) adjustments. Check these to see if either is the cause of the trouble. Also, note that certain adjustments affect other adjustments. For example, see the DETENT LEVER (Tape Reader Area) adjustment. Note that this adjustment affects the FEED PAWL (Tape Reader Area) and BLOCK PAWL (Tape Reader Area) adjustments. If the former adjustment is changed, check the latter adjustments.

1.08 The spring tensions specified in this section are indications, not exact values. Therefore, to obtain reliable readings, it is important that spring tensions be measured by spring scales placed in the positions shown on pertinent line drawings. Springs that do not meet their requirements should be replaced by new ones. Only those springs that directly affect the operation of the tape reader are measured, however, others may be measured indirectly in the

CLUTCH TRIP AREA

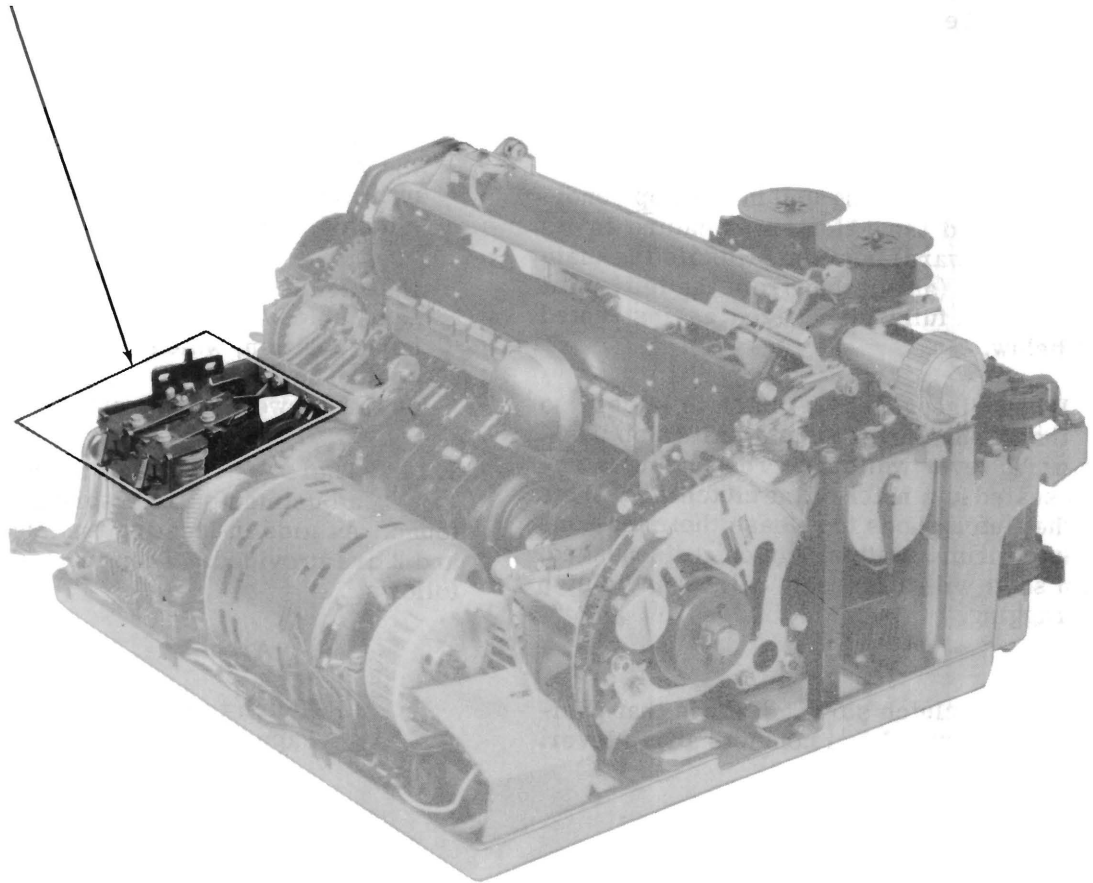


Figure 2 - Clutch Trip Area (Without Reader Feed Magnet Contact Assembly)

process. If this is the case and the requirement is not met, replace the springs one at a time, starting with the indicated spring, until the requirement is satisfied.

Note 1: Use spring scales which are listed in the Maintenance Tool Section 570-005-800TC.

Note 2: Spring tensions may be checked in any sequence.

1.09 Certain adjustments specify that an armature is to be in its attracted position prior to checking a requirement. This refers to an armature's position when it is magnetically attracted to its magnet core. If a separate power supply is not available, the armature can be held attracted by utilizing power normally supplied by the ASR set. This is accomplished with the motor power turned off and the reader trip magnet armature manually energized.

**CAUTION: THE TAPE READER FEED MAGNET OPERATES UNDER HIGH VOLTAGE.**

**PRECAUTIONARY MEASURES SHOULD BE TAKEN WHENEVER POWER TO THE TAPE READER IS TURNED ON. HIGH VOLTAGE WILL CONTINUE UNTIL APPROXIMATELY 10 SECONDS AFTER THE POWER PACK HAS BEEN DISCONNECTED.**

1.10 When inserting a tape that has originated from the tape punch, into a tape reader, allow some slack in the tape between the punch and the reader. This is done to close the reader tape lid.

Note: Do not place the control lever directly into the FREE position while the tape reader is operating under power. Place the control lever into the STOP position and wait until after the tape reader has stopped before moving it beyond the STOP position and into the FREE position. The FREE position of the control lever is used to facilitate the insertion and/or removal of paper tape from the tape reader.

SECTION 574-124-700TC

1. 11 All adjustments in the "Clutch Trip Area" should be started with the typing unit in the stop condition. It is in the stop condition when the selector armature is in its attracted (frontward) position and all clutches are disengaged.

1. 12 To place the typing unit in the stop condition, hold the selector armature in its attracted (frontward) position. Rotate the main shaft clockwise (as viewed from the left) until all clutches are fully disengaged as instructed in 1. 13 below.

1. 13 When disengaged, a clutch is latched so that a shoe lever is held in its stop position by a trip lever while a corresponding latch-lever is seated in a notch of the clutch disc. This allows the clutch shoes to release their tensions on the clutch drum. With all clutches disengaged, the main shaft will turn freely without any clutch shoes dragging.

Note 1: The clutch stop position is that position where a shoe lever contacts a trip lever.

Note 2: If the shaft is turned by hand, a clutch will not fully disengage upon reaching a stop position. Where an adjustment procedure requires disengagement, rotate the clutch to a stop position, apply a screwdriver to the associated stop-lug, and push the clutch disc in the normal direction of main shaft rotation until the corresponding latchlever seats in its clutch disc notch.

Note 3: The distributor clutch will not disengage unless the answer-back drum is in its home position, which is the position where the control lever is fully detented into the indent on the answer-back drum.

1. 14 There are two areas in which tape reader adjustments and spring tensions are found. As aids in locating the areas, Figures 1 and 2 are provided. They indicate the areas as follows:

<u>Area</u>	<u>Figure</u>
Clutch trip	2
Tape reader	1

2. BASIC UNIT

2.01 Clutch Trip Area


MAGNET CORE

Requirement

Magnet core slot to be perpendicular to magnet bracket pivot surface as gauged by eye.

To Adjust

With clutch trip coil mounting screw loosened, position clutch trip coil. Tighten screw.

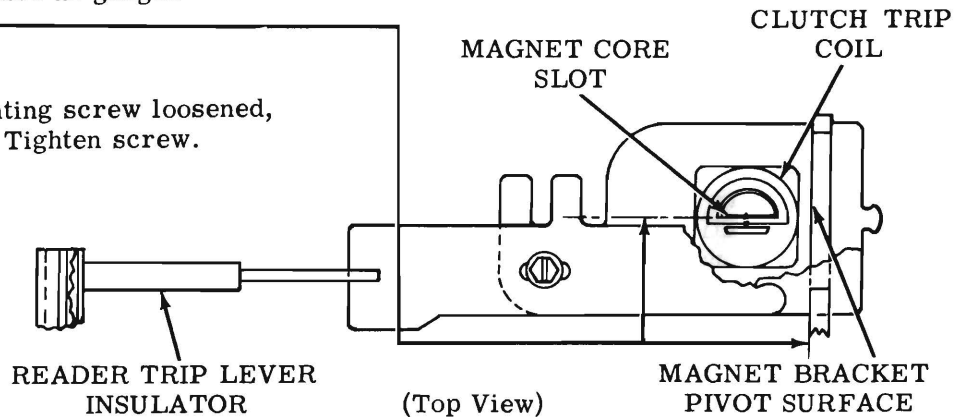

TRIP MAGNET

Requirement

Magnet bracket to be positioned on base casting post as far forward and to the left as possible.


To Adjust

Position magnet bracket with three mounting screws loosened. Tighten screws.

Related Adjustments

Affects

- TRIP LEVER OVERTRAVEL (Clutch Trip Area)
- CONTACT GAP (Clutch Trip Area)
- ARMATURE EXTENSION (Clutch Trip Area)
- TRIP MAGNET (See appropriate typing unit section.)

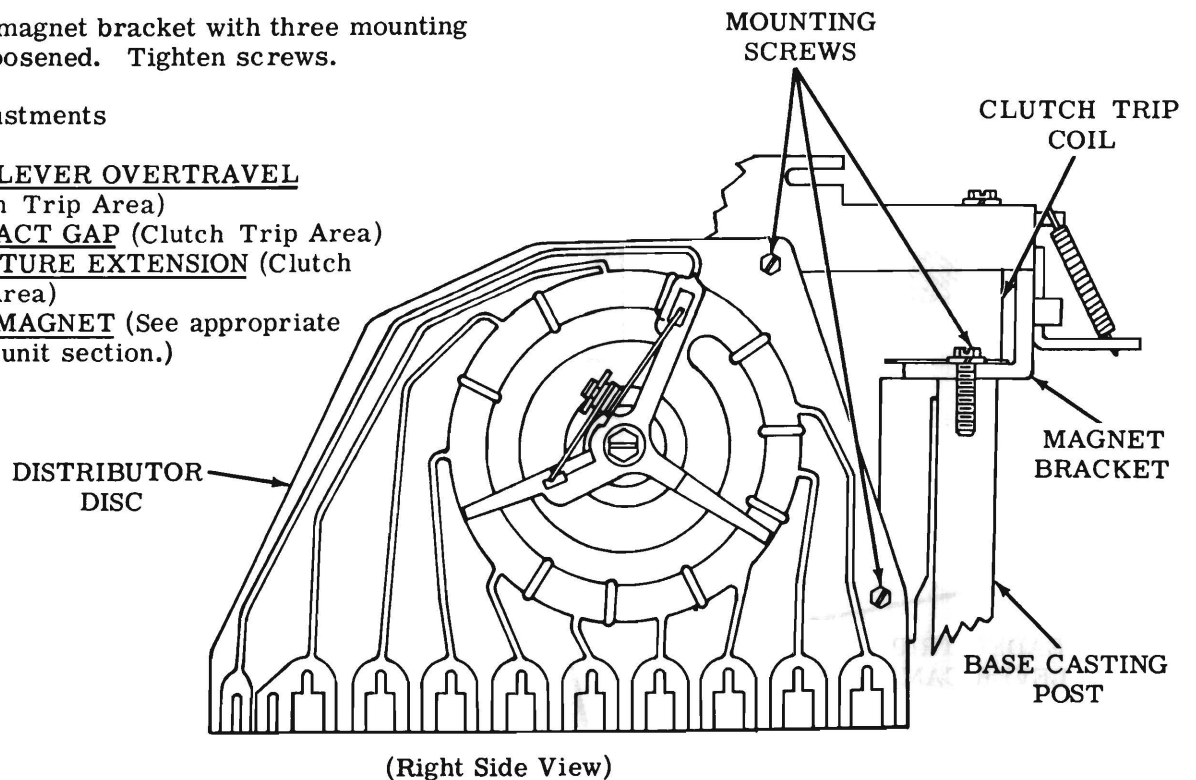

2.02 Clutch Trip Area (continued)

TRIP LEVER OVERTRAVEL

To Check

Trip distributor clutch by momentarily holding armature in its attracted position. Rotate main shaft until cam roller is on high part of reader trip lever cam. Take up play in the armature toward the rear and release. Position the reader trip lever to the center of the armature extension.

Requirement

Min 0.010 inch --- Max 0.030 inch between the end of armature extension and latching surface of reader trip lever.

To Adjust

With armature extension mounting screw loosened friction tight, position armature extension using pry point. Tighten screw.

Related Adjustment

Affects CONTACT GAP (Clutch Trip Area)


TRIP MAGNET ARMATURE SPRING

Requirement

With armature in its unattracted position and cam roller on high part of reader trip lever cam

Min 2 oz --- Max 4 oz to start armature moving.

Note: The requirement for readers containing busy and reset switches is Min 2 oz --- Max 3 oz

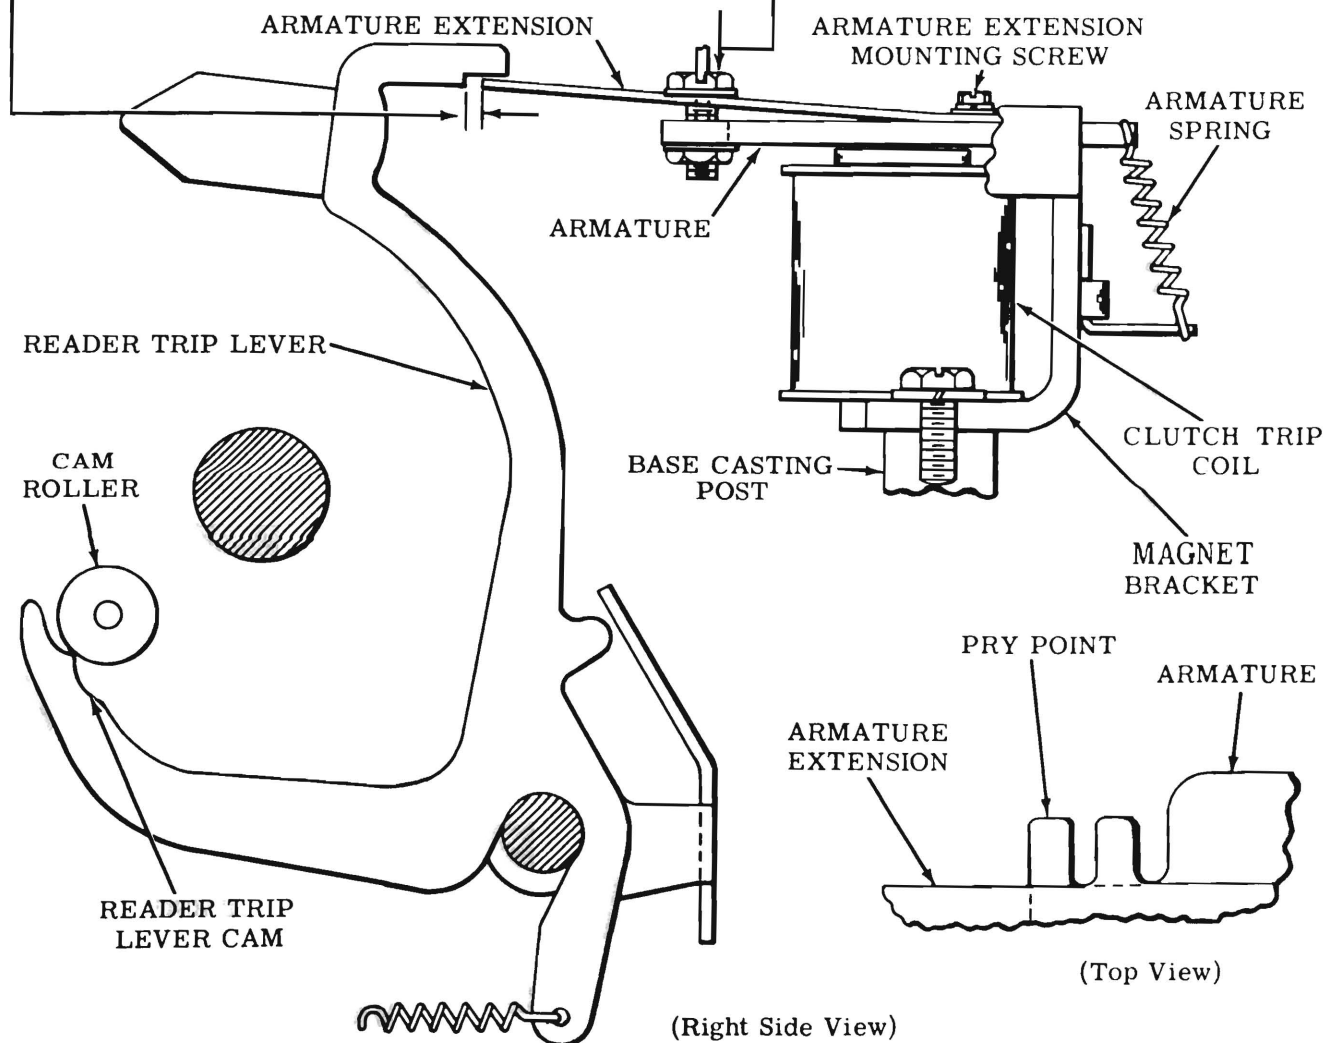

2.03 Clutch Trip Area (continued)

ARMATURE EXTENSION

To Check

Place typing unit in stop condition. Hold armature in attracted position and rotate main shaft until a clearance of


Min Some --- Max 0.040 inch exists between end of armature extension and reader trip lever.

Requirement

Min Some --- Max 0.030 inch between the armature extension and reader trip lever at its closest point.

To Adjust

Loosen and use armature extension adjusting screw and locknut to position armature extension. Tighten adjusting screw and locknut.

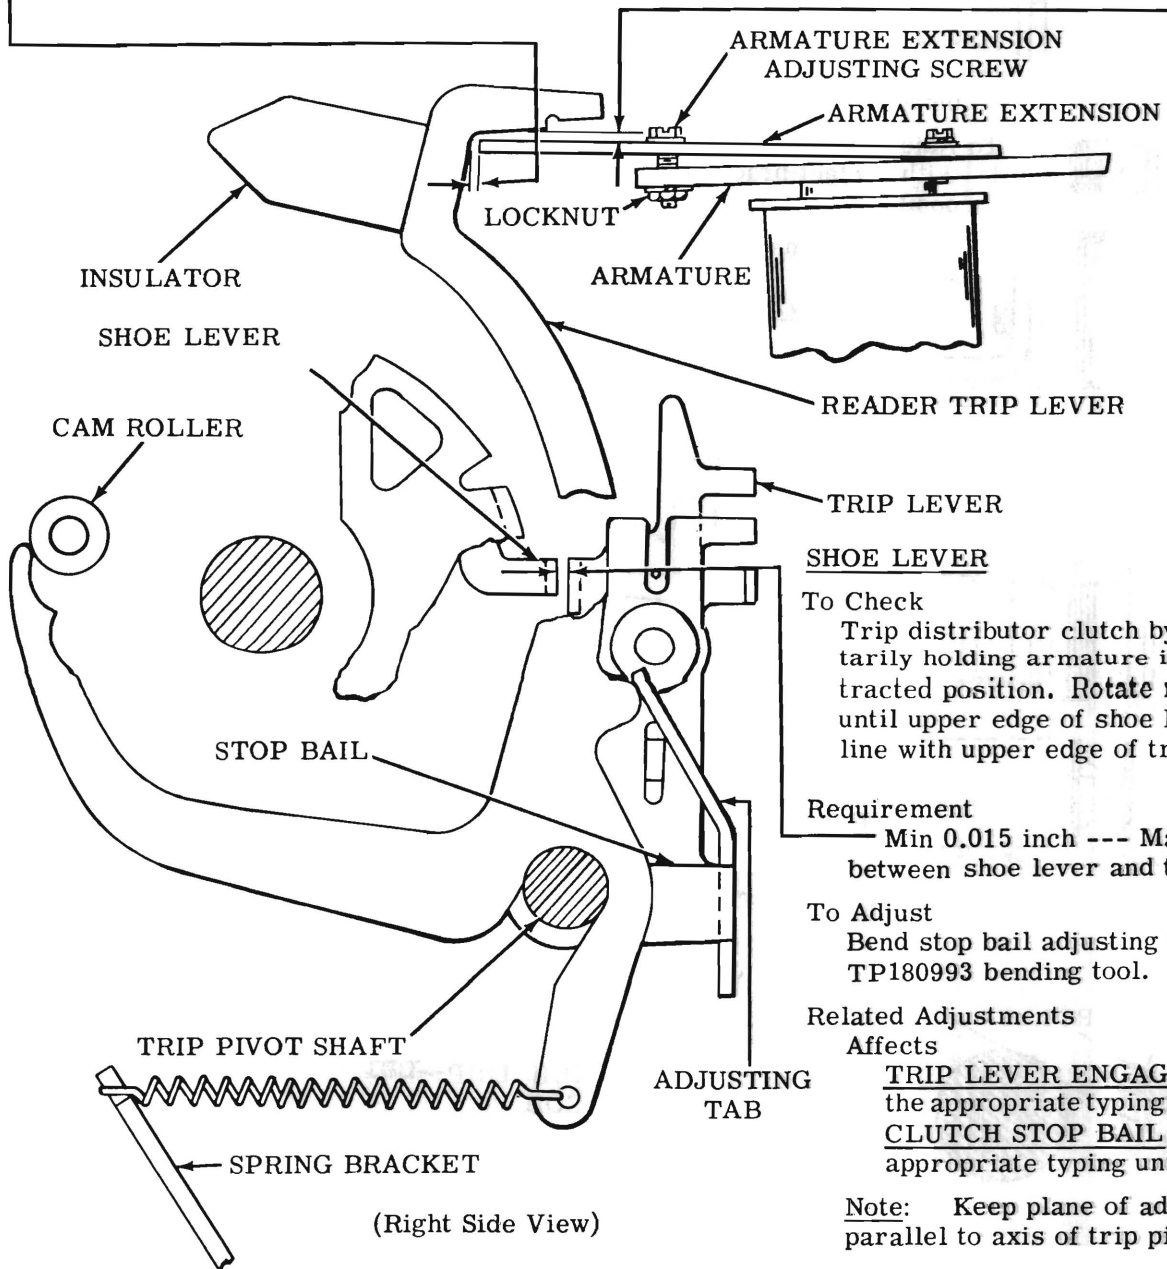


SHOE LEVER  
 To Check  
 Trip distributor clutch by momentarily holding armature in its attracted position. Rotate main shaft until upper edge of shoe lever is in line with upper edge of trip lever.  
 Requirement  
 Min 0.015 inch --- Max 0.035 inch between shoe lever and trip lever.

To Adjust  
 Bend stop bail adjusting tab with TP180993 bending tool.

Related Adjustments  
 Affects  
TRIP LEVER ENGAGEMENT (See the appropriate typing unit section.)  
CLUTCH STOP BAIL (See the appropriate typing unit section.)

Note: Keep plane of adjusting tab parallel to axis of trip pivot shaft.

2.04 Clutch Trip Area (continued)

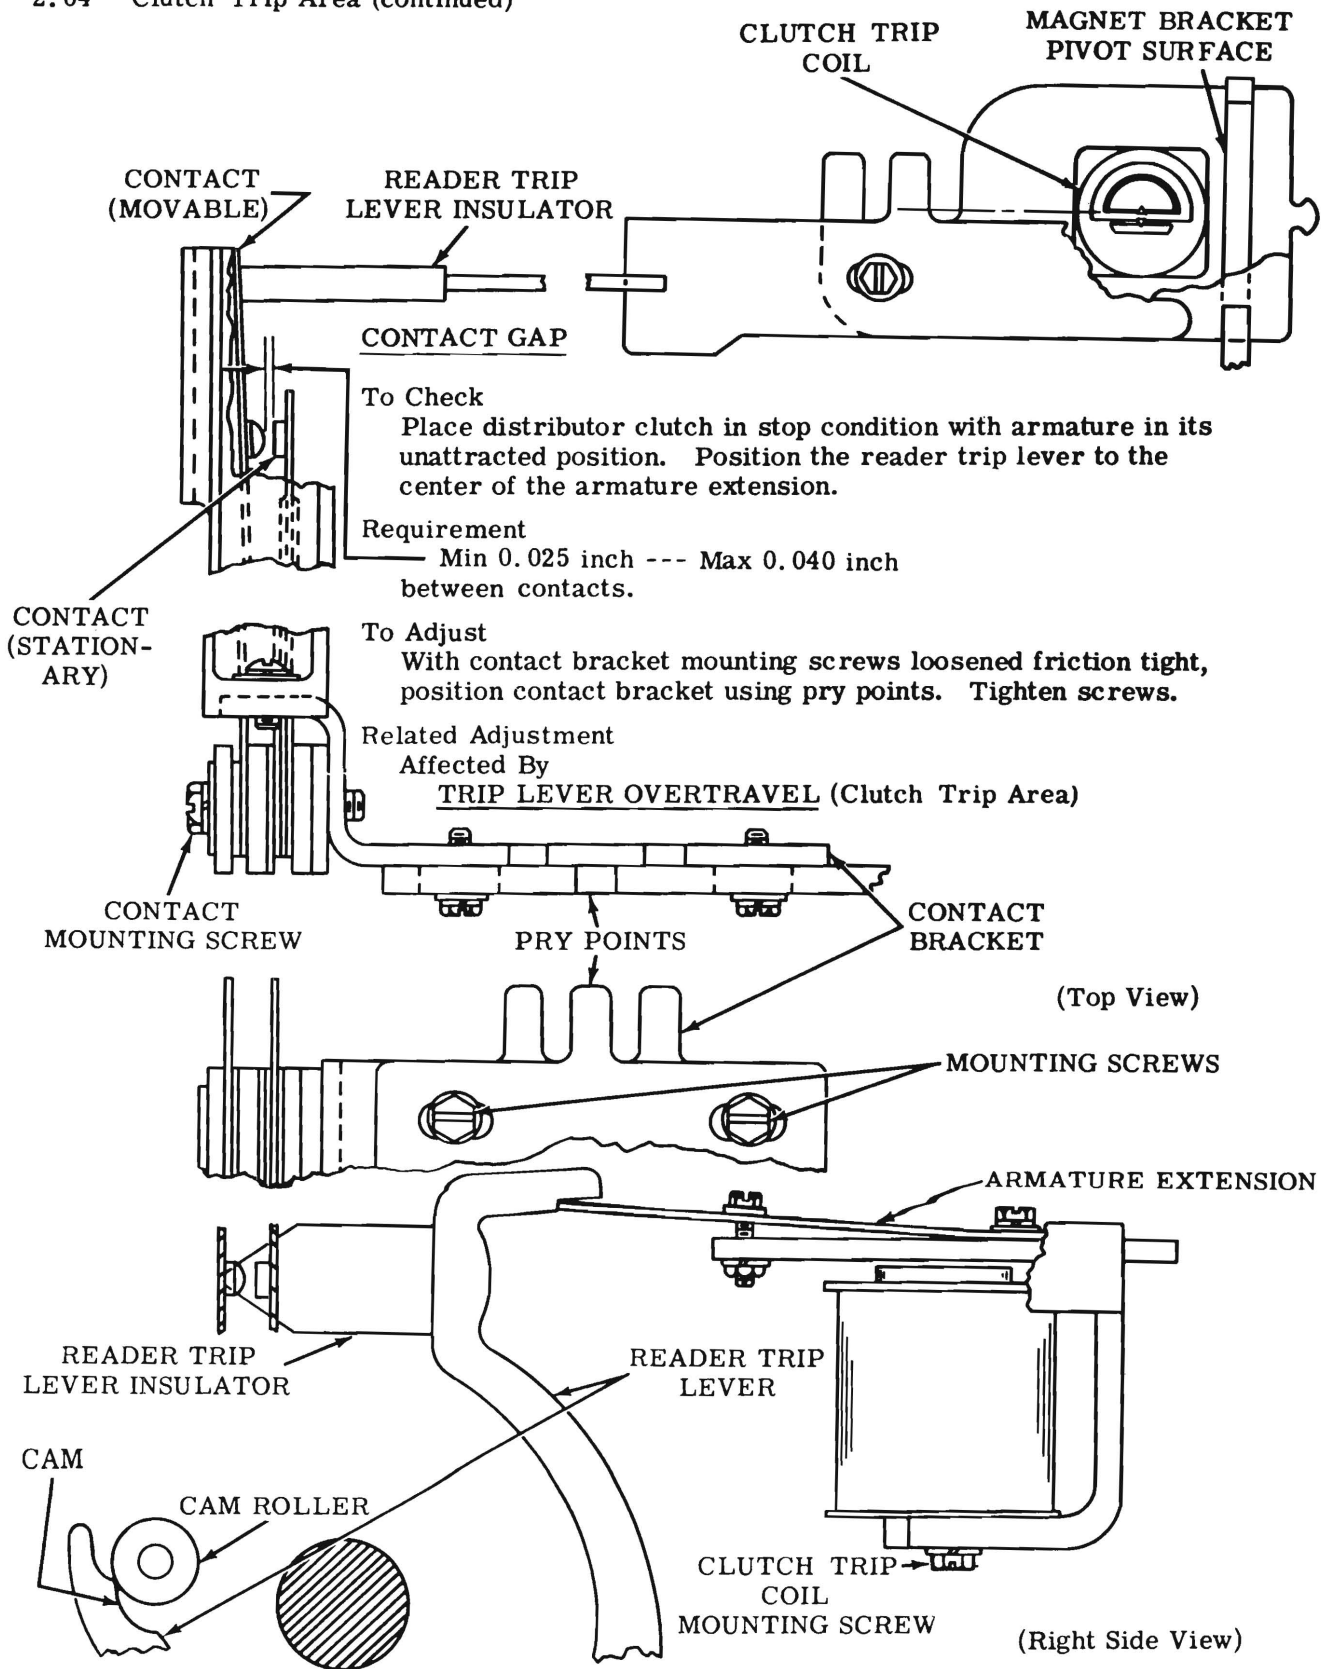

2.05 Clutch Trip Area (continued)

FEED MAGNET CONTACT SPRING


Requirement

With reader trip lever insulator out of contact with swinger spring

Min 2 oz --- Max 3 oz  
to open contacts.

To Adjust

Bend swinger spring near the contact insulators with spring bender TP110445.

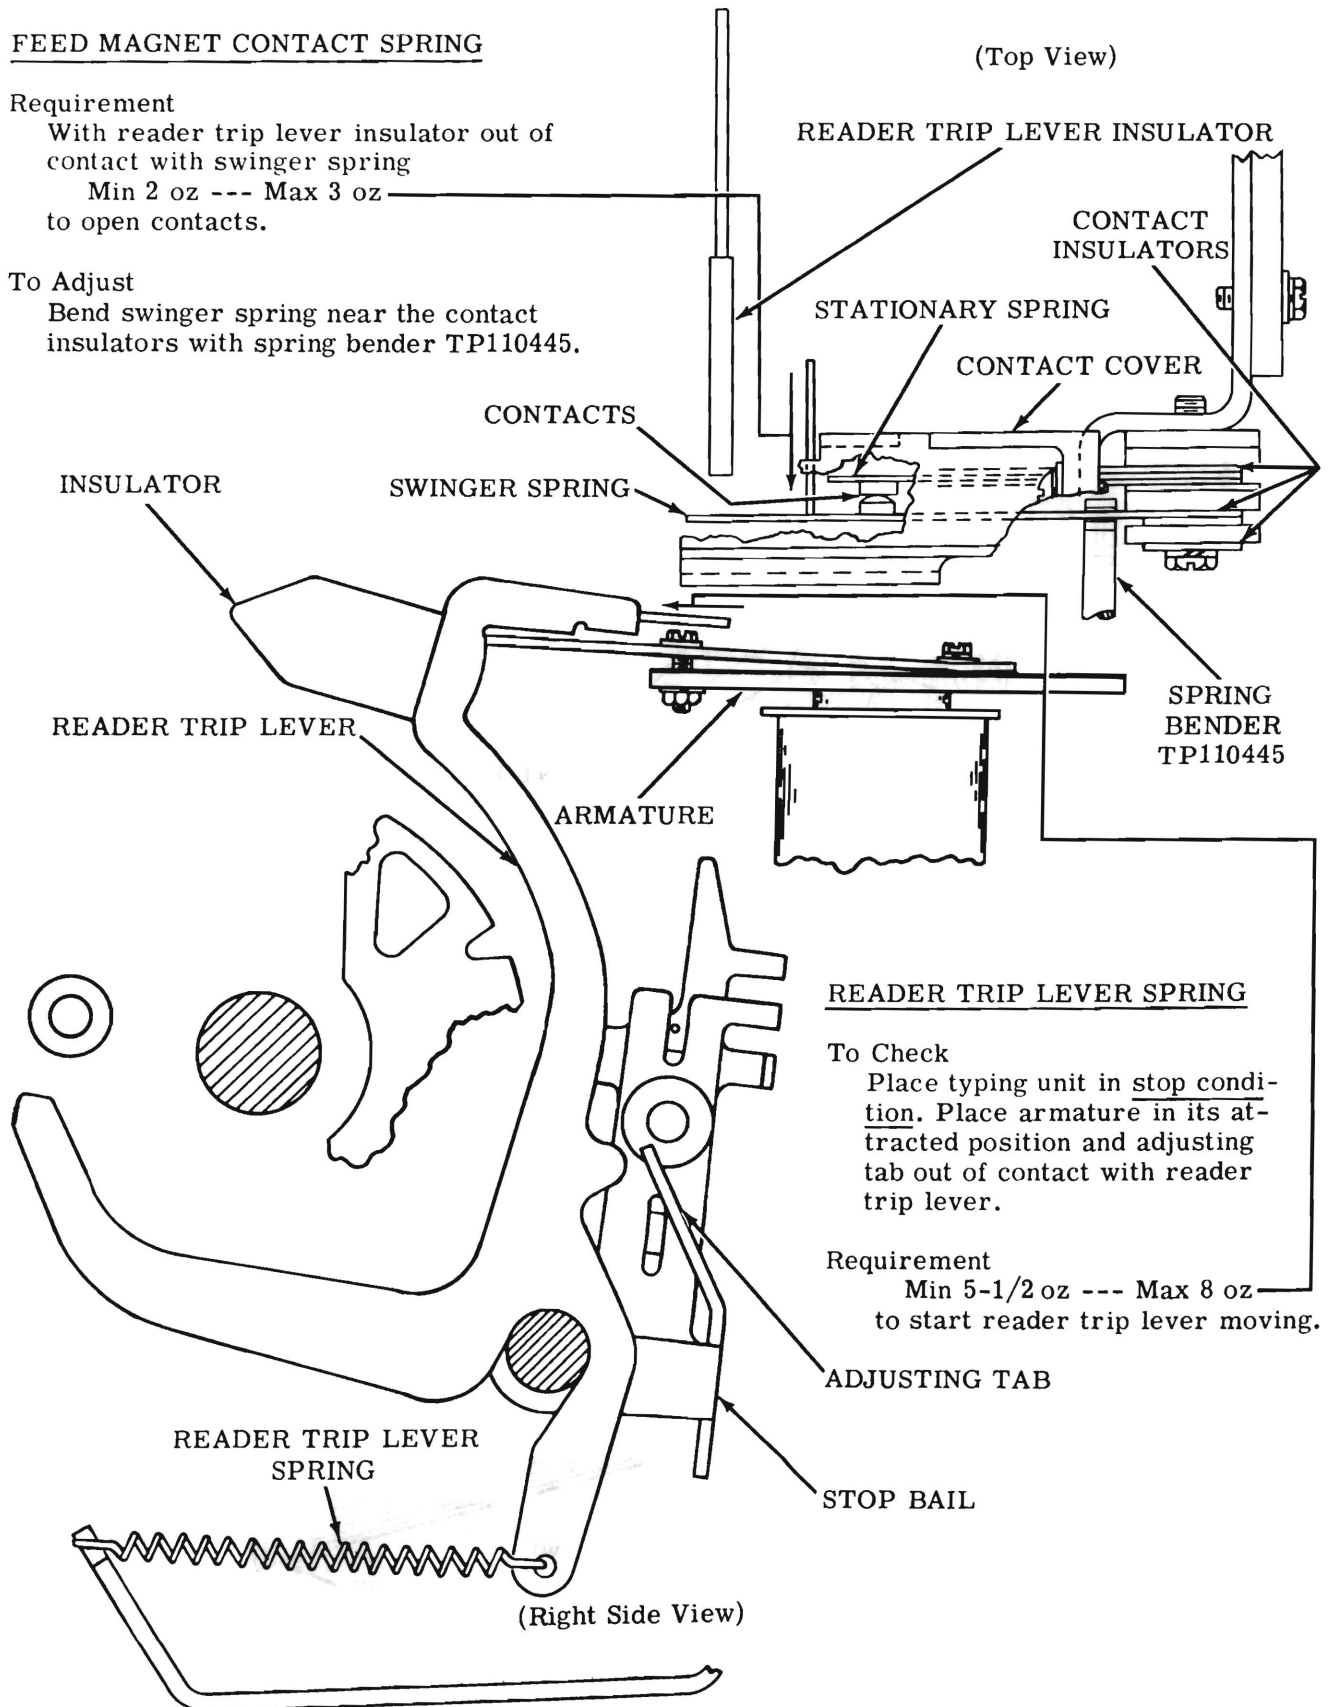

2.06 Tape Reader Area

DETENT LEVER

Requirement

With the control lever in FREE position and the feed wheel rotated to position its gate flash towards the front, tips of sensing pins must be centrally located in the code holes of tape which has an all-marking code combination punched into it.

Note: If the tape reader is operating under power, do not push the control lever beyond the STOP position until the tape reader has stopped.


To Adjust

With detent bracket mounting screw friction tight, position detent bracket by means of pry points. Tighten screw.

Related Adjustments

Affects

- FEED PAWL (Tape Reader Area)
- BLOCKING PAWL (Tape Reader Area)

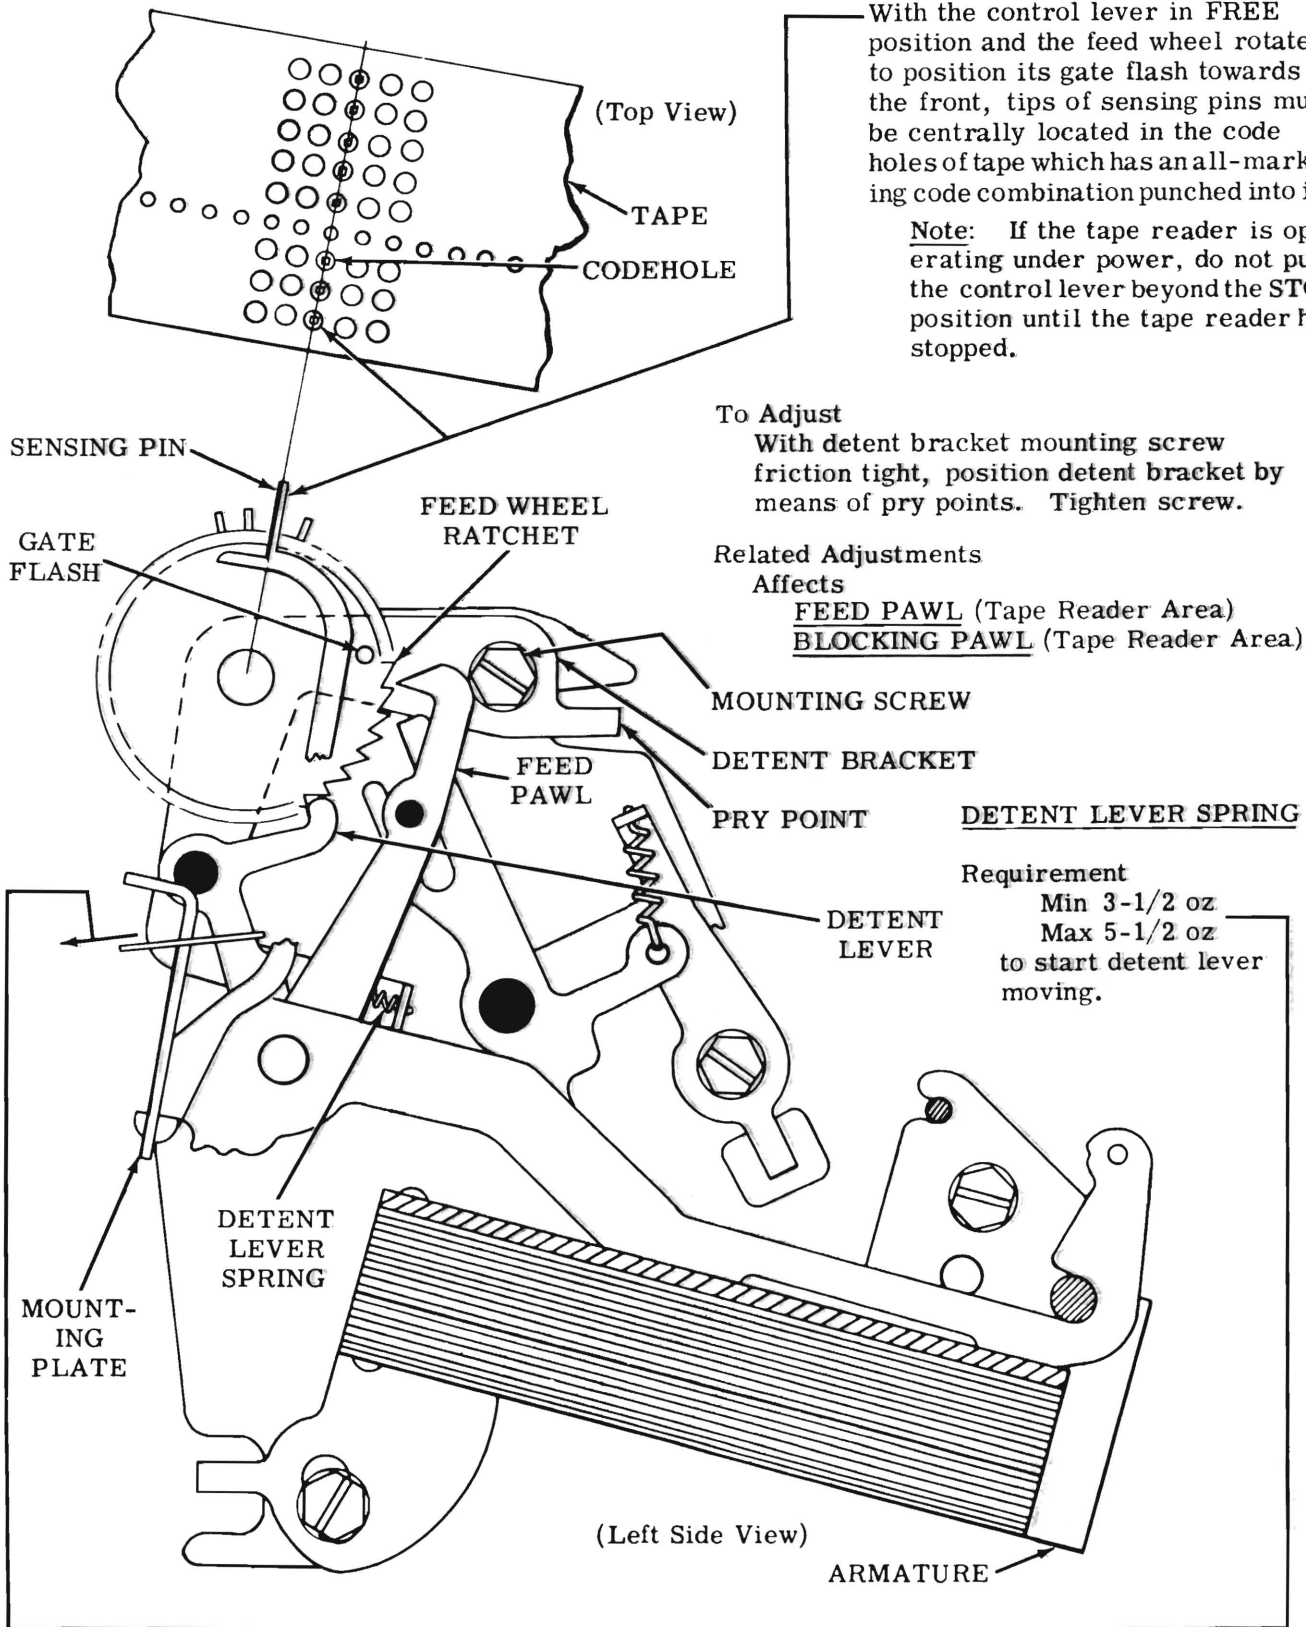

DETENT LEVER SPRING

Requirement

Min 3-1/2 oz  
 Max 5-1/2 oz  
 to start detent lever moving.

2.07 Tape Reader Area (continued)

**FEED PAWL (Adjustment with Gauge TP183103)**

**To Check**

Place armature in unattracted position. Visually check to see if there is some clearance between the blocking pawl and ratchet tooth. If not, provide clearance. See **BLOCK PAWL (Tape Reader Area)** adjustment.

**UPSTOP SPRING**

**Requirement**

With armature spring post removed from its slot in magnet bracket  
 Min 14 oz --- Max 20 oz  
 to start upstop bushing moving.


**Requirement**

Min Some --- Max 0.008 inch  
 between the feed pawl and ratchet tooth with a total of five ratchet teeth between the feed pawl and detent lever. (Continued on following page.)

**BLOCKING PAWL SPRING**


**Requirement**

With the armature in its unattracted position and control lever in START position  
 Min 2 oz --- Max 3-1/2 oz  
 to start blocking pawl moving.

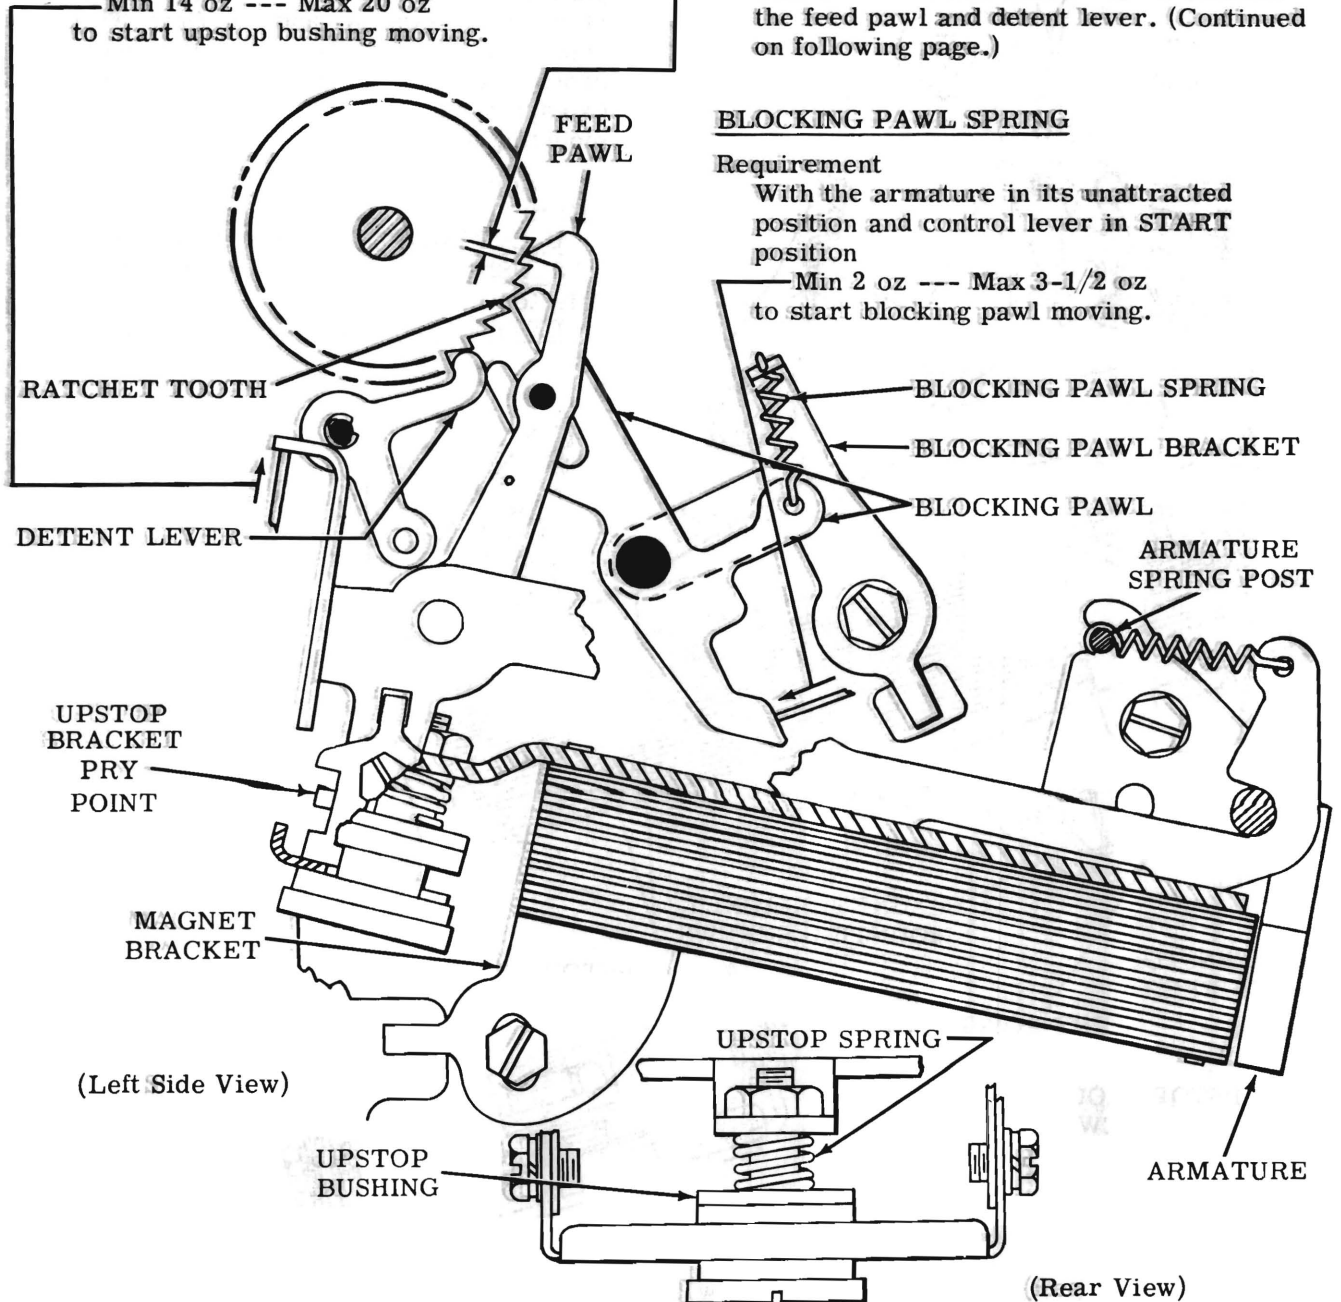

2.08 Tape Reader Area (continued)

FEED PAWL (Continued from preceding page.)

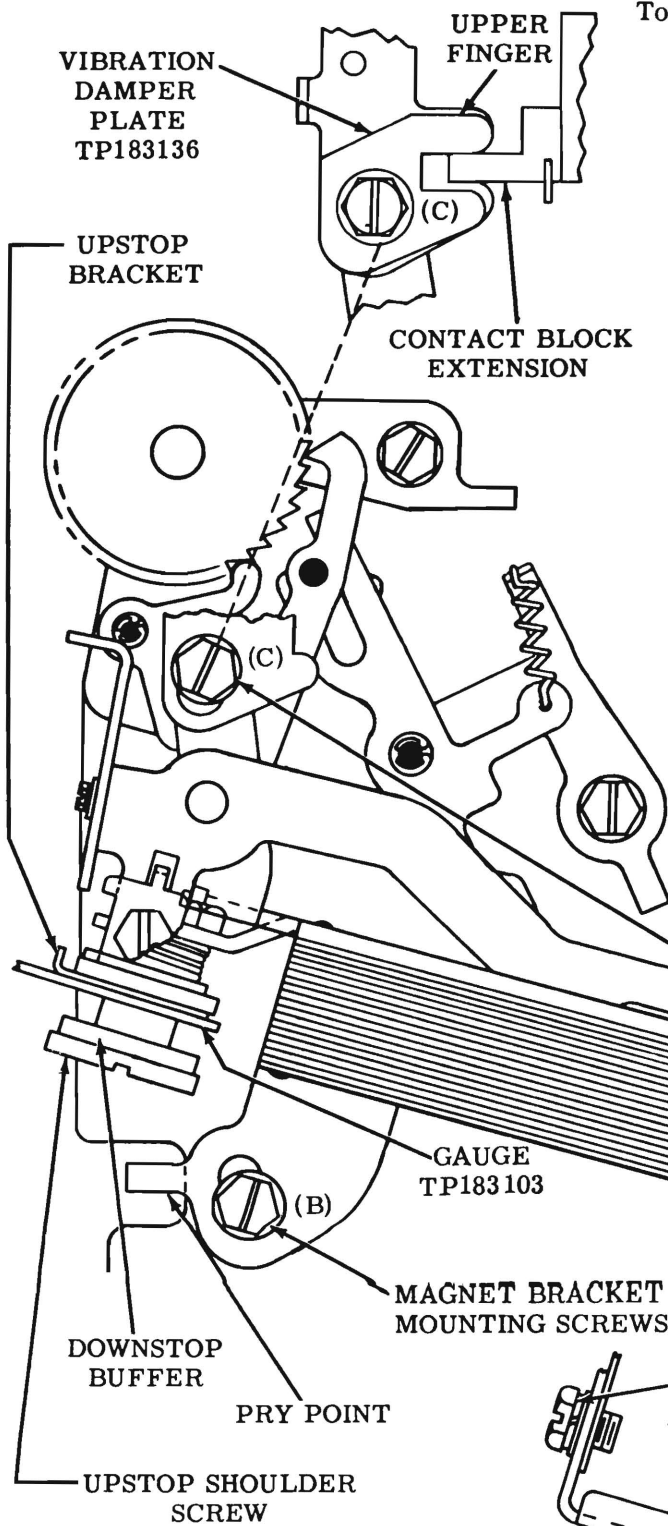

To Adjust

With armature in attracted position and two upstop bracket mounting screws friction tight, insert gauge TP183103 between upstop bracket and shoulder of upstop shoulder screw. Position upstop bracket so that it lies flat on gauge. Tighten upstop bracket mounting screws. With armature in unattracted position and three magnet mounting screws friction tight, position magnet bracket by means of pry point. Tighten magnet bracket mounting screws.

**Note:** For tape readers with vibration damper plate TP183136, tighten magnet bracket mounting screws A and B first. Then, rotate the vibration dampener plate until the upper finger presses firmly on contact block extension. Finally, tighten magnet bracket mounting screw C.

Related Adjustments


Affects

BLOCKING PAWL (Tape Reader Area)

SENSING PIN (Tape Reader Area)

Affected By

DETENT LEVER (Tape Reader Area)

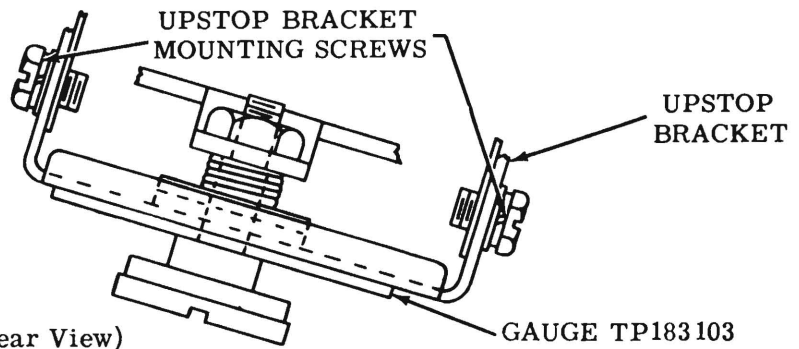

2.09 The Tape Reader Area (continued)

FEED PAWL (Adjustment without Gauge TP183103)

(1) To Check

Place armature in attracted position and loosen two upstop bracket mounting screws so that the upstop bracket does not limit the feed pawl motion.

Requirement

Min 0.020 inch --- Max 0.045 inch between feed pawl and ratchet tooth and a total of six ratchet teeth between feed pawl and detent lever.

To Adjust

With three magnet bracket mounting screws friction tight, position magnet bracket using pry point.

(2) To Check

Place armature in unattracted position. Visually check to see if there is some clearance between the blocking pawl and ratchet tooth. If not, provide clearance. See BLOCKING PAWL (Tape Reader Area) adjustment. Place upstop bracket flat against downstop buffer.

Requirement

Min Some --- Max 0.008 inch between feed pawl and ratchet tooth at point of least clearance.

To Adjust

With two upstop bracket mounting screws friction tight, position upstop bracket using upstop bracket pry point. Tighten screws.

Note 1: If the some of 0.008 inch requirement cannot be met, refine requirement (1) until it is met.

Note 2: For tape readers with vibration damper plate TP183131, tighten magnet bracket mounting screws A and B first. Then, rotate the vibration damper plate until the upper finger presses firmly on contact block extension. Finally tighten magnet bracket mounting screw C.

Recheck Requirements (1) and (2) and refine, if necessary.

Related Adjustments


Affects

BLOCKING PAWL (Tape Reader Area)

SENSING PIN (Tape Reader Area)

Affected By

TRIP LEVER OVERTRAVEL (Tape Reader Area)

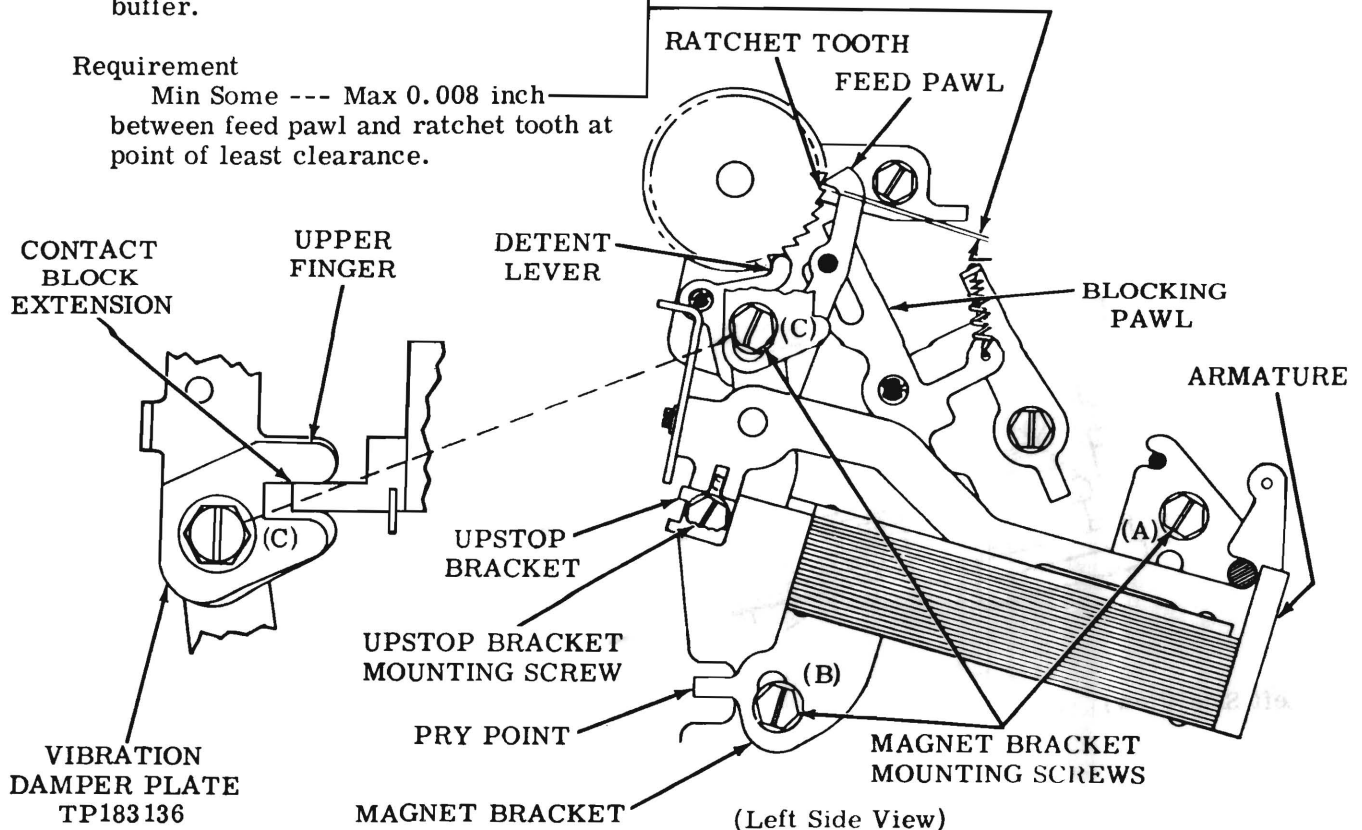

2.10 Tape Reader Area (continued)

BLOCKING PAWL

To Check

Place armature in unattracted position. Check to see that there is some clearance between feed pawl and ratchet tooth. If not, provide clearance. See FEED PAWL (Tape Reader Area) adjustment.

Requirement

Min some --- Max 0.003 inch at point of least clearance between blocking pawl and ratchet tooth.


To Adjust

With blocking pawl bracket mounting screw loosened friction tight, position blocking pawl bracket using pry point. Tighten mounting screw.

Related Adjustments

Affected By

DETENT LEVER (Tape Reader Area)  
FEED PAWL (Tape Reader Area)

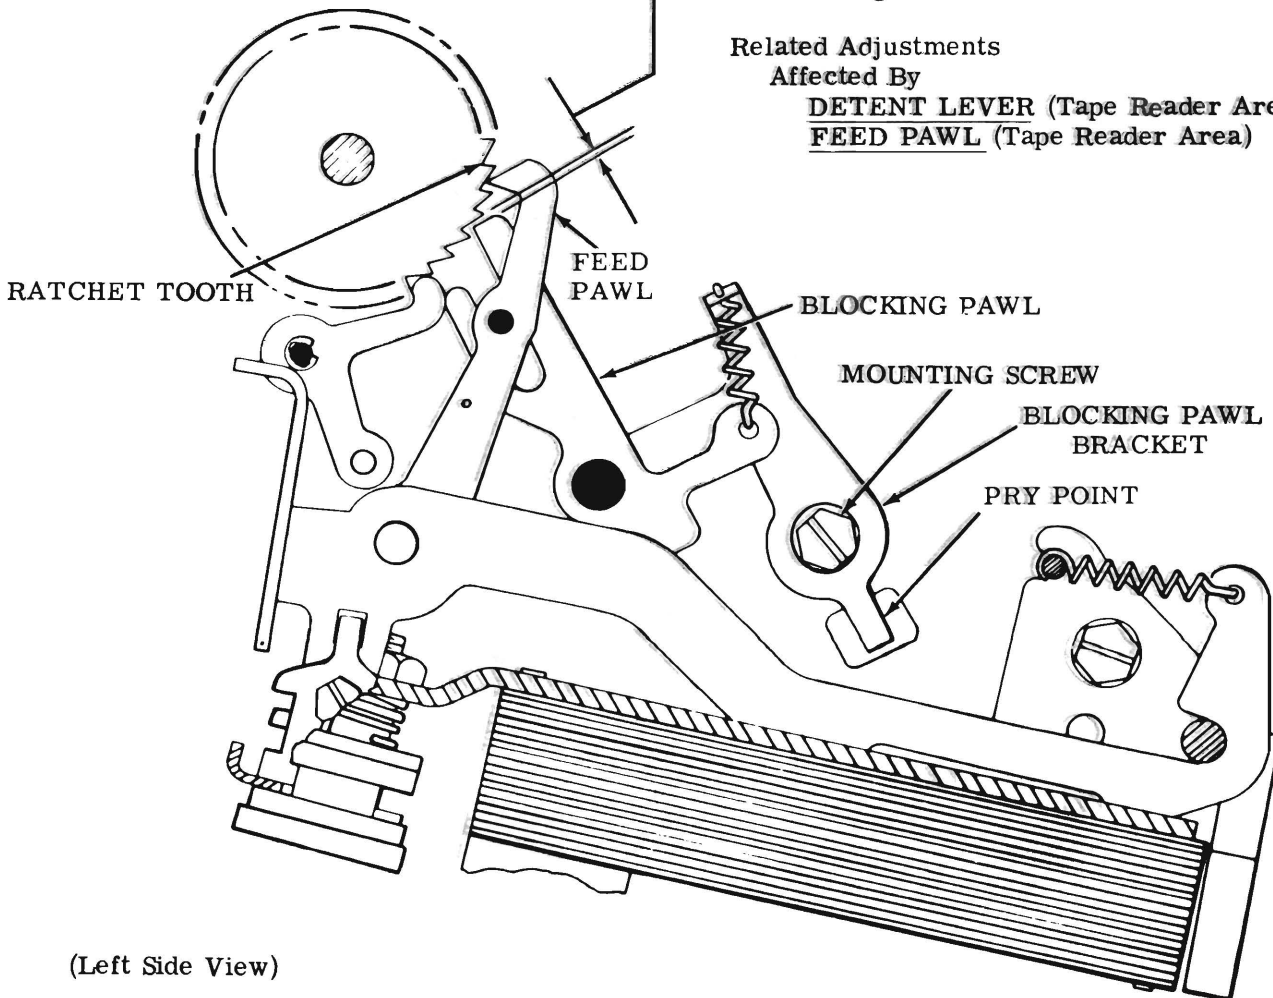

2.11 Tape Reader Area (continued)

SENSING PIN SPRING

Requirement

With armature in its attracted position  
 Min 1-1/2 oz --- Max 2-3/4 oz  
 to position sensing pin flush with top plate.

SENSING PIN

Requirement

With armature in unattracted position, the tip of all sensing pins shall be  
 Min Flush --- Max 0.015 inch  
 below top surface of top plate.


To Adjust

With two sensing pin guide adjusting screws loosened friction tight, position sensing pin guide using pry points. Tighten screws.


Related Adjustment

Affected By

FEED PAWL (Tape Reader Area)

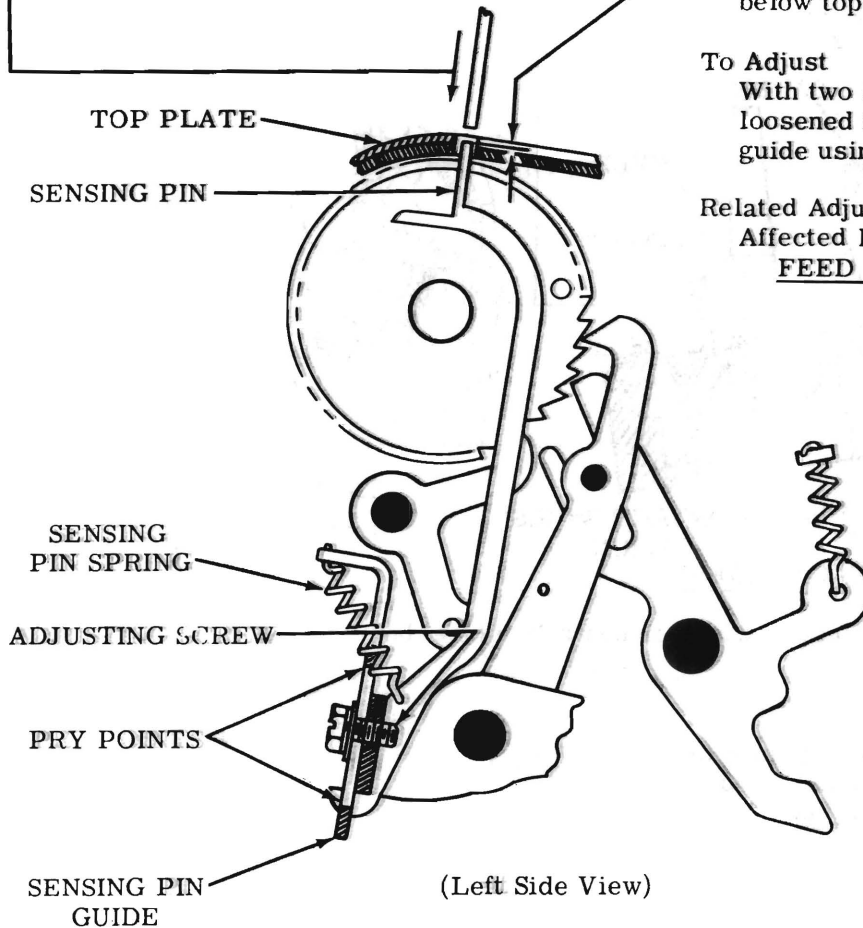

(Left Side View)

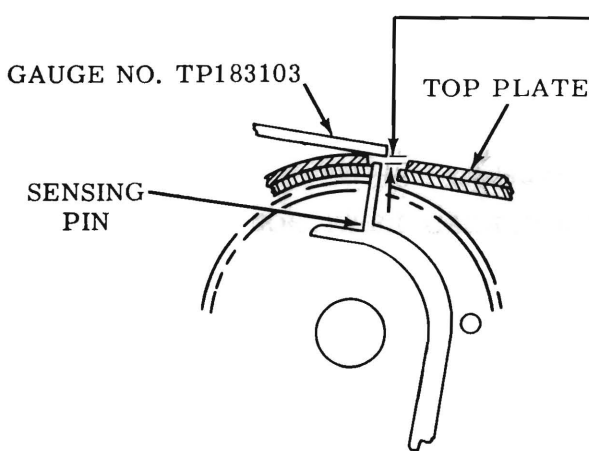

(Left Side View)

Note: This adjustment may be made by using the thin-slotted end of gauge TP183103. To check the above minimum requirement (Flush), hold the gauge flat against the top plate in back of the sensing pins and move it forward against sensing pins. If any sensing pin is deflected by the gauge, then the above minimum requirement is not met. The sensing pin pin guide must be lowered. To check the above maximum requirement (0.015 inch), hold the gauge directly above the sensing pins and measure the clearance. Adjust, if necessary, as indicated above.

2.12 Tape Reader Area (continued)


CONTACT WIRES\* SPRING

To Check

Place control lever in START position and fully depress tape-out pin.

Requirement

Min 1-1/4 oz --- Max 2-1/4 oz  
to start each contact wire\* moving

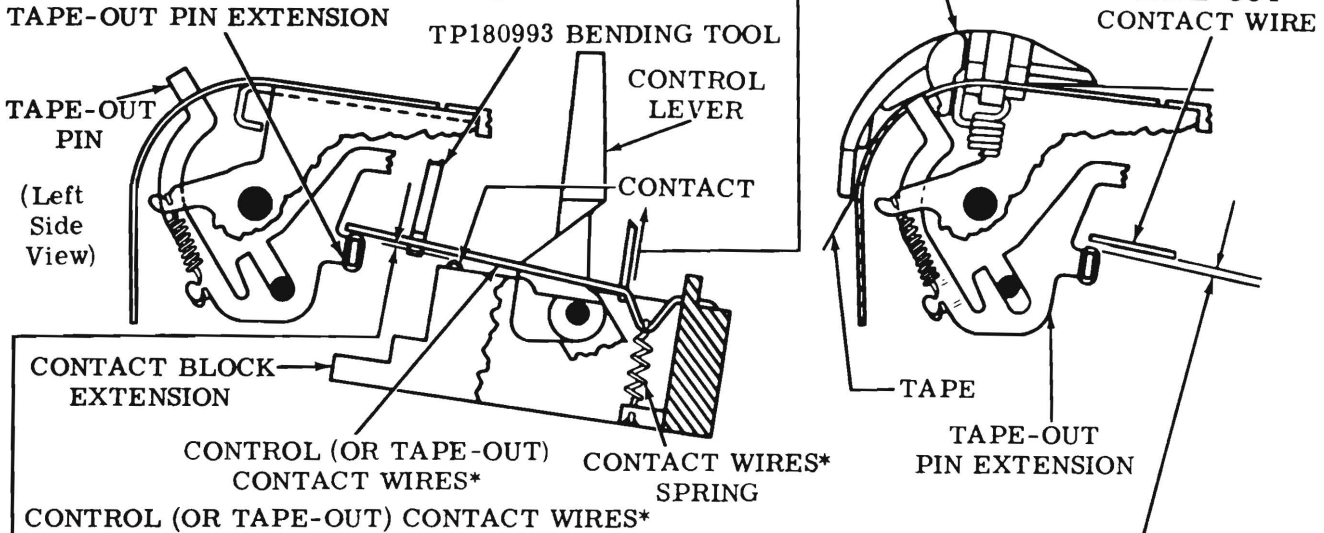

Note 1: Tape readers without automatic reader control: Place the control lever in START position.

(1) Requirement

With tape-out pin in its fully up position,  
Min 0.010 inch --- Max 0.025 inch  
between control (or tape-out) contact wires\* and contact.

(2) Requirement


With tape in reader and reader lid closed,  
Min 0.005 inch  
clearance between the tape-out pin extension and tape-out contact wire.

To Adjust


Bend control (or tape-out) contact wires\* between the contact and the tape-out pin extension with bending tool TP180993.

\*Note 2: The location of the contact wires is shown below:

TAPE READERS WITH AUTOMATIC READER CONTROL

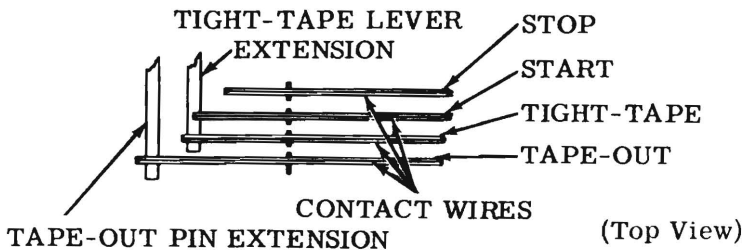

TAPE READERS WITHOUT AUTOMATIC READER CONTROL

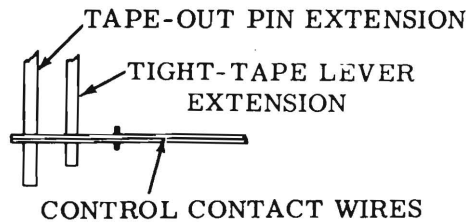

## 2.13 Tape Reader Area (continued)

Note: The following adjustment applies only to tape readers with automatic reader control.


START CONTACT WIRESRequirement

With the control lever in the neutral position (resting in a position midway between START and STOP positions)

— Min 0.035 inch --- Max 0.055 inch  
between the start contact wires and their contact.


To Adjust

With the control lever in the FREE position, bend start contact wires between contact block and control lever cam surface with bending tool TP180993.

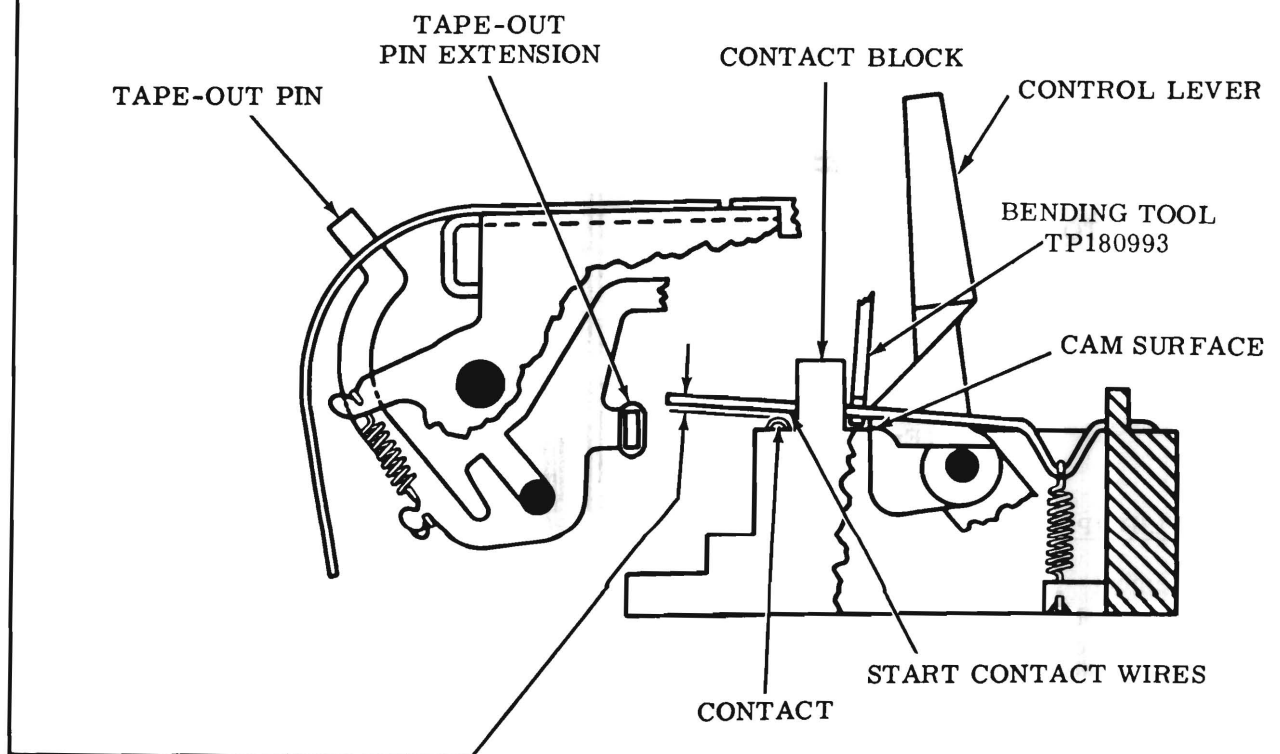

(Left Side View)

2.14 Tape Reader Area (continued)

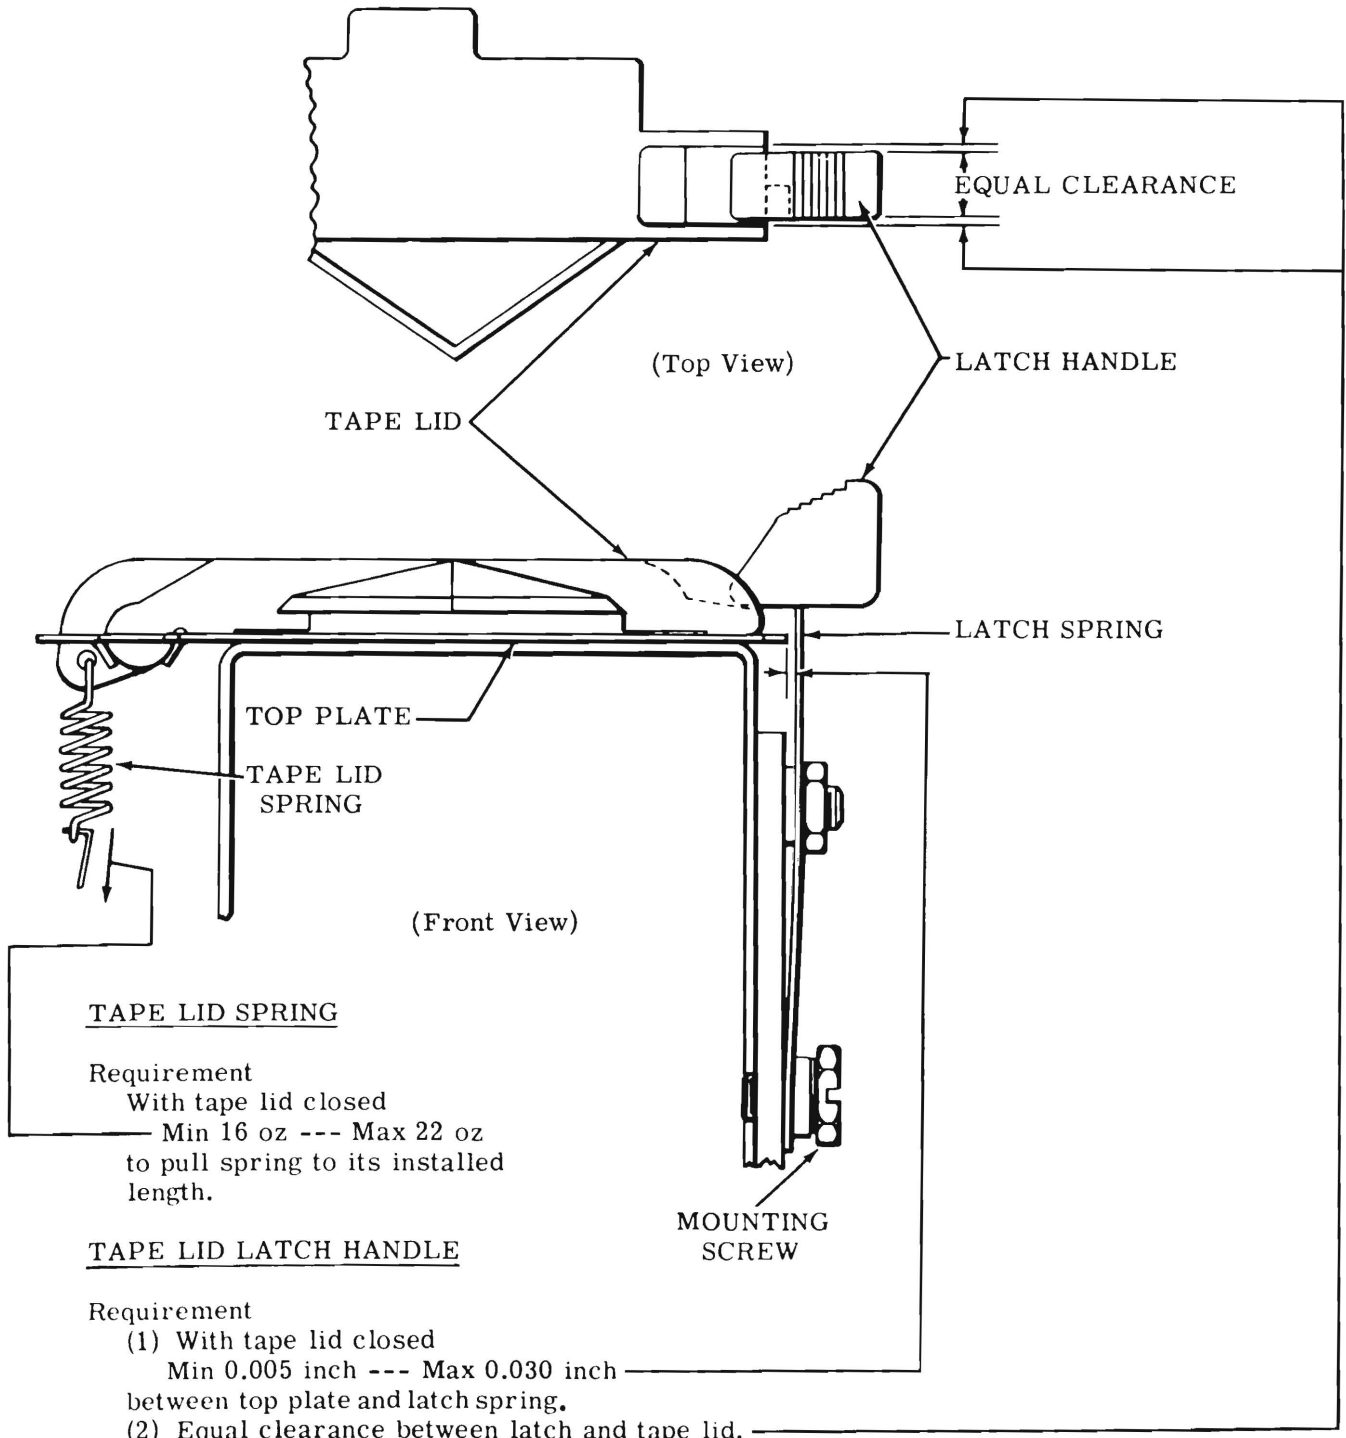

To Adjust  
 With mounting screw friction tight, position  
 latch handle vertically. Tighten screw.

2.15 Tape Reader Area (continued)

TIGHT-TAPE LEVER SPRING

Requirement

With the tape lid closed  
 Min 1 oz --- Max 2-1/4 oz  
 to start tight-tape lever moving.

CONTROL DETENT SPRING


Requirement

Place control lever in STOP position,

Note: For tape readers with automatic reader control, place the control lever in the neutral position.

Without\* Min 5 oz --- Max 9 oz  
 With\* Min 12 oz --- Max 16 oz  
 to start control detent lever moving.

\*Automatic reader control.

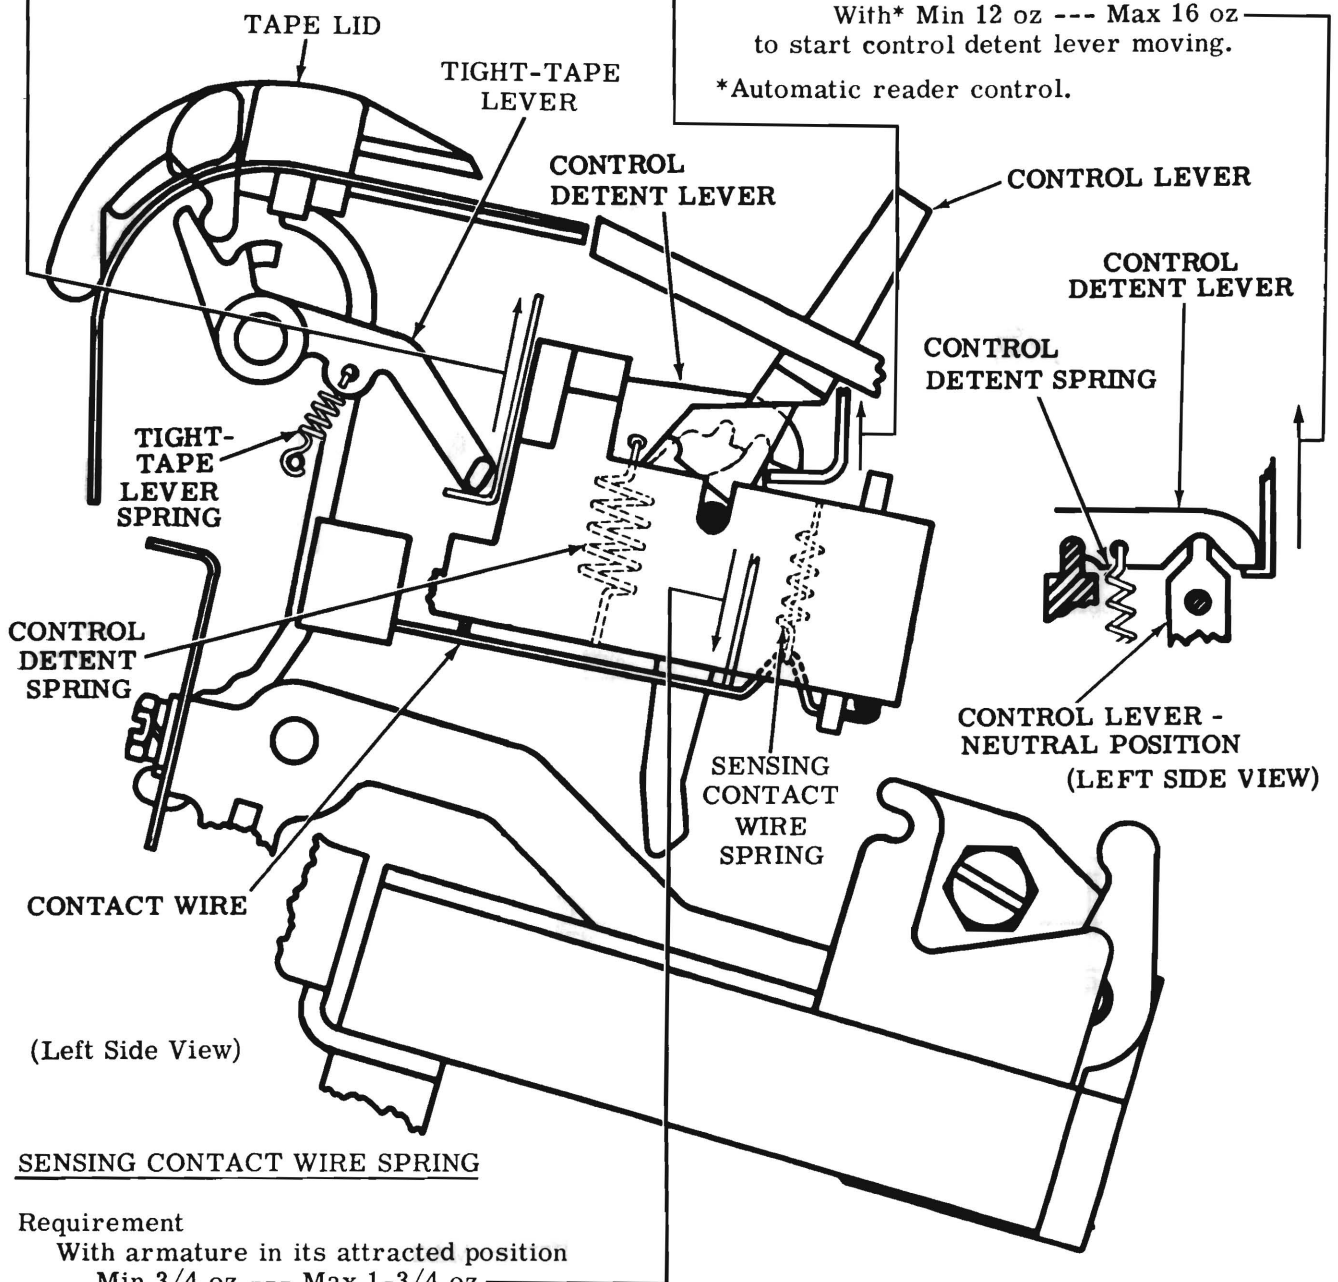

SENSING CONTACT WIRE SPRING

Requirement

With armature in its attracted position  
 Min 3/4 oz --- Max 1-3/4 oz  
 to start contact wire moving.

2.16 Tape Reader Area (continued)


TAPE-OUT PIN SPRING

Requirement

With tape lid open and control contact wires held away from the tape-out pin extension

Min 1-3/4 oz --- Max 3-3/4 oz to start tape-out pin moving.


Note: On tape readers equipped with automatic reader control, hold the control tape-out contact wires away from the tape-out pin extension.

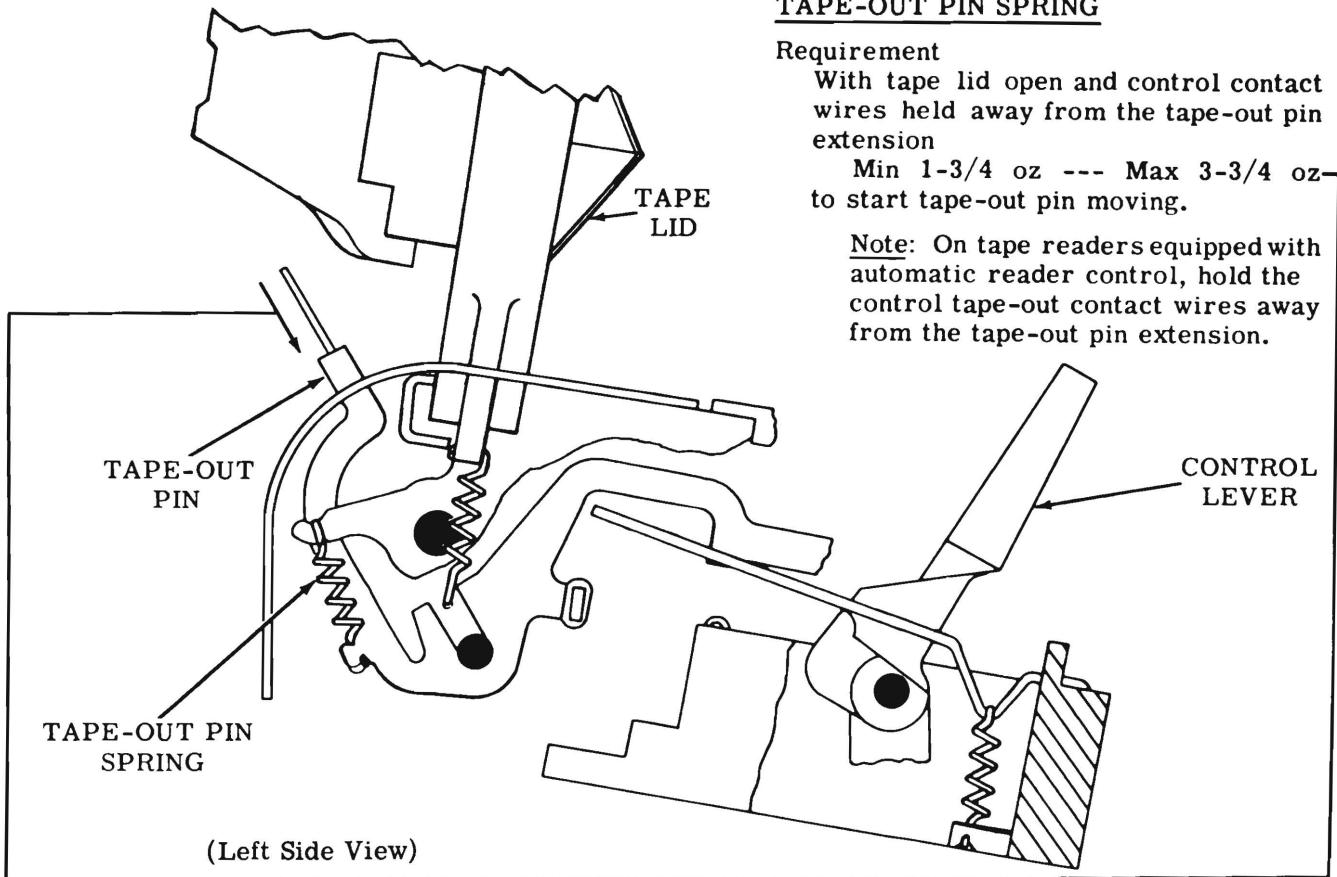


ARMATURE SPRING

Requirement

With armature in its unattracted position  
Min 24 oz --- Max 37 oz to start spring post moving. Measure each end individually.

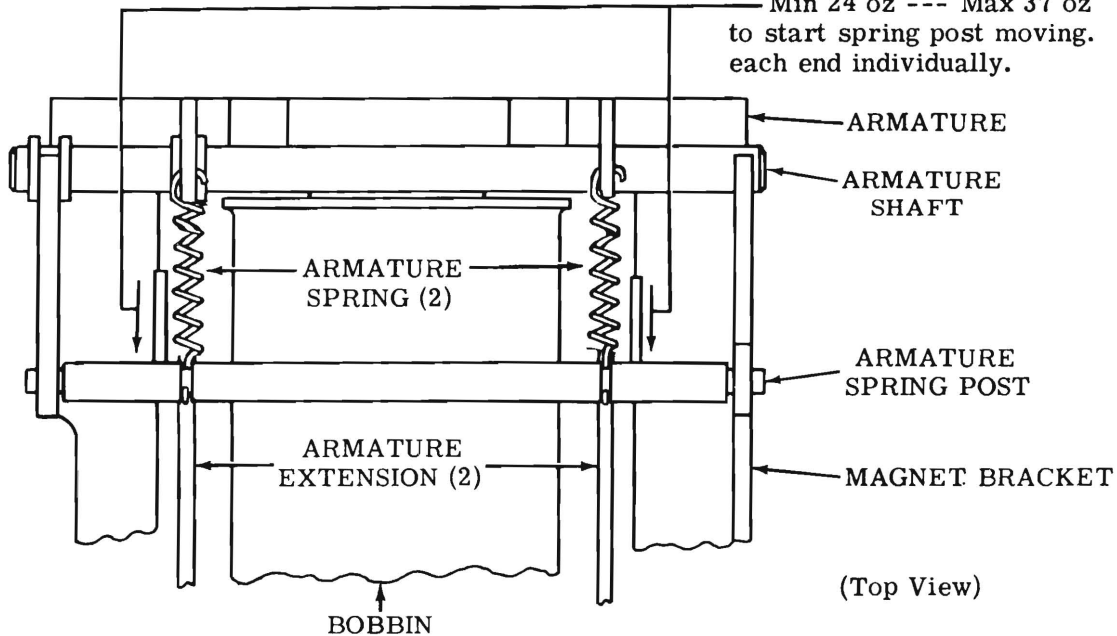

2.17 Tape Reader Area (continued)

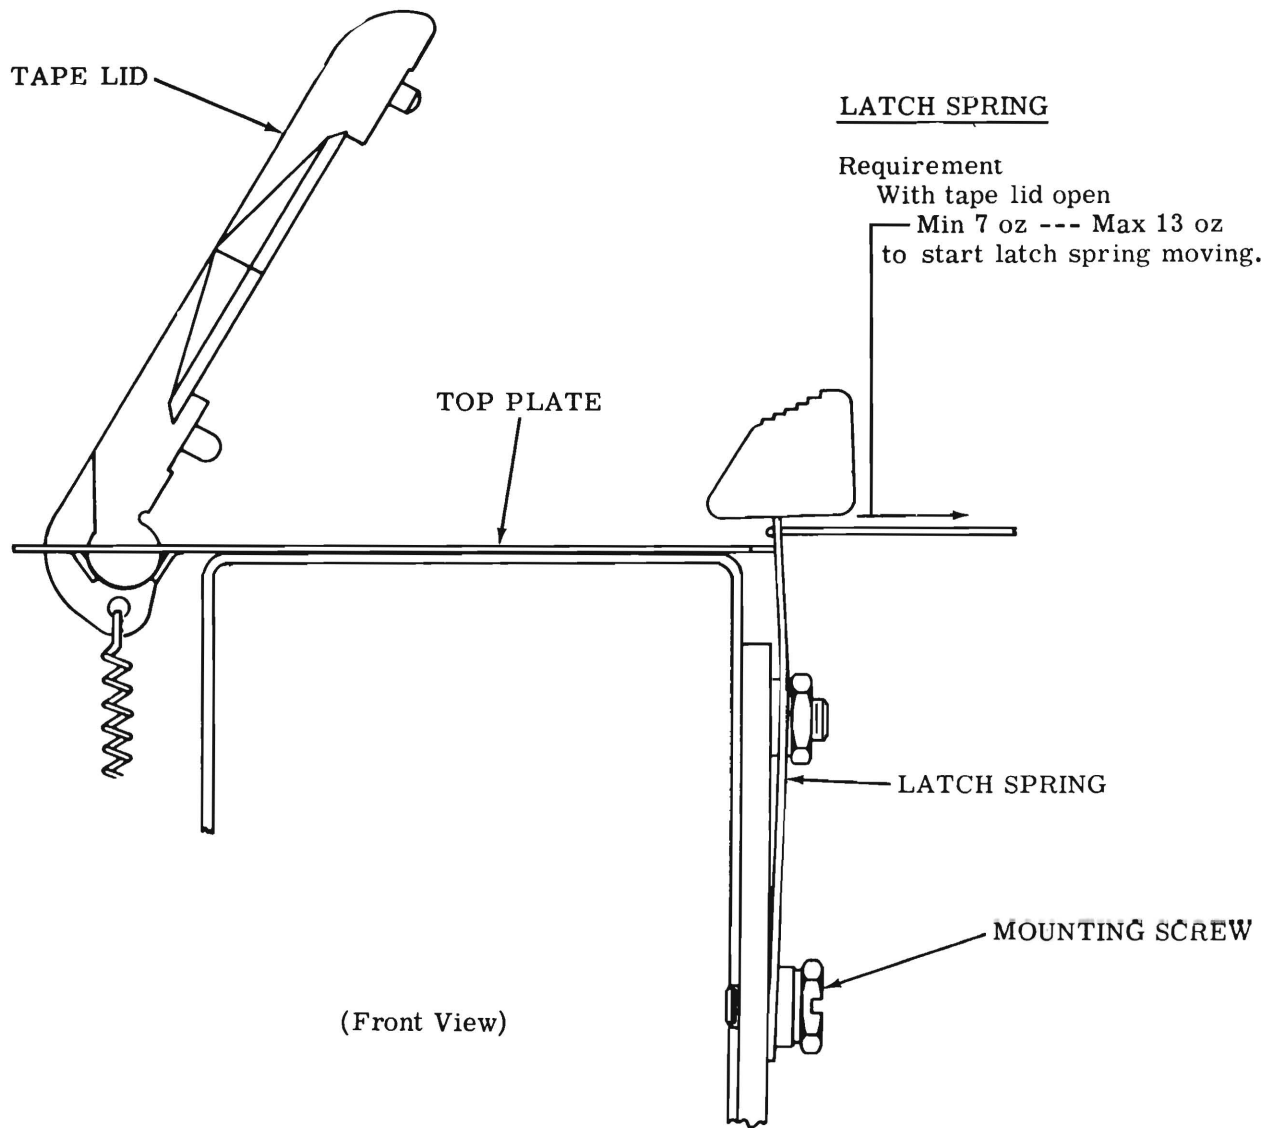

2.18 Tape Reader Area (continued)

Note: The following adjustment applies to tape readers with early design bases.


READER MOUNTING BRACKET (Early Design)

Requirement

There shall be equal clearance on three sides between top plate and tape reader cover.

To Adjust

With three mounting screws friction tight, position tape reader base. Tighten screws.

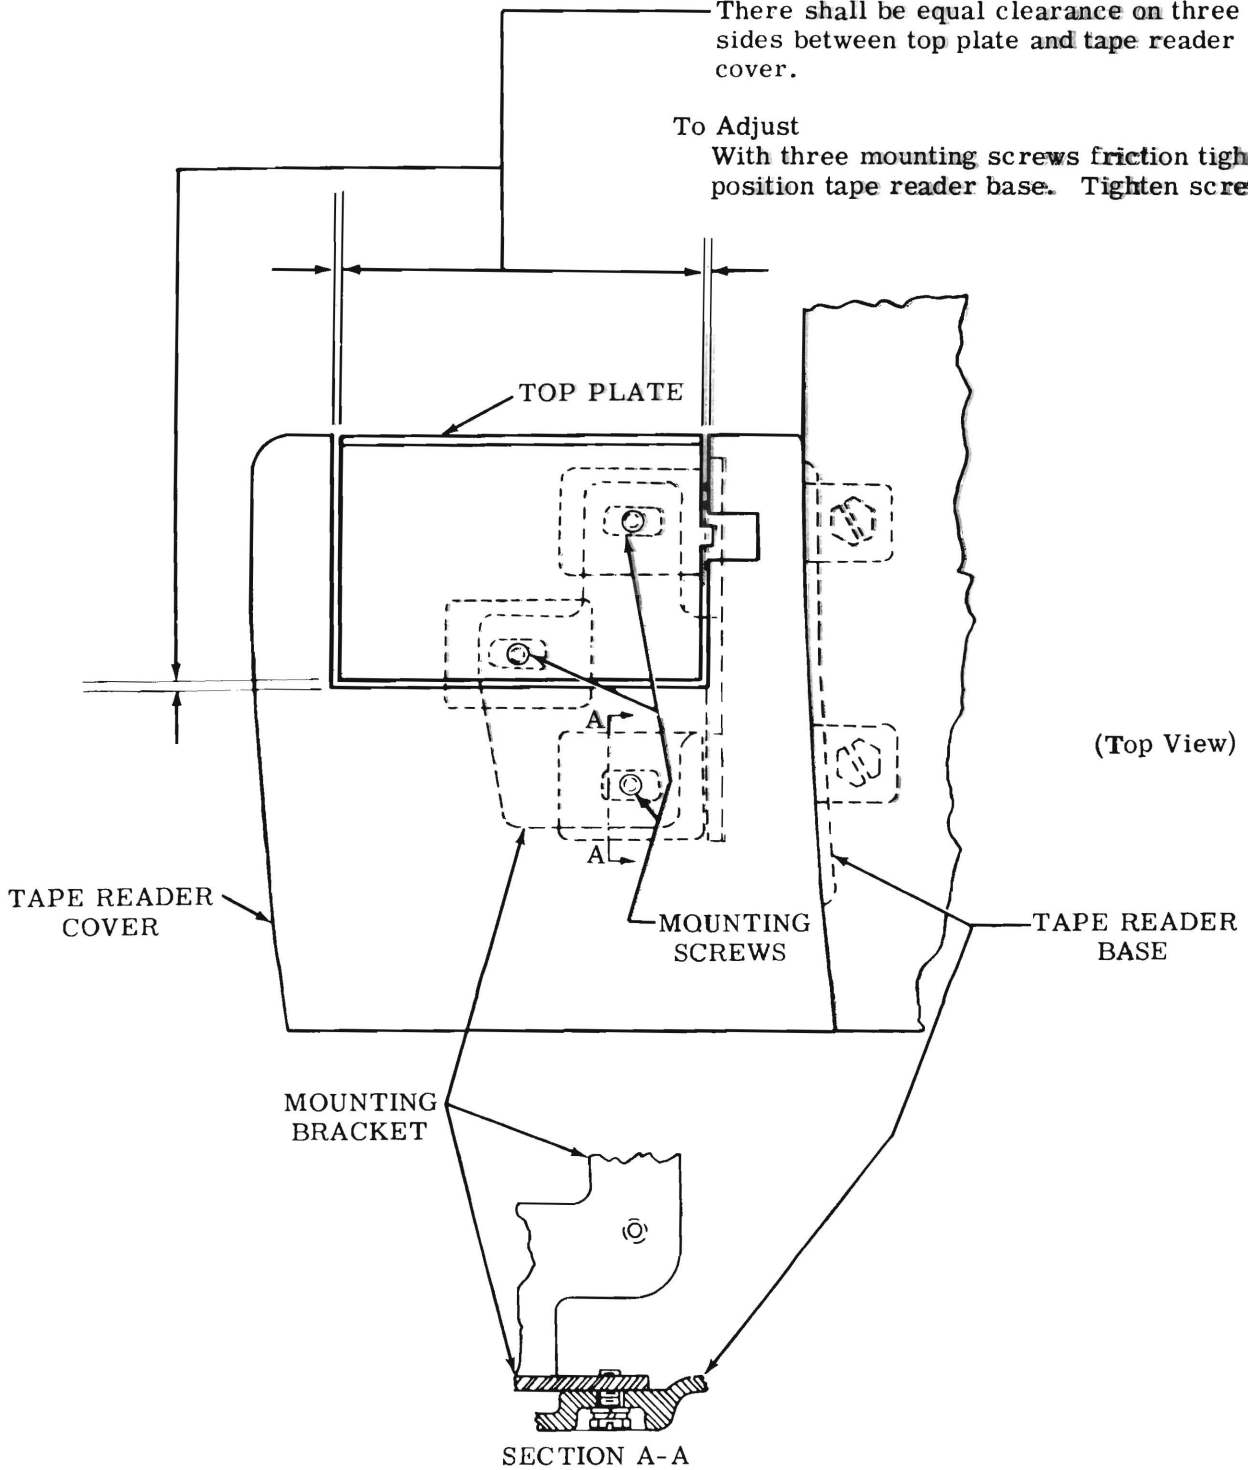

## 2.19 Tape Reader Area (continued)

**Note:** The following adjustment applies to tape readers with late design bases.

**READER MOUNTING BRACKET (Late Design)****(1) Requirement**

Top plate to be

Min Flush --- Max 0.030 inch  
below cover.


**(2) Requirement**

Equal clearance between top plate and tape reader cover on three sides.

**To Adjust**

With four adjusting screws and locking screw (L) loosened and mounting bracket lying flat on tape reader base, position tape reader. Run two adjusting screws (X) up until requirement is approximately met. Tighten locking screw friction tight. Run two adjusting screws (Y) up until requirement is approximately met. Refine all four adjusting screws. Tighten locking screw (L).

**CAUTION:** (1) TO PREVENT STRIPPING OF THREADS IN READER BASE WHEN ADJUSTING OR REFINING (X) OR (Y) SCREWS, BACK OFF SLIGHTLY ON CENTER LOCKING SCREW WHEN RESISTANCE IS FELT. (2) AFTER COMPLETING THE ADJUSTMENT PROCEDURE, CHECK THAT ALL FOUR ADJUSTING SCREWS ARE AT LEAST FRICTION TIGHT. IF NOT, TIGHTEN LOOSE SCREW(S) FRICTION TIGHT.

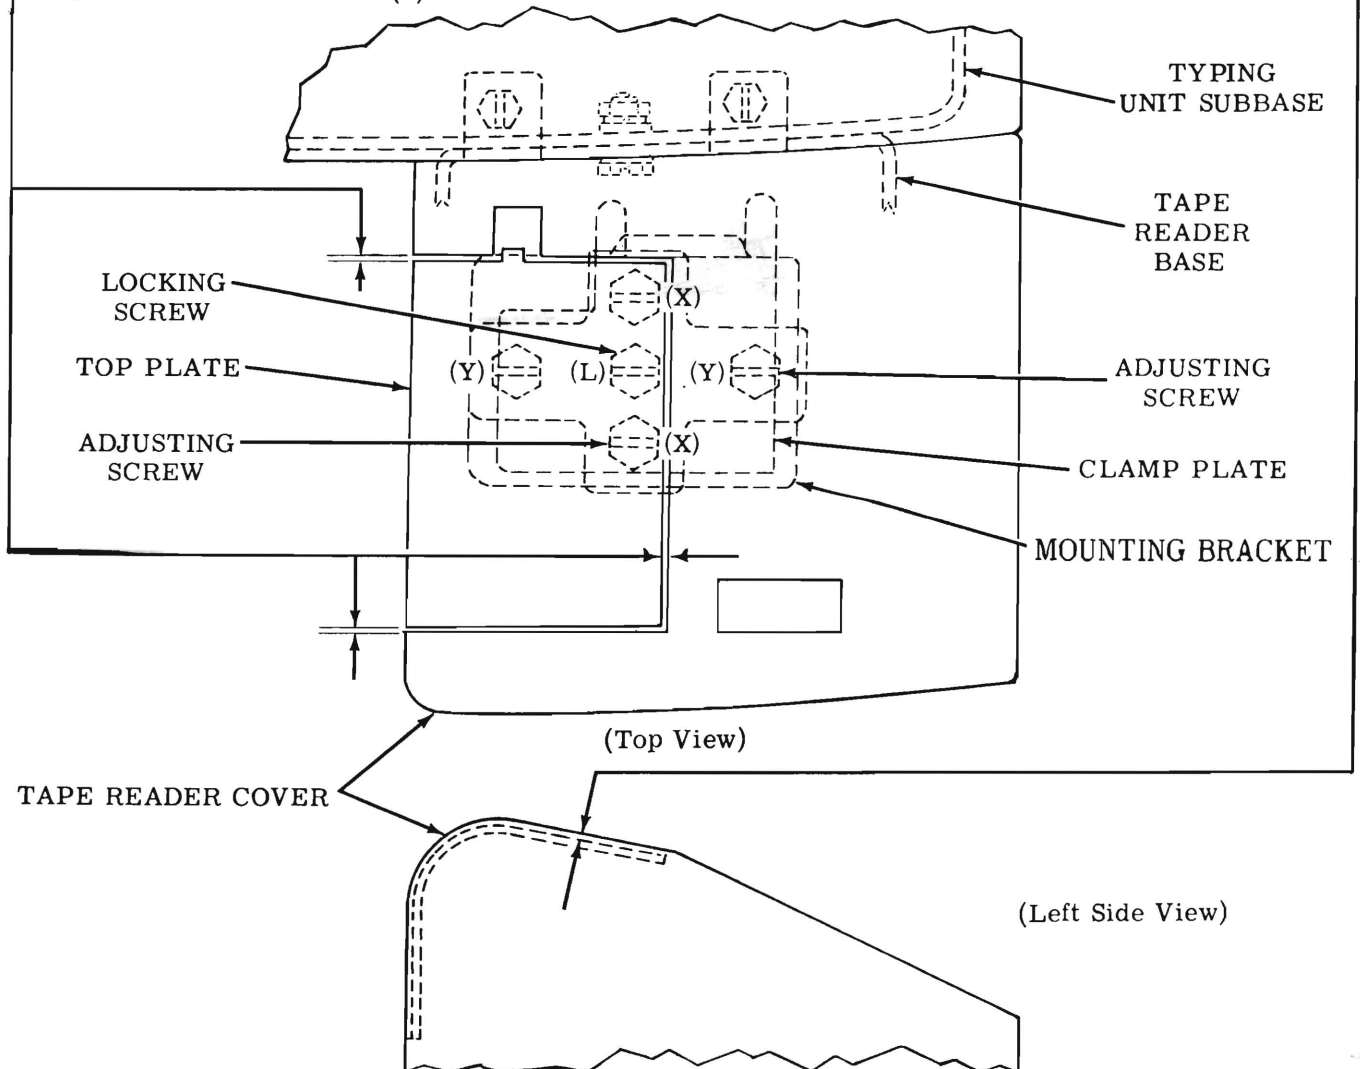

3. VARIATIONS TO THE BASIC UNIT

3.01 Tape Reader Area

Note: The following adjustment applies to readers equipped with timing contacts.


RESET AND BUSY SWITCH TIMING

(1) Requirement (Preliminary)

The busy and reset switches should be centered in their bracket slots.


(2) Requirement (Final)


With the sensing pins fully down, the reset switch should be closed and the busy switch should be open. With the sensing pins fully up (energized position), the reset switch should be open and the busy switch should be closed.

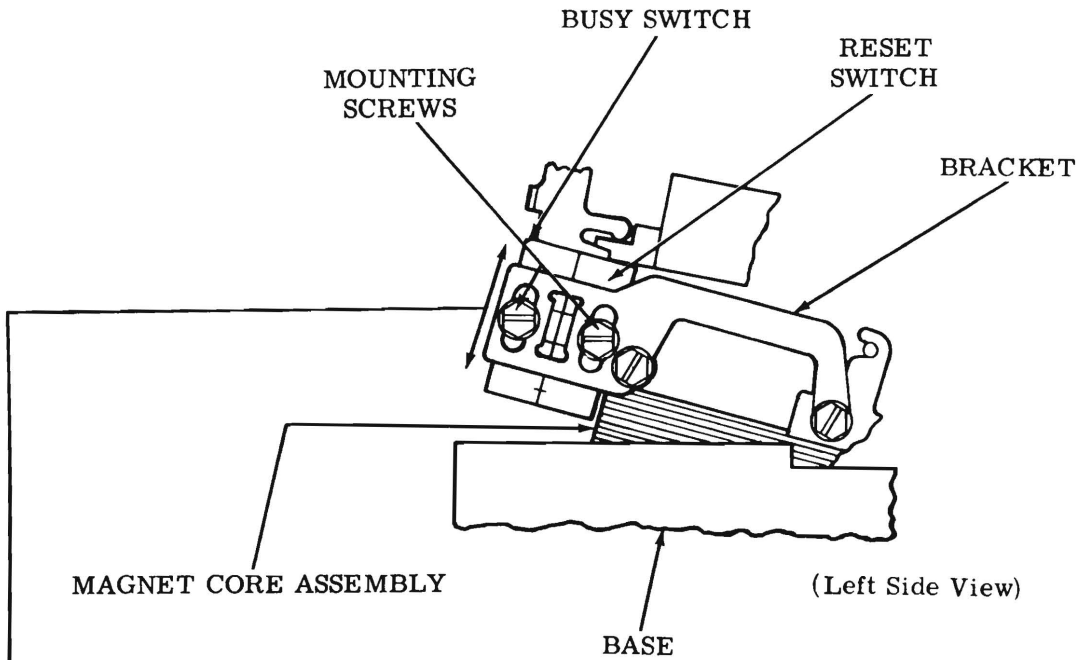

To Adjust

With switch mounting screws friction tight, position switches up or down. Tighten screws.

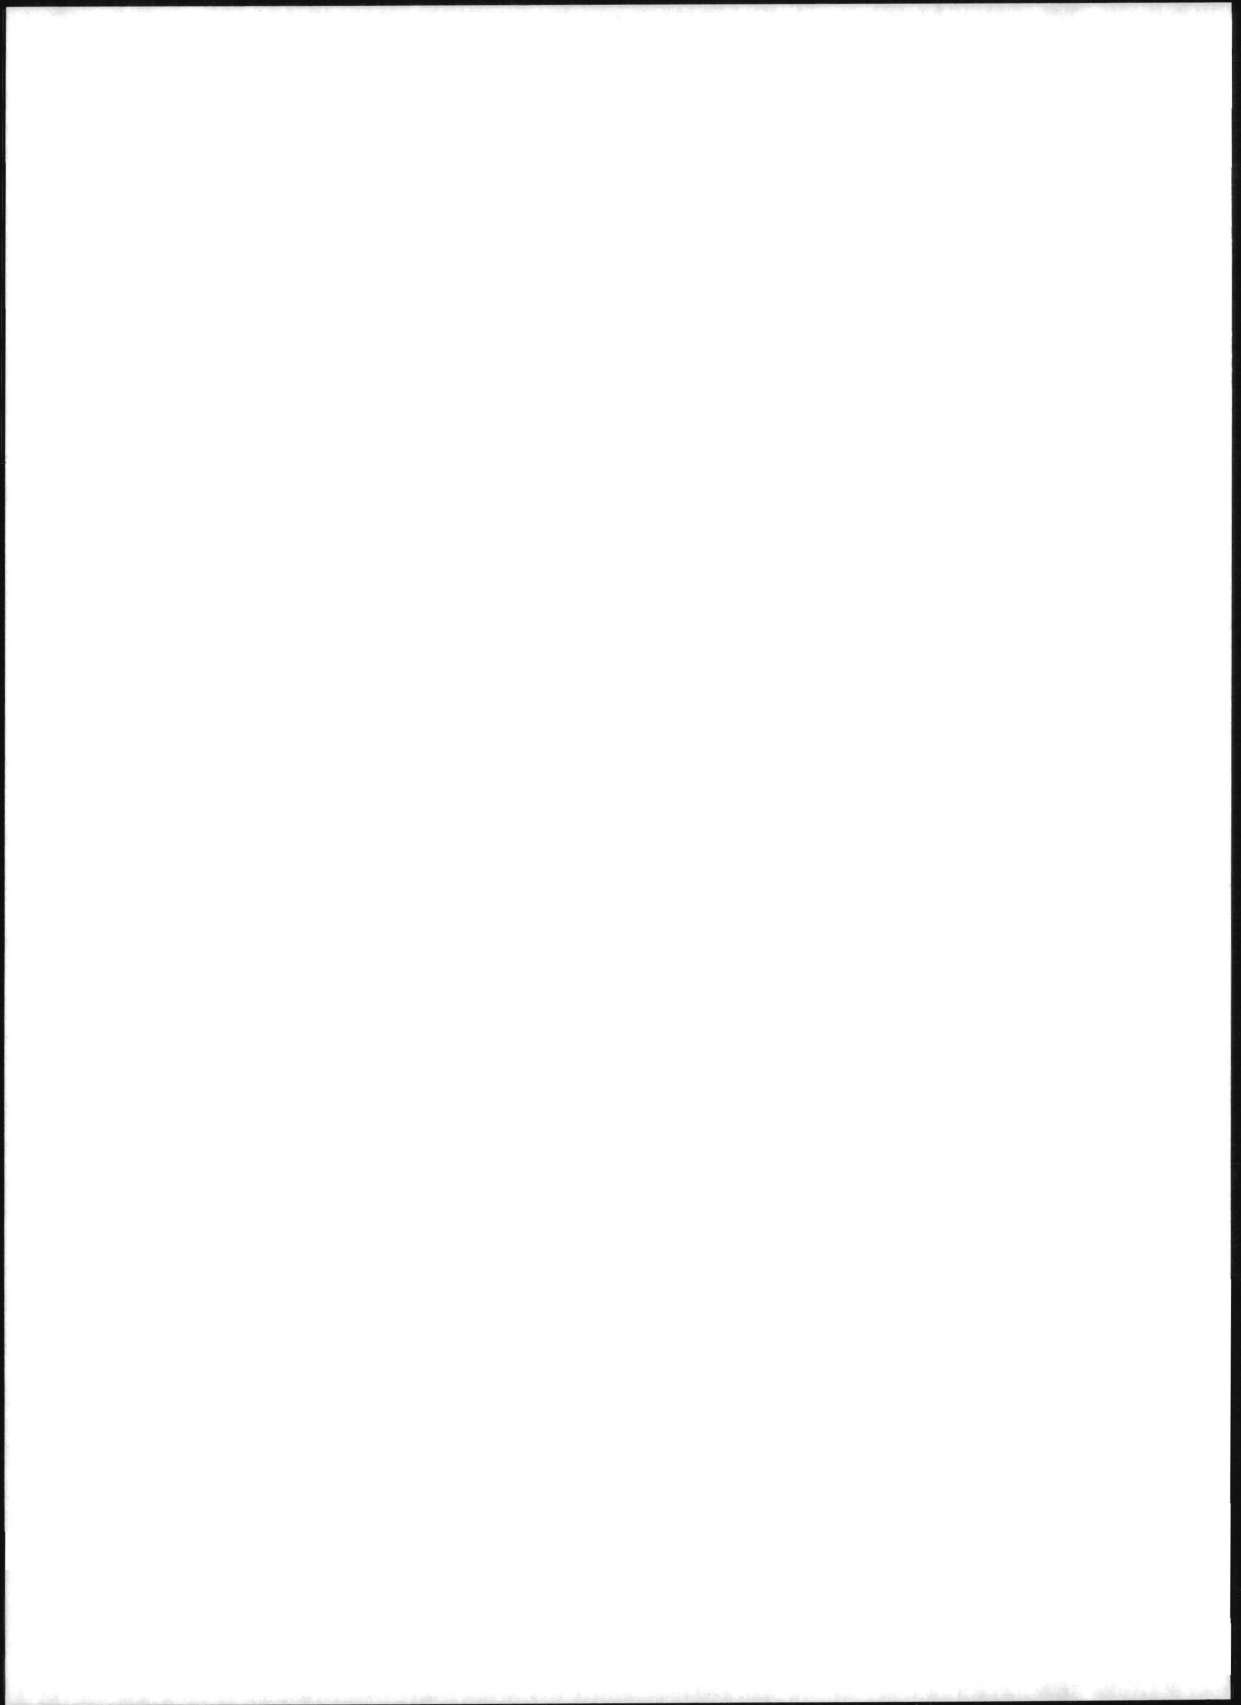


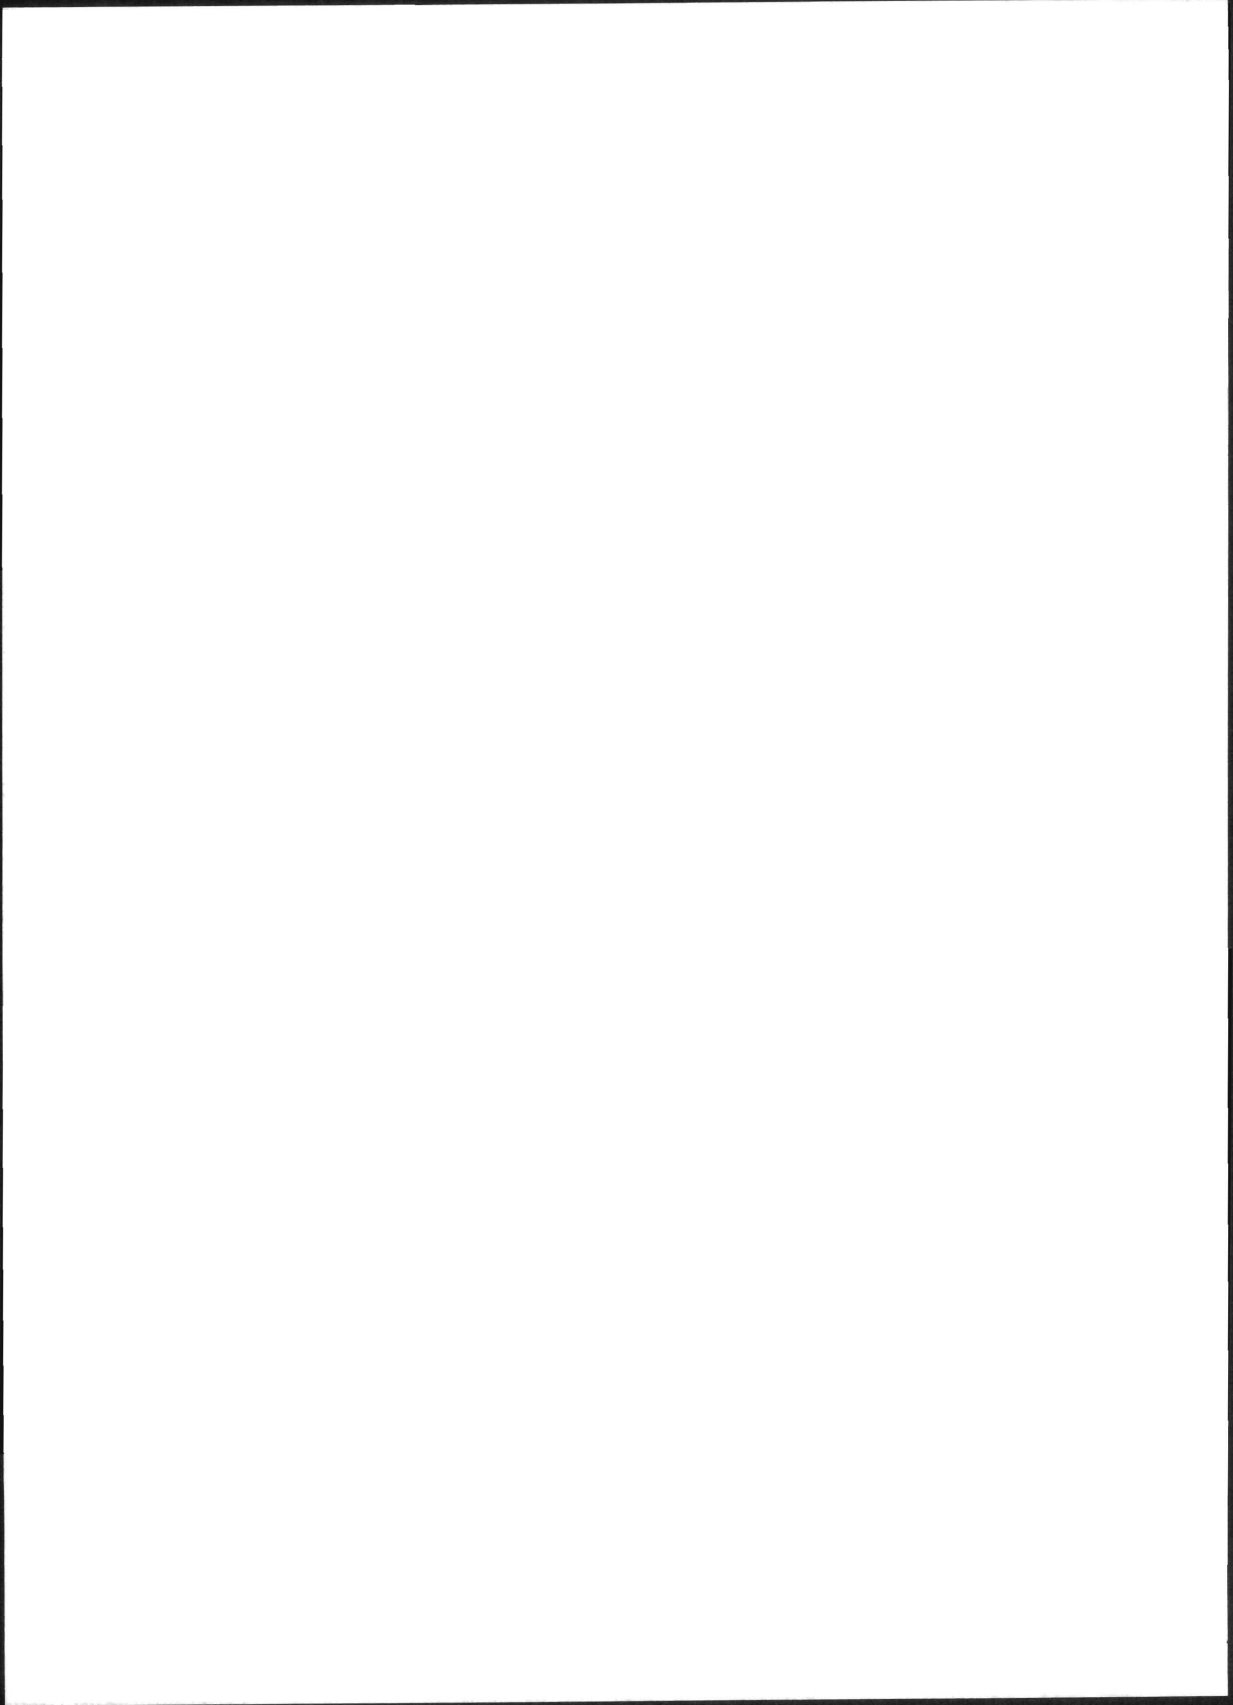

33 TAPE PUNCH  
 ADJUSTMENTS

CONTENTS	PAGE	CONTENTS	PAGE
1. GENERAL . . . . .	1	Lever overtravel . . . . .	21
2. BASIC UNIT . . . . .	5	LOCK ON . . . . .	26
Backspace lever spring . . . . .	17	ON mechanism return spring . . . . .	28
Chad chute extension . . . . .	13	Sensing lever and bail gap . . . . .	23
Codebar extension springs . . . . .	14	Visual ON OFF indicator . . . . .	25
Control detent lever spring . . . . .	18	Miscellaneous	
Control pushbuttons . . . . .	18	Folded tape guide . . . . .	29
Detent lever spring . . . . .	16	1. GENERAL	
Drive link spring . . . . .	19	1.01 This section provides adjustment and maintenance information for the 33 tape punch. It is reissued to include engineering changes. Since this is a general revision, marginal arrows ordinarily used to indicate changes and additions are omitted.	
Feed pawl spring . . . . .	16	1.02 Figure 1 shows the tape punch area where the punch adjustments and spring tension checks are made.	
Feed wheel ratchet and pawl — final . . . . .	11	1.03 In the adjustments covered in this section, location of clearances, position of parts, and point and angle of scale applications are illustrated by line drawings. Requirements and procedures are set forth in several texts that accompany the line drawings. Required tools are included in TP185830 Maintenance Tool Kit and are listed in Section 570-005-800TC.	
Feed wheel ratchet and pawl — preliminary . . . . .	6	1.04 The sequence in which the adjustments appear should be followed when a complete readjustment of the tape punch is undertaken. No adjustment should be undertaken without completely understanding the procedure and the requirements. Read a procedure all the way through before making an adjustment or checking a spring tension.	
Pawl and lever springs . . . . .	15		
Pawl upstop assembly — final . . . . .	10		
Pawl upstop assembly — preliminary . . . . .	5		
Punch block assembly . . . . .	19		
Punch penetration . . . . .	9		
Sensing lever springs . . . . .	14		
Stripper bail spring . . . . .	15		
Stripper bail upstop . . . . .	7		
Tape bias spring . . . . .	13		
Tape guide compression spring . . . . .	18		
Tape guide tension spring . . . . .	17		
Tape nudger . . . . .	5		
Tape punch drive . . . . .	8		
Ten characters per inch . . . . .	12		
3. VARIATIONS TO THE BASIC UNIT . . . . .	20		
Automatic Control Mechanisms			
Automatic ON . . . . .	27		
Automatic punch interlock spring . . . . .	28		
Control bail assembly . . . . .	20		
Control bail assembly spring . . . . .	26		
Feed wheel ratchet and pawl gap . . . . .	22		
Latch bail gap . . . . .	24		
Latch bail spring . . . . .	22		

TAPE PUNCH AREA

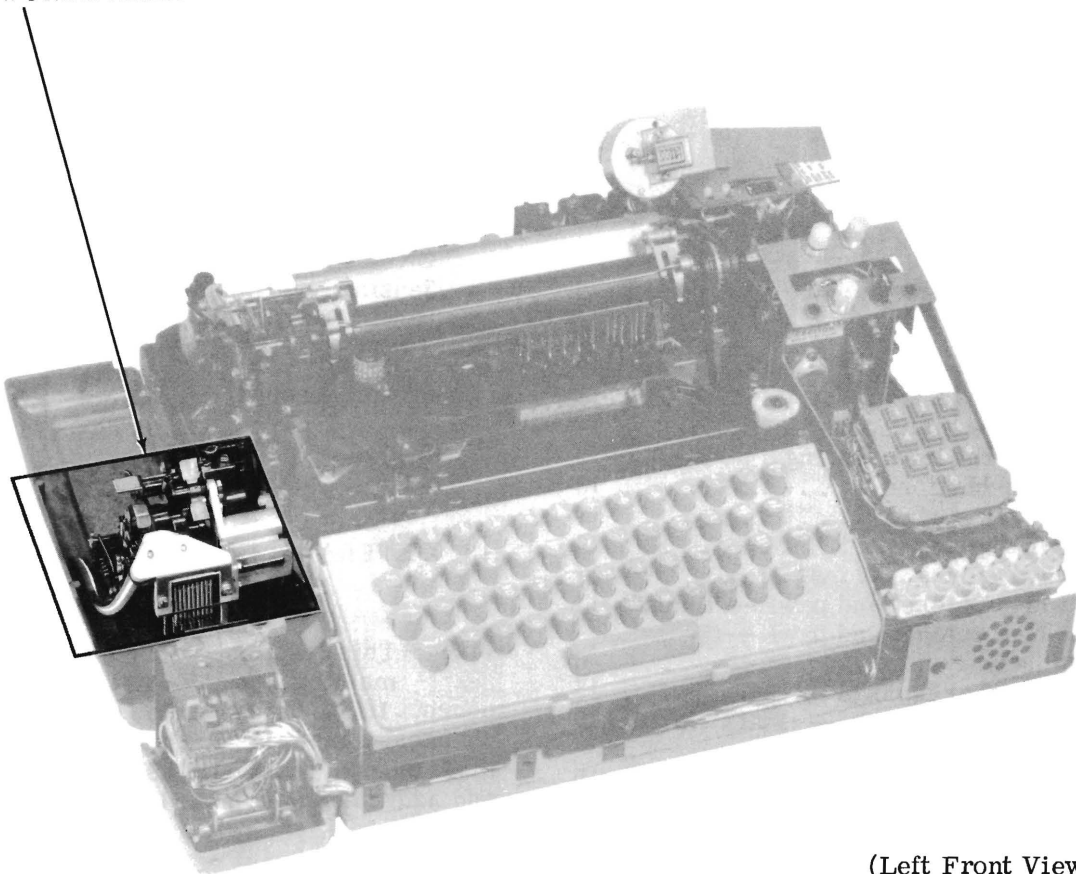

(Left Front View)

Figure 1 - Tape Punch Area

Note: Remove all electrical power sources from unit before checking or performing any adjustments.

1.05 References to left, right, front, or rear, etc consider the tape punch to be viewed from a position where the tape guide assembly faces up and the backspace lever is located to the viewer's left.

1.06 When a procedure calls for using pry points or slots to make an adjustment, place a screwdriver between the points or in the slots and pry parts in the proper direction.

1.07 If the tape punch is removed from the typing unit to facilitate making an adjustment and then replaced, recheck any adjustment that may have been affected. Also, if parts are removed from the tape punch to facilitate making an adjustment, be sure that they are replaced. Recheck any adjustment that may have been affected by the removal of the parts.

1.08 The spring tensions specified in this section are indications, not exact values. Therefore, to obtain reliable readings, it is important that spring tensions be measured by spring scales placed in the positions shown on pertinent line drawings. Springs that do not

meet their requirements should be replaced by new ones. Only springs that directly affect the operation of the tape punch are measured, however, others may be measured indirectly in the process. If this is the case and the requirement is not met, replace the springs one at a time, starting with the indicated spring, until the requirement is satisfied.

Note 1: Use spring scales which are listed in the Maintenance Tools Section 570-005-800TC.

Note 2: Spring tensions may be checked in any sequence.

1.09 Certain adjustments require that the tape punch be either "on" or "off." These conditions can be identified as follows:

(a) "Off" condition

(1) Manual (Punch) Controls: A tape punch is "off" when the control lever is in its clockwise detented position and fully engages the drive post.

(2) Automatic (Punch) Controls: An "automatic" tape punch is "off" when the associated typing unit is in the stop condition and the On-Off bail assembly is latched by the latch bail.

Note 1: If the automatic punch is equipped with the "On Lock" option, the "unlock" button must be depressed to enable the On-Off bail assembly to be latched.

Note 2: If the automatic punch is equipped with the interlock mechanism, the nonprint codebar must be in its unoperated position — solenoid not energized.

(b) "On" condition

(1) Manual (Punch) Controls: A tape punch is "on" when the control lever is detented in its counterclockwise posi-

tion and the drive post is fully engaged by the drive link.

(2) Automatic (Punch) Controls: An automatic tape punch is "on" when the On-Off bail assembly is in its unlatched counterclockwise position.

1.10 With the tape punch and typing unit assembled together, all adjusting procedures should be started with the typing unit in the stop condition. It is in the stop condition when the selector armature is in its attracted (frontward) position and all clutches are disengaged.

Note: When the typing unit is in the stop condition and the punch is "on," the tape punch is said to be in the off position.

1.11 To place the typing unit in the stop condition, hold the selector armature in its attracted (frontward) position. Rotate the main shaft clockwise (as viewed from the left) until all clutches are fully disengaged as instructed in 1.12.

1.12 When disengaged, a clutch is latched so that a shoe lever is held in its stop position by a trip lever while a corresponding latch-lever is seated in a notch of the clutch disc. This allows the clutch shoes to release their tension on the clutch drum. With all clutches disengaged, the main shaft will turn freely without any clutch shoes dragging.

Note 1: The clutch stop position is that position where a shoe lever contacts a trip lever.

Note 2: If the shaft is turned by hand, a clutch will not fully disengage upon reaching a stop position. To fully disengage a clutch, rotate the clutch to a stop position, apply a screwdriver to the associated stop-lug, and push the clutch disc in the normal direction of main shaft rotation until the corresponding latchlever seats in its clutch disc notch.

Note 3: The distributor clutch will not disengage unless the answer-back drum is in its home position, which is the position where the control lever is fully detented into the indent on the answer-back drum.

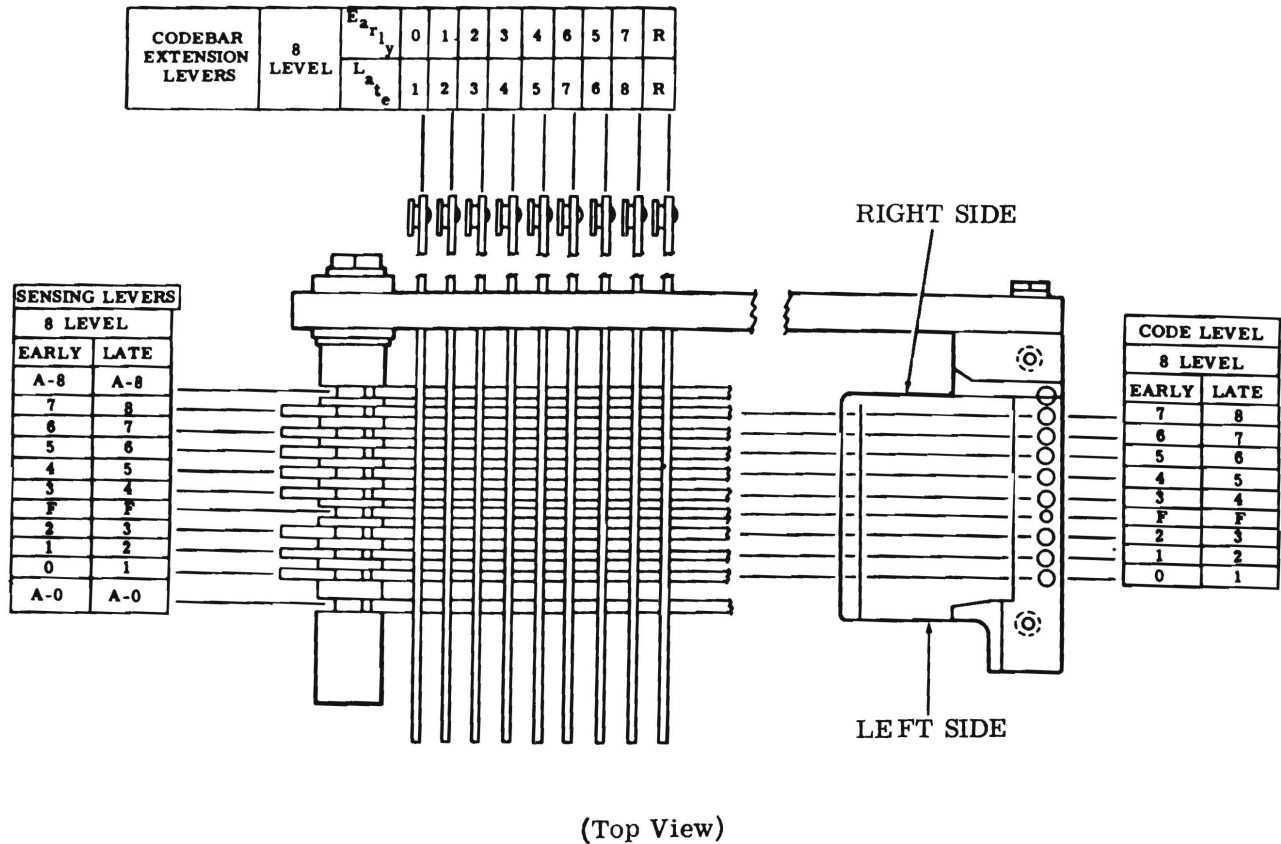


Figure 2 - Tape Punch Code Level Cross Reference Chart

1.13 Manual Operation: To manually operate the typing unit, place it in the stop condition as instructed in 1.11. Momentarily permit the armature to move to its unattracted (rearward) position to trip the selector clutch. Slowly rotate the main shaft clockwise (as viewed from the left) until all push levers have moved under their respective selector levers. Using a spring hook, strip the push levers from under the selector levers corresponding to the spacing elements of the code combination to be set up. Then continue to rotate the main shaft until the

proper condition is set up or the character is cleared through the typing unit.

1.14 The selector levers are numbered 1, 2, 3, 4, 5, 7, 6, and 8 from left to right. To set up the character Y, for example, whose code combination is 1--45-78, strip the push levers from the 2, 3, and 6, selector levers.

1.15 The relationship between code levels, sensing levers, and codebar extensions is illustrated in Figure 2.

2. BASIC UNIT

2.01 Tape Punch Area

Note 1: These adjustments are to be made only if these areas have been disturbed during disassembly.

Note 2: Prior to making adjustments, remove the chad extension. Reassemble when the adjustments are completed.

PAWL UPSTOP ASSEMBLY — PRELIMINARY


Requirement

The pawl upstop assembly should be positioned so that it is vertical or within 2 degrees clockwise from vertical, as gauged by eye.

To Adjust

Loosen the screw which secures the pawl upstop assembly post to the tape punch casting and position pawl upstop assembly. Tighten screw.

(Left Side View)

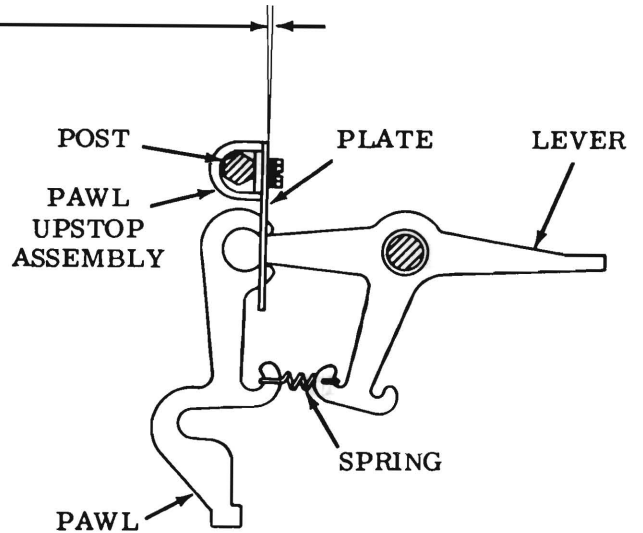

TAPE NUDGER

Note 3: This adjustment applies only to tape punch castings which have an elongated tape nudger post mounting hole.


Requirement

The post should be in its most rearward position.

To Adjust

Loosen the screw which secures the post to the tape punch casting and position the post. Tighten screw.

(Left Side View)

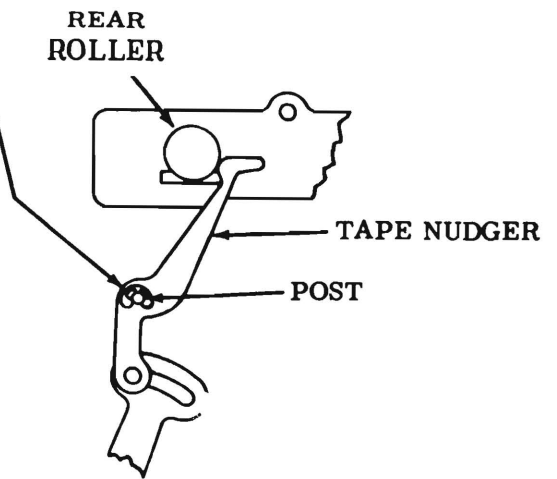

2.02 Tape Punch Area (continued)


FEED WHEEL RATCHET AND PAWL — PRELIMINARY

**Requirement**

The plate should be in middle of slot located in feed pawl arm, as gauged by eye.

**To Adjust**

Loosen screw and adjust plate using pry points. Tighten screw.

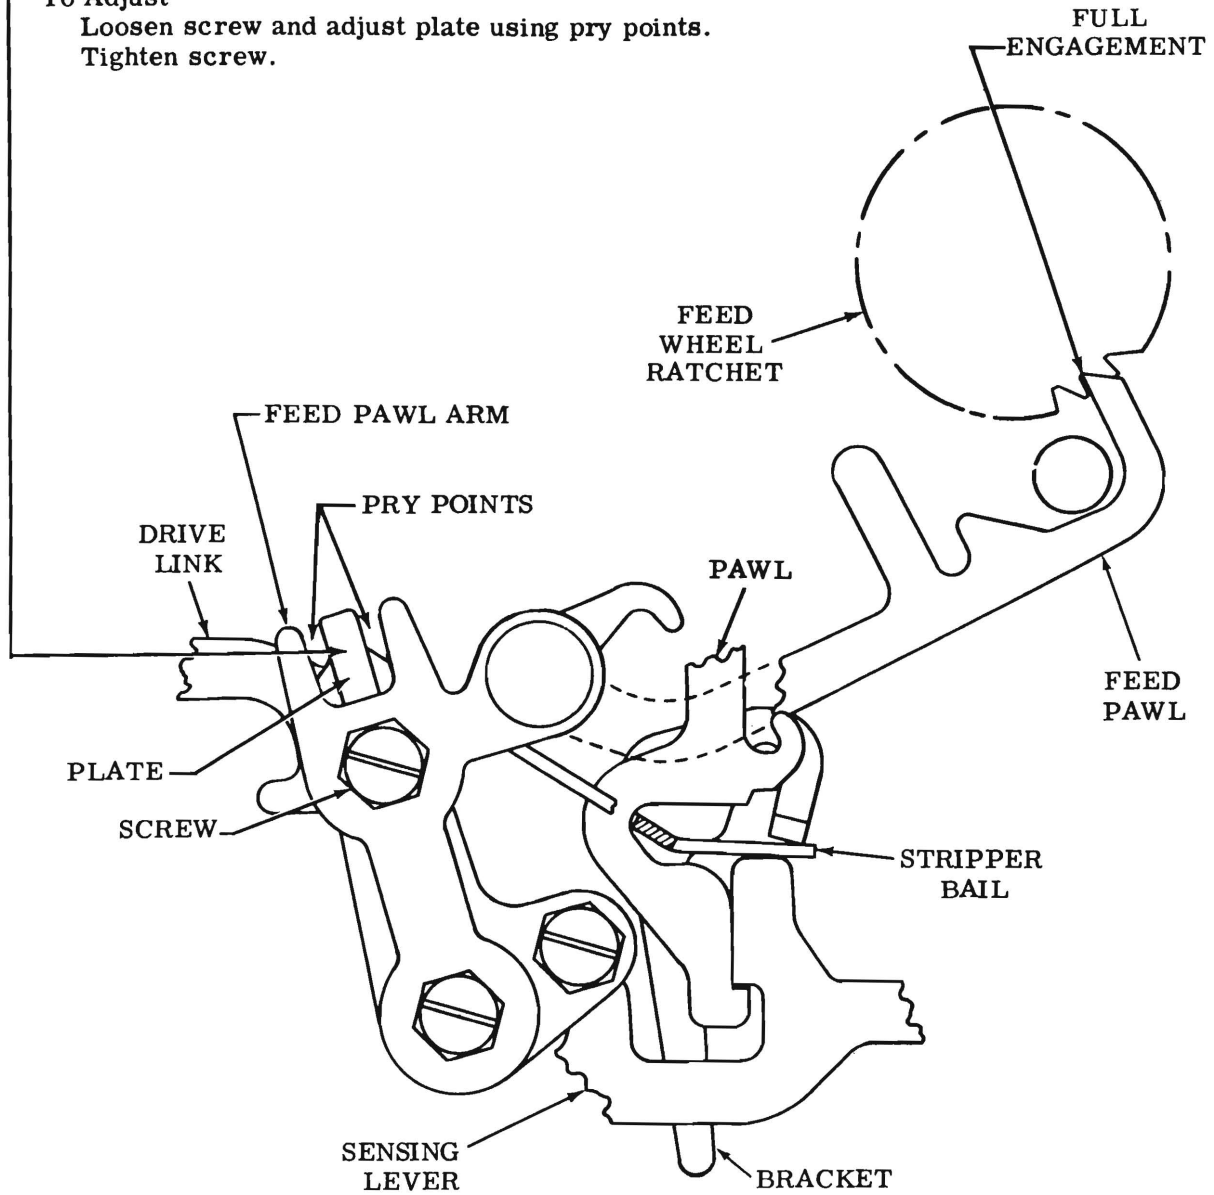

(Left Side View)

2.03 Tape Punch Area (continued)


STRIPPER BAIL UPSTOP

**Requirement**

With the tape punch "off" and all pawls in their uppermost position, the stripper bail should clear bottom corner of the stripping surface of lowermost pawl by  
 Min some---Max 0.012 inch

**To Adjust**

With all pawls in their uppermost position, loosen screw and rotate bracket to meet requirement.  
 Tighten screw.

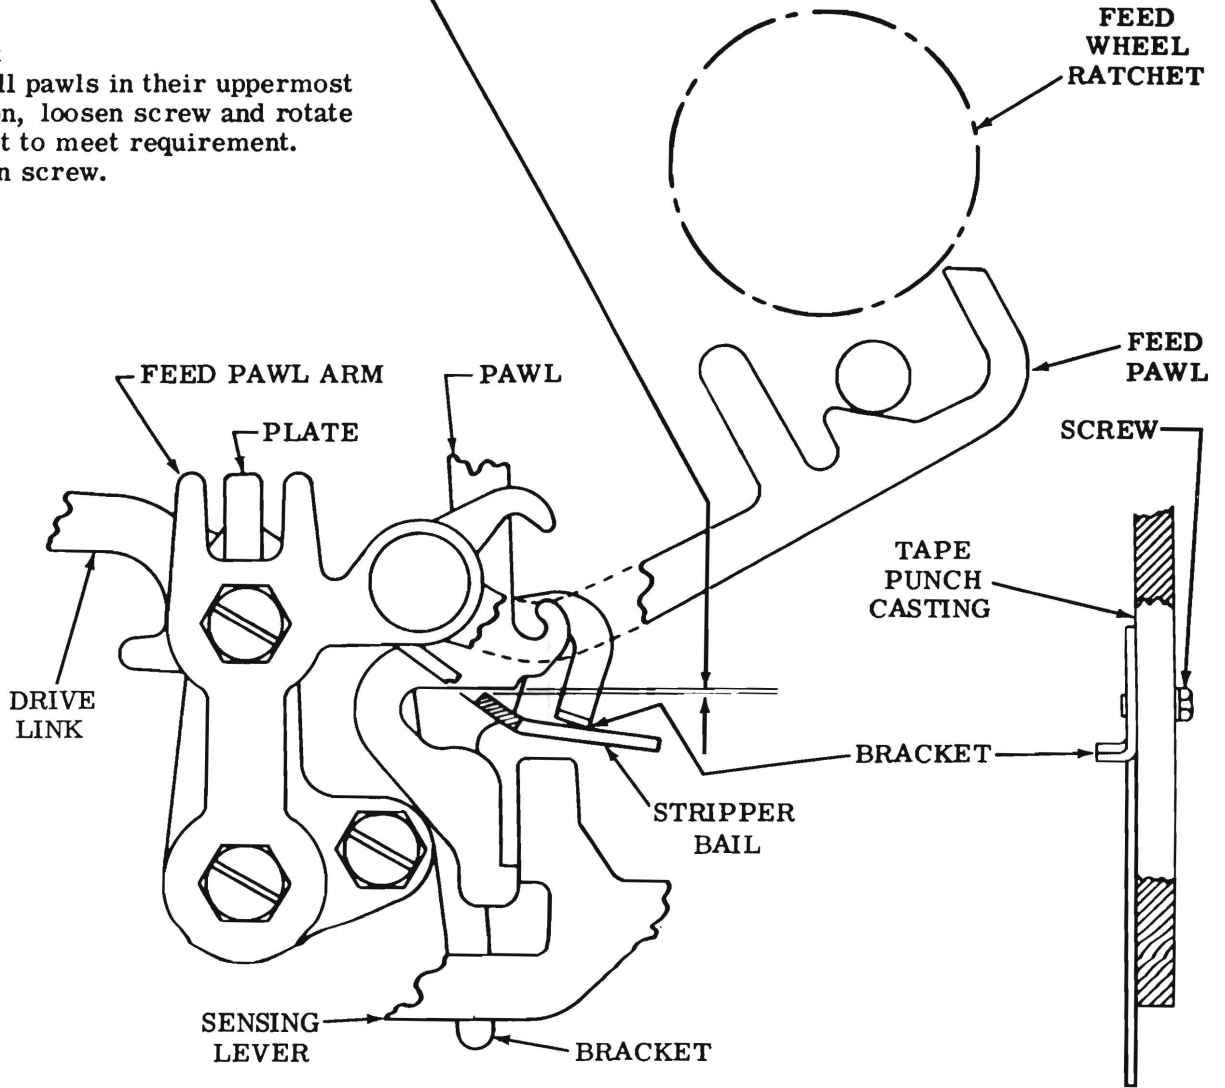

(Left Side View)

(Front View)

2.04 Tape Punch Area (continued)

Note 1: For the adjustments which follow, the tape punch should be mounted to the typing unit. For instructions, see section titled "33 Tape Punch, Disassembly and Reassembly."

Note 2: The following Tape Punch Area adjustments must be made in sequence: TAPE PUNCH DRIVE, PUNCH PENETRATION, PAWL UPSTOP ASSEMBLY — FINAL, and FEED WHEEL RATCHET AND PAWL — FINAL. Prior to making the above adjustments, check or make the following Tape Punch Area adjustments: PAWL UPSTOP ASSEMBLY — PRELIMINARY, TAPE NUDGER, FEED WHEEL RATCHET AND PAWL — PRELIMINARY, and STRIPPER BAIL UPSTOP.

TAPE PUNCH DRIVE

To Check


With no tape in the tape punch and with the tape punch "on," manually rotate the main shaft until the stripper bail is in its most forward position. Take up rear roller play toward rear and tape nudger play in a clockwise direction.

Requirement


Min 0.030 inch---Max 0.080 inch at point of least clearance between rear roller and tape nudger.

To Adjust


Loosen adjusting screw and use pry points to position plate. Tighten screw.

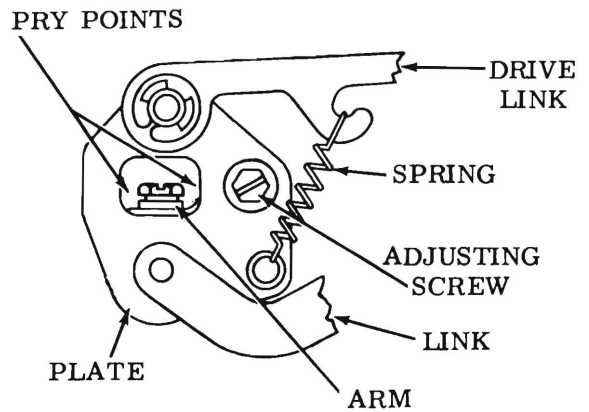

EARLY DESIGN  
(Left Side View)

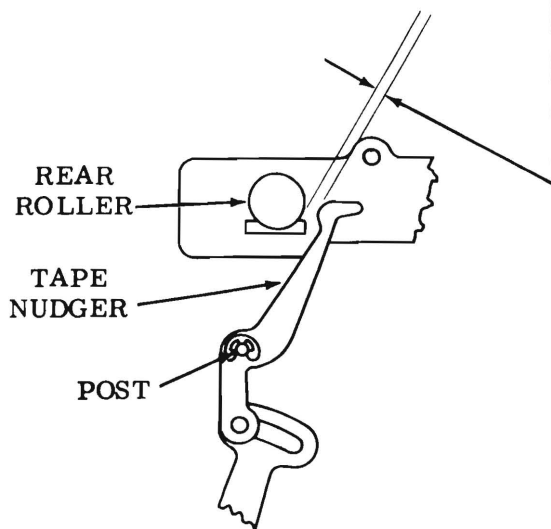

EARLY OR  
LATE DESIGN  
(Left Side View)

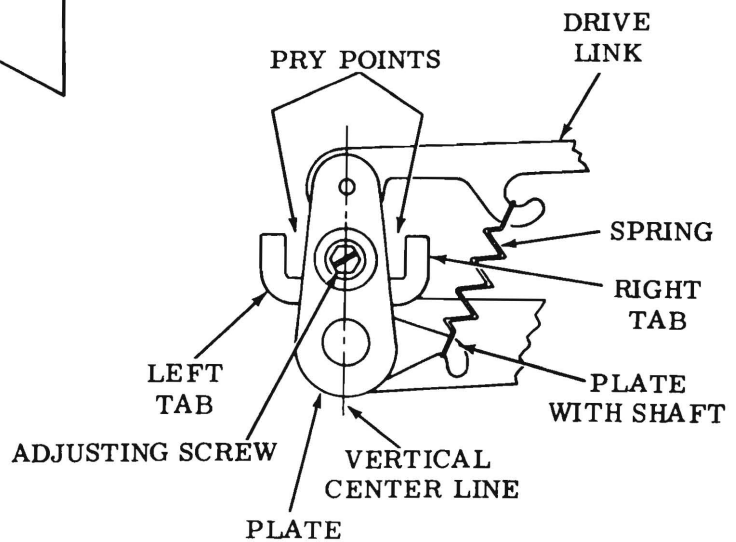

LATE DESIGN  
(Left Side View)

2.05 Tape Punch Area (continued)

PUNCH PENETRATION

To Check


With the tape punch "on," set up an all-marking code combination in the selector. Manually rotate the main shaft until the stripper bail is in its most forward position.

Requirement

Min 0.017 inch---Max 0.037 inch between bottom surface of holder and top surface of any lever.

To Adjust

With code lever post mounting screw (and support plate nut on late design units) friction tight, position post within the elongated base hole (and support plate hole — late design units). Tighten screw and nut.

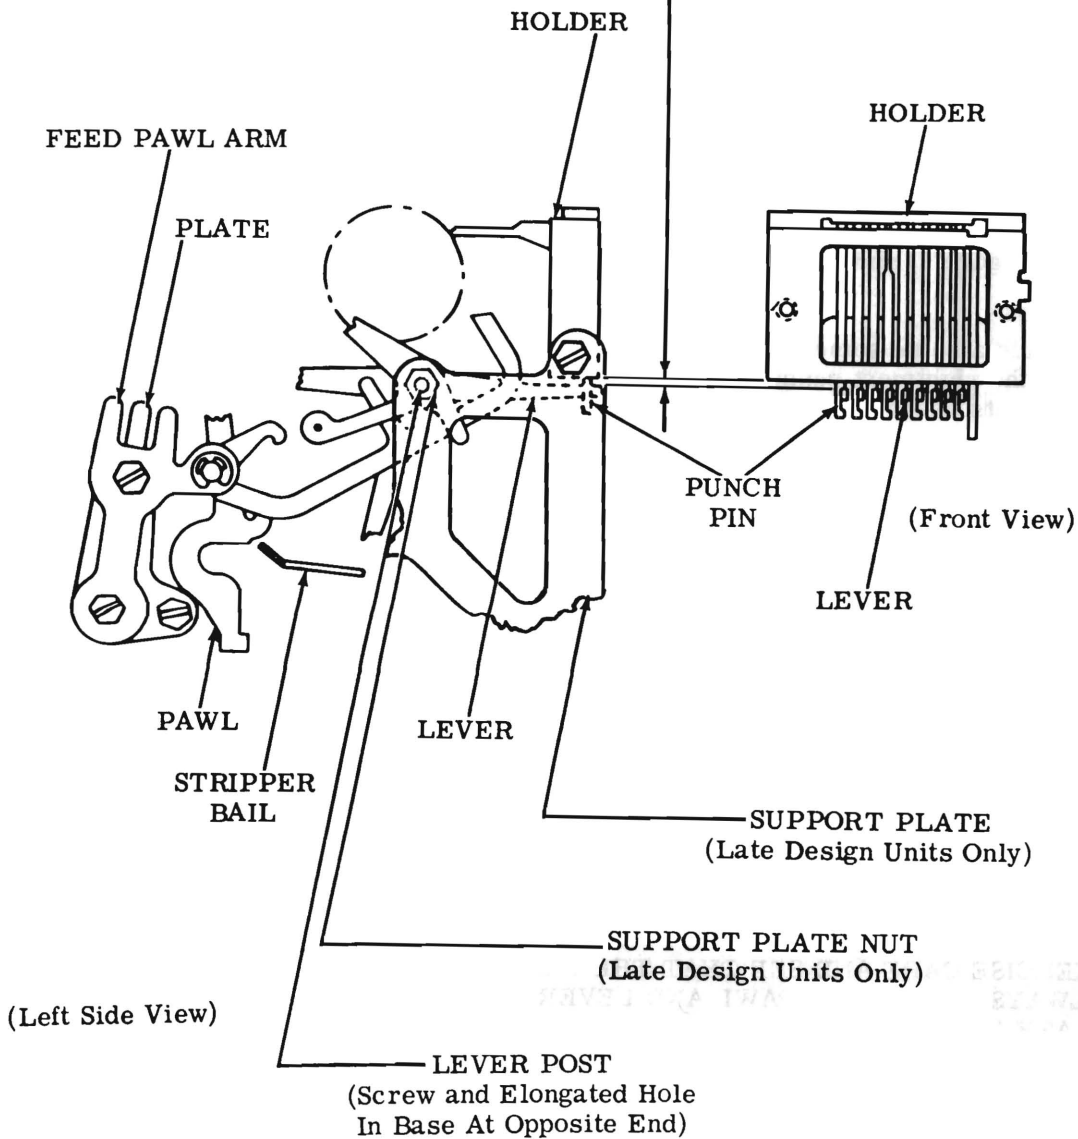

2.06 Tape Punch Area (continued)

PAWL UPSTOP ASSEMBLY — FINAL

To Check

With the tape punch "on," set up an all-marking code combination in the selector. Manually rotate the main shaft until the stripper bail is in its rearmost position.

Note 1: For tape punches equipped with the answer-back blocking option or automatic controls, use the following "To Check" procedure:

To Check

With the tape punch "on," set up the code combination in the selector that will cause the special feature to operate. Manually rotate the main shaft until the stripper bail is in its rearmost position. Check requirement (1). Then, set up an all-marking code combination in selector. Manually rotate the main shaft until the stripper bail is in its rearmost position. Check requirement (2).


(1) Requirement

Min 0.005 inch---Max 0.020 inch  
between the leftmost sensing lever  
(Figure 2) and its associated pawl.

Note 2: For tape punches equipped with automatic controls, the requirement will be checked between the second from the left sensing lever (Figure 2) and its associated pawl.

Note 3: There should also be some clearance between the rightmost sensing lever (Figure 2) and its associated pawl.

Note 4: "Some clearance" can be determined by feeling movement when pressing down on a sensing lever while holding its assembled lever in its most downward position.

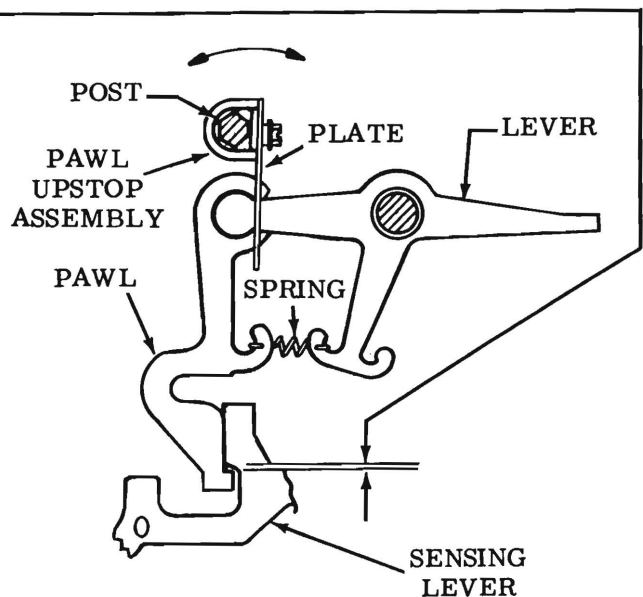

(Left Side View)

(2) Requirement

Some clearance between the feed lever  
and its associated pawl and each sensing  
lever and its associated pawl.

To Adjust

Loosen the screw which secures the pawl upstop assembly post to the tape punch casting. Provide proper clearance by rotating the pawl upstop assembly. Tighten screw. Recheck requirement (1) above and refine if necessary. Remake STRIPPER BAIL UPSTOP (Tape Punch Area) adjustment.

**CAUTION:** EXERCISE CARE AND SEE THAT THE PLATE OF THE PAWL UPSTOP ASSEMBLY ALWAYS GUIDES THE PAWL AND LEVER SIMULTANEOUSLY. AVOID ROTATING PLATE IN A COUNTERCLOCKWISE DIRECTION FROM ITS VERTICAL POSITION IF POSSIBLE.

## 2.07 Tape Punch Area (continued)

FEED WHEEL RATCHET AND PAWL — FINAL**To Check**

With no tape in the tape punch and with the tape punch "on," set up an all-marking code combination in the selector. Manually rotate the main shaft until the stripper bail is in its rearmost position. Take up all play in stripper bail toward the front.


**Requirement**

With feed wheel ratchet in its fully detented position  
Min some---Max 0.005 inch  
between the feed pawl and feed wheel ratchet tooth.

**To Adjust**

Loosen screw and position plate w/bushing using pry points. Tighten screw. Backspace feed wheel ratchet one full revolution, one tooth at a time, using backspace lever. Check each tooth to see if the requirement is met. Gauge by eye. Readjust where necessary.

Note: On late designed units equipped with a support plate, remove the two mounting screws and nut. Then move the support plate out of the way to facilitate checking this adjustment.

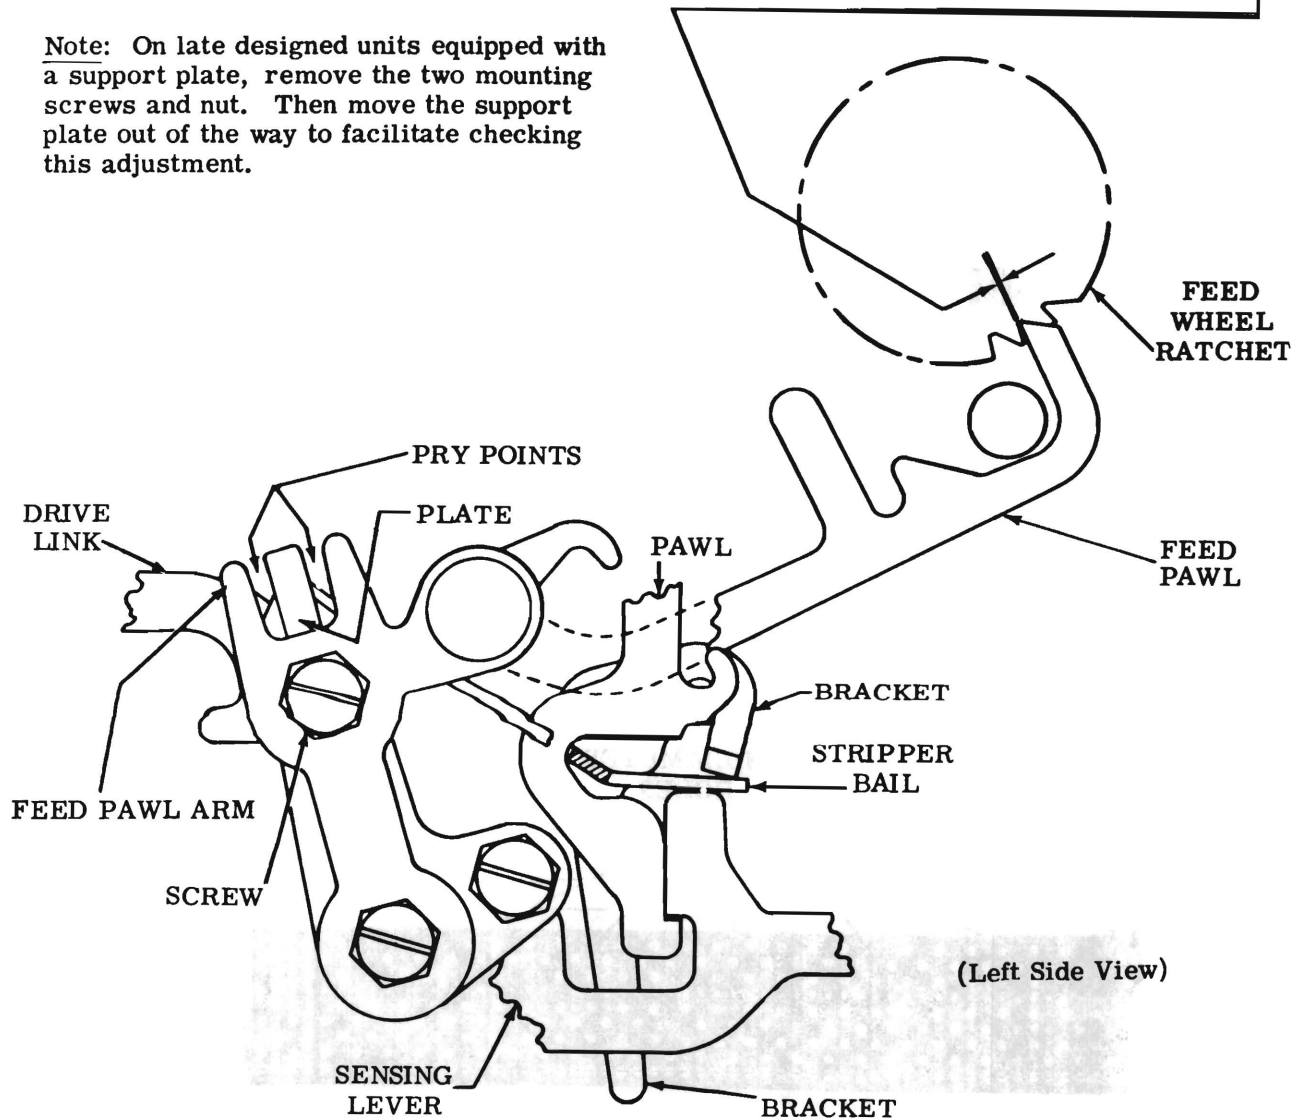

2.08 Tape Punch Area (continued)

TEN CHARACTERS PER INCH

Note: From left to right, with the smooth side of TP156011 gauge up, there are six holes in line — five holes with 0.072-inch diameters and one hole with a 0.086-inch diameter.

To Check

Position one end of spring to lower notch of arm w/bushing. Operate the typing unit under power and perforate an alternate R and "hyphen" code combination in approximately 8 inches of tape. Tear the 8-inch length of punched tape from the tape punch and place it to the smooth side of TP156011 gauge. Concentrically align a no. 2 code hole of the punched tape with the first 0.072-inch diameter hole of TP156011 gauge.

(1) Requirement


The four remaining 0.072-inch diameter gauge holes should be visible through corresponding no. 2 code holes in the punched tape.

(2) Requirement


The no. 2 code hole which corresponds with the 0.086-inch diameter gauge hole should lie entirely within the perimeter of that gauge hole.

To Adjust

Position spring up arm w/bushing, notch by notch, until requirement is met.

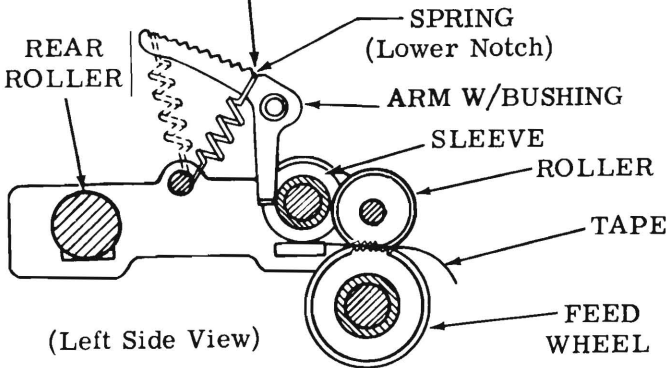

To Adjust  
Position spring up arm w/bushing, notch by notch, until requirement is met.

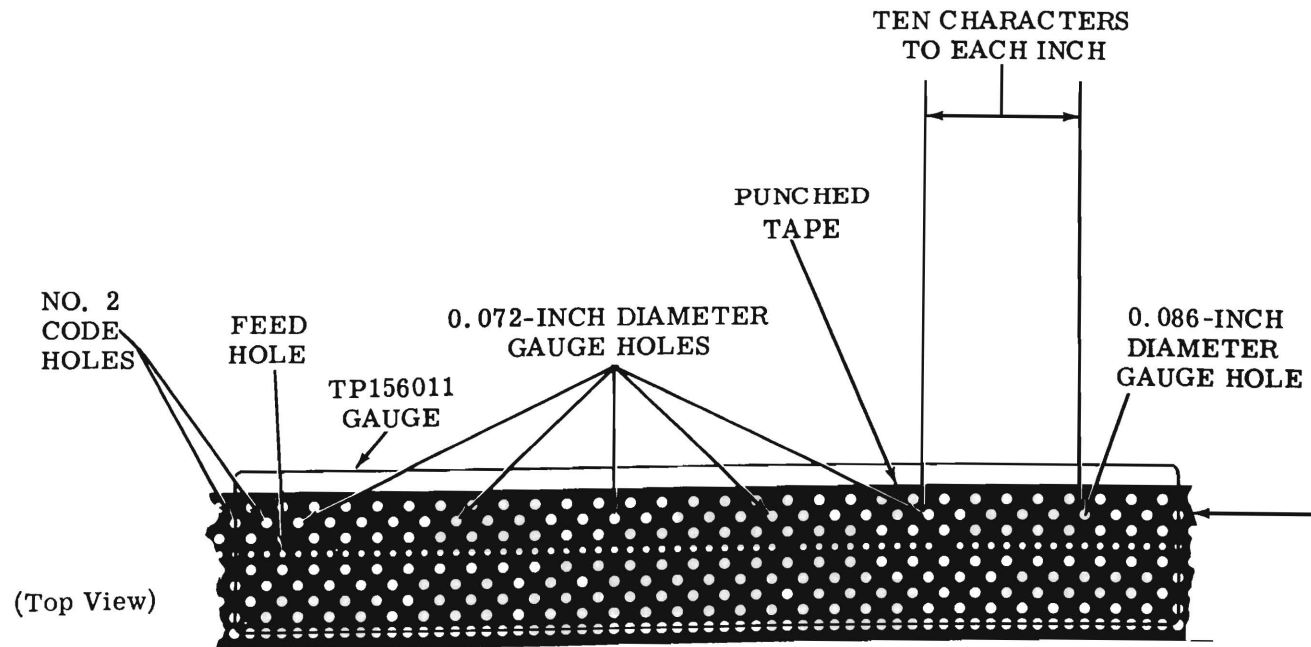

2.09 Tape Punch Area (continued)


TAPE BIAS SPRING

**Requirement**

With tape removed from the tape punch, tape bias spring should rest against side of die plate and should be symmetrical about the tape opening, as gauged by eye.

**To Adjust**

Loosen tape bias spring screw and position tape bias spring so that it just rests against the left side of clearance slot and is symmetrical about the tape opening. Tighten screw.

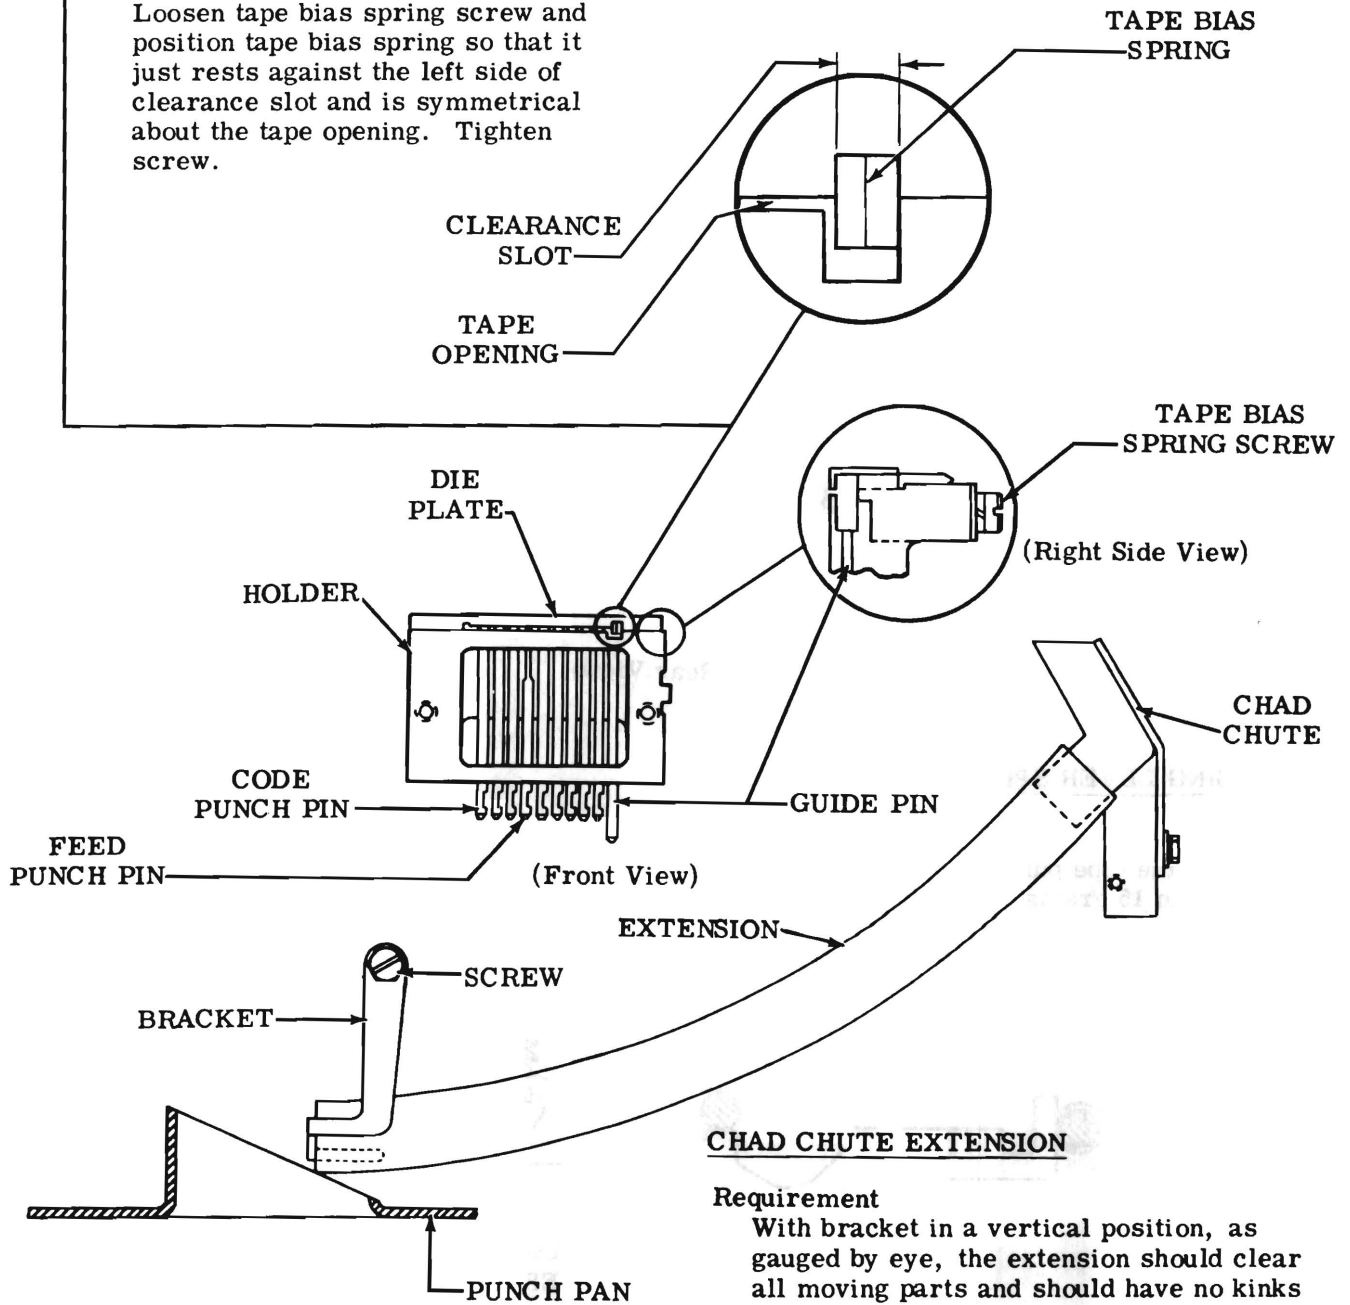

CHAD CHUTE EXTENSION

**Requirement**

With bracket in a vertical position, as gauged by eye, the extension should clear all moving parts and should have no kinks along its length.

**To Adjust**

Loosen screw and position bracket to meet requirement. Tighten screw.

(Left Side View)


2.10 Tape Punch Area (continued)

CODEBAR EXTENSION SPRINGS

**Requirement**

With the typing unit in stop condition

Min 3/4 oz---Max 1-1/4 oz  
to pull spring to its installed length.

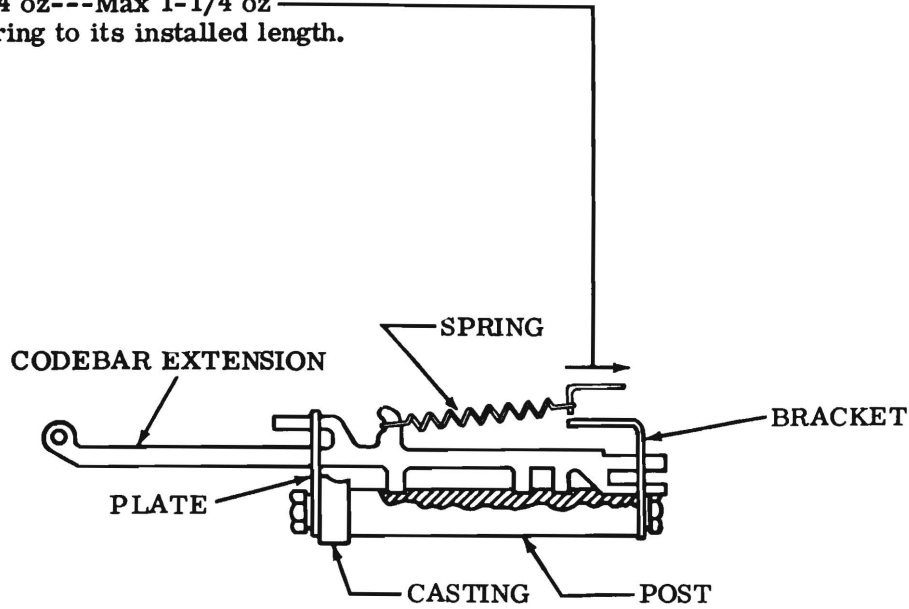


(Rear View)

SENSING LEVER SPRINGS

**Requirement**

With the tape punch in off position


Min 15 grams---Max 32 grams  
to start sensing lever moving.

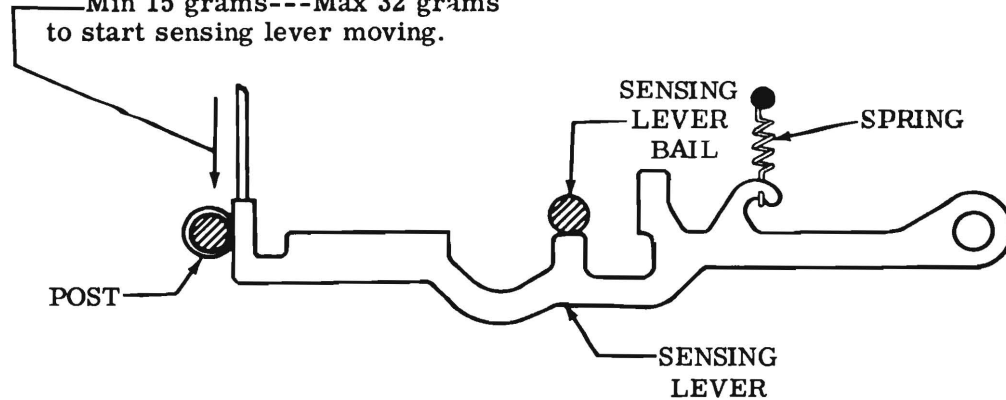

(Left Side View)

2.11 Tape Punch Area (continued)

PAWL AND LEVER SPRINGS

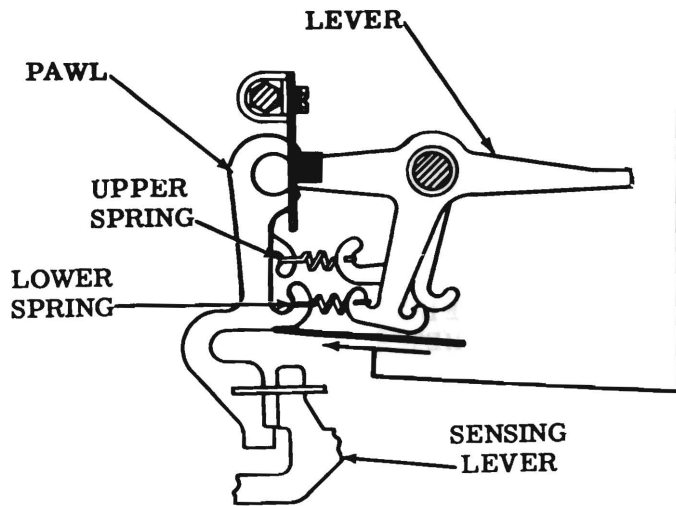

Requirement

With the tape punch "off"

Upper spring

Min 1 oz---Max 2 oz

Lower spring


Min 1-1/2 oz---Max 2-1/2 oz  
to start pawl moving.

STRIPPER BAIL SPRING

Requirement

With the tape punch in off position

Min 12 oz---Max 15 oz  
to pull spring to its installed length.

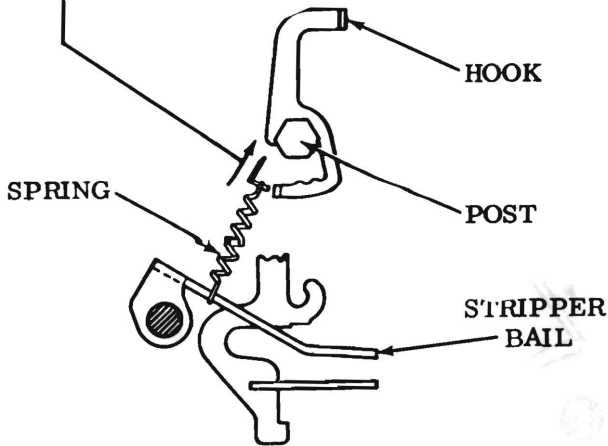


EARLY DESIGN

STRIPPER BAIL SPRING

Requirement

With tape punch in off position

Min 7 oz---Max 13 oz  
to start the stripper bail moving.

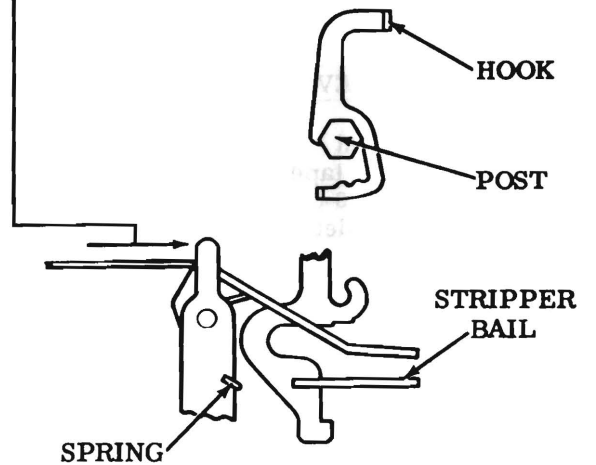

LATE DESIGN

(Left Side Views)


2.12 Tape Punch Area (continued)

FEED PAWL SPRING

Requirement

With tape punch in off position

Min 1/2 oz---Max 1 oz  
to start feed pawl moving.

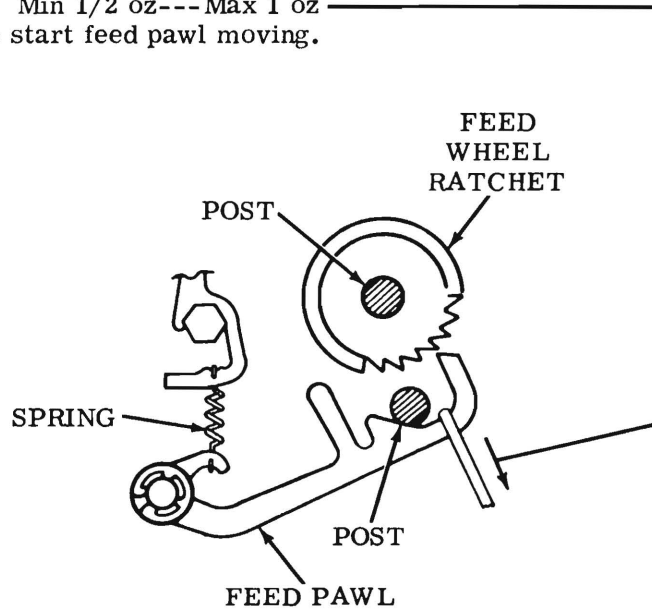


(Left Side View)

DETENT LEVER SPRING

Requirement

With the tape punch "off"

Min 13 oz---Max 17 oz  
to start detent lever moving.

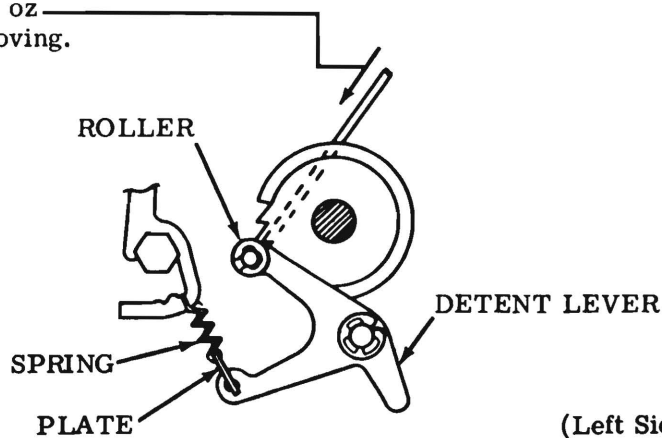

(Left Side View)


2.13 Tape Punch Area (continued)

BACKSPACE LEVER SPRING

Requirement

With the tape punch in off position


—Min 3/4 oz---Max 1-1/2 oz  
to pull spring to its installed length.

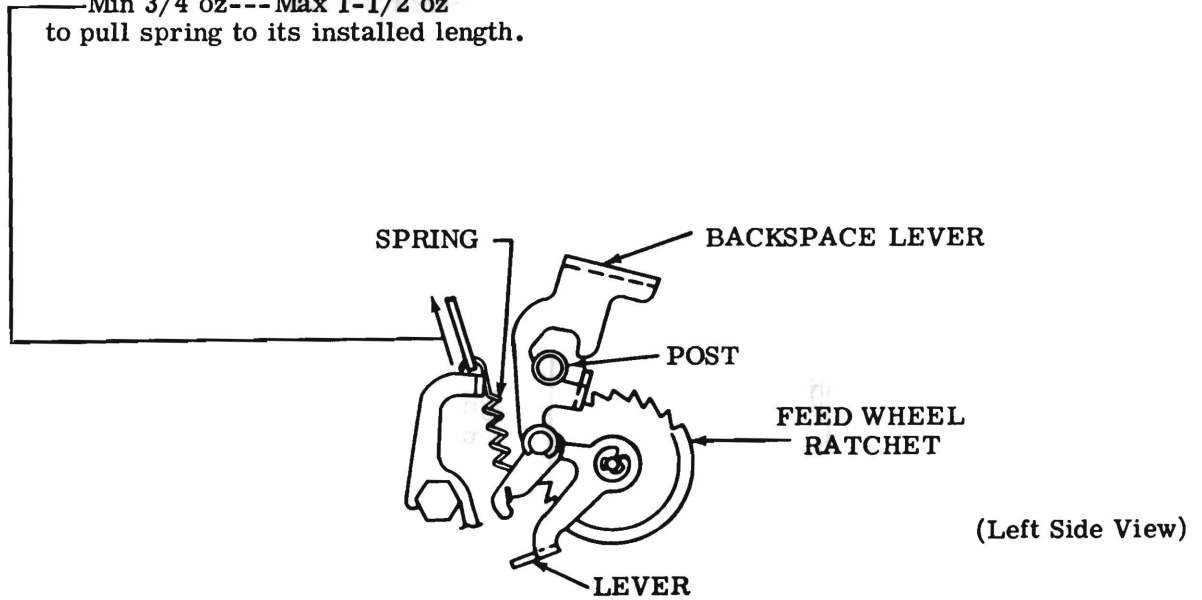

TAPE GUIDE TENSION SPRING

Requirement

Min 34 oz---Max 38 oz  
to pull spring to its installed  
(upper notch) length.

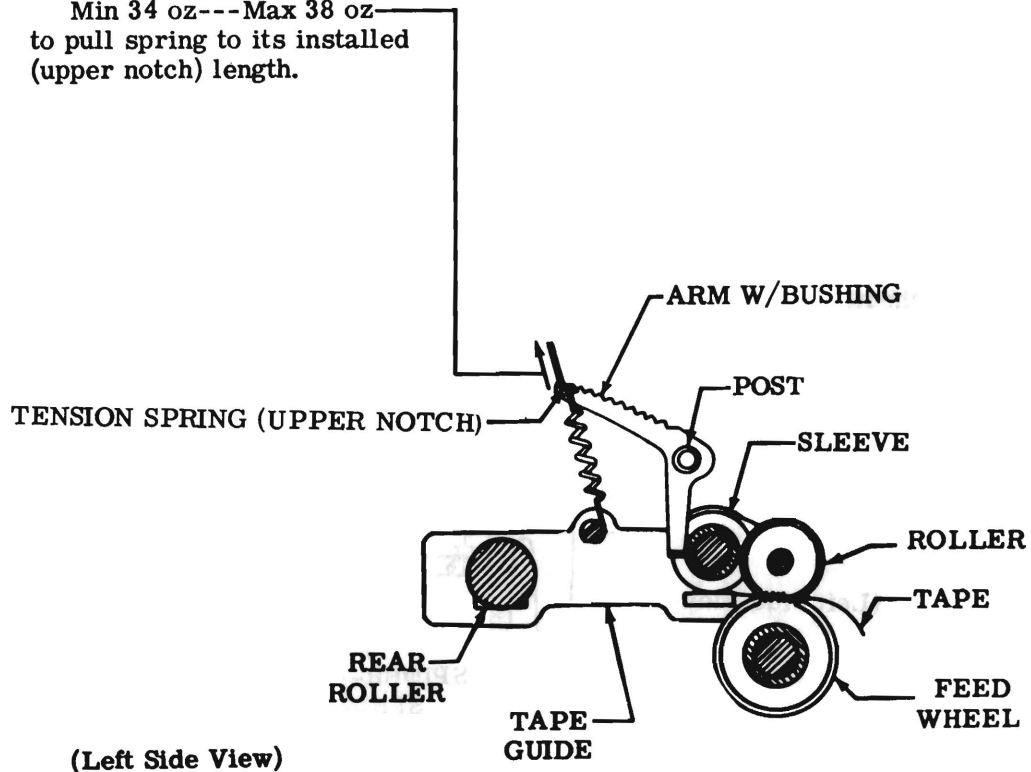


2.14 Tape Punch Area (continued)

TAPE GUIDE COMPRESSION SPRING

**Requirement**

Remove the tape guide tension spring. Place roller slightly above the feed wheel

Min 24 oz---Max 48 oz to start tape guide moving.

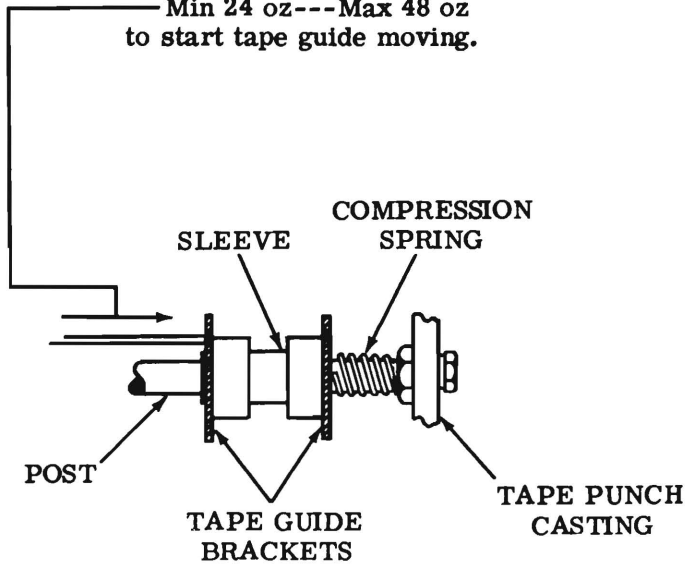

(Front View)


CONTROL DETENT LEVER SPRING

**Note:** This adjustment applies only to tape punches equipped with TP182843 detent lever.

**Requirement**

With the tape punch "off"

Min 10-1/2 oz---Max 14-1/2 oz to start detent lever moving.

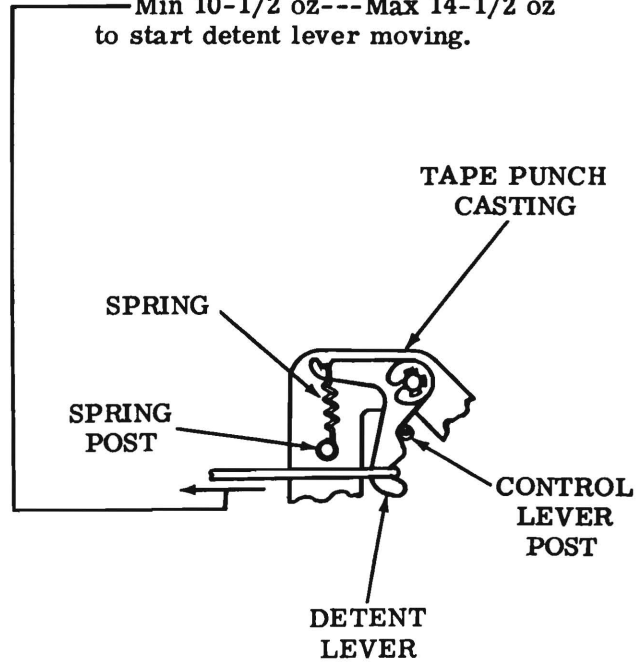


(Left Side View)

CONTROL PUSHBUTTONS

**Requirement**

Min 1/2 oz---Max 1-1/2 oz to push each control pushbutton down 1/8 inch as gauged by eye, while remaining control pushbuttons remain in their normal upward positions.

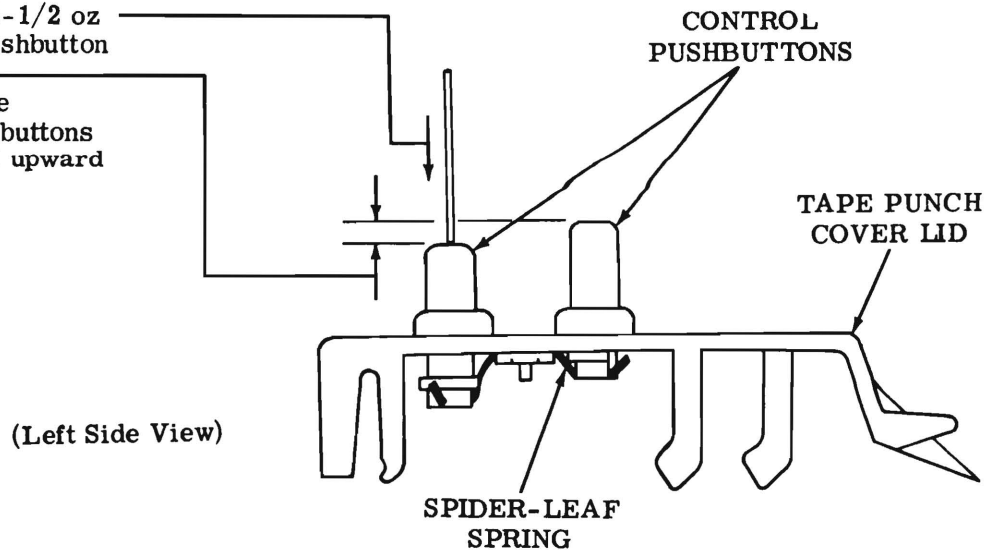


(Left Side View)

2.15 Tape Punch Area (continued)


DRIVE LINK SPRING

Requirement  
 With tape punch "off"  
 Min 7 oz---Max 9 oz  
 to start drive link moving.

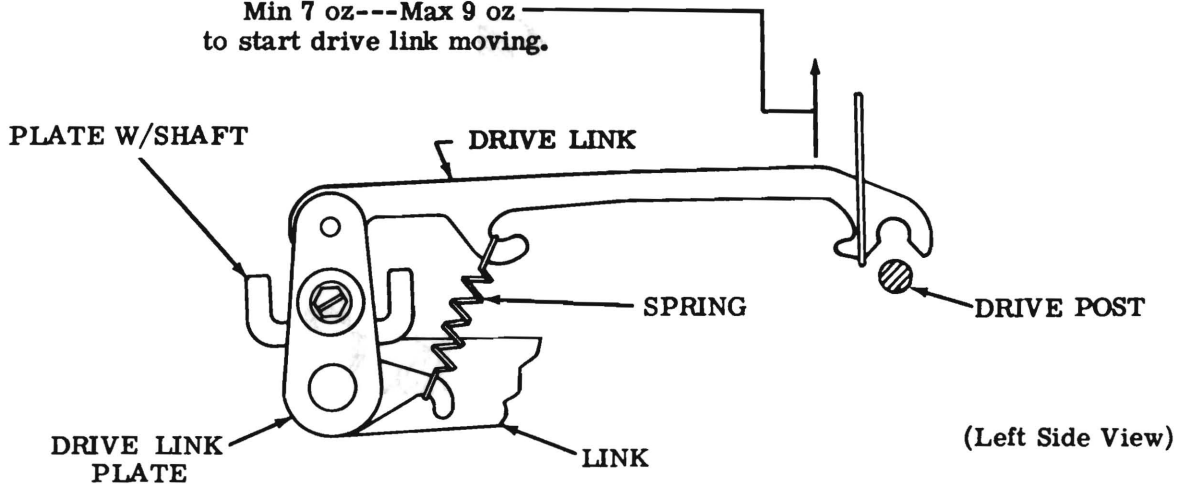

PUNCH BLOCK ASSEMBLY

To Check  
 Remove the punch block assembly from the tape punch. Replace after performing this adjustment. (For instructions, see the appropriate tape punch section.)

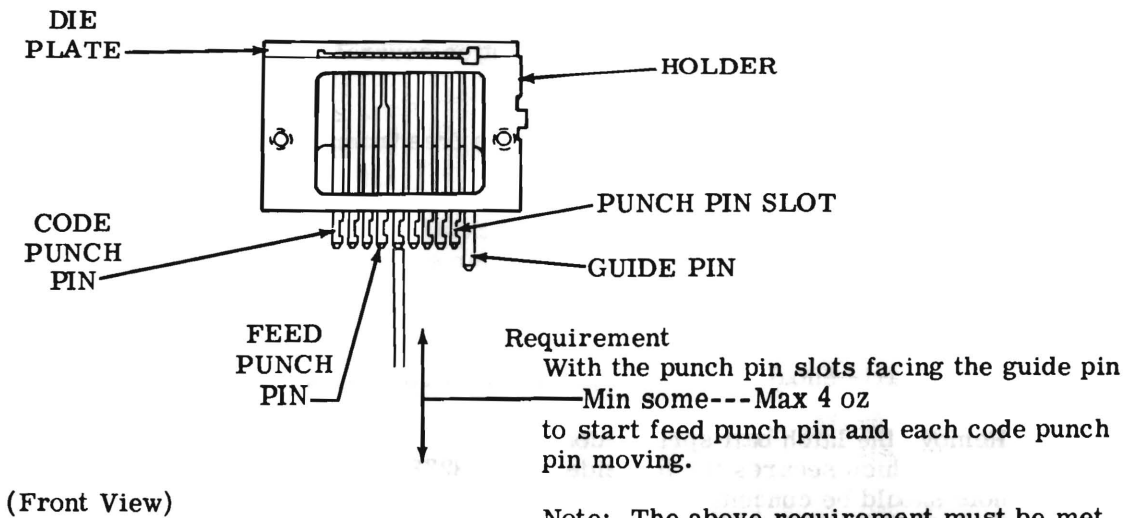


Requirement  
 With the punch pin slots facing the guide pin  
 Min some---Max 4 oz  
 to start feed punch pin and each code punch pin moving.

Note: The above requirement must be met anywhere along each punch pin's upward and downward travel in holder.

3. VARIATIONS TO THE BASIC UNIT

3.01 Automatic Control Mechanisms

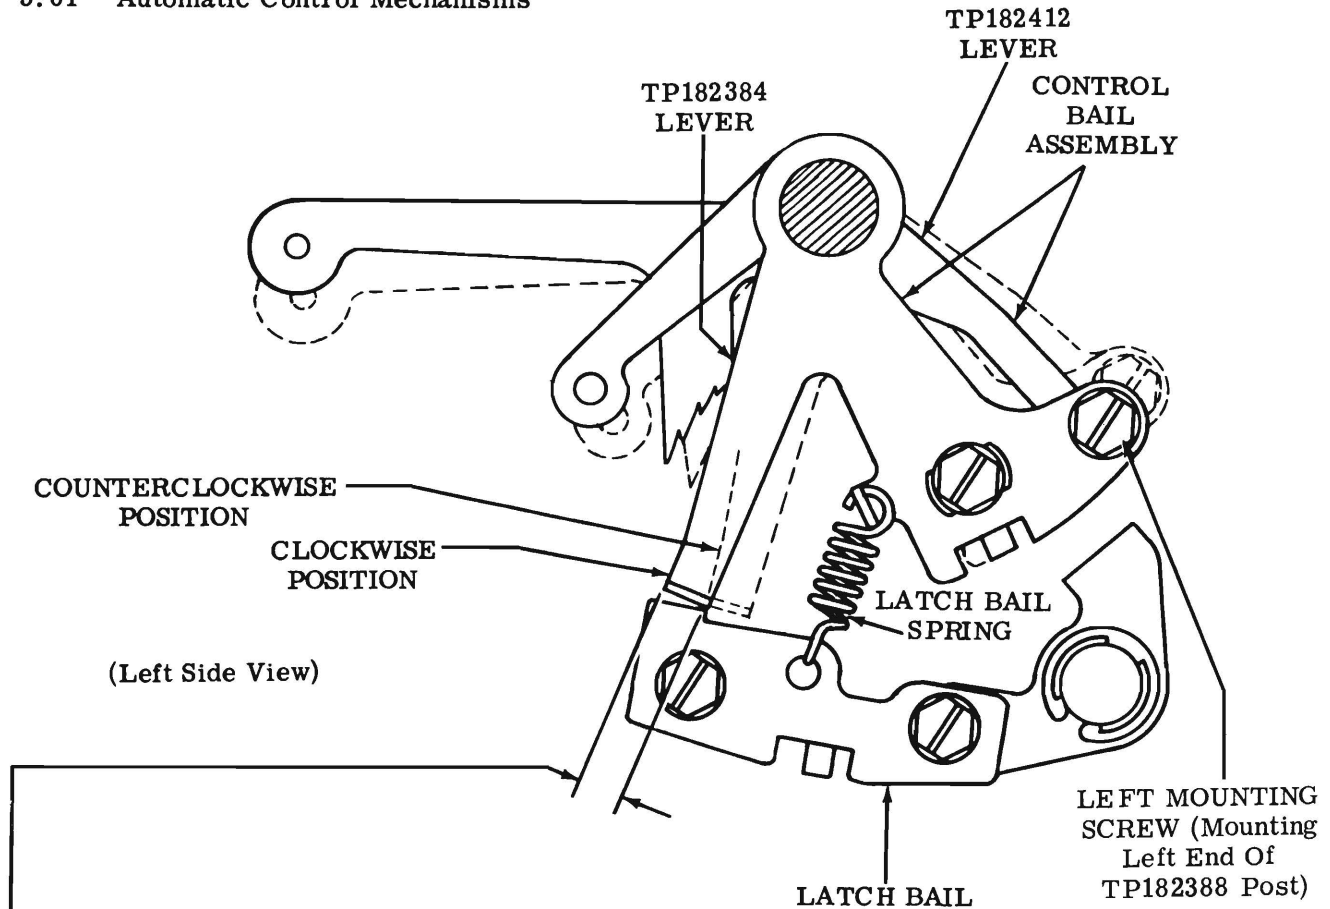

CONTROL BAIL ASSEMBLY

To Check

With the typing unit in the stop condition and the tape punch "on," gently oscillate the control bail assembly from its clockwise position to its counterclockwise position and back again. Repeat this oscillating motion several times while noting requirements.

(1) Requirement

The control bail assembly should be free from binds along its normal travel.

(2) Requirement


When released from its counterclockwise position, the control bail assembly should return to its clockwise position under spring tension.

To Adjust

Note: Parts should not be bent, other than specifically directed.

Remove the latch bail spring, control bail spring (not illustrated), and left mounting screw which secures the left side of TP182388 post. The TP182388 post threaded hole should be concentric to the left mounting screw hole. If necessary, bend TP182388 post about its right mounting screw (not illustrated). Reassemble left mounting screw and tighten. Replace springs. Recheck requirements and refine adjustment if necessary.

## 3.02 Automatic Control Mechanisms (continued)

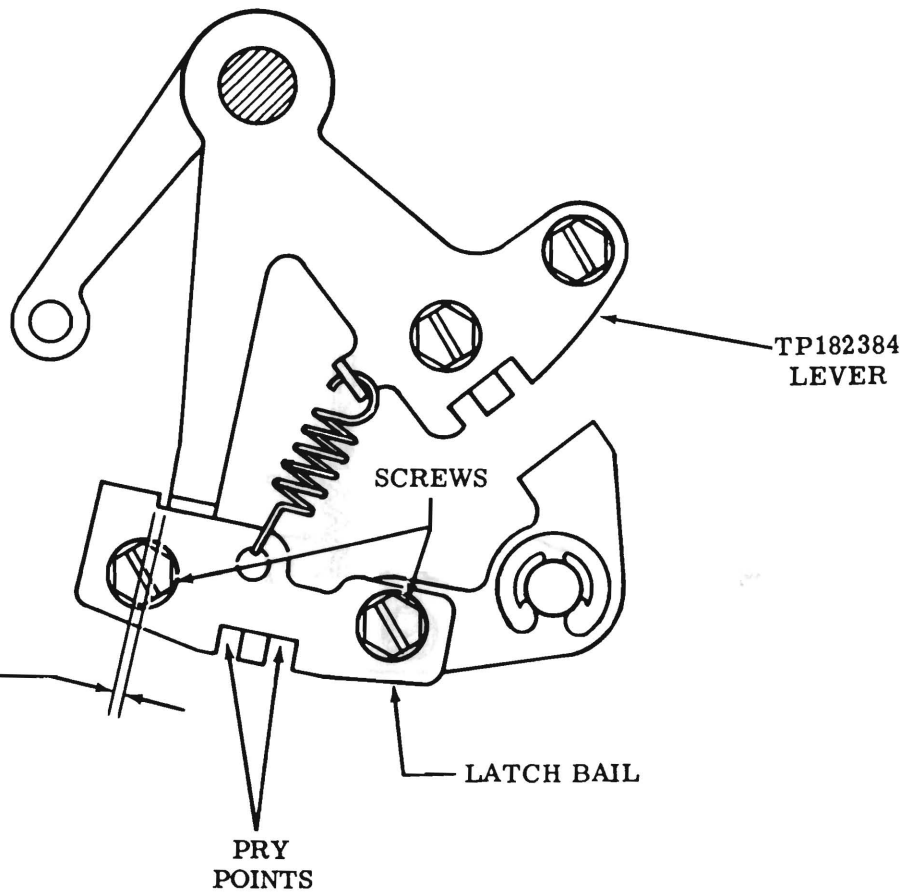

(Left Side View)

LEVER OVERTRAVEL**To Check**

With the tape punch "on," set up the ~~TAPE~~ (--3-5---) code combination in the selector. Manually rotate the main shaft until the function rocker shaft is in its most forward position.

**Requirement**

Min 0.005 inch---Max 0.015 inch  
between the TP182384 lever and latch bail.


**To Adjust**

Loosen screws and position latch bail using pry points. Tighten screws.

3.03 Automatic Control Mechanisms (continued)

LATCH BAIL SPRING

Requirement  
 With the tape punch "off"  
 Min 2 oz ---Max 4 oz  
 to pull spring to installed length.

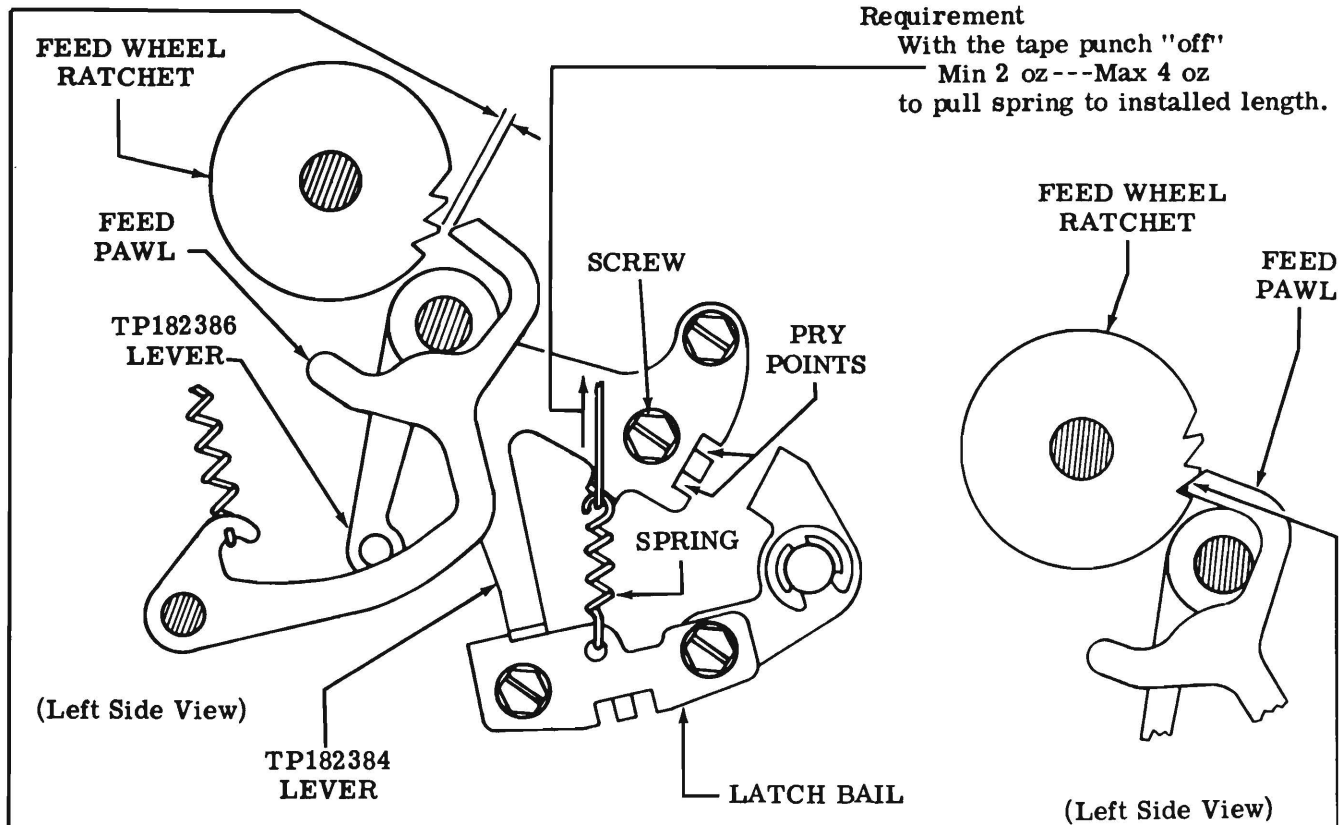

FEED WHEEL RATCHET AND PAWL GAP

- (1) To Check  
 With the tape punch "off," manually rotate the main shaft until the function rocker shaft positions the feed pawl so that there is a minimum clearance between it and a tooth of the feed wheel ratchet.

Requirement  
 Min 0.015 inch ---Max 0.030 inch  
 between the feed pawl and a tooth of the feed wheel ratchet.

To Adjust  
 Loosen the screw and position the TP182386 lever using the pry points.  
 Tighten screw.

- (2) To Check  
 With the tape punch "on," manually rotate the main shaft until the function rocker shaft positions the feed pawl so that it engages a tooth of the feed wheel ratchet.

Requirement  
 The feed pawl should fully engage a tooth of the feed wheel ratchet.

To Adjust  
 Refine requirement under (1) To Check.

## 3.04 Automatic Control Mechanisms (continued)

M to

SENSING LEVER AND BAIL GAP

Note: This adjustment applies only to tape punches equipped with the sense suppression option — TP182430 bail etc.

**To Check**


Place the tape punch "off."

**Requirement**

The sensing lever associated with the leftmost code level (Figure 2) should be Min 0.010 inch underflush---Max 0.010 inch overflush with the bail.

**To Adjust**

Loosen screws and position bail using pry points. Tighten screws.

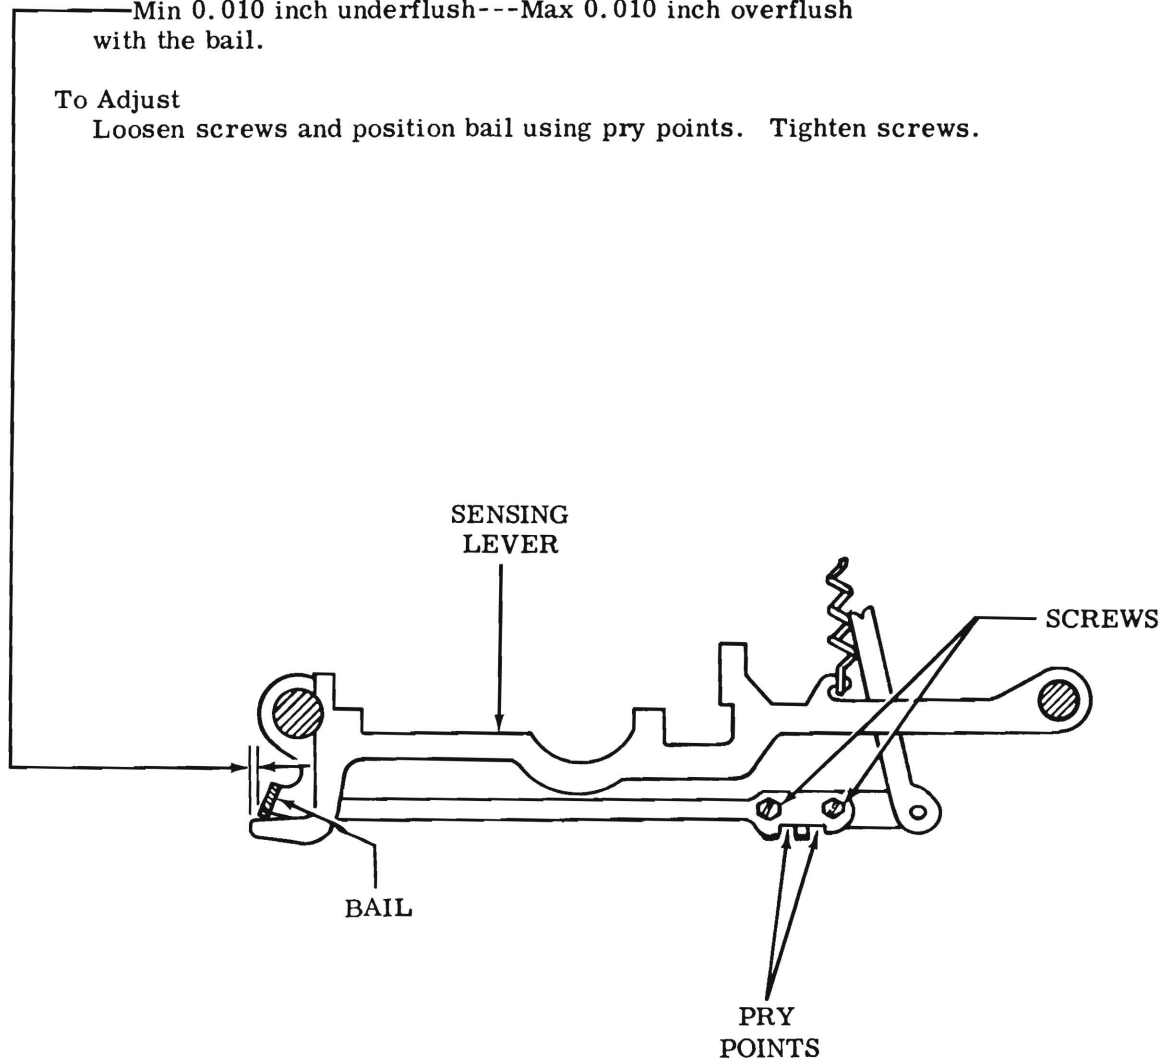

(Left Side View)

3.05 Automatic Control Mechanisms (continued)

LATCH BAIL GAP

Note: This adjustment applies only to tape punches equipped with tape punch interlock mechanism.

To Check


Place the typing unit in the stop condition and the tape punch "off."  
Place the nonprint codebar in its operated position (solenoid energized).

Requirement

Min 0.015 inch---Max 0.030 inch  
between the latch bail and TP182384 lever.

To Adjust

Remove punch interlock spring. Loosen clampscrew and position lever using pry points. Tighten screw and replace spring.

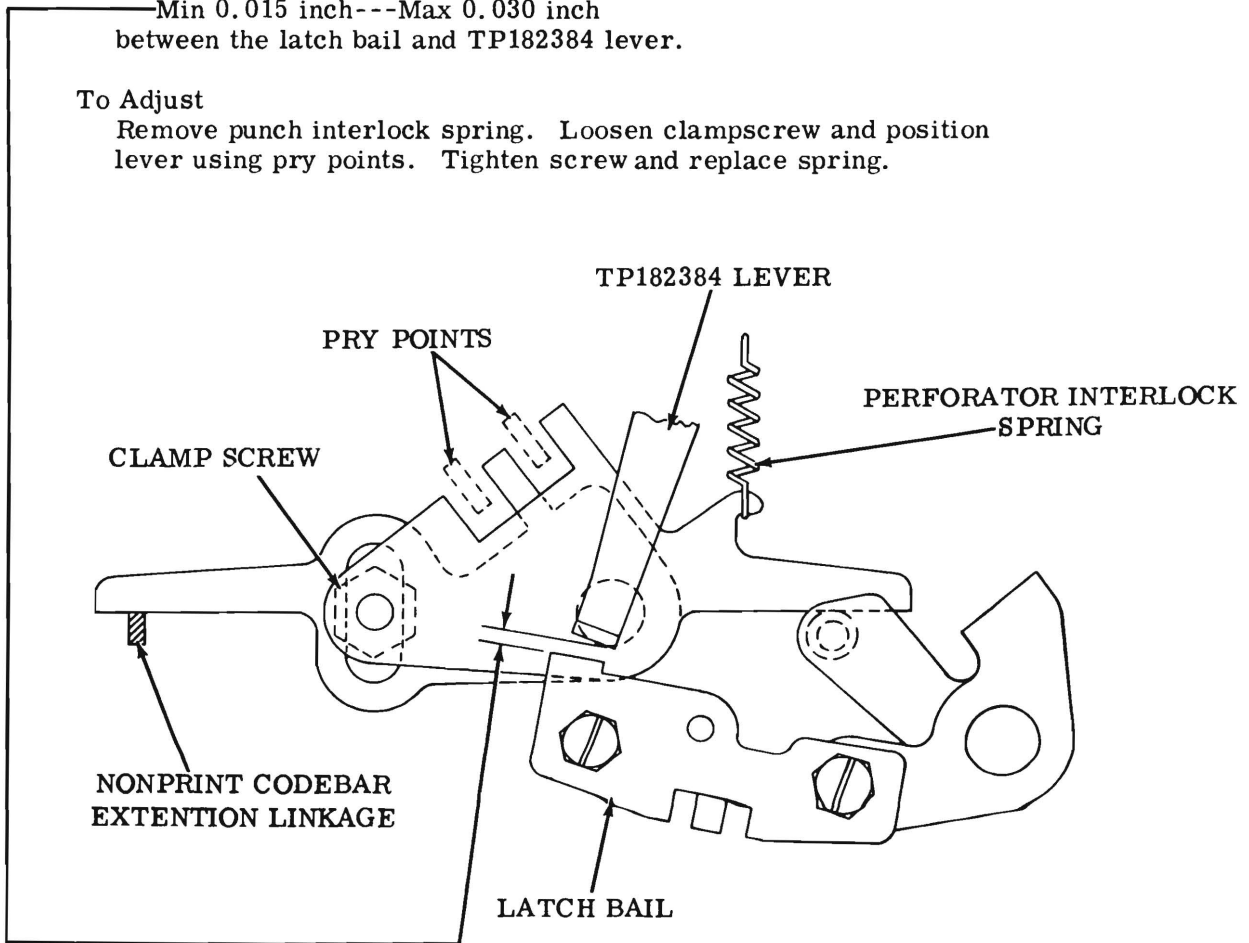

(Left Side View)

3.06 Automatic Control Mechanisms (continued)

VISUAL "ON OFF" INDICATOR

Note: This adjustment applies only to tape punches equipped with the visual ON OFF indicator option.

To Check


With the tape punch cover in place over the tape punch, place the tape punch "off." Note the gap between the rear edge of the cover opening and the rear edge of the indicator arm. Place the tape punch "on." Note the gap between the front edge of the cover opening and the front edge of the indicator arm.

Requirement

The gaps should be equal, as gauged by eye.

To Adjust

With the tape punch lid removed from the tape punch cover, loosen screw post and position indicator arm. Tighten screw post.

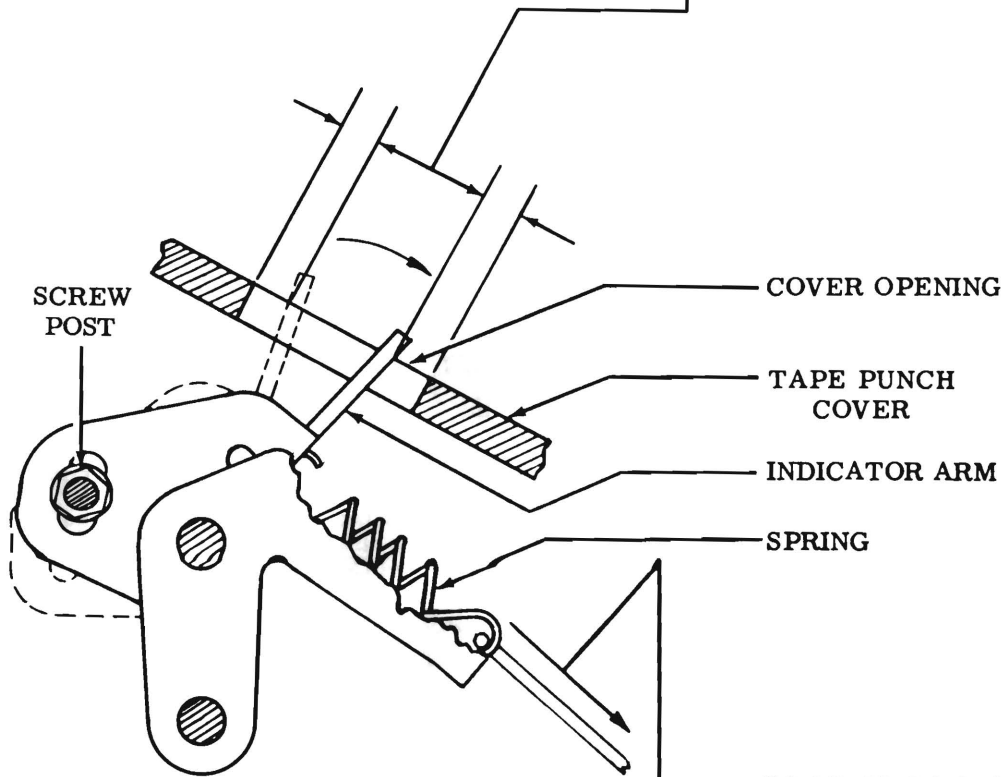

(Left Side View)

CONTROL BAIL ASSEMBLY SPRING

Note: This adjustment applies only to tape punches equipped with the visual ON OFF indicator option.

Requirement

With tape punch "off"  
Min 2 oz ---Max 3 oz  
to pull spring to installed length.


3.07 Automatic Control Mechanisms (continued)

**CONTROL BAIL ASSEMBLY SPRING**


Note: This adjustment applies only to tape punches which are not equipped with visual ON OFF indicator option.

**Requirement**

With the tape punch "off"  
 ---Min 2-1/2 oz ---Max 3-1/4 oz  
 to pull the spring to installed length.

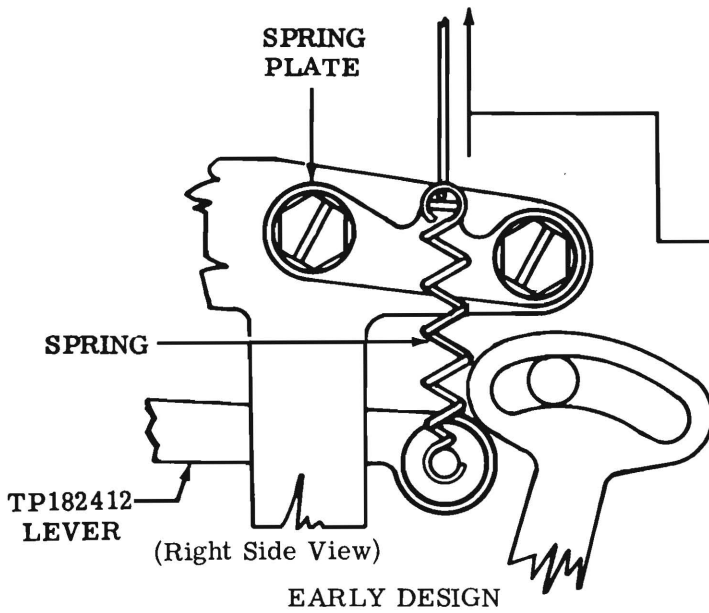

"LOCK ON"

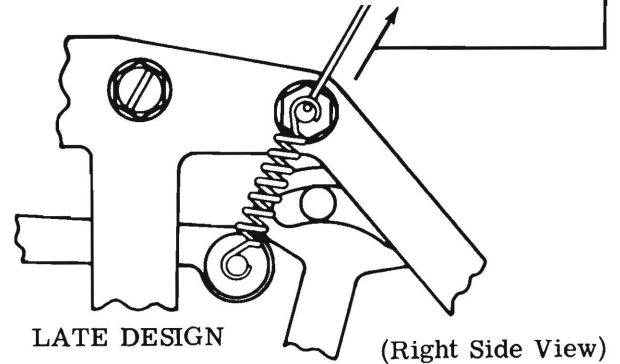

Note: This adjustment applies only to tape punches equipped with the LOCK ON option — TP184200 lock bail, etc.

**To Check**


Place the tape punch in the "off" condition. Depress the LOCK ON pushbutton and allow the TP184200 lock bail to latch the TP182466 lever.

**Requirement**


---Min 0.050 inch ---Max 0.070 inch  
 between the latch bail and  
 TP182384 lever.

**To Adjust**

Loosen clamp screw and position  
 the bracket. Tighten clamp screw.

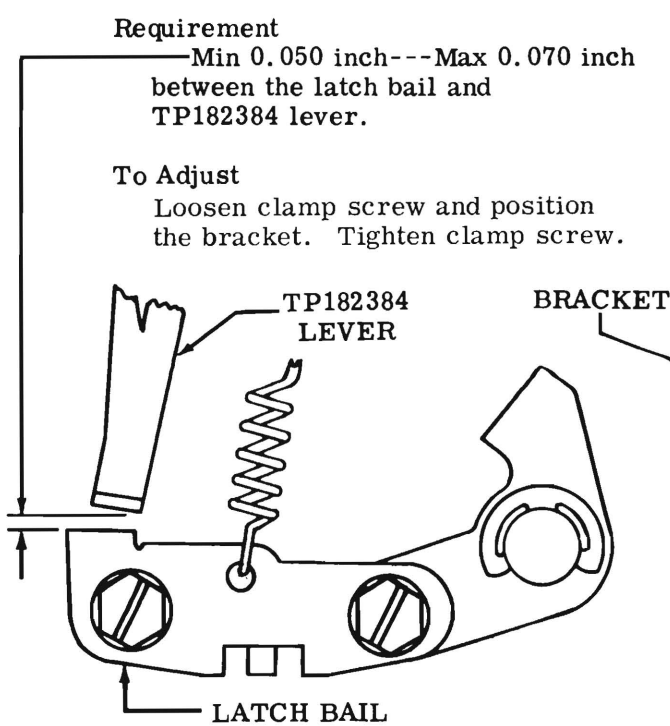

(Left Side View)

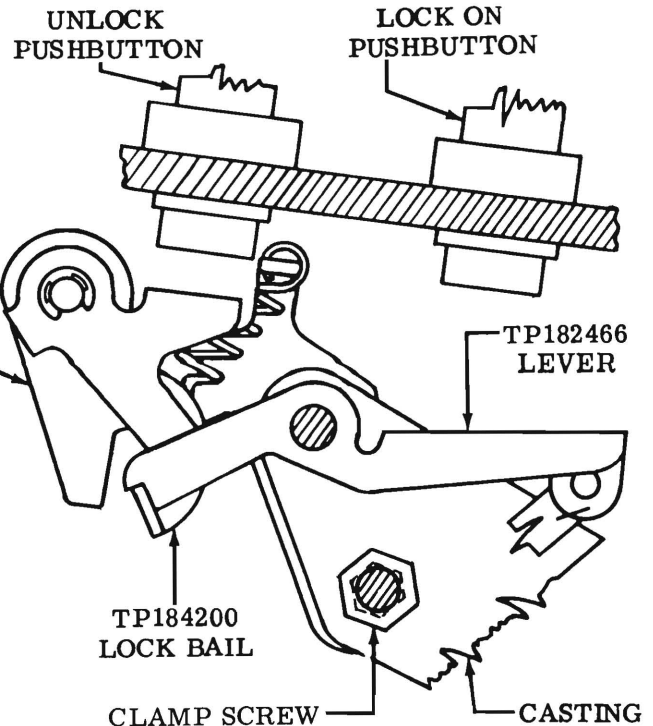

(Left Side View)

3.08 Automatic Control Mechanisms (continued)

AUTOMATIC "ON"

**Note:** This adjustment applies only to tape punches equipped with the LOCK ON option.

**To Check**


With the tape punch "on," depress the UNLOCK pushbutton. Set up the TAPE (-2--5---) code combination in the selector. Manually rotate the main shaft until the drive link is in its most forward position.

**Requirement**

Min 0.010 inch---Max 0.025 inch  
between the latch bail and TP182384 lever.

**To Adjust**


Loosen clamp nut and rotate eccentric post.  
Tighten clamp nut.

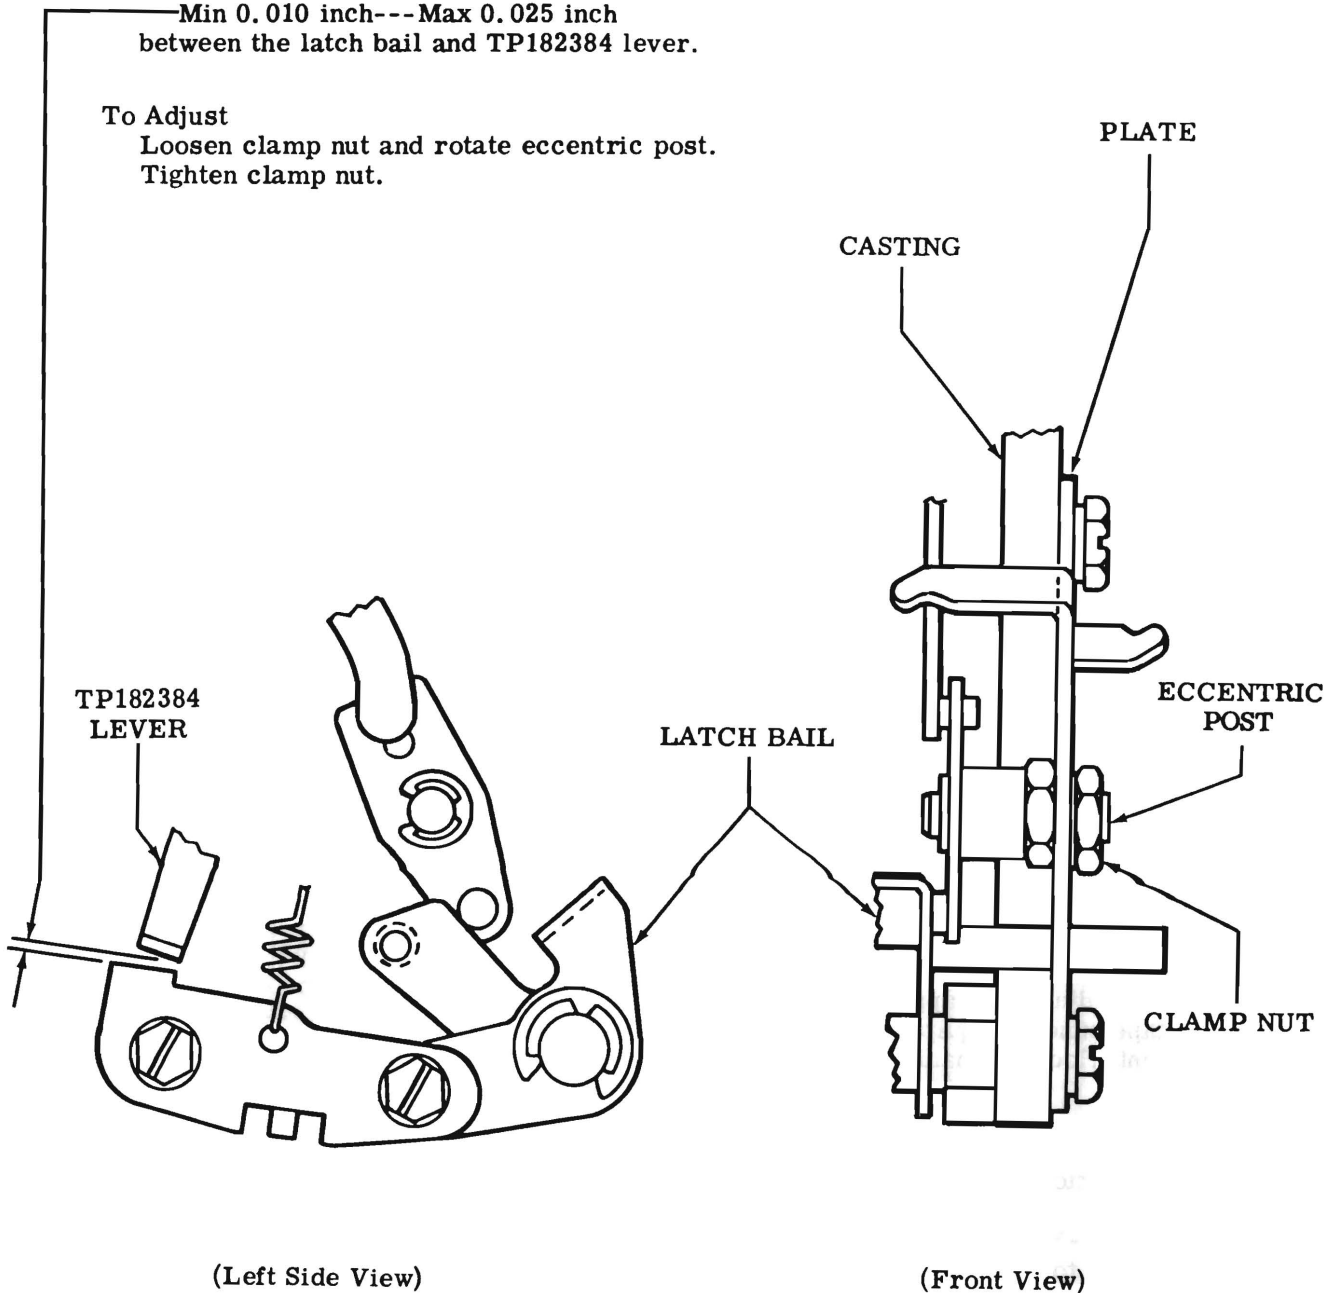

3.09 Automatic Control Mechanisms (continued)

"ON" MECHANISM RETURN SPRING

Requirement  
 With the tape punch "off"  
 Min 1/2 oz --- Max 2-1/2 oz  
 to pull spring to installed length.

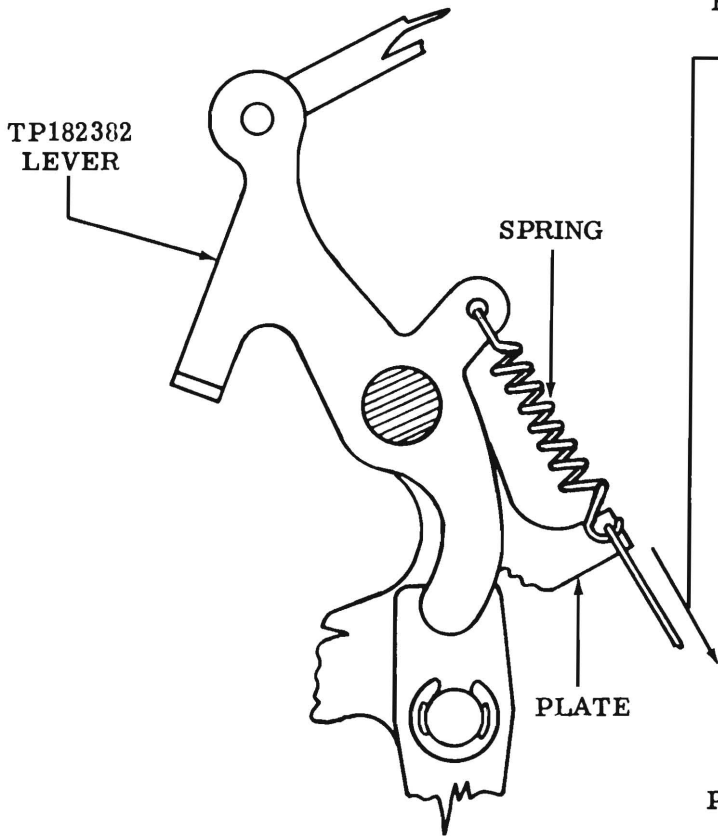


(Left Side View)

AUTOMATIC PUNCH INTERLOCK SPRING

Note: This adjustment applies only to tape punches equipped with the interlock mechanism.

Requirement  
 With nonprint codebar in its operated position (solenoid energized)  
 Min 4 oz --- Max 6 oz  
 to pull spring to installed length.

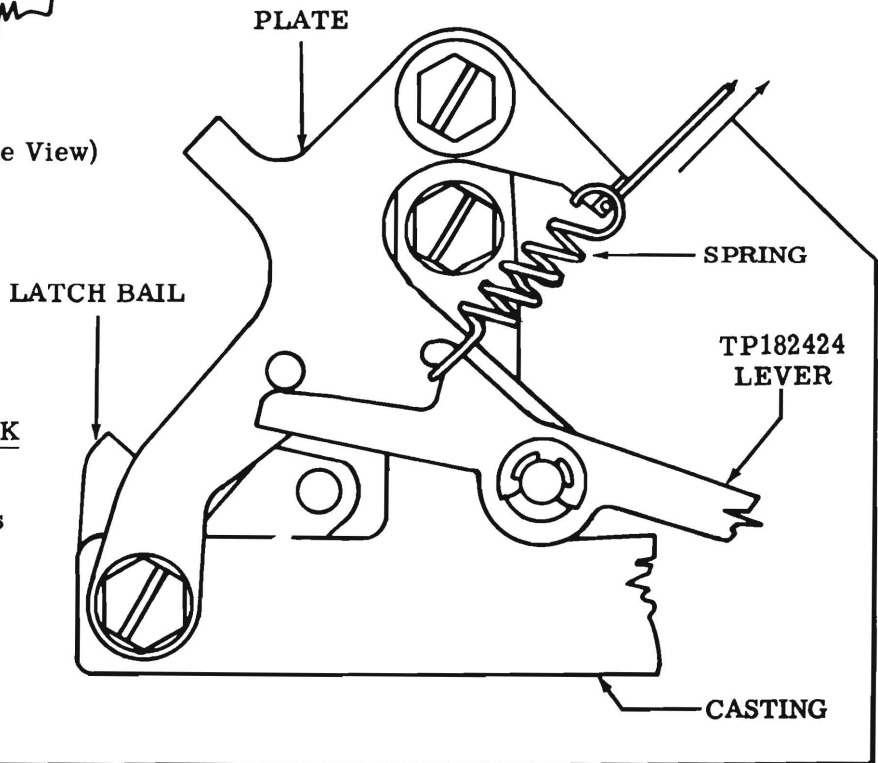

(Right Side View)

3.10 Miscellaneous

FOLDED TAPE GUIDE


(1) Requirement

With no tape in the punch, the bracket should be flush to the top surface of the punch block casting.

To Adjust

Loosen screw and position bracket.  
Tighten screw.

Note 1: This adjustment applies only to tape punches equipped with TP185705 folded tape guide modification kit.

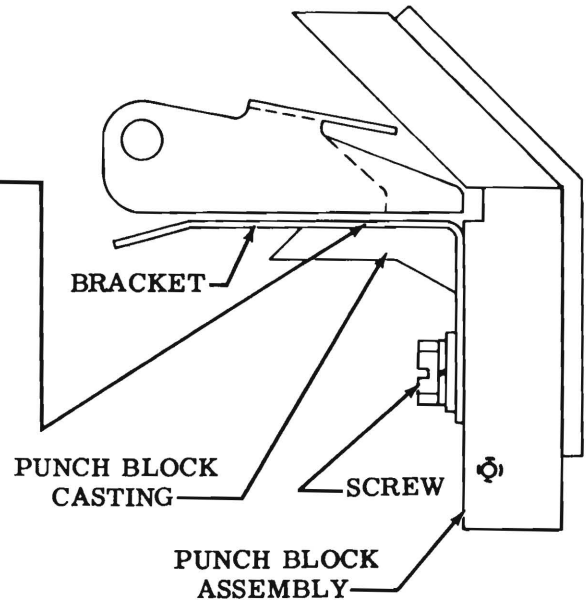


(Left Side View)

(2) Requirement

With tape in punch

Min some---Max 0.015 inch  
between the tape depressor  
tab and underside of the  
chad chute.

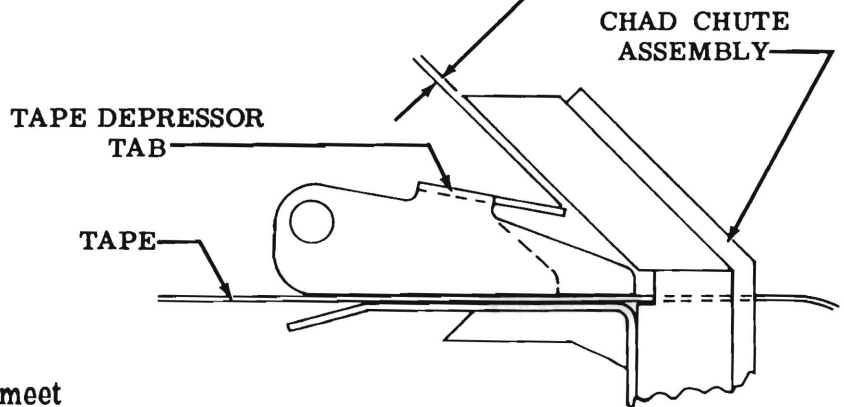


To Adjust

Bend tape depressor tab to meet  
requirement.

Note 2: Check TEN CHARACTERS  
PER INCH requirement and refine  
if necessary.



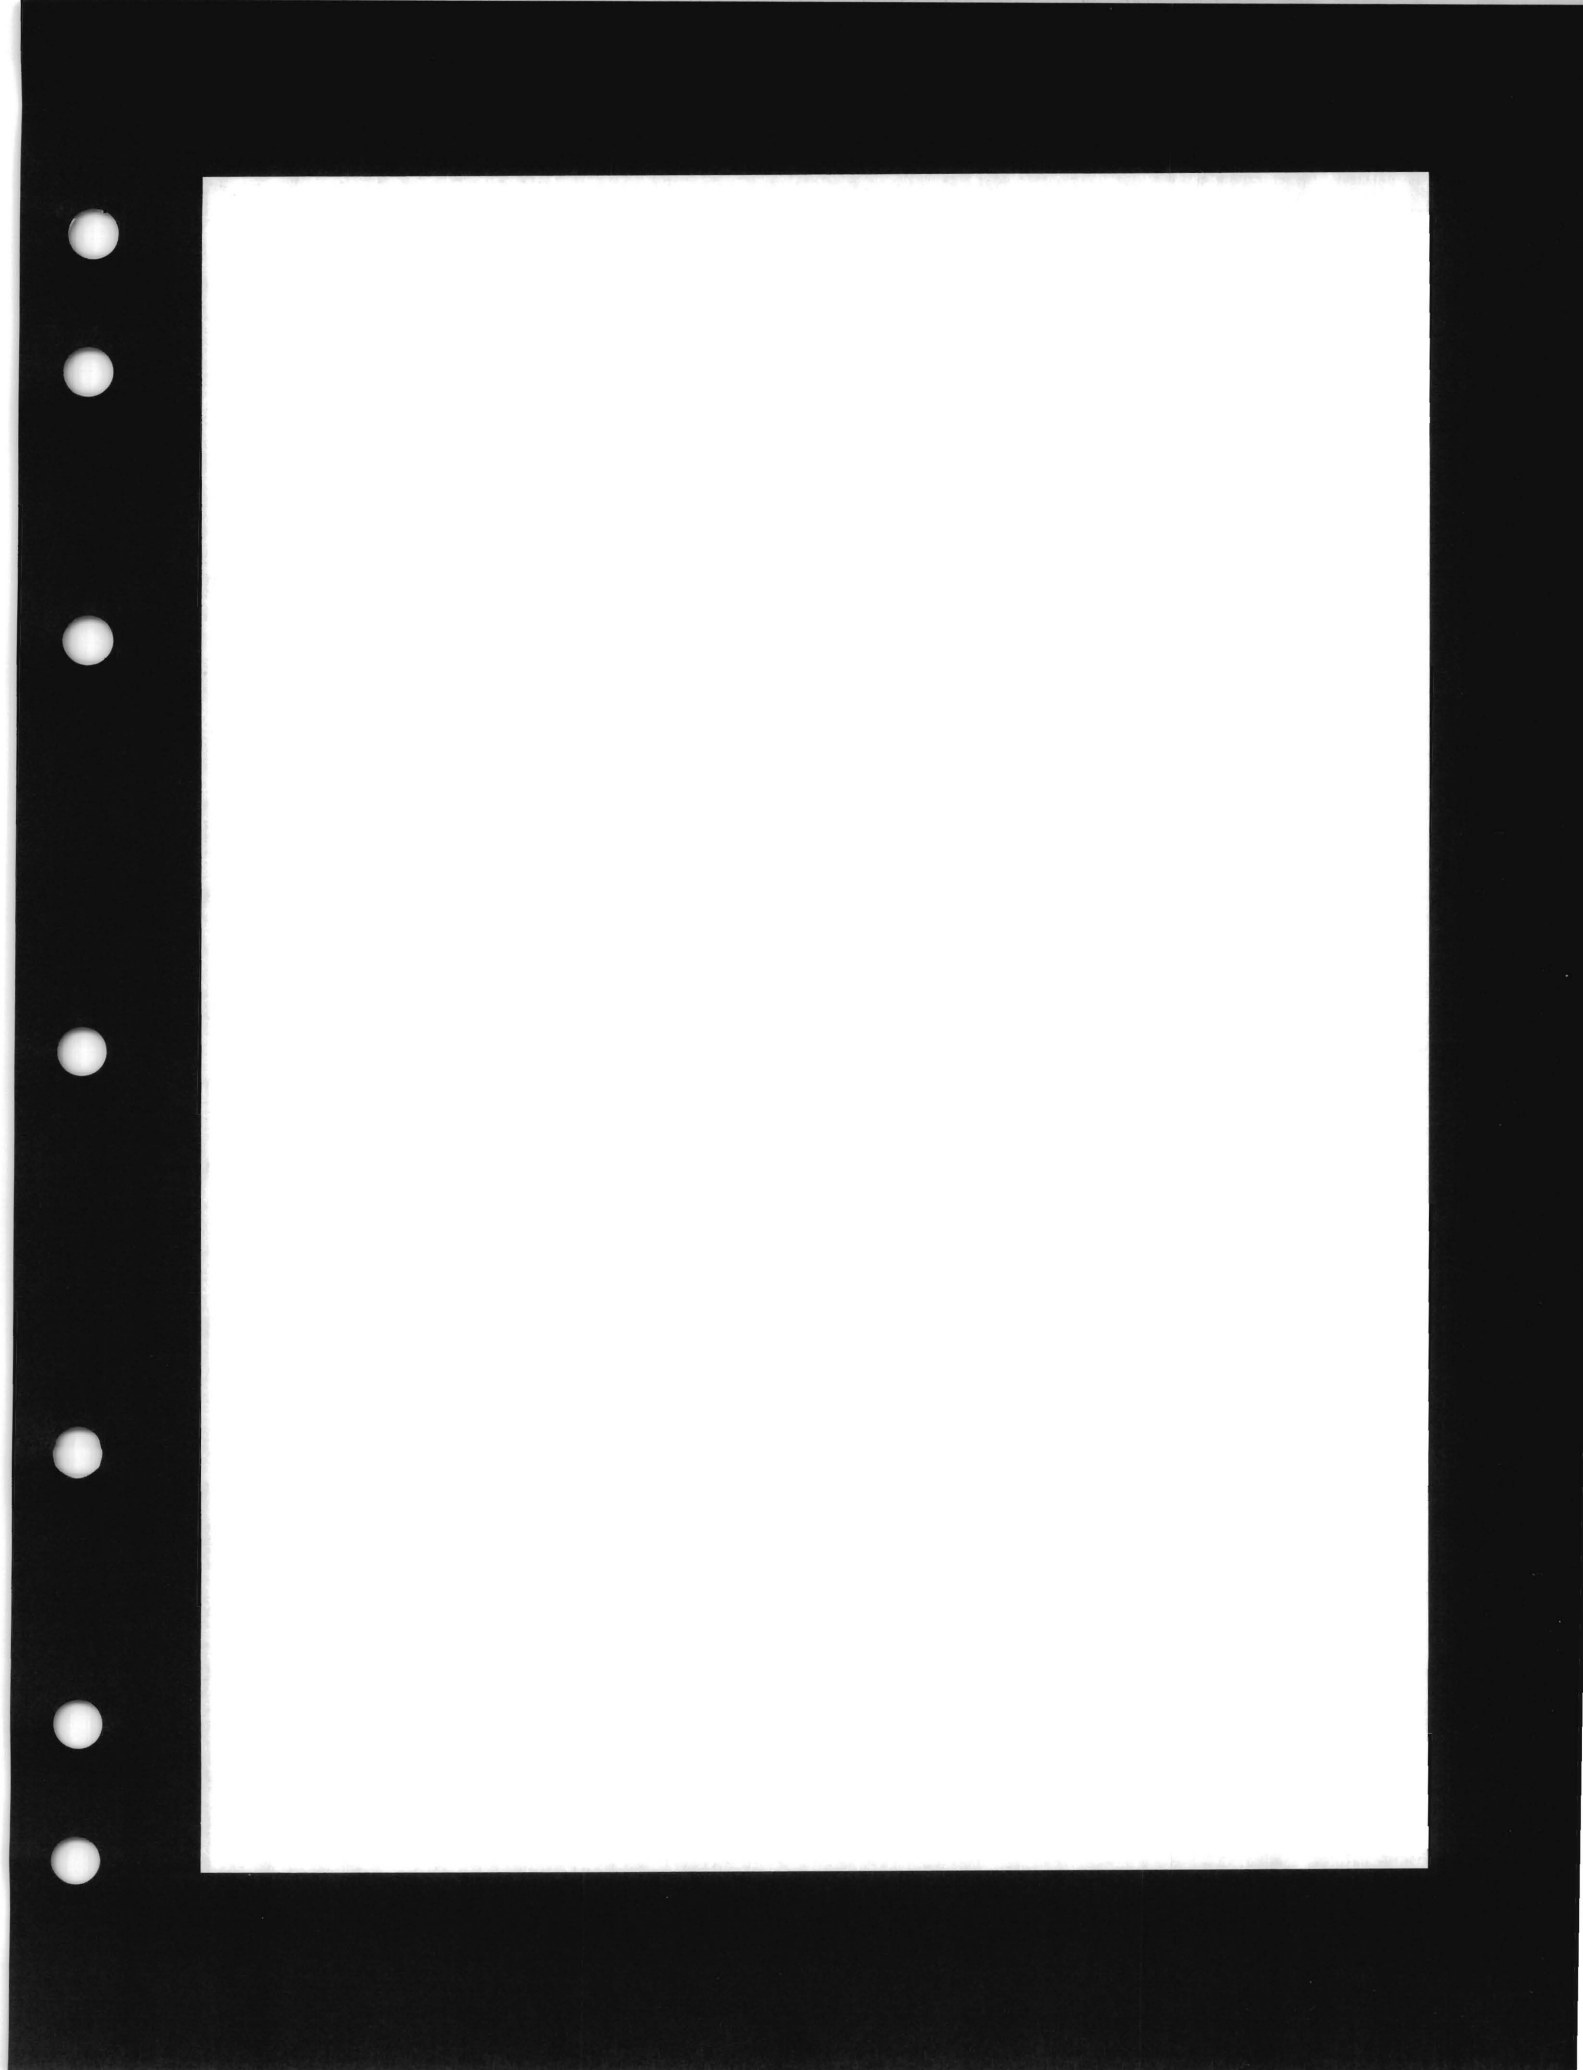




33 COVERS


ADJUSTMENTS

CONTENTS	PAGE	
1. GENERAL . . . . .	1	Receive (KSR) and Automatic Send-Receive (ASR) Sets (Figures 1 and 2).
2. BASIC UNIT . . . . .	3	1.02 After completing an adjustment, replace cover and/or any parts that were removed. Check any adjustments affected by the removal of the cover and/or parts.
Call Control Area		
Dial to cover . . . . .	3	
Knob to bezel . . . . .	3	<b>CAUTION: ELECTRICAL POWER MUST BE REMOVED FROM UNIT BEFORE ANY ADJUSTMENTS ARE MADE.</b>
Paper Area		
Low paper contact operating arm . . .	4	1.03 In the adjustments covered in this section, location of clearances and position of parts are illustrated by line drawings. Requirements and procedures are set forth in the texts that accompany the line drawings.
Tape Punch Area		
Control pushbuttons . . . . .	7	
Visual "ON-OFF" indicator . . . . .	7	1.04 Reference to left, right, front, or rear, etc, consider the cover to be viewed from a position where the lid is up and the nameplate position is facing the viewer.
Tape Reader Area		
Reader mounting bracket (early design) . . . . .	5	1.05 Unless specifically stated otherwise, position screws or nuts friction tight to make an adjustment, and tighten them securely once the adjustment has been made.
Reader mounting bracket (late design) . . . . .	6	1.06 Tools needed to perform adjustments are included in TP185830 maintenance tool kit and are listed in Section 570-005-800.
1. GENERAL		1.07 Check appropriate disassembly and re-assembly section for approved procedure of cover and parts removal.
1.01 This section is issued to provide adjustment information for the 33 typing unit, tape punch, and reader covers. The requirements apply to covers for both Keyboard Send-		

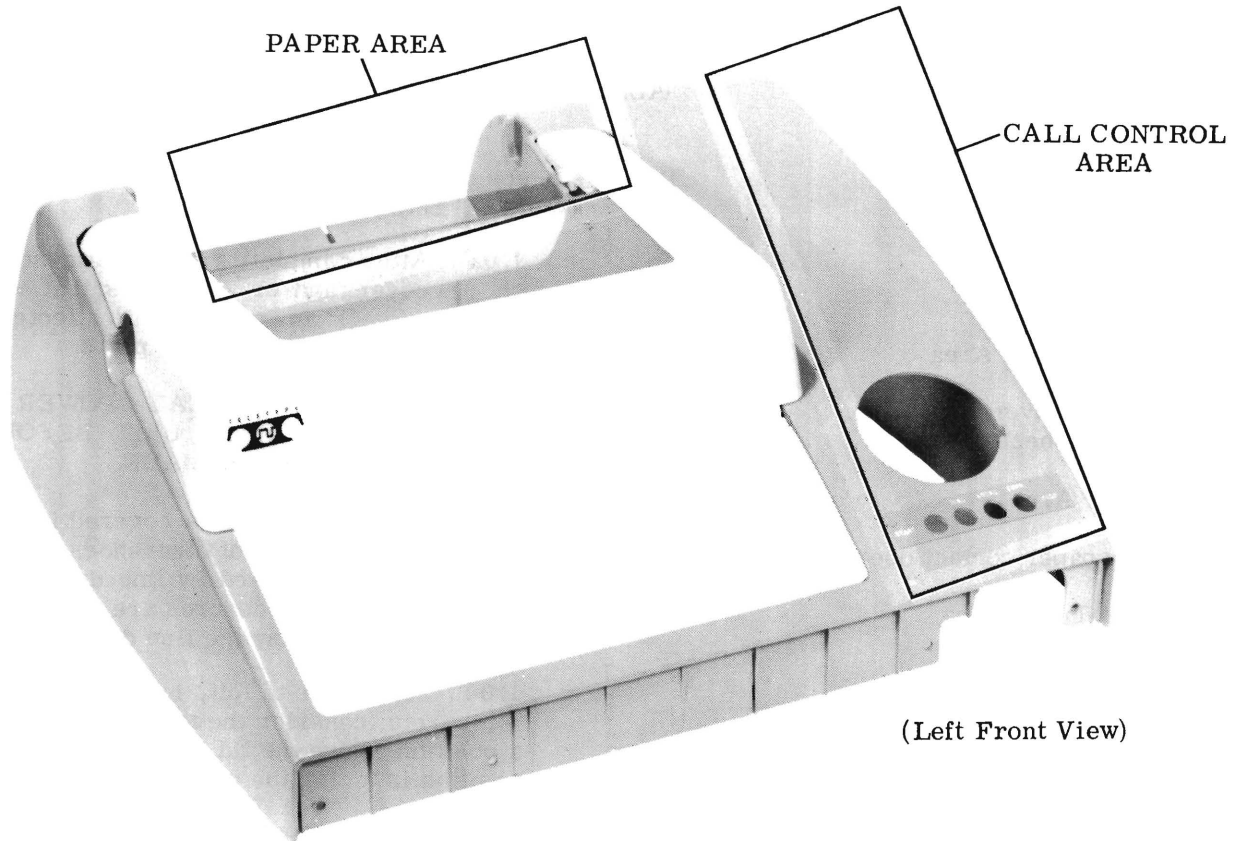

(Left Front View)

Figure 1 - Cover (Keyboard Send-Receive Set)

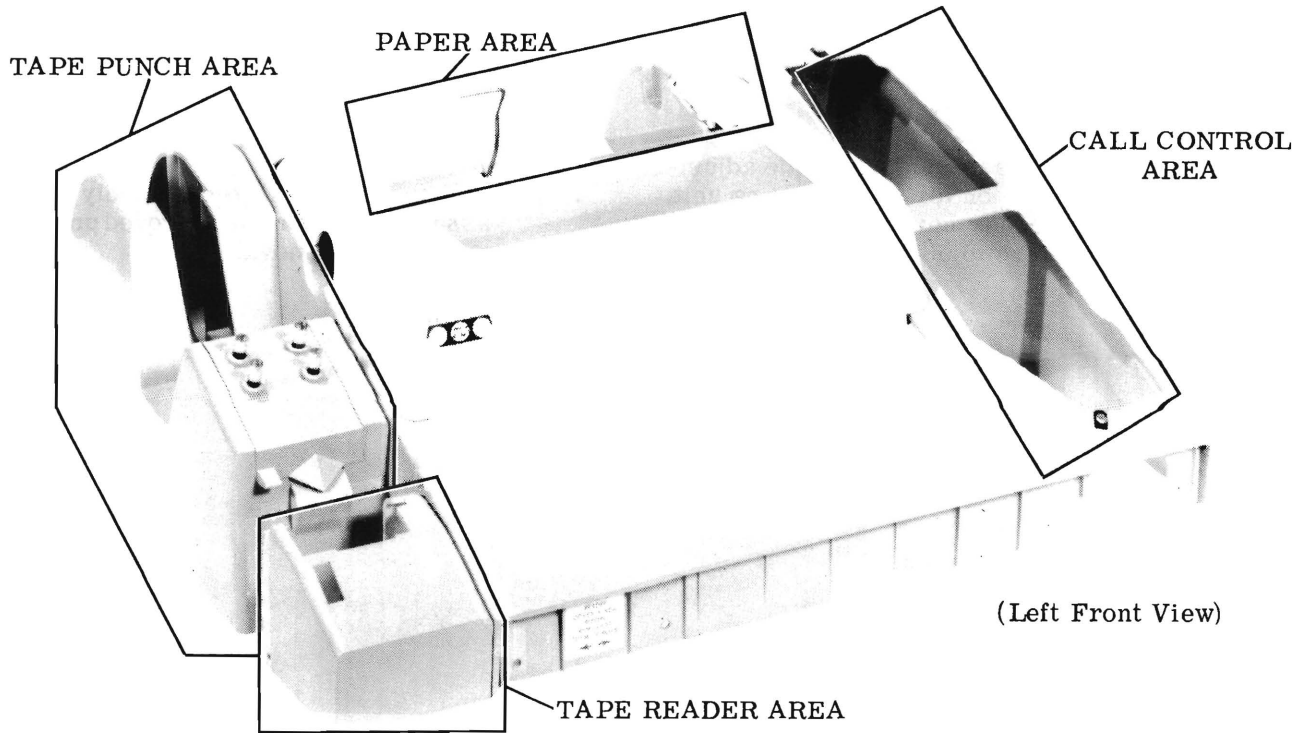


(Left Front View)

Figure 2 - Cover (Automatic Keyboard Send-Receive Set)

2. BASIC UNIT

2.01 Call Control Area

(Left Front View)

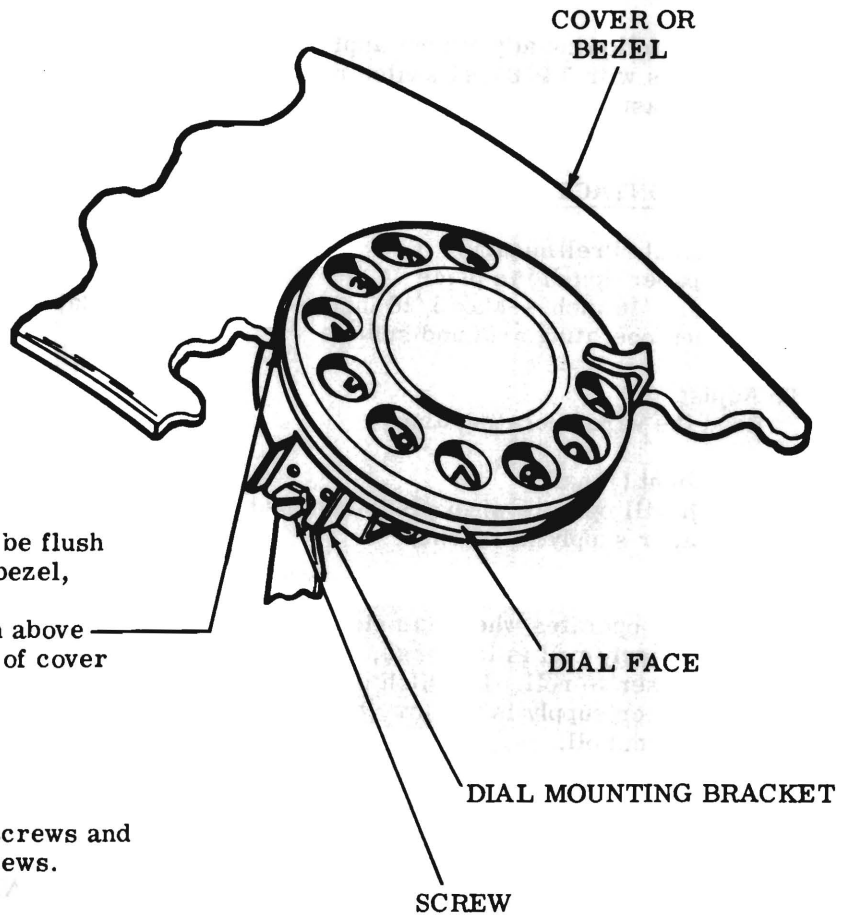

DIAL TO COVER

**Requirement**


The numbered dial face should be flush to outside surface of cover or bezel, within

1/16 inch below---3/32 inch above and parallel to outside surface of cover or bezel, within

1/16 inch as gauged by eye.

**To Adjust**

Loosen dial mounting bracket screws and position dial face. Tighten screws.

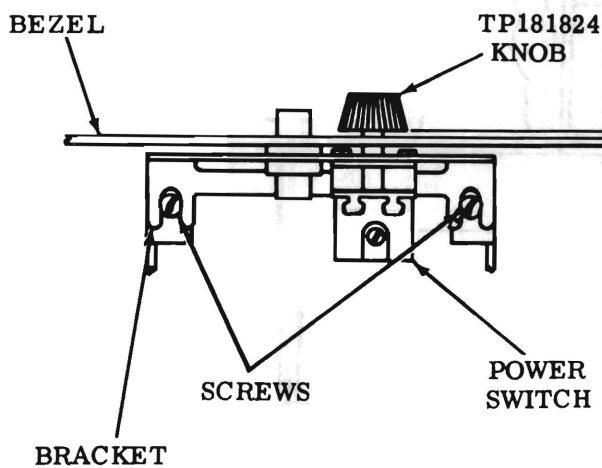

(Rear View)

KNOB TO BEZEL

**To Check**

Fully seat the TP181824 knob on the power switch.

**Requirement**

Min some---Max 1/8 inch between the bottom of the knob and the face of the bezel.

**To Adjust**

Remove the TP181824 knob and the cover (refer to appropriate disassembly and reassembly section). Loosen screws and position bracket. Tighten screws and replace cover and knob. Recheck Requirement.

2.02 Paper Area

Note 1: The following adjustment applies only to typing units with TP181441 switch mounted on the base casting next to the left function shaft clamp.

LOW-PAPER CONTACT OPERATING ARM


- (1) Requirement (Preliminary)  
With paper spindle in place  
Min 1/16 inch---Max 3/16 inch  
between operating arm and spindle.

To Adjust  
Bend the wire operating arm.

- (2) Requirement (Final)  
Switch will operate when predetermined  
low paper supply is reached.

To Adjust  
If switch operates when diameter of  
paper supply roll is too large, bend  
arm closer to roll. If switch operates  
when paper supply is too low, bend arm  
away from roll.

Note 2: The operating arm should pass through the cover slot, free from any contact with the cover.

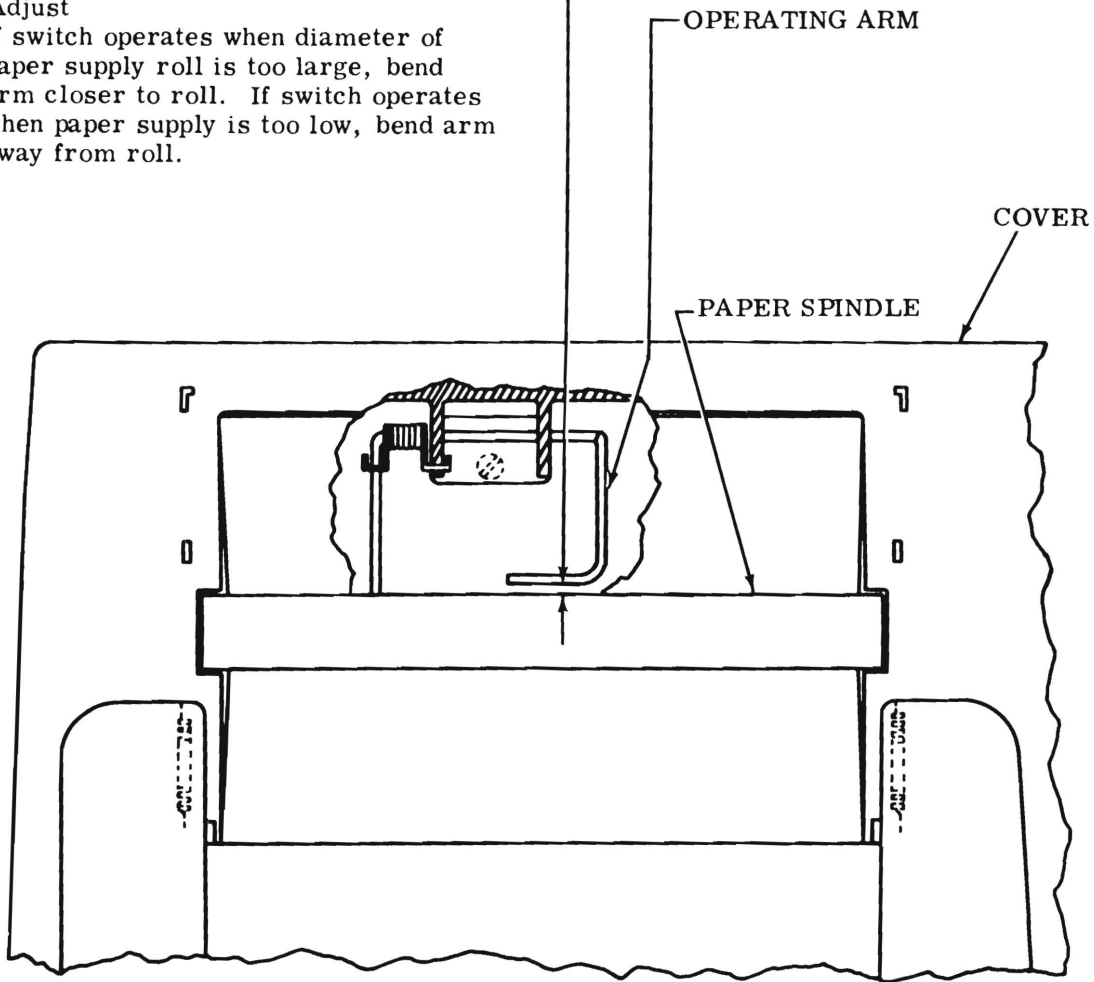

(Top View)

2.03 Tape Reader Area

Note: The following adjustment applies to tape readers with early design bases.


READER MOUNTING BRACKET (Early Design)

Requirement

There should be equal clearance on three sides between top plate and tape reader cover.

To Adjust

With three mounting screws friction tight, position tape reader base. Tighten screws.

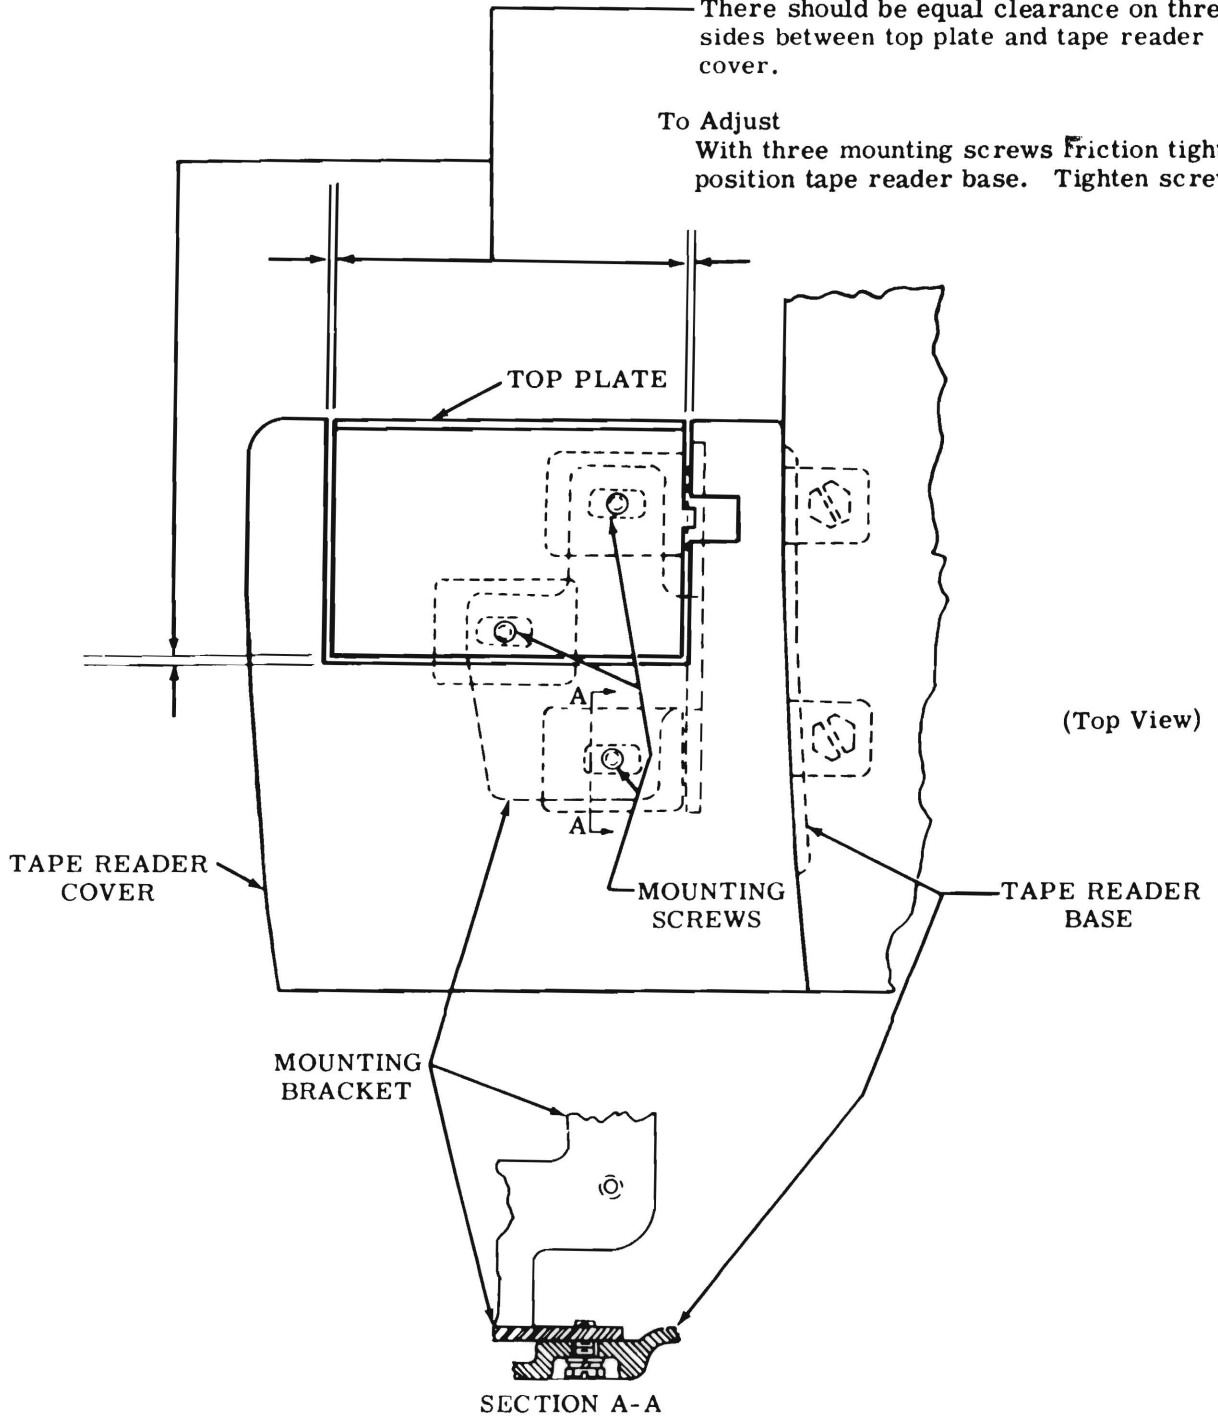

2.04 Tape Reader Area (continued)

Note: The following adjustment applies to tape readers with late design bases.

READER MOUNTING BRACKET (Late Design)

(1) Requirement


Top plate to be  
Min flush---Max 0.030 inch  
below cover.

(2) Requirement

Equal clearance between top plate and tape reader cover on three sides.

To Adjust

With four adjusting screws and locking screw (L) loosened and mounting bracket lying flat on tape reader base, position tape reader. Run two adjusting screws (X) up until requirement is approximately met. Tighten locking screw friction tight. Run two adjusting screws (Y) up until requirement is approximately met. Refine all four adjusting screws, loosen locking screw if necessary. Tighten locking screw.

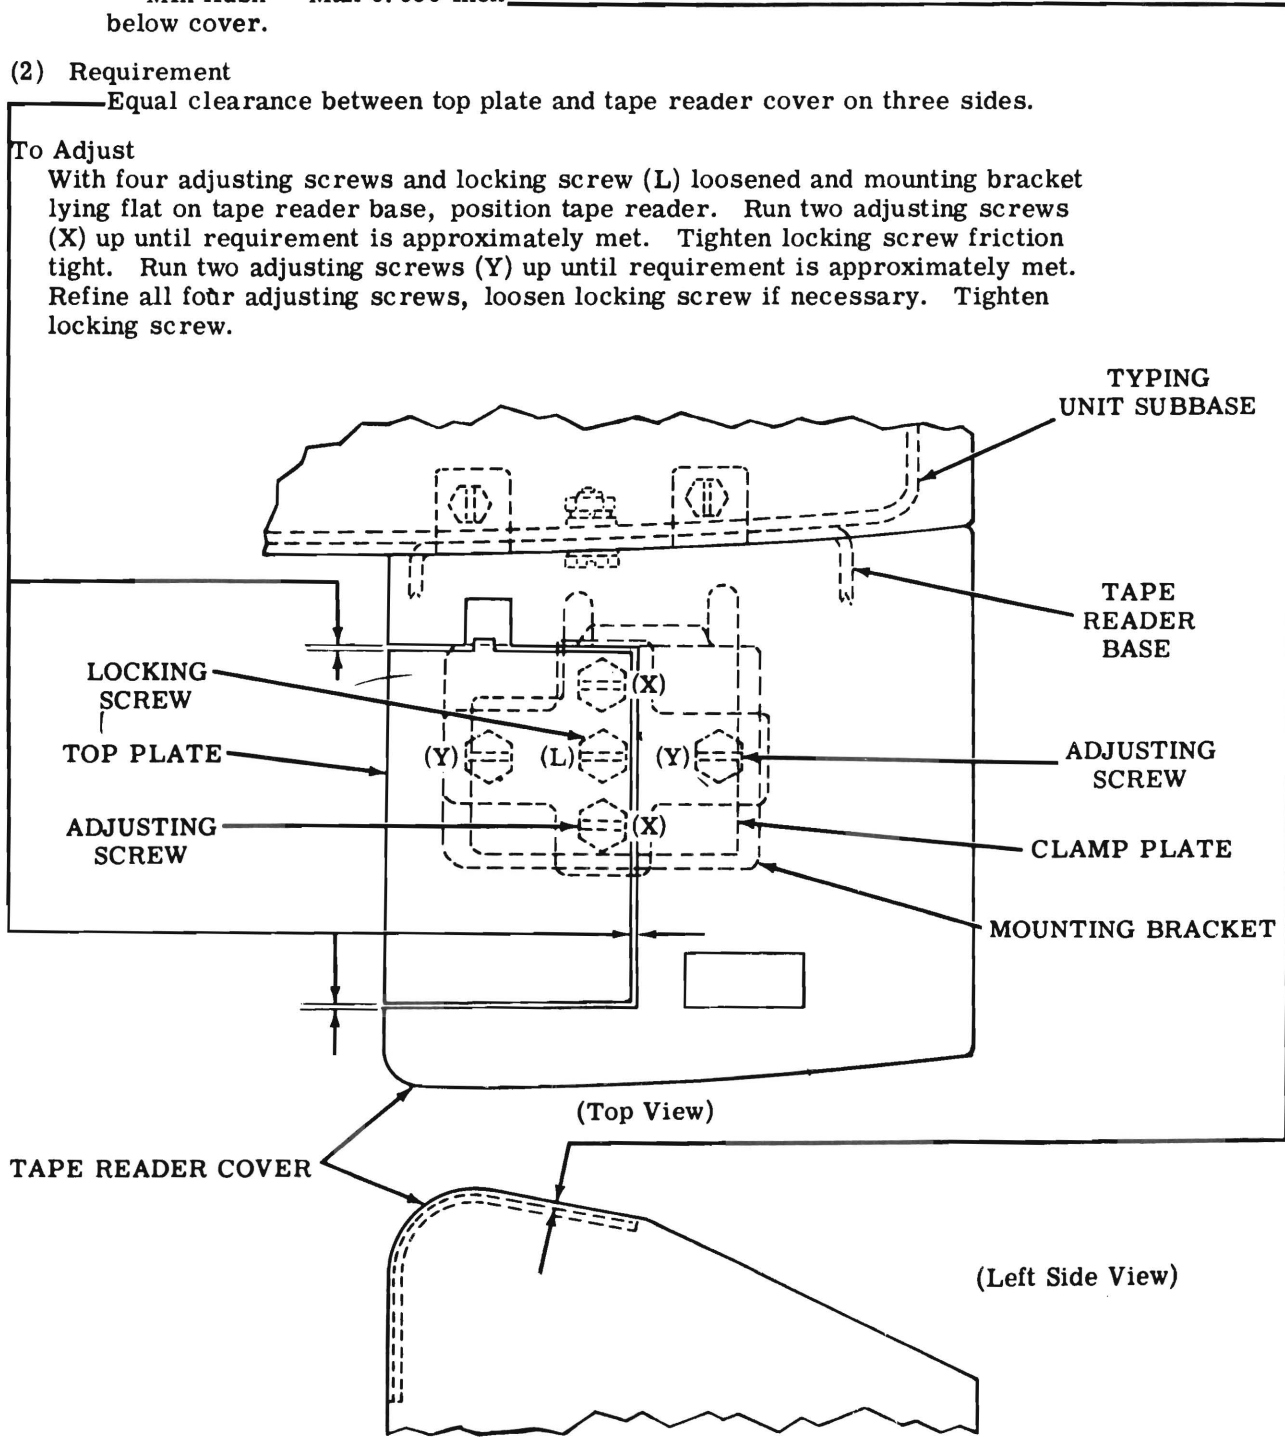


2.05 Tape Punch Area

CONTROL PUSHBUTTONS

Requirement

Min 1/2 oz---Max 1-1/2 oz  
to push each control pushbutton  
down 1/8 inch  
as gauged by eye, while  
remaining control pushbuttons  
remain in their normal upward  
positions.

(Left Side View)

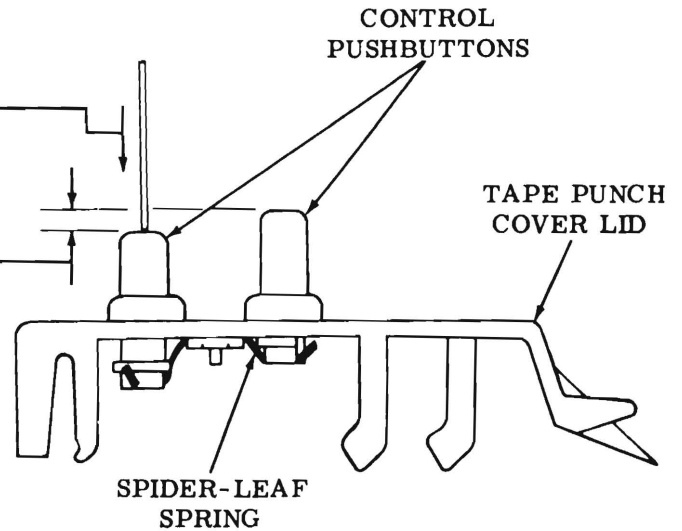

VISUAL "ON-OFF" INDICATOR

Note: This adjustment applies only to tape punches equipped with the automatic control visual ON-OFF indicator option.

To Check


With the tape punch cover in place over the tape punch, place the tape punch "off." Note the gap between the rear edge of the cover opening and the rear edge of the indicator arm. Place the tape punch "on." Note the gap between the front edge of the cover opening and the front edge of the indicator arm.

Requirement

The gaps should be equal, as gauged by eye.

To Adjust

With the tape punch lid removed from the tape punch cover, loosen screw post and position indicator arm. Tighten screw post.

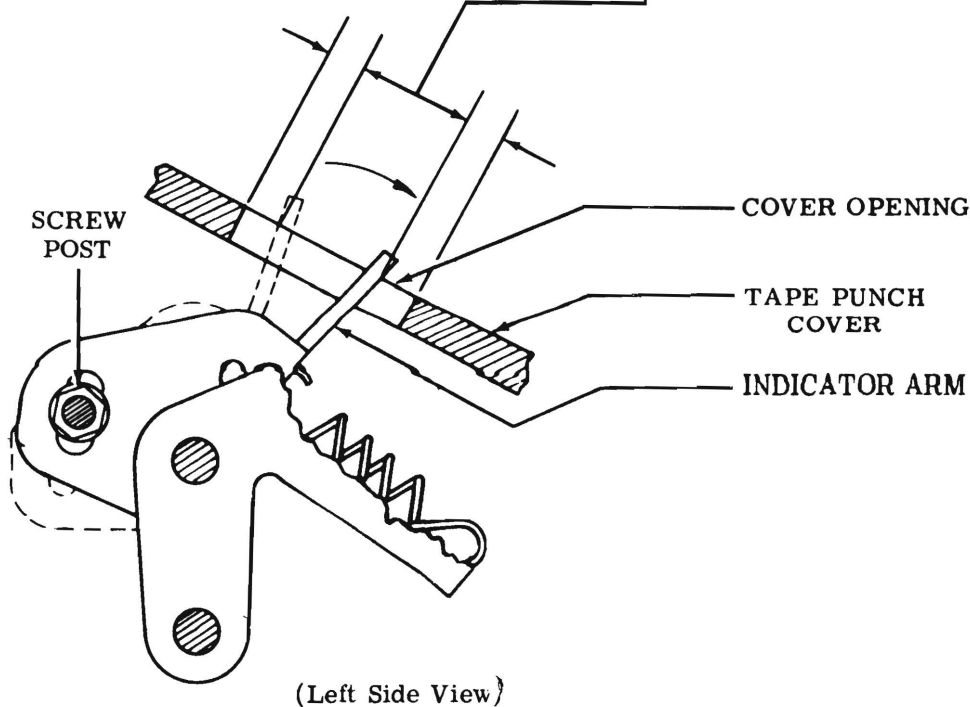

(Left Side View)



